


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

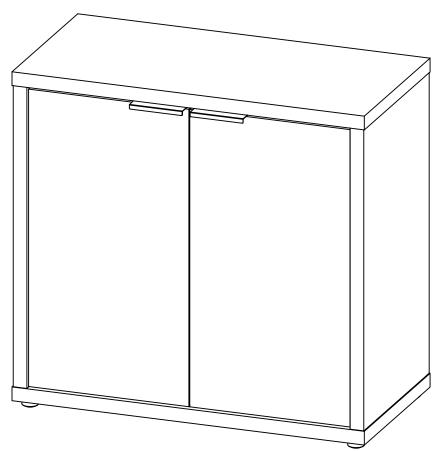

Fine Furniture for every stage of life

950394 ACCENT CABINET

REVISION 0: 10/25/2023

ITEM: 950394

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.







PARTS IDENTIFICATION

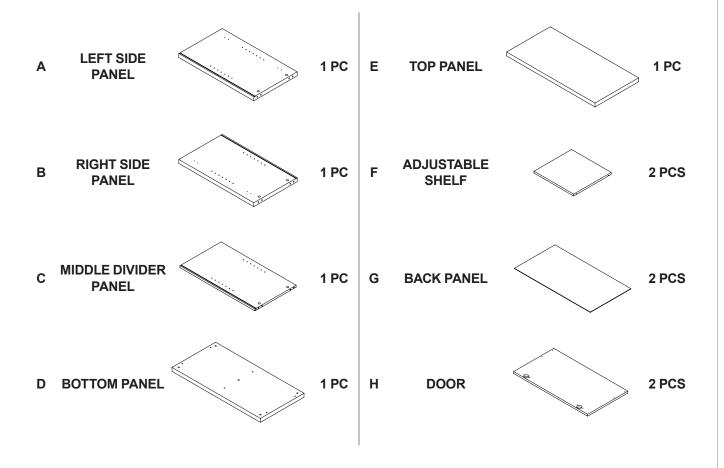

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:950394



HARDWARE IDENTIFICATION


Z	-						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	8	HINGE SCREW Ø 4x15mm SR		16 PCS
2	WOODEN DOWEL Ø8x30mm		12 PCS	9	HANDLE L=120mm BLK		2 PCS
3	CAM BOLT Ø7x35.5mm SR		6 PCS	10	HANDLE BOLT Ø 3x15mm BLK		4 PCS
4	CAM LOCK Ø15x12mm SR		6 PCS	11	FOOT Ø35xH19mm		5 PCS
5	BOLT Ø9.5x55mm SR		6 PCS	12	BACK PANEL SUPPORT		6 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		8 PCS	13	BACK PANEL SUPPORT SCREW Ø3x19mm SR		6 PCS
7	HINGE Ø35mm SR		4 PCS	14	STICKER Ø20mm		1 PC

Z7,Z9,Z11 not included in blister packaging.


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:950394 STEP 1 **INCORRECT** CORRECT 2 Apply glue on all wooden dowels to ensure integrity of the structure.

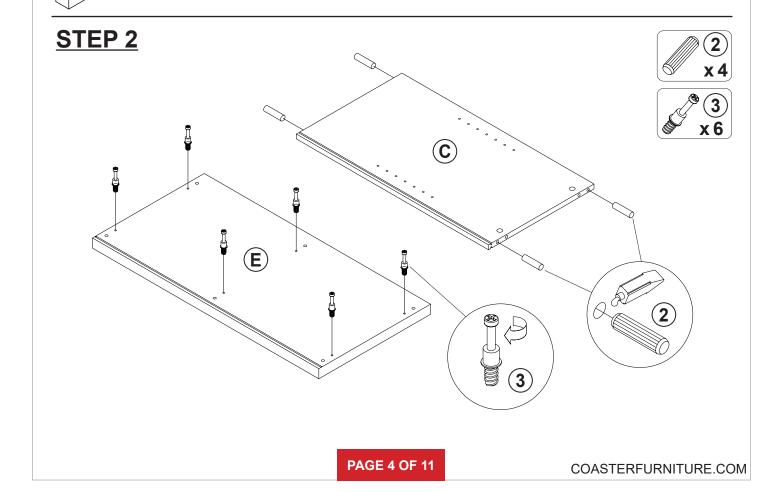


STEP 4

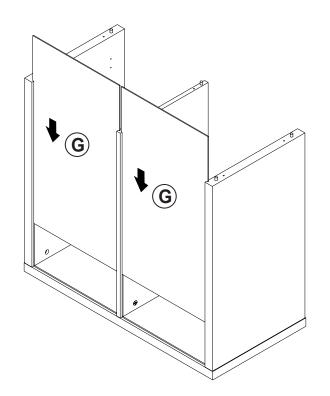

ITEM: **950394 STEP 5**






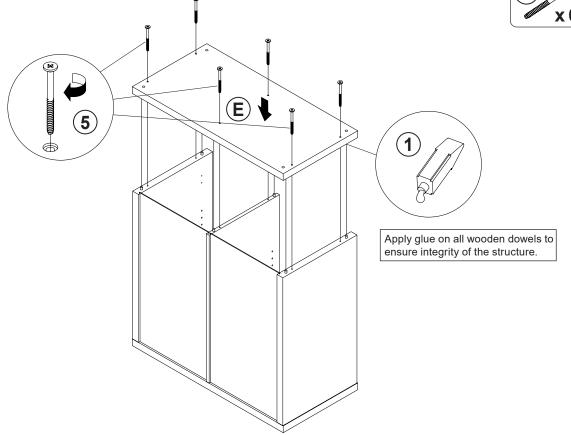


STEP 6




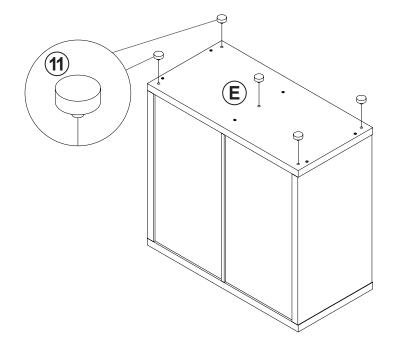

ITEM: **950394 STEP 7**



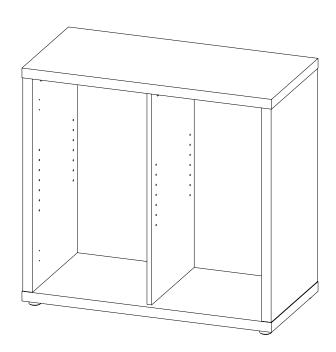

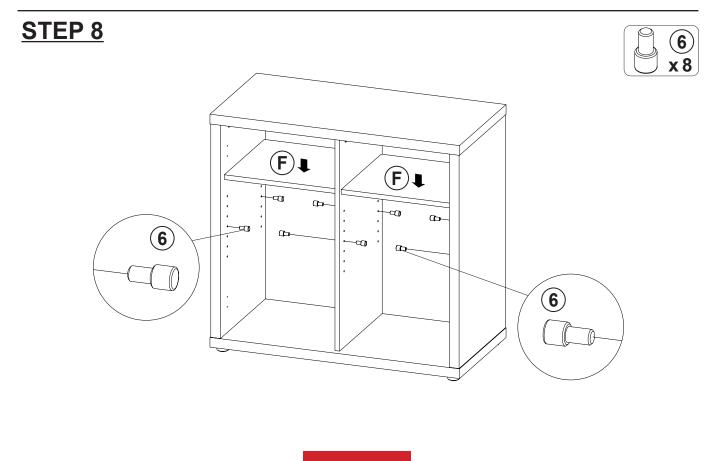


ITEM: **950394 STEP 9**







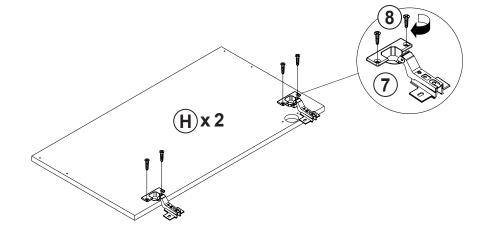


STEP 10








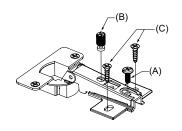


HORIZONTAL BY SCREW AADJUSTMENT




 LATERAL BY SCREW B ADJUSTMENT



VERTICAL BY SCREW C ADJUSTMENT

 


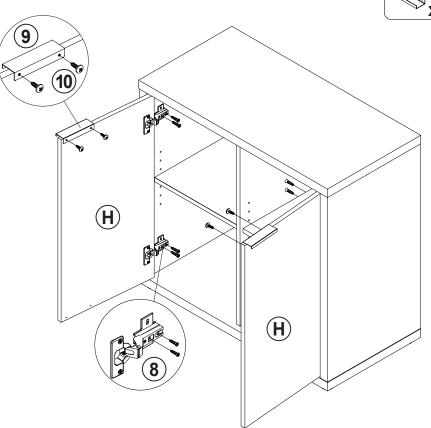


ITEM:950394 **STEP 11**






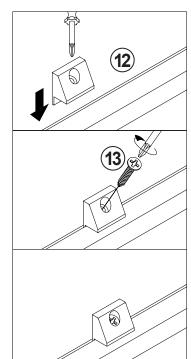

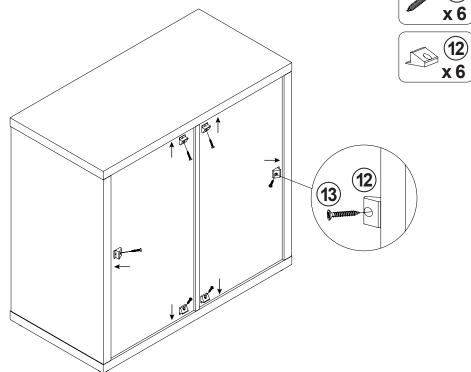


STEP 12

COMPLETE

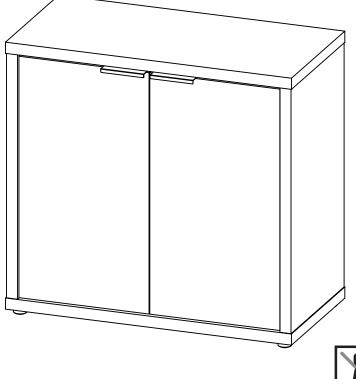





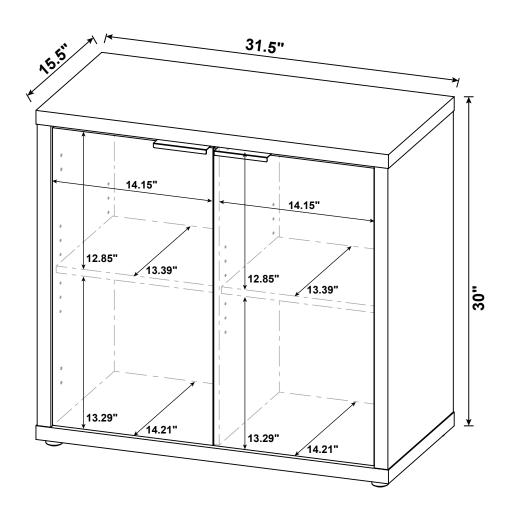

Note: Dimension tolerance ±5%

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
- 2. Position the case piece against the wall in the desired location.
- 3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
- 4. Drill a 1-1/4" hole in the spot you marked.
- 5. Tap in plastic wall plug.
- 6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tiping kit in the middle of the case piece if only have one set of anti-tipping kit.)

