




ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

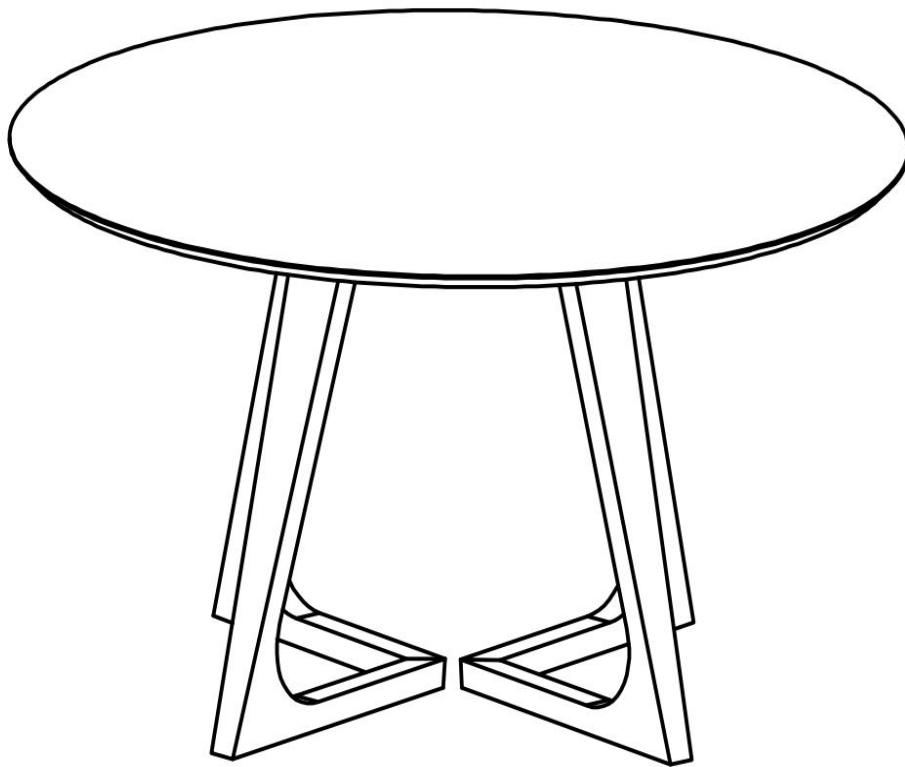

107171
DINING TABLE

ITEM:107171 (B1-B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

 
A TOP MARBLE



1PC

B2 (BOX 2)

B BASE



2PCS

ITEM:107171 (B1-B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

Z-HARDWARE IDENTIFICATION

1 ALLEN WRENCH



1PC

2 SHORT BOLT
(M8*45mm)



8PCS

3 FLAT WASHER D20*2




8PCS

Hardware pack is located in 107171 B2


ITEM:107171 (B1-B2)

ASSEMBLY INSTRUCTIONS


STEP 1

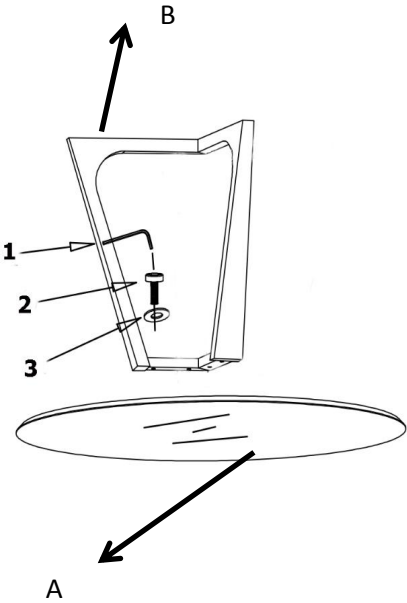


STEP 2

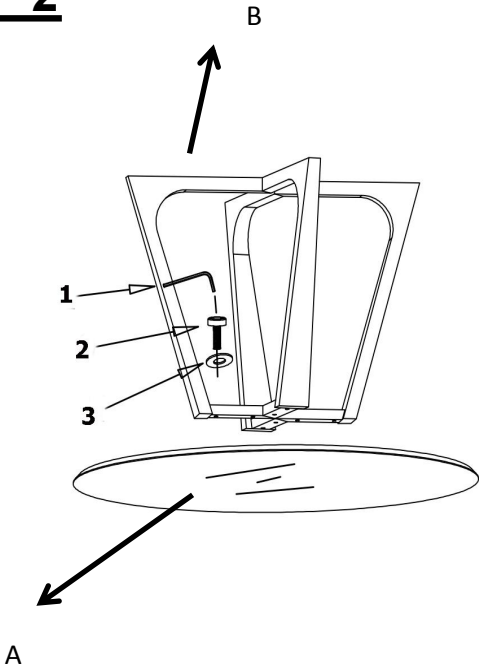

STEP 3

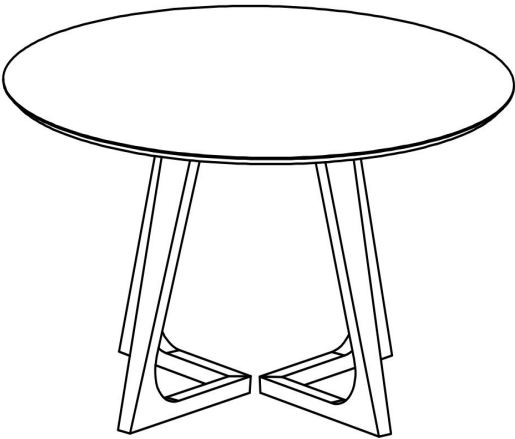

ITEM:107171 (B1-B2)

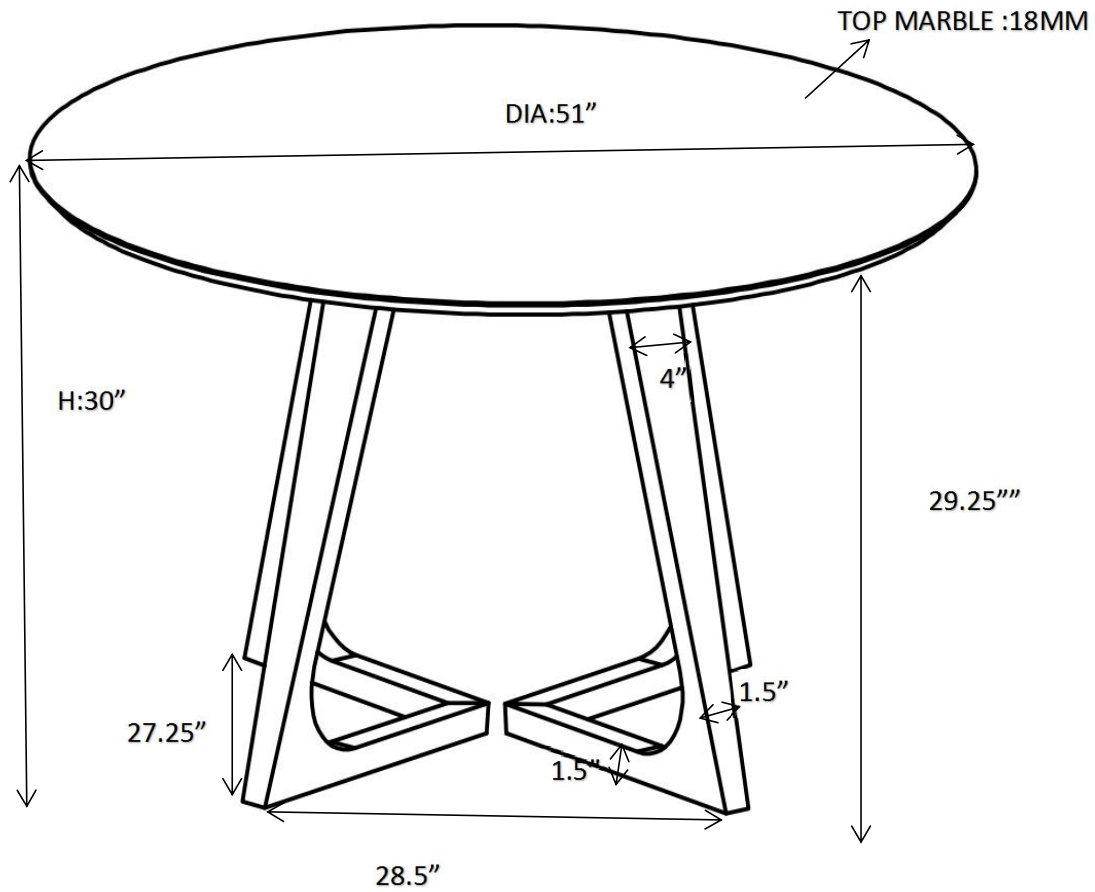

Note : Dimension tolerance $\pm 5\%$