



ASSEMBLY INSTRUCTION

	AX1PC		BX1PC		CX1PC									
	DX1PC		EX1PC		FX1PC									
				GX1PC										
HX8PCS		IX10PCS		JX10PCS		KX12PCS		LX4PCS		MX2PCS		NX1PC		
5x25mm		6x38mm		Ø12x10mm		4x10mm		4x20mm						
1 2 3														


4

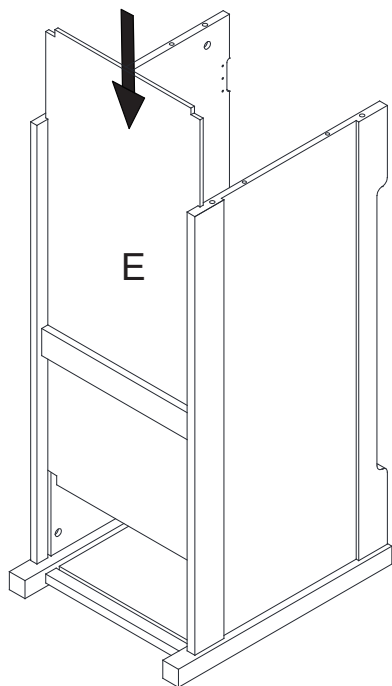

5

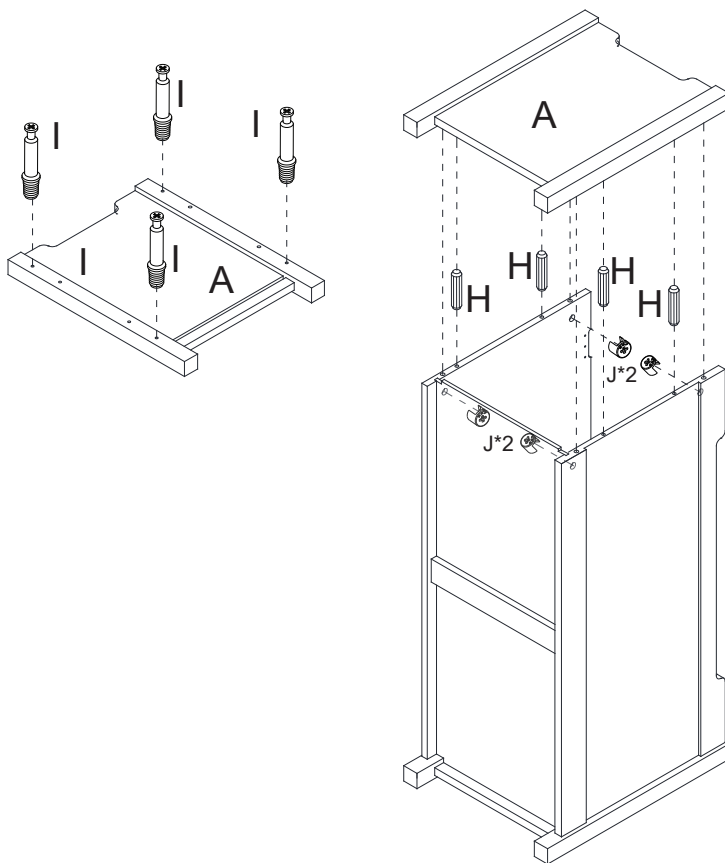

6

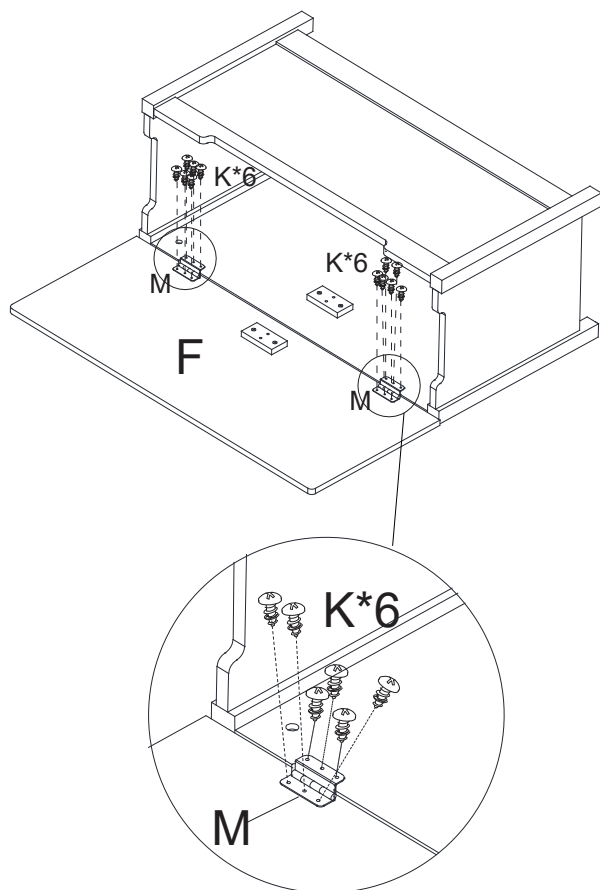

7

