

# ASSEMBLY INSTRUCTIONS

#### **EASTERN KING HEADBOARD**

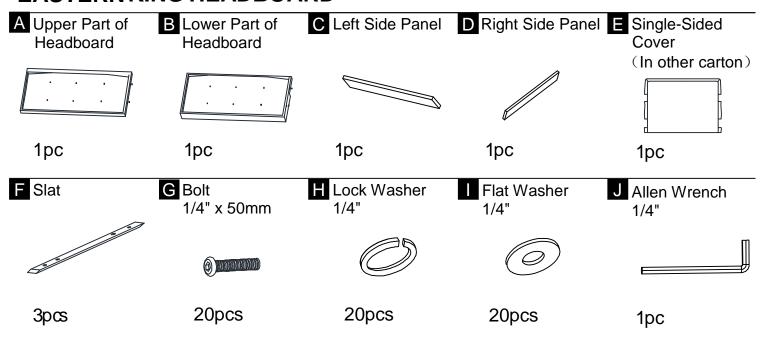


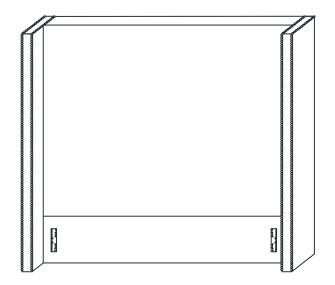


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Notice: This product requires more than two people for assembly.


Attach Slat (F) to Upper & Lower Part of Headboard (A & B) using Bolt (G), Lock Washer (H) and Flat Washer (I) with Allen Wrench (J).

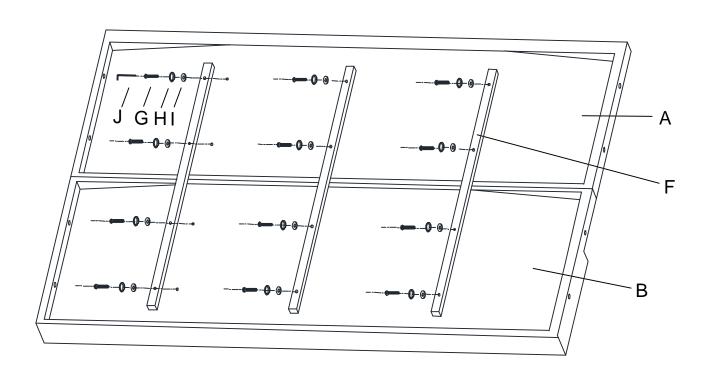

Place Single-Sided Cover (E) on the front of Headboard (A & B), then attach the Velcro at the back of Headboard (A & B).

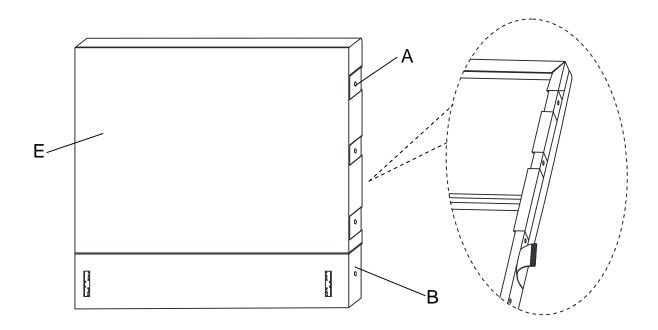

Attach Left & Right Side Panel (C & D) to Headboard (A & B) using Bolt (G), Lock Washer (H) and Flat Washer (I) with Allen Wrench (J).

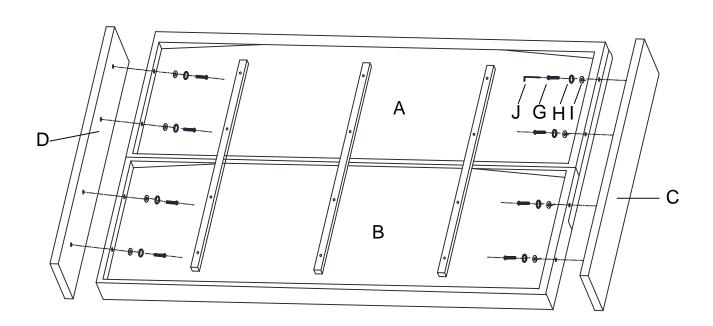

### **Helpful Tip:**


- After assembly, if fabric is not smooth or wrinkled, please iron it.


### **Cleaning & Care**

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

## **ASSEMBLY INSTRUCTION**


### WINGBACK KING BED WITH REGULAR SLATS

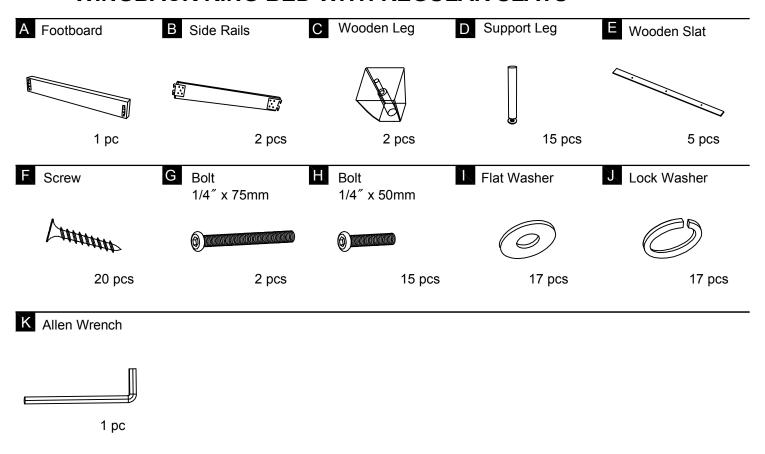

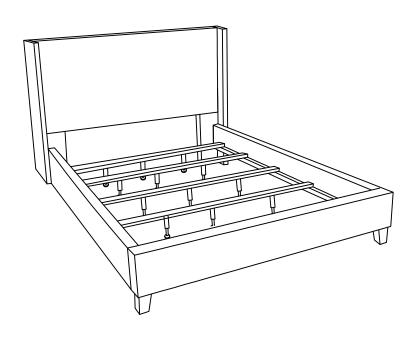


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Attached Wooden Leg (C) to the Footboard (A) use Bolt (G), Lock Washer (J) and Flat Washer (I) on both of holes. Turn the Allen Wrench (K) in Bolt (G).

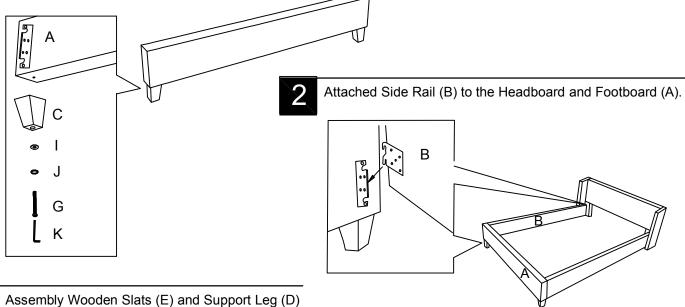

Assembly Wooden Slats (E) and Support Leg (D) use Flat Washer (I), Lock Washer (J) and Bolt (H), Turn the Allen Wrench (K) in Bolt (H).

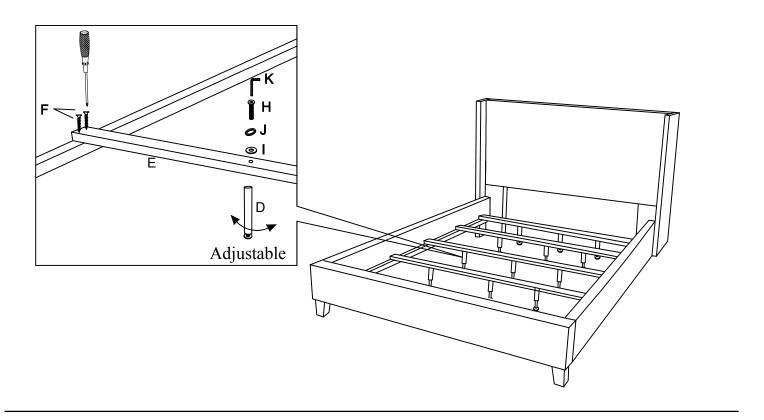

#### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.