
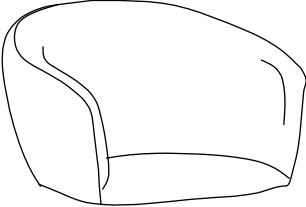
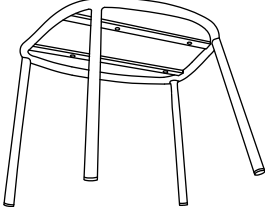


ITEM NAME/NOM D'ITEM:ESSEN DINING CHAIR
ITEM #/NO. ITEM:110101/110102

PARTS LIST/LISTE DES PIÈCES		
(1)	(2)	(3)
		A  M6×35mm ×2
		B  M6×40mm ×2
		C  M6 ×4
		D  M6 ×2
		E  M5 ×1


ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

I

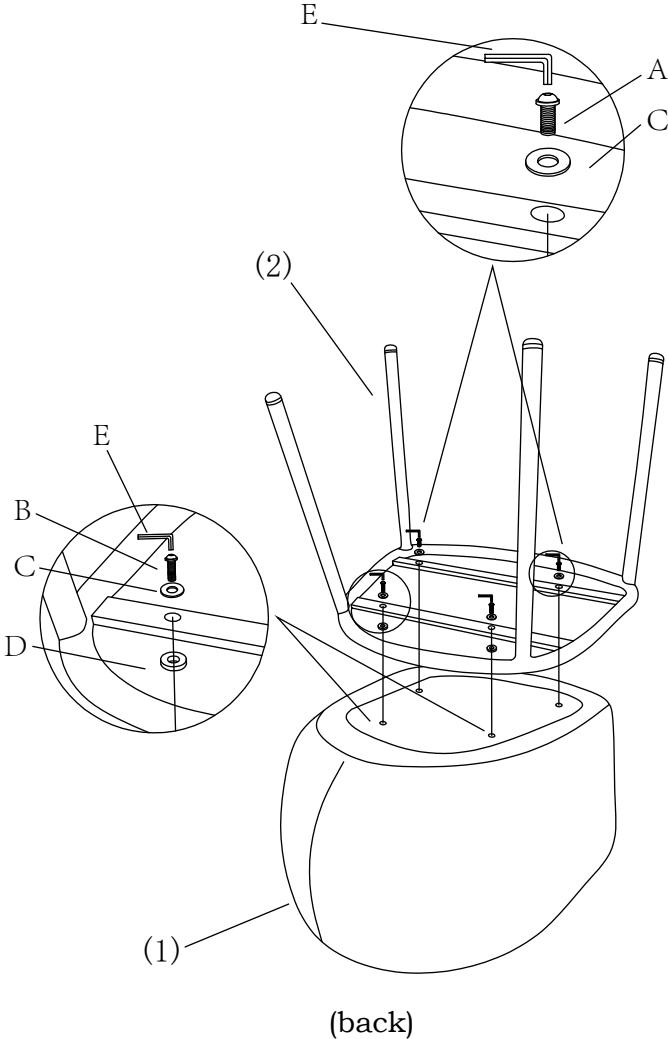

(back)

II

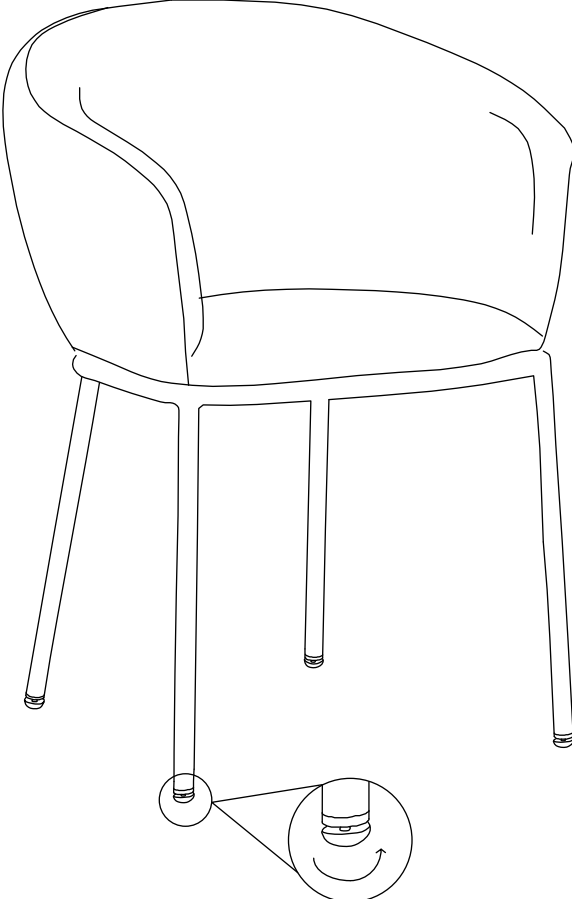

Please use the attached adjustable footglides to level the chair on uneven surface.

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663