 



 

 





Assembly Instruction
ACCENT CHAIR

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


COMPONENT LIST

NO	DESCRIPTION	DRAWING	QTY	NO	DESCRIPTION	DRAWING	QTY
A	SEAT		1PC	E	Ø5/16" *2" BOLT		2PCS
B	BACK		1PC	F	Ø5/16" *1 9/16" BOLT		8PCS
C	LSF ARM		1PC	G	Ø5/16" * Ø13x2mm LOCK WASHER		10PCS
D	RSF ARM		1PC	H	Ø5/16" * Ø22x2mm FLAT WASHER		10PCS
				I	ALLEN KEY (4mm)		1PC


Step #1

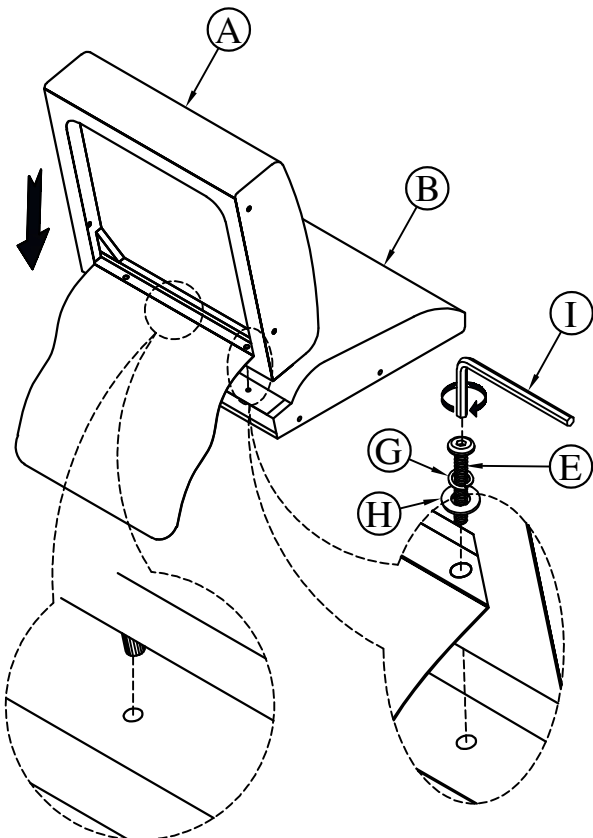


Step #2

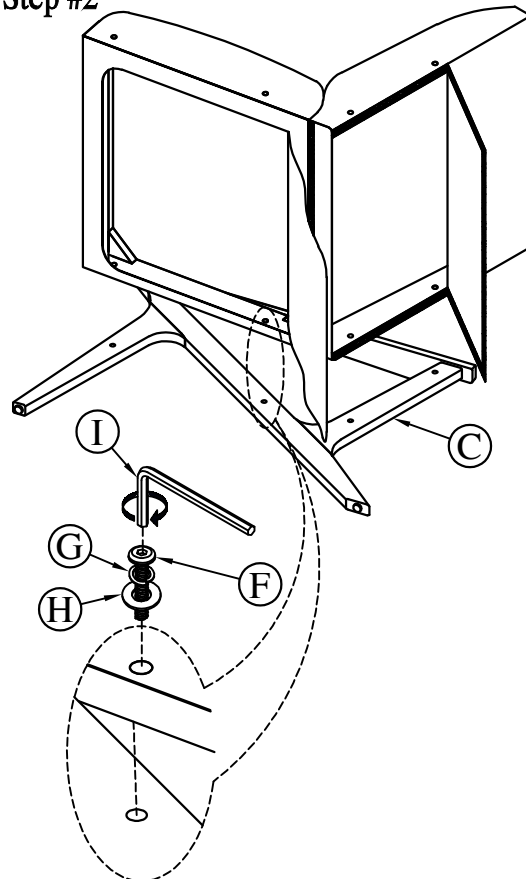

Step #3

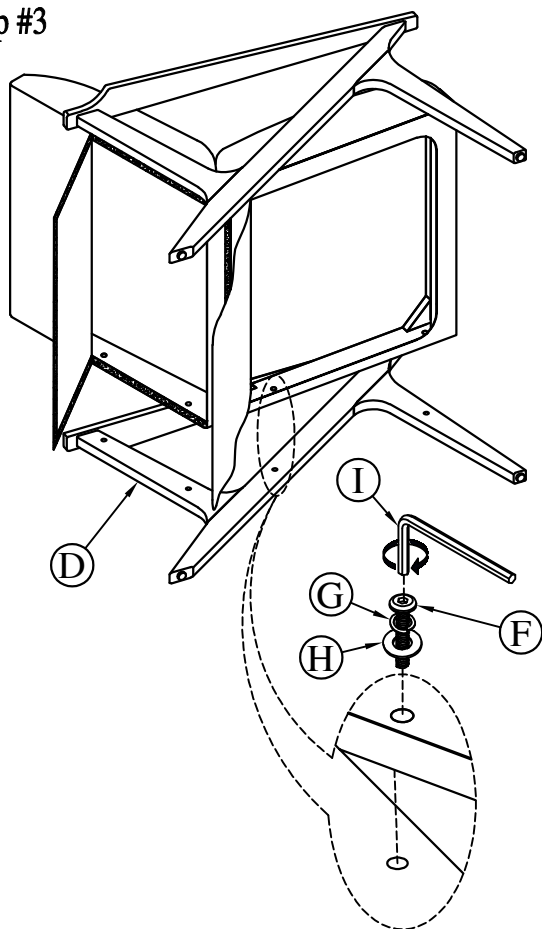

Step #4

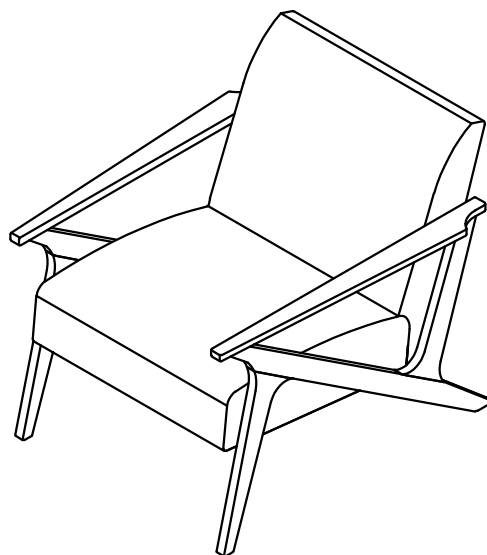

CARE INSTRUCTION FOR POLYESTER:

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/ damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.