

ASSEMBLY INSTRUCTION

Thank you for purchasing this product. Please take time to read and follow the instructions below.
Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials.
If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

Hardware may loosen over time. Periodically check to make sure all connections are tight.
Re-tighten if necessary.




HARDWARE LIST

No. N°.	DESCRIPTION	DRAWING DESSIN	SIZE DIMENSION	Q'TY QTÉ
A	BOLT		Ø16/5*50 mm	8 PCS
B	FLAT WASHER		Ø16/5*19 mm	8 PCS
C	SPRING WASHER		Ø16/5*13 mm	8 PCS
D	ALLEN KEY		4 mm	1 PC


PARTS LIST

No. N°.	DESCRIPTION	DRAWING/ DESSIN	Q'TY QTÉ
1	ACCENT CHAIR		1 PC
2	PILLOW		1 PC
3	LSF FRONT WOODEN LEG		1 PC
4	RSF FRONT WOODEN LEG		1 PC
5	REAR WOODEN LEGS		2 PCS

STEP 1

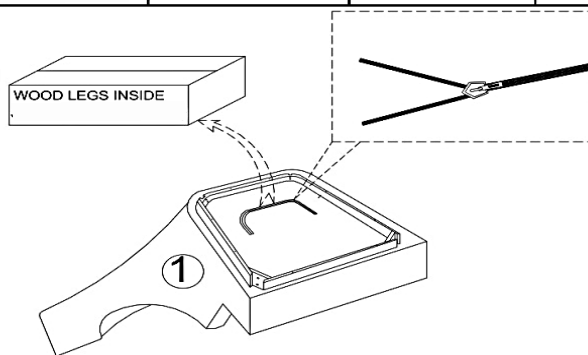


STEP 3

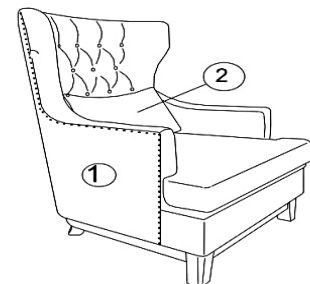

STEP 2

CARE INSTRUCTION FOR FABRIC FURNITURE/

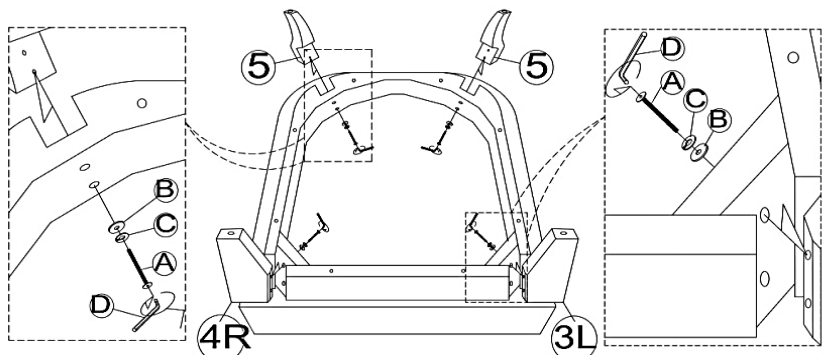

In order to maintain the original appearance of your fabric furniture, please follow below care procedures:
Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage fabric. Do not place your upholstered furniture too close to windows, radiators, air vents and be sure to use window treatments to block the sun's rays.