




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

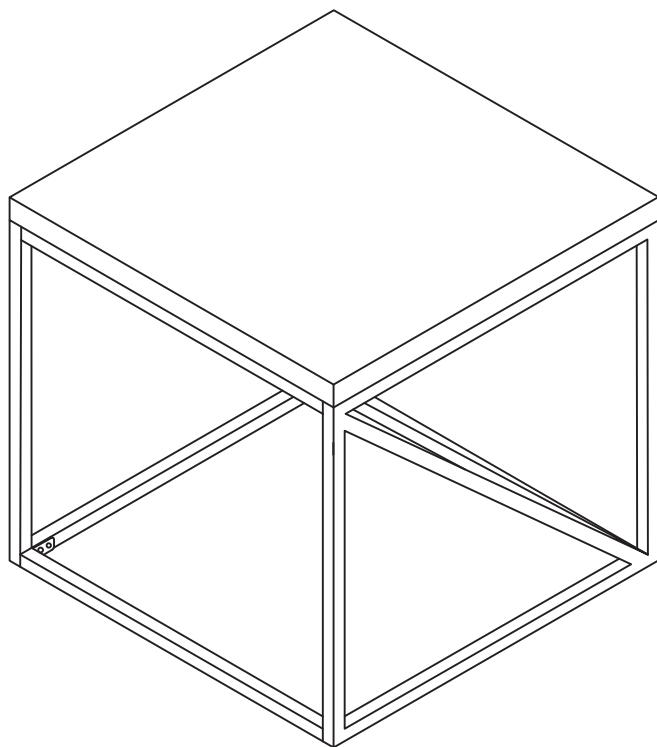

Fine Furniture for every stage of life

705617
End Table

REVISION 0 : 05/07/2019

REVISION1 : 04/28/2021

REVISION2 : 11/08/2022

COASTERFURNITURE.COM

ITEM: 705617

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

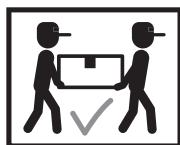


ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION

A Top

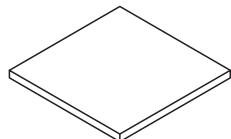

1 PC

B Right Side Frame

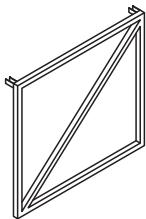

1PC

C Top Crossbar




2 PCS

D Bottom Crossbar



2 PCS

E Left Side Frame

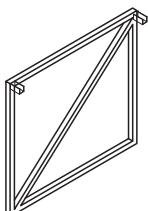

1PC

ITEM:705617




HARDWARE IDENTIFICATION

DESCRIPTION	FIGURE	Q'TY
1 Short Bolt (M6x12MM)		20 PCS
2 Allen wrench (M4)		1 PC


ITEM: 705617

ASSEMBLY INSTRUCTIONS
STEP 1

COASTER®
FINE FURNITURE

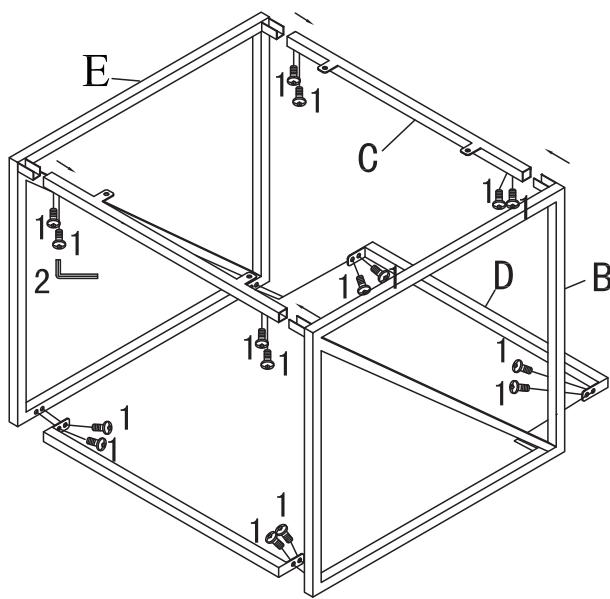


STEP 2

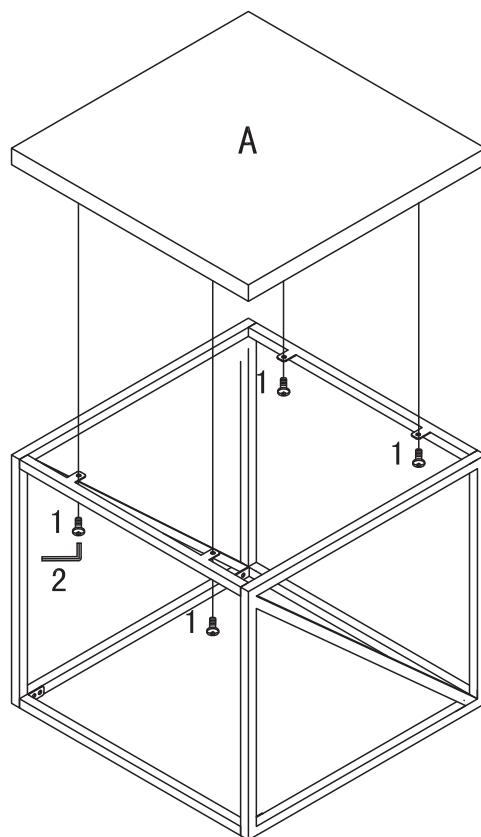

ITEM: 705617

COASTER®
FINE FURNITURE

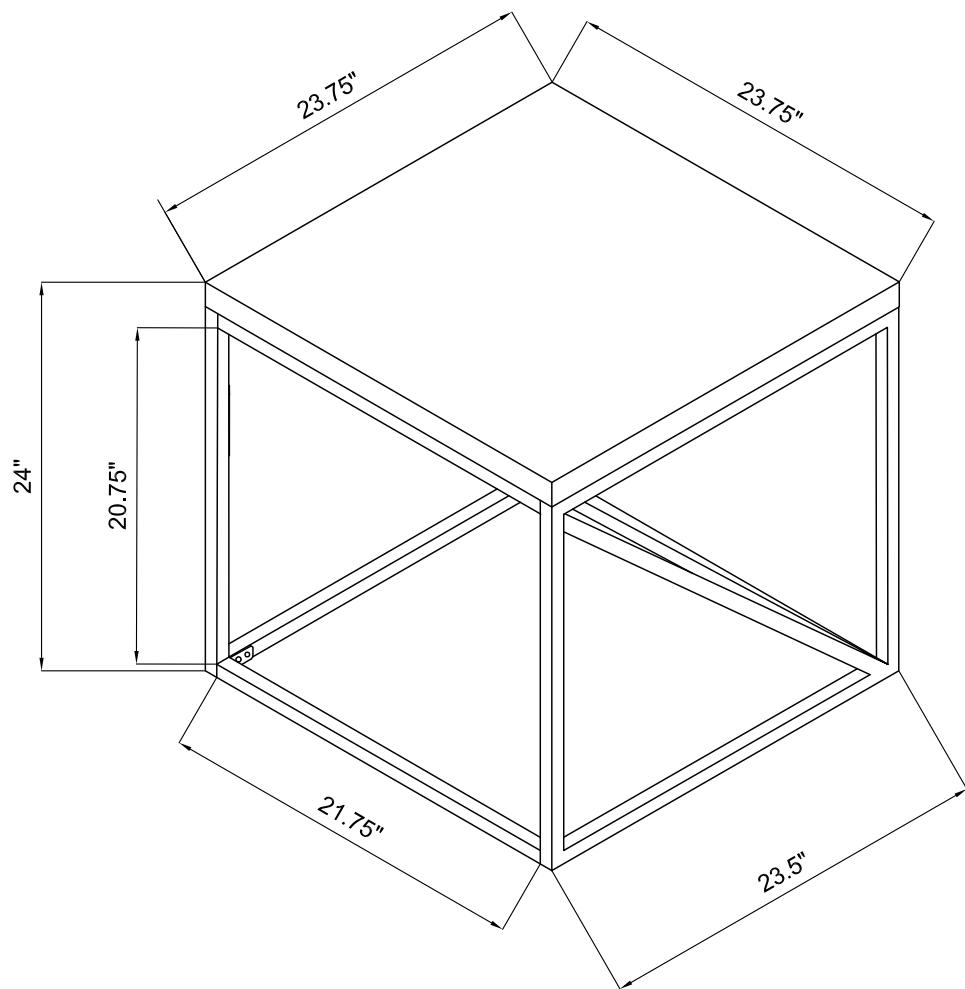

Note: Dimension tolerance $\pm 5\%$