
OPERATION INSTRUCTIONS

CHAIR

WF321704 - WF321705 - WF321706

 
Please do not assemble until receiving the complete 4 packages. If you have not received the complete 4 packages, please be sure to contact us.

 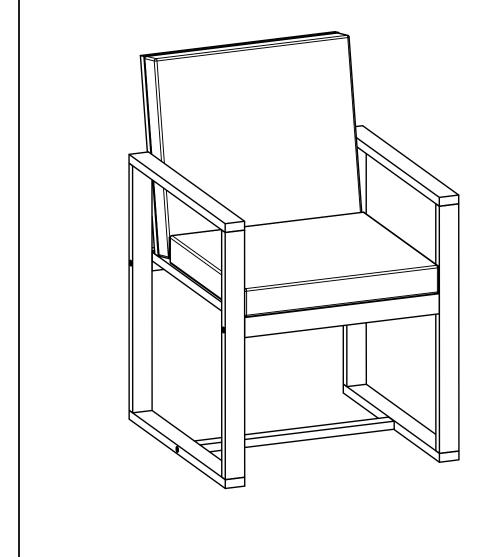


Caution: You must read this before you proceed

Care & Maintenance







To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.

O [* Children should not climb or jump on the furniture.


• Do not write on furniture without a padded barrier to protect the surface.

• To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.

Stains may be removed with mild soap solution and damp cloth.

• Dust and pick-up spills using a clean, non-colored, lint-free cloth.

ASSEMBLY INTRUCTIONS

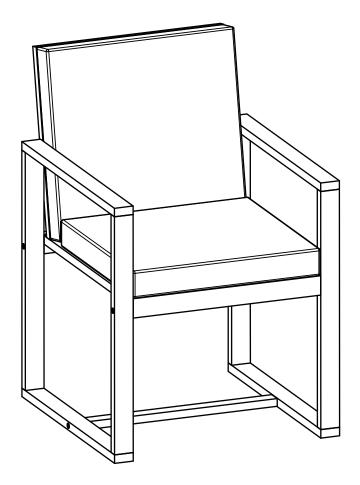

GENERAL ASSEMBLY INFORMATION GUIDE

Please read the following instructions prior to assembling this product:

- 1. To avoid damage, assemble this product on a non-abrasive surface such as carpet.
- 2. Make sure all bolts are tightly fastened before use.
- 3. For home use or light commercial use only.
- 4. Please make sure you have all parts before assembly.

