
ASSEMBLY INSTRUCTIONS

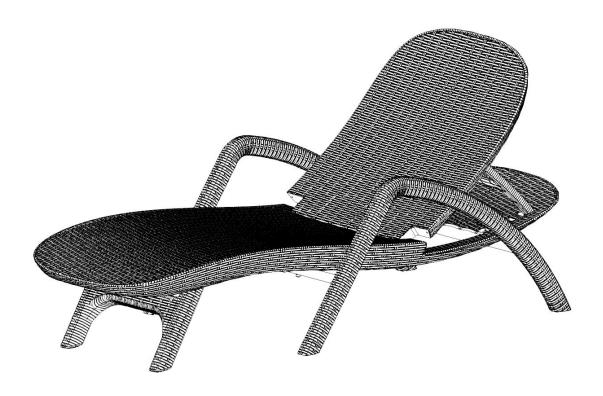

CHAISE LOUNGE





SCAN FOR ASSEMBLY VIDEO AND ONLINE INSTRUCTION MANUAL

CHAISE LOUNGE ASSEMBLY PARTS


PART	DESCRIPTION	IMAGE	QTY
68020-001 (BR) 68020-002 (BH) 68020-007 (SBR)	Head Area of Body (Pre-assembly)		1
68020-003 (BF) 68020-006 (FF) 68020-008 (C-FF)	Foot Area of Body (Pre-assembly)		1
68020-004(AR-L)	Left Armrest		1
68020-005(AR-R)	Right Armrest		1
68020-009 (PS)	Plastic Screw		2
68020-010 (PW)	Plastic Wrench		1
68020-011 (MT)	Metal Tube		2
68020-012 (M8)	Bolt(M8*45mm)		5
68020-013 (M6)	Bolt(M6*16mm)	O MINING	18
68020-014 (M8-AK)	Allen Key(M8)		1
68020-015 (M6-AK)	Allen Key(M6)		1


^{*}Note: Recommended for two people to finish the assembly.

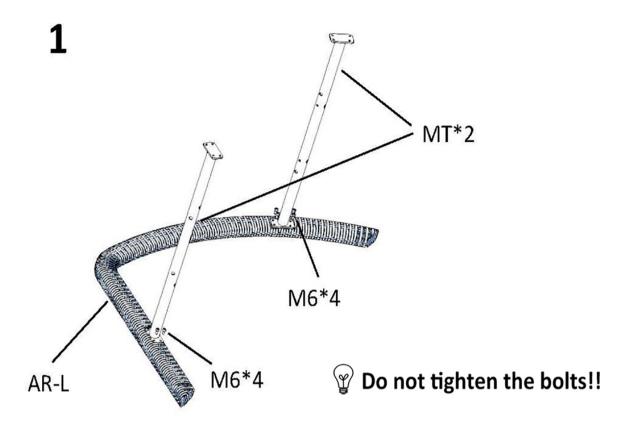

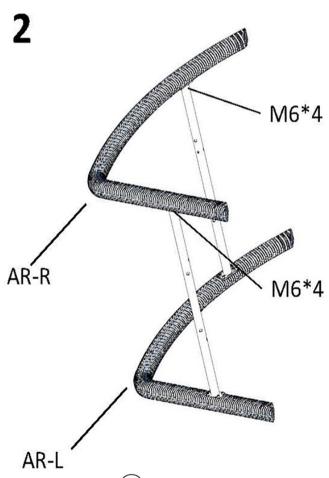


Tighten the bolts when all bolts lines up!!

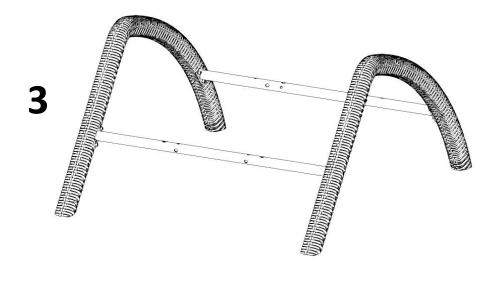


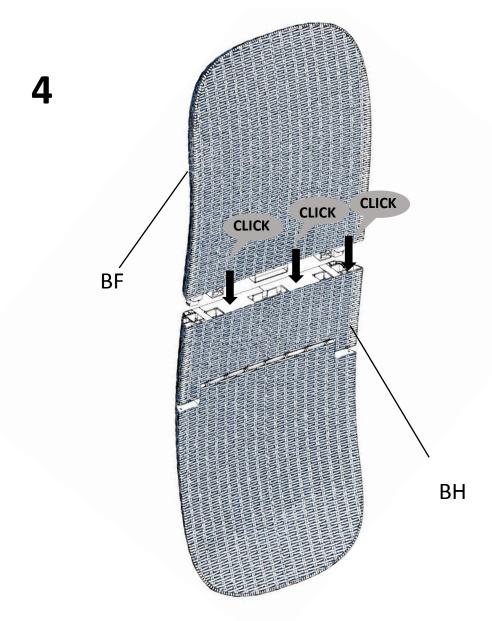

5

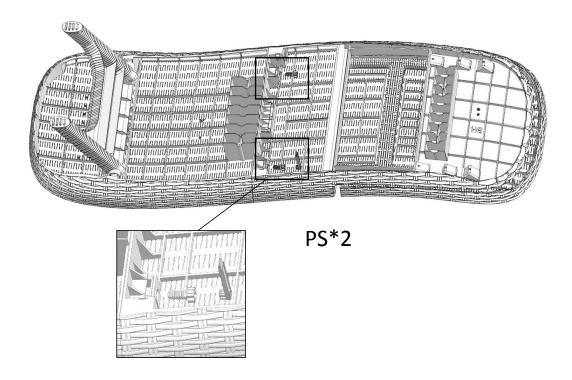

6

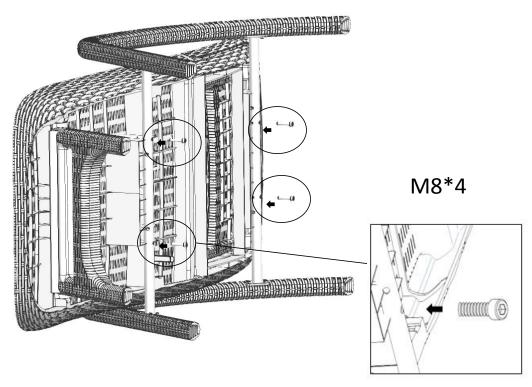

7



Care & Maintenance





- Prolonged exposure to rain may cause rusting which can stain floors.
- Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.



- To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.



- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- Not for commercial use. For residential use only.
- Stains may be removed with mild soap solution and damp cloth.



Keep away from sources of ignition.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.