ASSEMBLY INSTRUCTION

7FT PRE-LIT GREEN PINE CHRISTMAS PORCH TREE WITH 200 WARM WHITE LIGHTS,9 FUNCTIONAL WARM WHITE/MULTI-COLOR, REMOTE CONTROLLER



Please carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface. If you require assistance with assembly or parts, please call 888-357-7263.

Get social with us and discover more about our products, tips and exclusive discounts!











BEFORE ASSEMBLING

- 1. Please check and make sure all the parts have been received.
- 2. Tools are not required for assembly.
- 3. The length of extension cord is 59 inch, please set up the tree in the suitable place away from the power socket.


Reference No.	Height	Number of tree parts		Stand	
2030800024	2030800024 7'		3	Decorative plastic urn	
PART LIST					
Tree Top (A)			Upper Part (B)		
The state of the s		The state of the s			
	Q	ΓY: 1		QTY: 1	
Lower Part (C)			Power Line And Transformer (D)		
	QT	ΓY: 1		QTY: 1	
Remote Controller (E					
	000				
	Q	ΓY: 1			

STEP-BY-STEP ASSEMBLY

PLEASE CAREFULLY UNPACK AND IDENTIFY EACH COMPONENT BEFORE BEGINNING ASSEMBLY. BEFORE YOU BEGIN, PLEASE REFER TO PARTS LIST TO MAKE SURE THAT YOU HAVE ALL PARTS.


STEP 1

Gently lower braches into proper position (Figure 1). Each Branch must be shaped to a natural position by spreading out the left and right tips away from the center tip. Continue to lower branches on upper section(s) in the same manner making sure not to place undue pressure on the brackets.

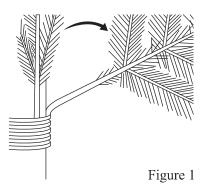


STEP 2 Inse


Insert the trunk in the stand as indicated on Figure 2. When the trunk consists of more than one part, begin by inserting into the Lower Part (Part C) the lower parts of the tree (Part B) in respective order, ending with the top (Part A).

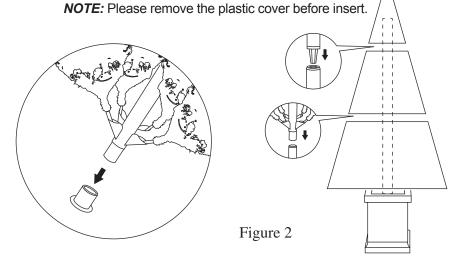


STEP 3 Unfold one-by-one the branches beginning by the lower branches.

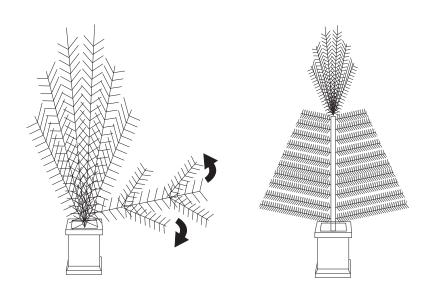

STEP 4 Make final adjustment and trimming of the tree.

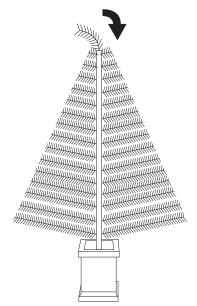

STEP 5 Connect the electric wire of part A and part B, then connect the adapter to power source.

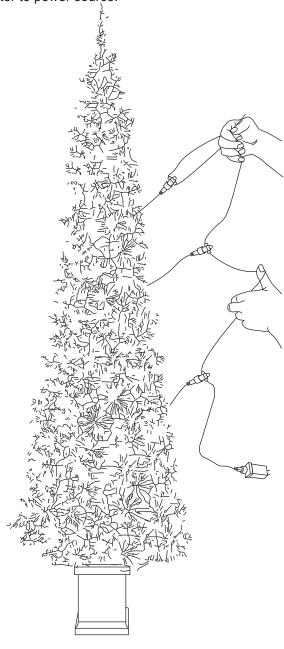

DISASSEMBLY AND STORAGE

- 1. Remove all decorations.
- Disassemble the tree in reverse order of assembly. 2.
- Suggest to store the tree in its original carton box or in storage bag and 3. keep in a cool dry place.

CAUTION

- 1. To be assembled by or under the supervision of an adult.
- 2. Keep plastic bags out of reach of children.
- Keep away from fire or hot temperatures. 3.
- 4. Do not light a candle on or near the tree.
- Do not leave lighted electric cords unattended. 5.
- 6. Do not overload with heavy ornaments and/or too many decorations.
- 7. Place the tree on an even surface to ensure stability.
- 8. This tree is intended for indoor use only.
- 9. Keep this information for future reference.

Made in China

glitzhome®

Glitzhome,LLC.

Toll free 888-357-7263 customerservice@glitzhome.com