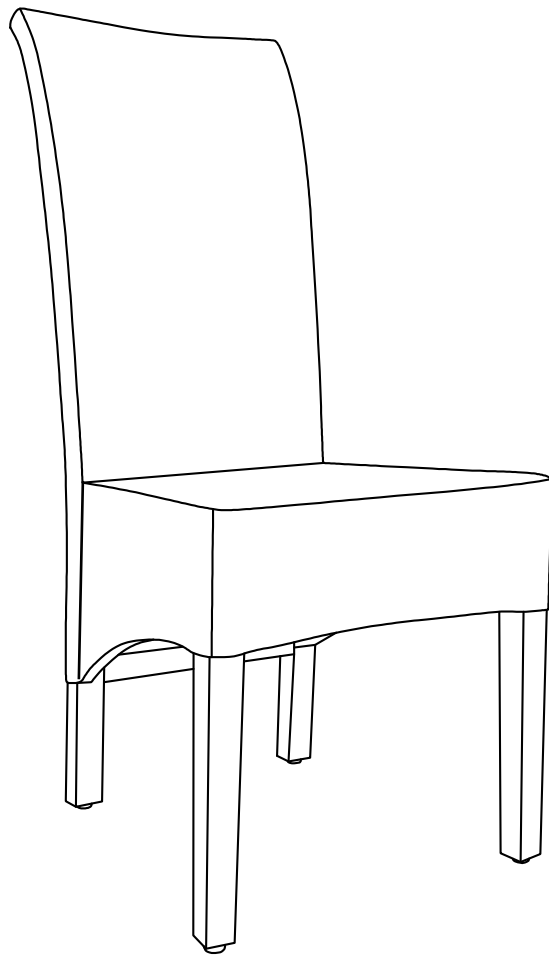


 
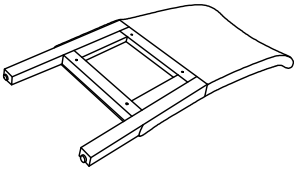
 
CROSLEY

FURNITURE

 
 


Dining Chair **CF503021**



PART LIST

<div data-bbox="113 228 172 286">A</div> 	<div data-bbox="453 228 512 286">B</div> 	<div data-bbox="794 228 853 286">C</div> 
Seat Panel 2 PCS	Backrest 2 PCS	Front Leg 4 PCS

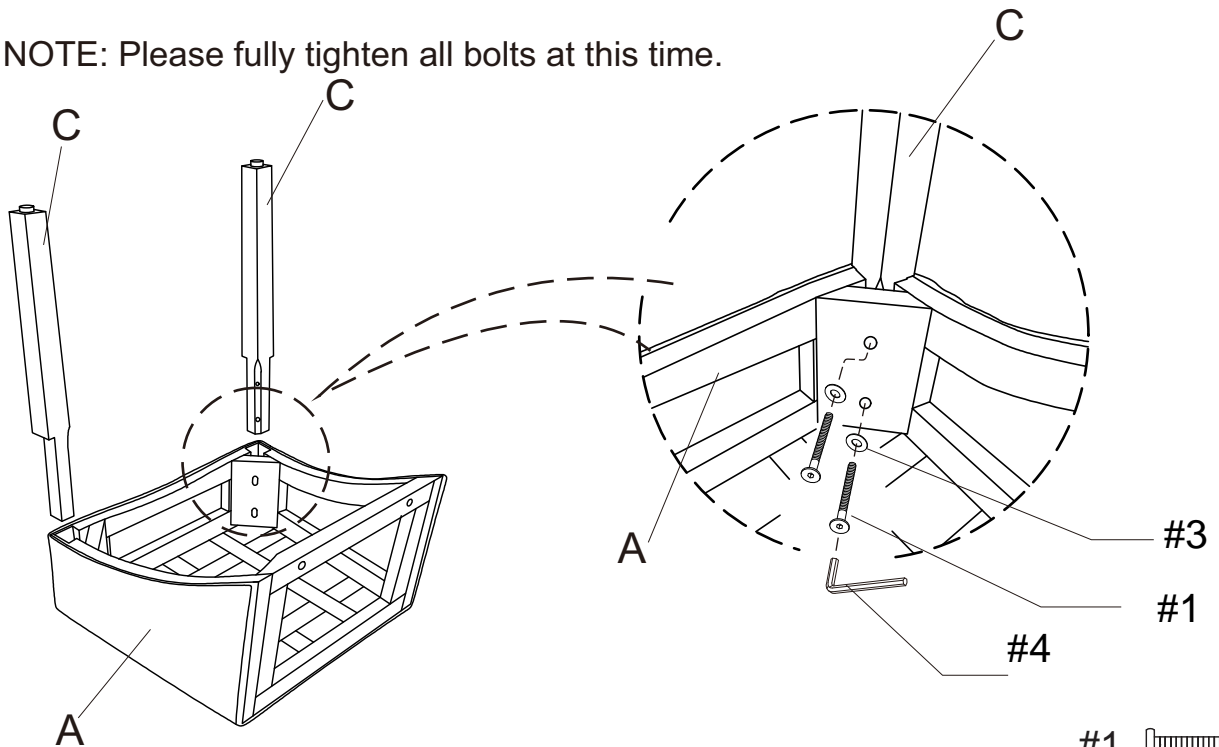
HARDWARE LIST

<div data-bbox="113 896 172 954">1</div>  <p>$\frac{1}{4}$ " x 2" L</p>	<div data-bbox="453 896 512 954">2</div>  <p>$\frac{1}{4}$ " x 1.½" L</p>	<div data-bbox="794 896 853 954">3</div> 	<div data-bbox="1136 896 1195 954">4</div> 
Long Bolt 8 PCS (Extra 1)	Short Bolt 8 PCS (Extra 1)	Flat Washer 16 PCS (Extra 1)	Allen Wrench 1 PC

Step 1 : Carefully turn seat panel (part A) down on a flat, soft surface, such as carpet.

Attach front legs (part C) to seat panel (part A) using long bolts (part #1), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.



#1  x 4

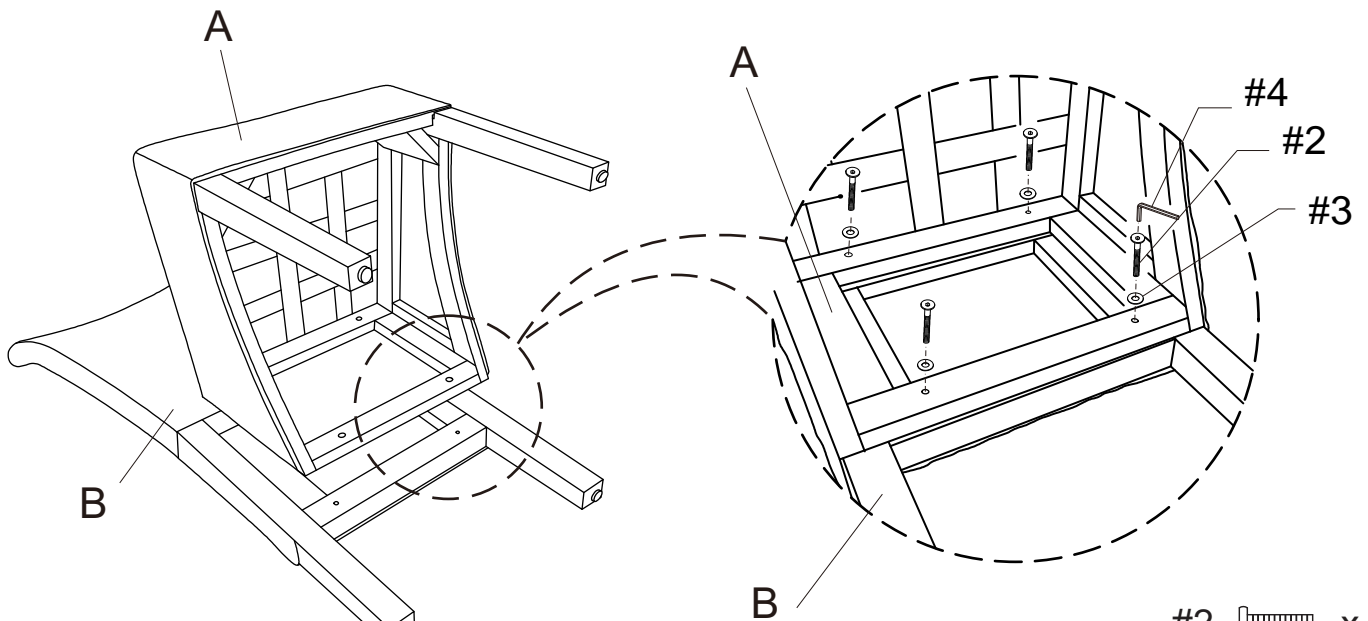
#3  x 4

#4  x 1

Step 2 : Lay backrest (part B) down on a flat, soft surface, such as carpet.

Attach assembled unit (parts A & C) to backrest (part B) using short bolts (part #2), flat washers (part #3) and allen wrench (part #4)

NOTE: Please fully tighten all bolts at this time.

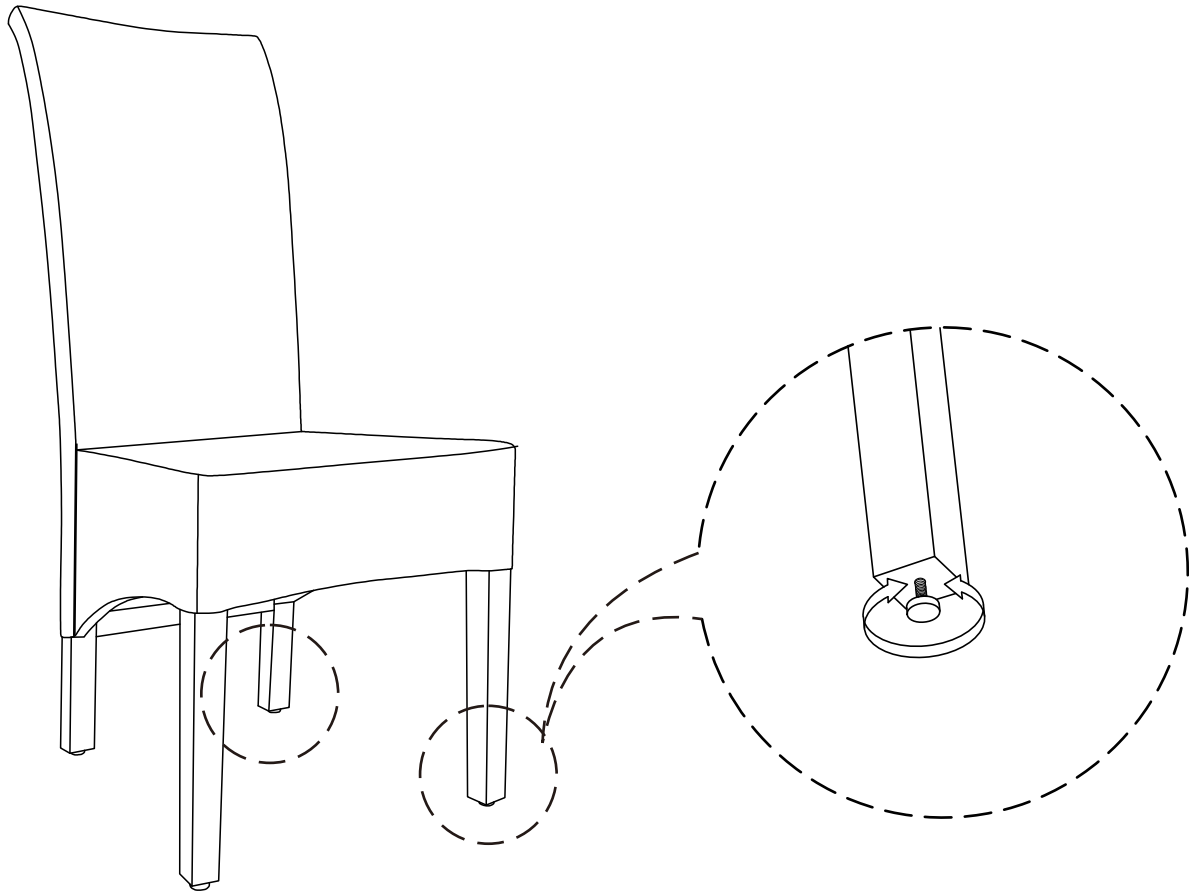


#2  x 4

#3  x 4

#4  x 1

STEP 3 : Carefully turn unit upright. Repeat steps 1-2 to assemble remaining chair.



NOTE: It is important to adjust levelers once fully assembled and upright.
Extend adjustable leveler until it's firmly in contact with the floor.
If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.