

TOOLS REQUIRED



Allen Wrench

(Included)



Phillips Screwdriver

(Not Included)



2 - People Recommended

ASSEMBLY RATING



EASY ----- DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION #24-03-05



Are you missing anything? Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	Check out our Quick Tips! We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling. Set up your workspace by laying the parts and hardware out separately, then begin!

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

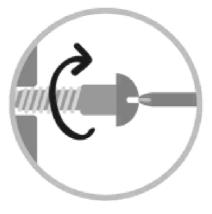

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

ARM CHAIR



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

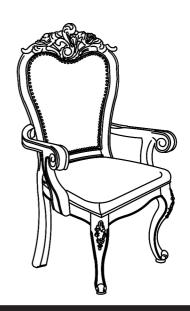

PARTS

















Chair Back

Chair Seat

Legs

Arm (L&R)

HARDWARE





7pcs x2



11pcs x2



11pcs x2









Bolt Ø5/16" x 3-1/4"

Bolt Ø5/16" x 1-3/4"

Lock Washer Ø5/16"

Flat Washer Ø5/16"x22mm









Allen Wrench M4

Screw #8 x 50mm

Exploded View

x 2 #1 #4 #2 #3


Align the Leg (#3) to the Chair seat (#2) and secure by using Bolt (#B) with Lock washer (#C) an Flat washer (#D).

Part #2 x1pc Part #3 x2pc

Hardware #B x4pcs

Hardware #C x4pcs

Hardware #D x4pcs

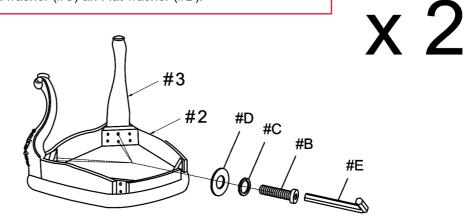


x 2


Part #1) x1pc


Hardware #B x1pc

Hardware #O x1pc

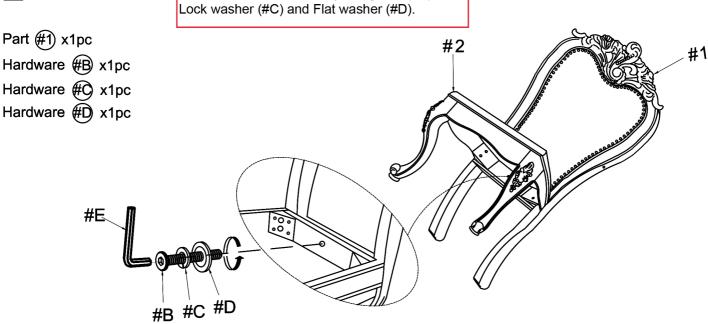

Align the Chair seat (#2) to the Chair back (#1) and secure at the center by using Bolt (#B) and

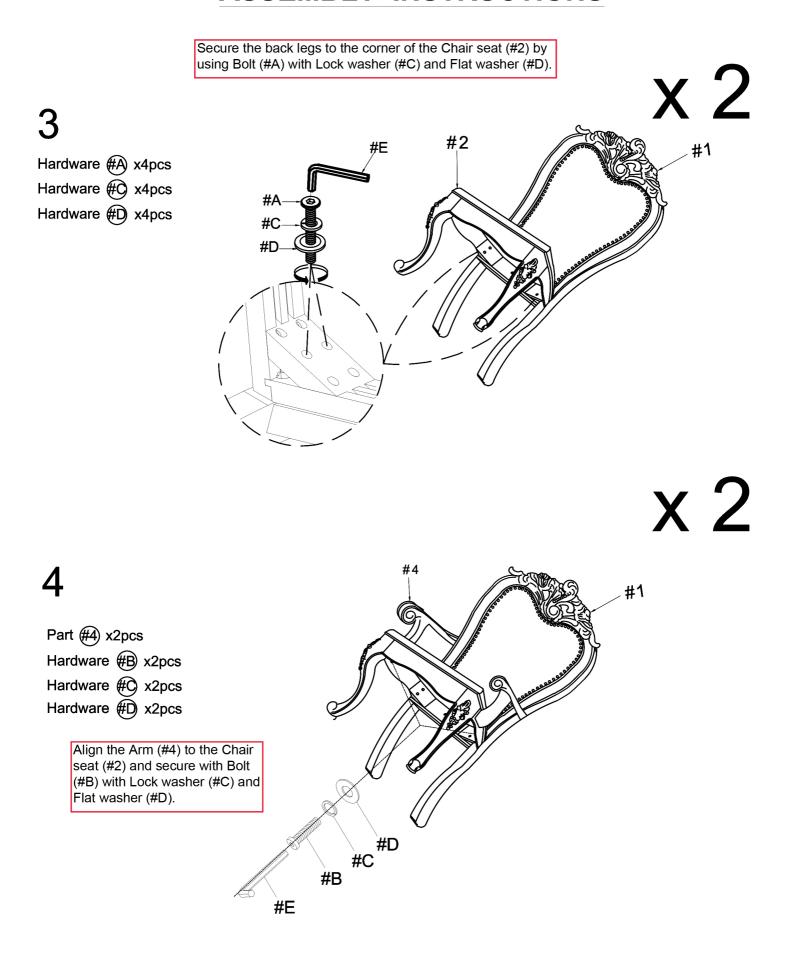

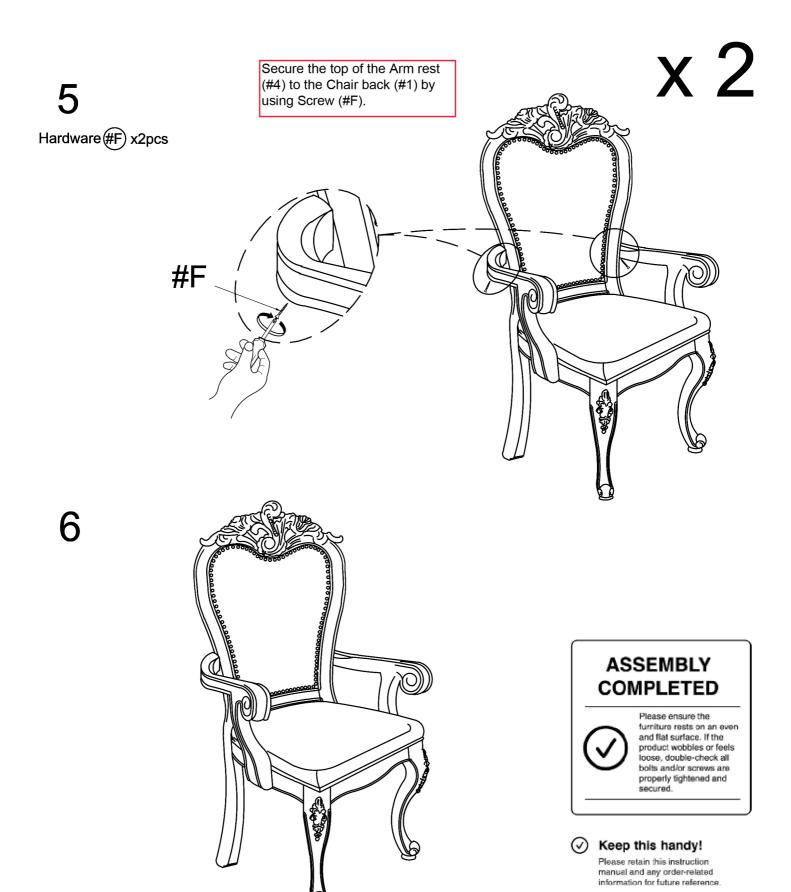

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.

Lift, don't drag!

the placement.

To avoid damage to product please always LIFT the product when transporting of adjusting