
 
PFC70FP36 Assembly Instructions

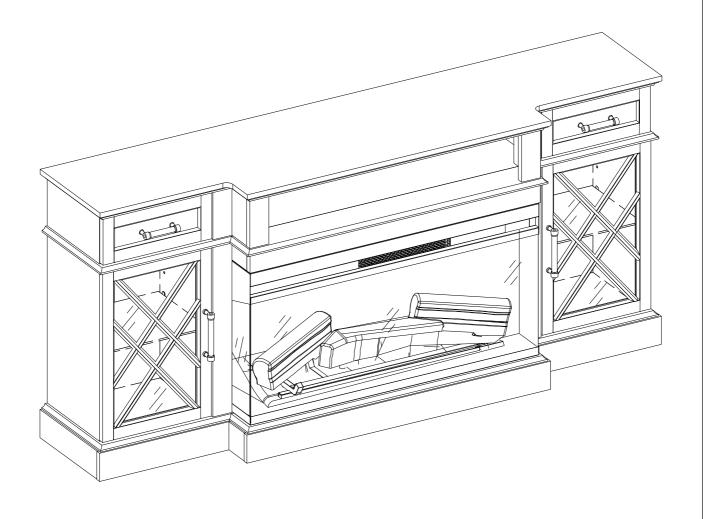

General Assembly Guidelines

 
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.



 VII. Power tools should not be used to assemble this product.




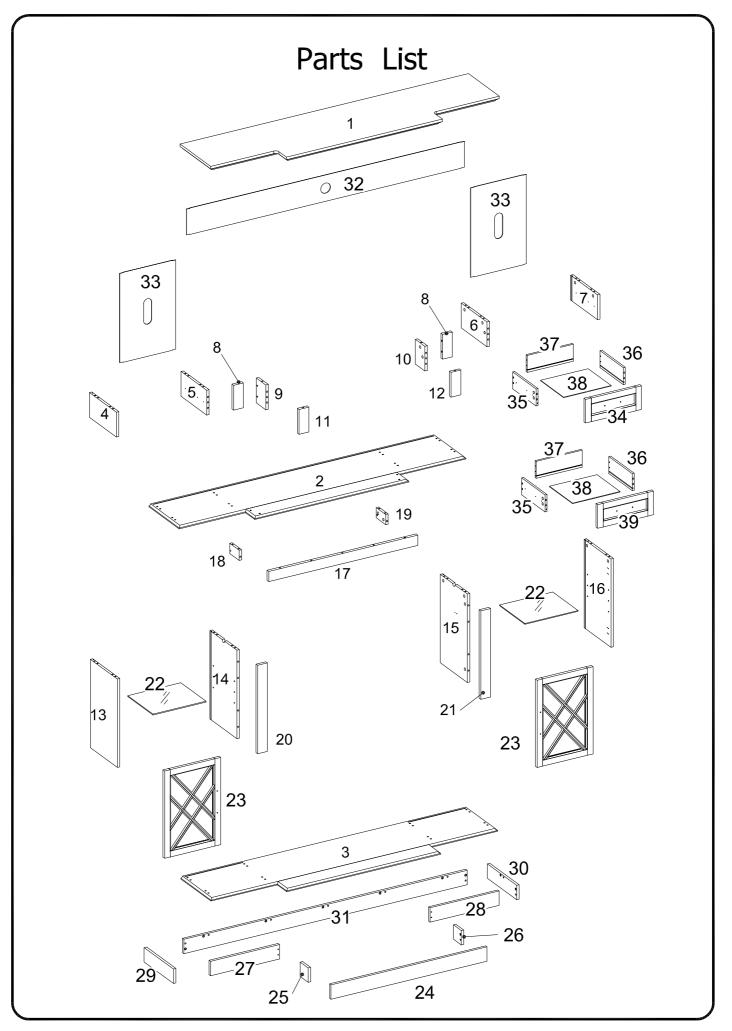


		Hardware	List		
Α		Ø8x30mm	Wood dowel	54	pcs
В		Ø6x35mm	Cam bolt	39	pcs
С		Ø15x11mm	Cam lock	31	pcs
D			Sticker	39	pcs
Е		Ø15x9.5mm	Cam lock	8	pcs
F			Shelf support pin	8	pcs
G		Ø6x13mm	Bolt	40	pcs
Н			Glue	1	pcs
Ι	annan 🕞	Ø6x50mm	Screw	20	pcs
J			Plastic wedge	16	pcs
K	(D)	Ø3x17mm	Flat-head screw	16	pcs
L		M 4	Hex key	1	pcs
М	<i>{</i> }	Ø3x12mm	Screw	12	pcs
N				6	pcs
0	(%)	Ø4x38mm	Screw	14	pcs
Р			Connector	20	pcs
Q	9		Handle	2	pcs
R		Ø4x12mm	Handle bolt	4	pcs
S	9		Handle	2	pcs
Т			L shape bracket	2	pcs
U	(Junuum)>	Ø4x12mm	Screw	4	pcs
V	(a) (b) (c) (c) (d)	10"	Drawer slider	2	sets
W		Ø3.5x12mm	Screw	24	pcs


Hardware List


X		Ø26mm	Europe hinge	4	pcs
Υ	(A)DIIIIIIO-	Ø3.5x14mm	Hinge screw	24	pcs
Z		Ø4x25mm	Handle bolt	4	pcs
AA			Led strip light	2	PCS
BB	ann line	Tipping Restraint Hardware		2	sets
СС		3622-L-D7	Fireplace Insert	1	pcs

 



Philips head screwdriver required for assembly (not included)

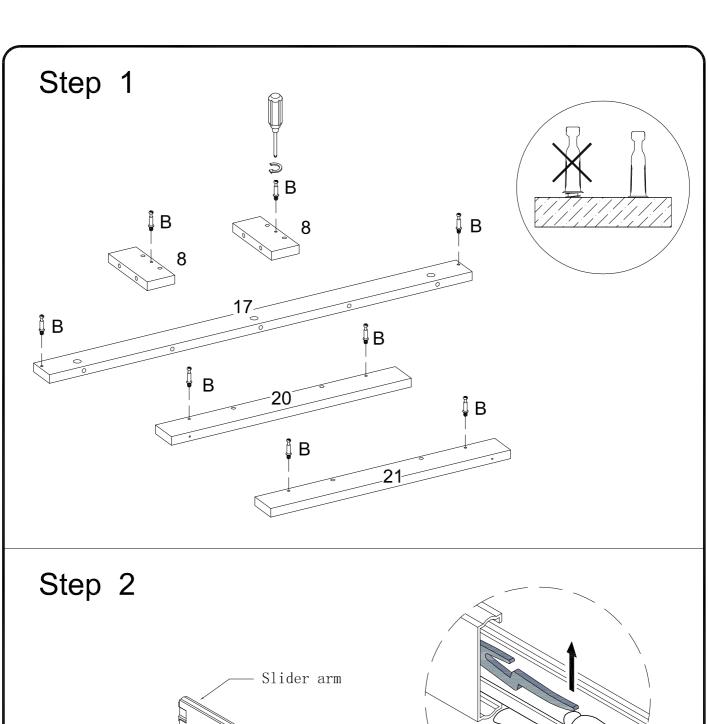


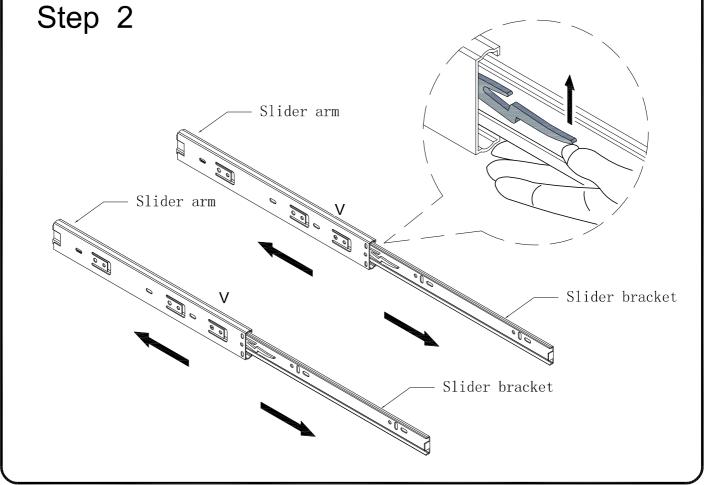


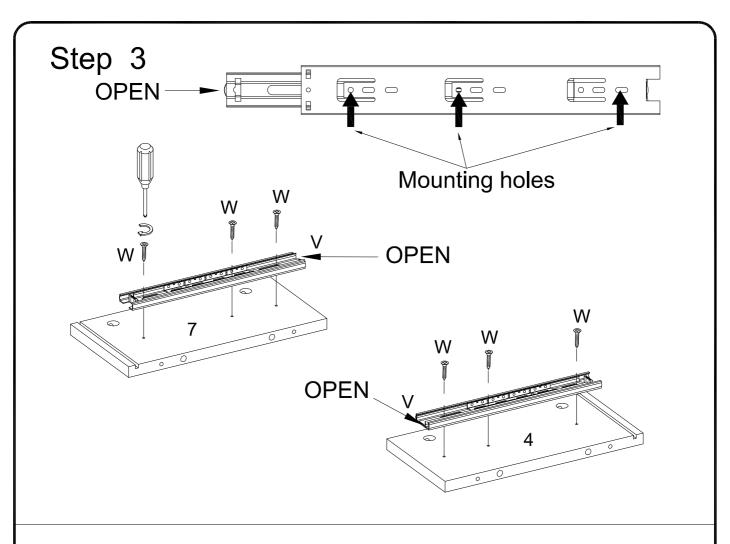


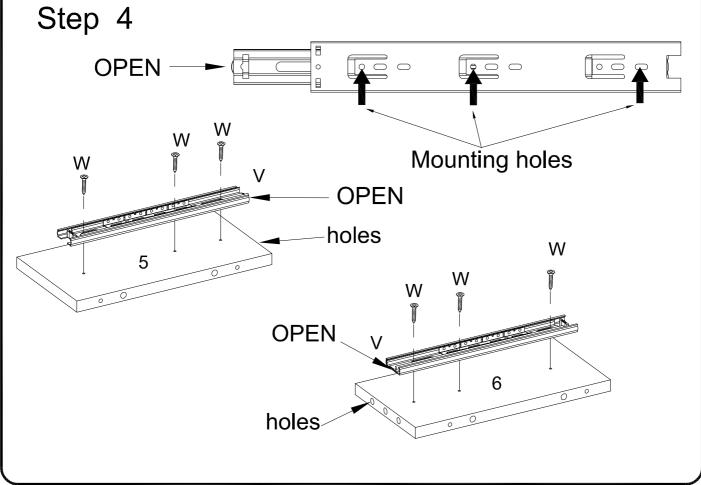


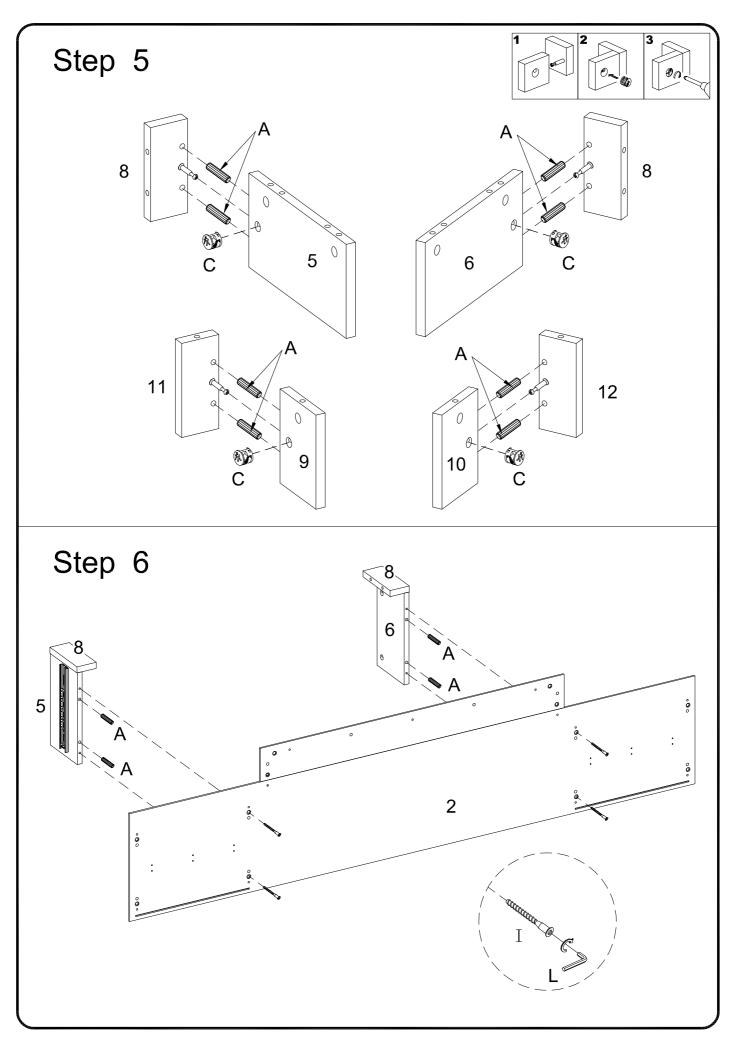


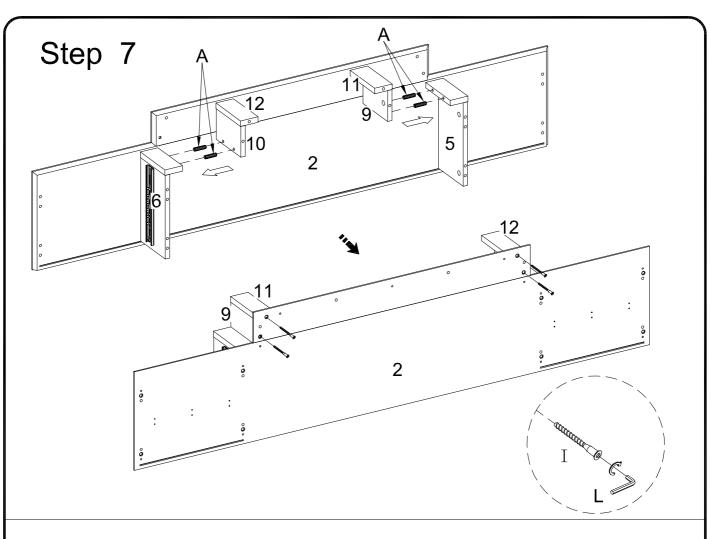


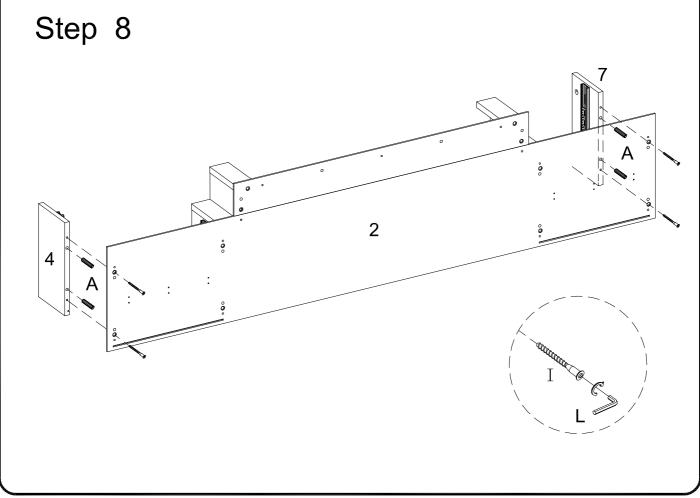


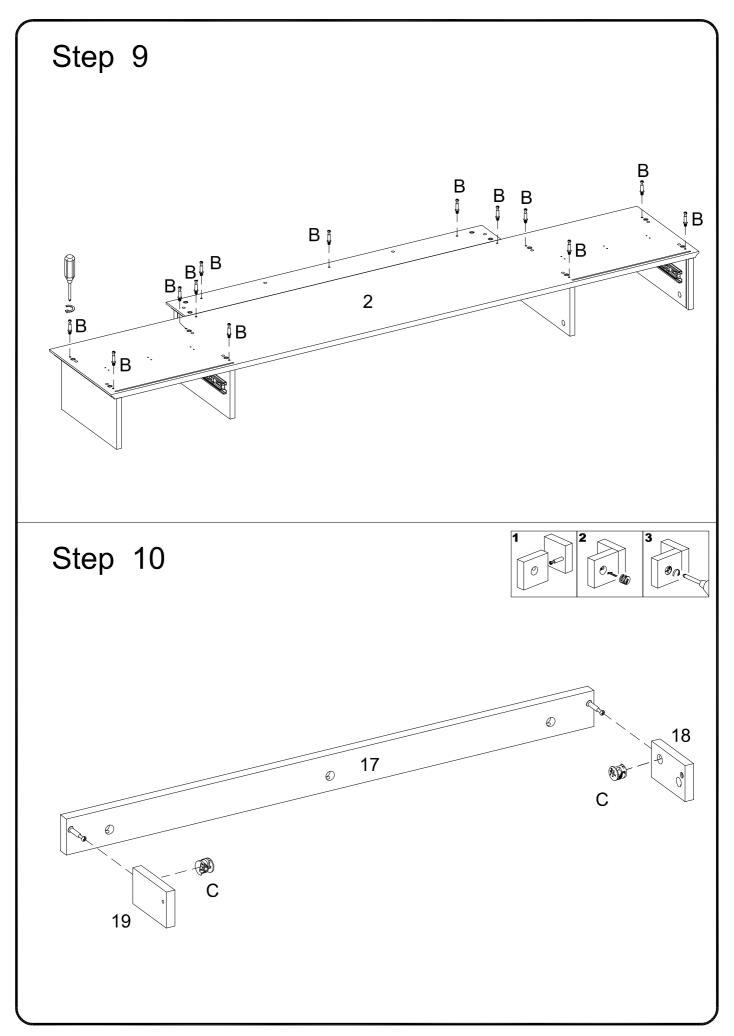


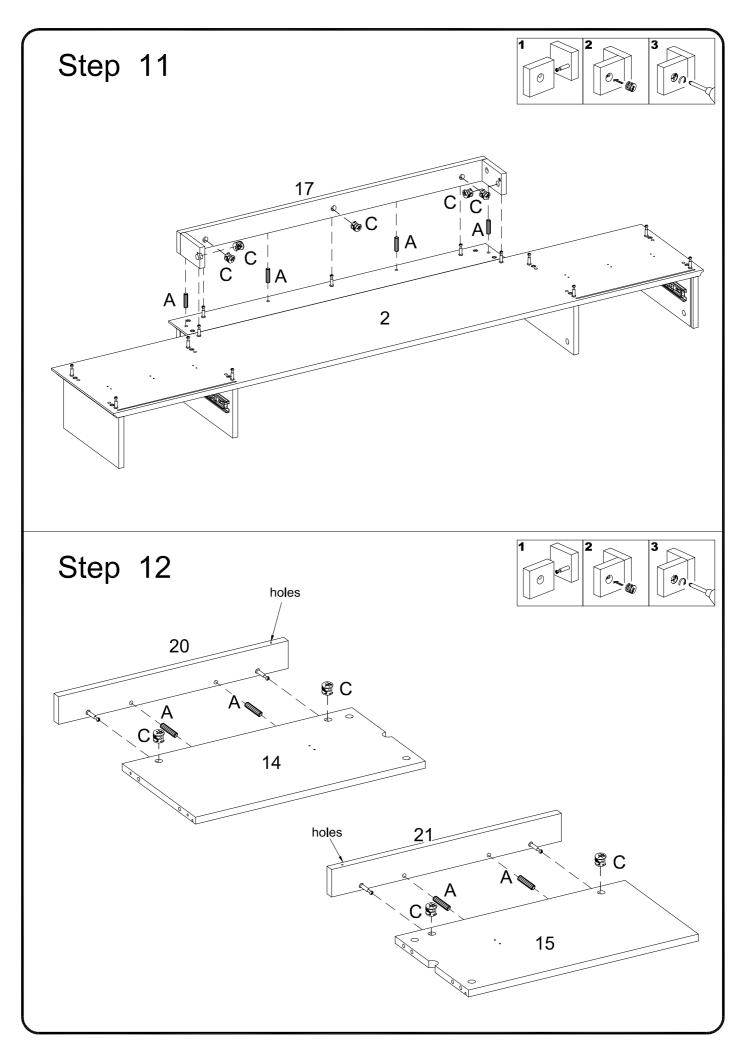


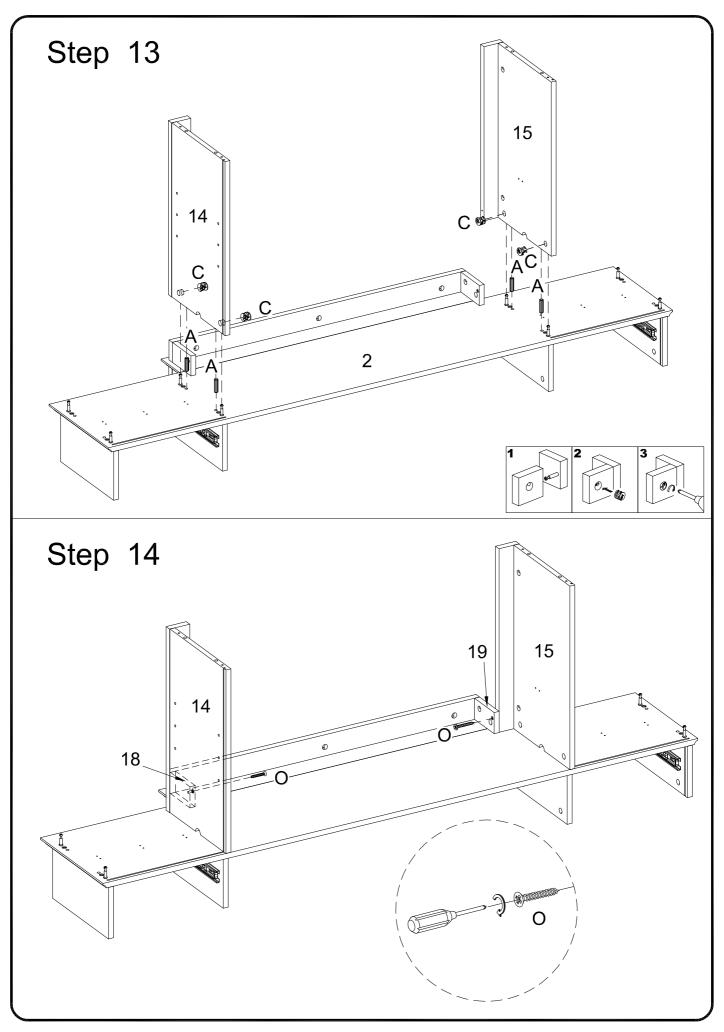


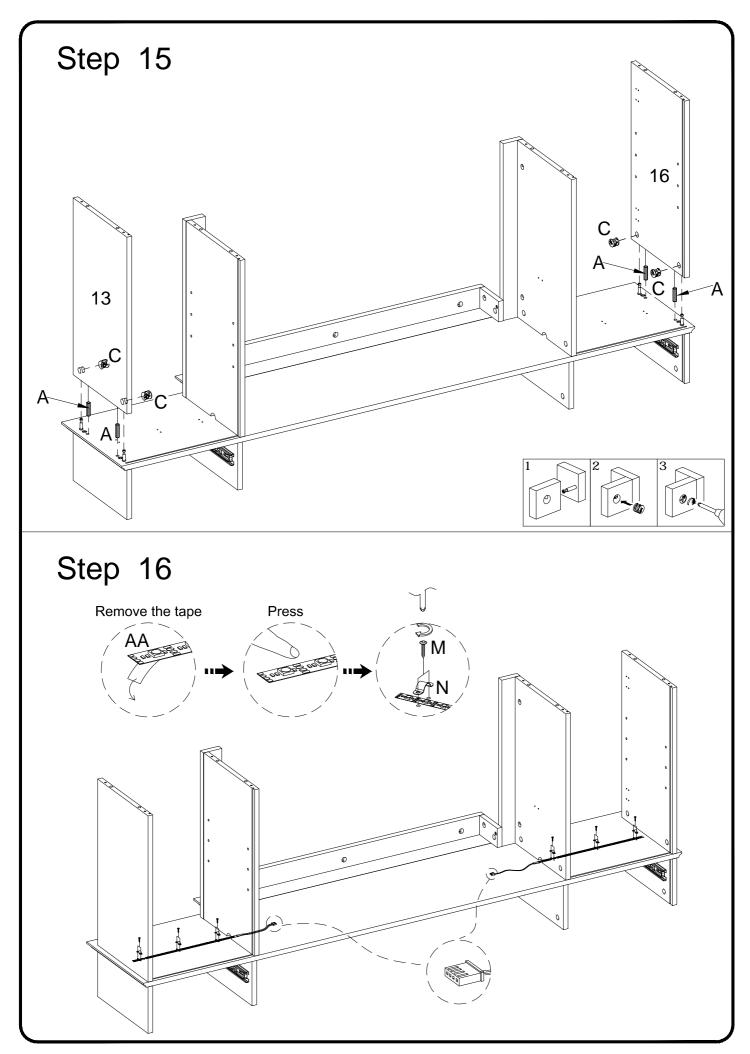


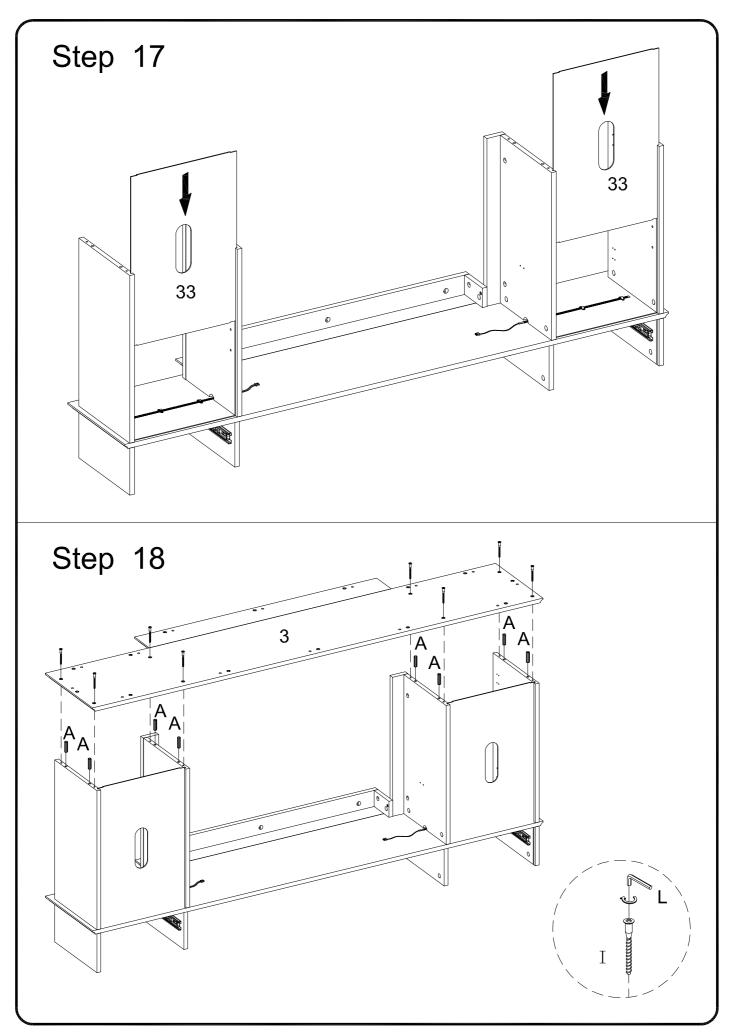


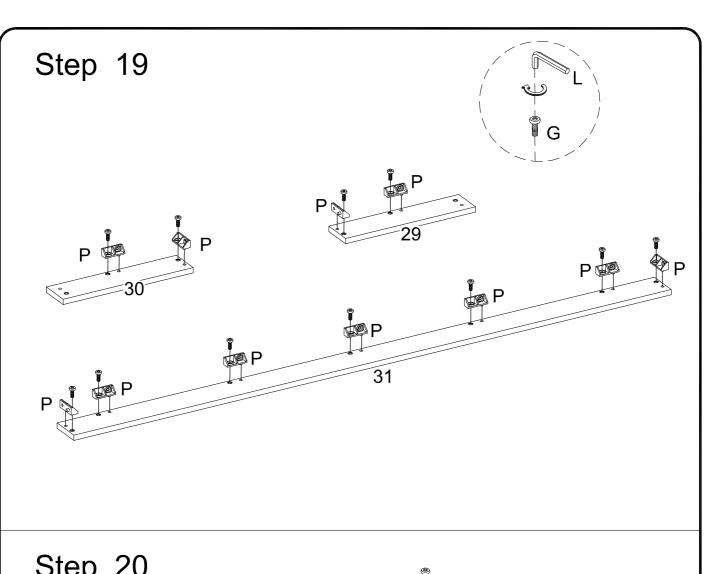


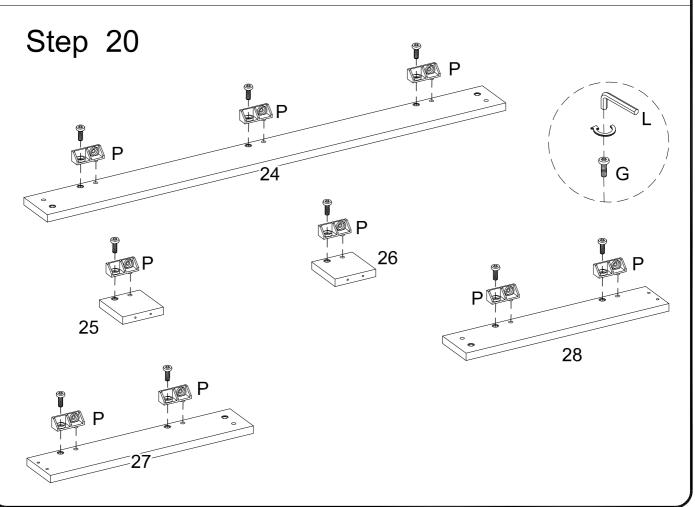


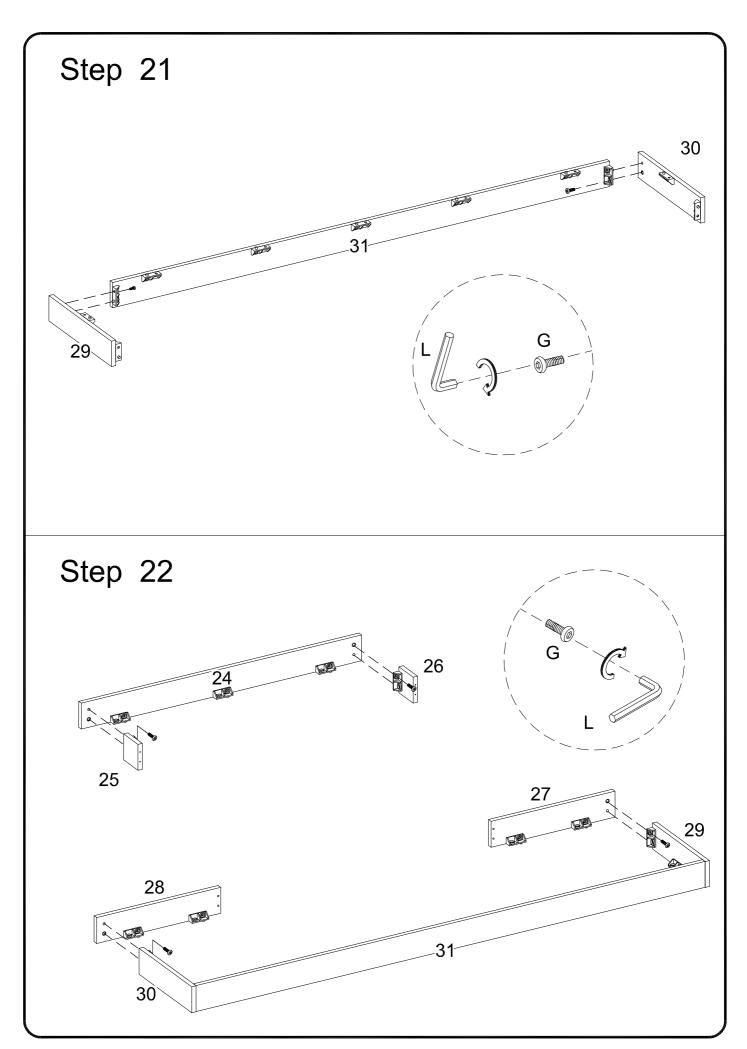


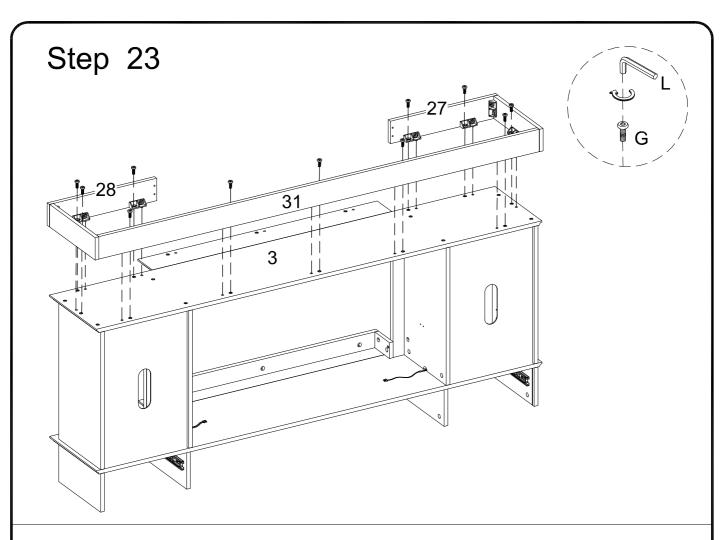


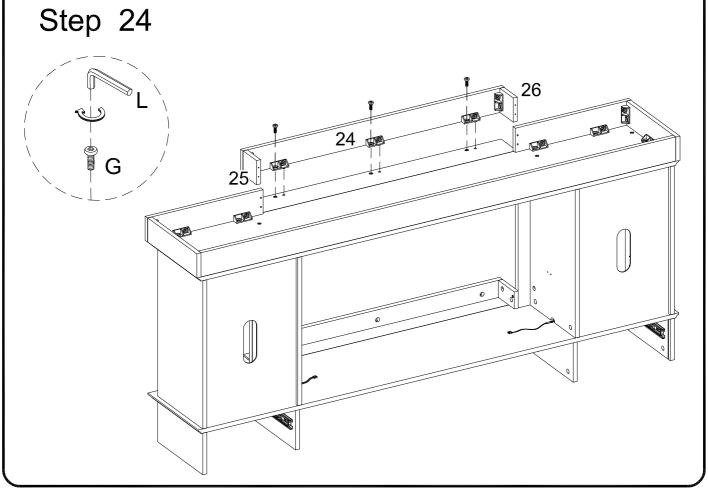


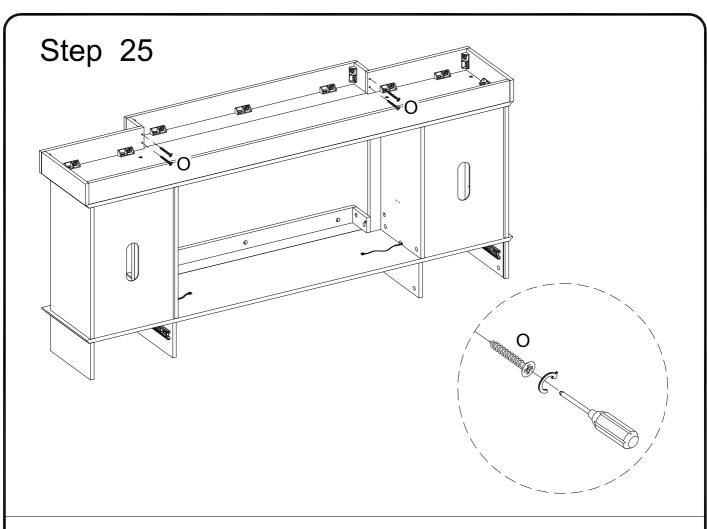


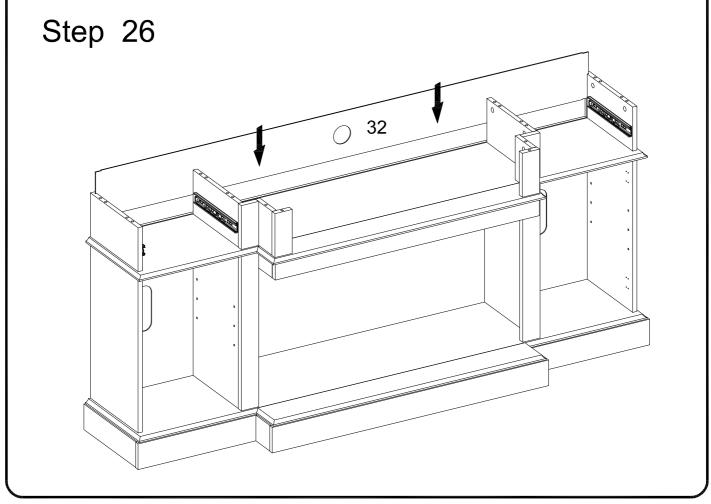


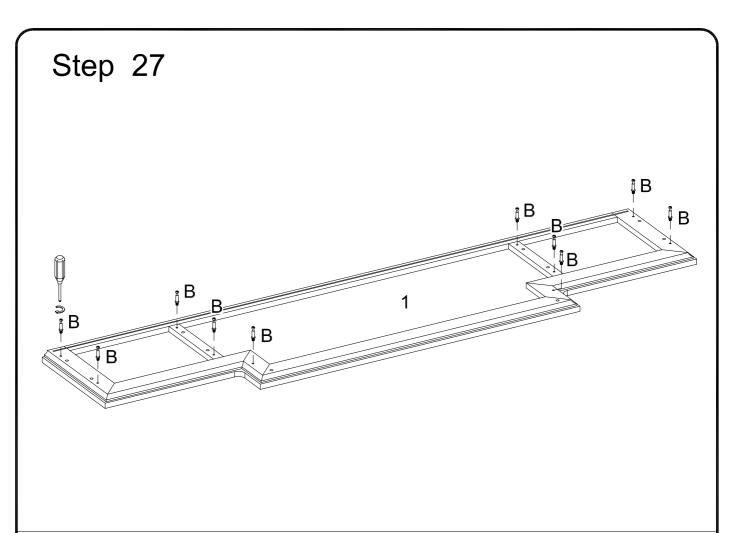


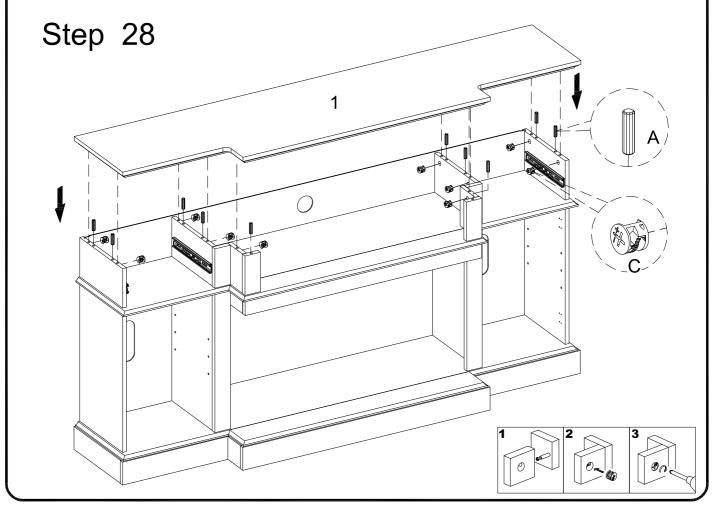


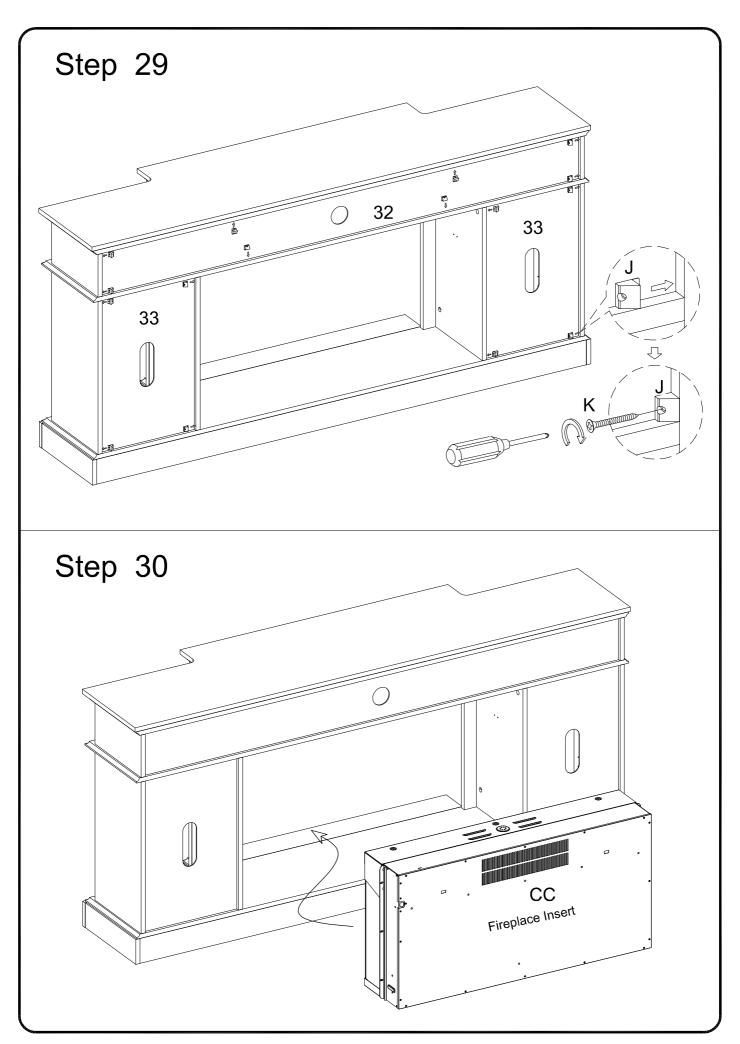


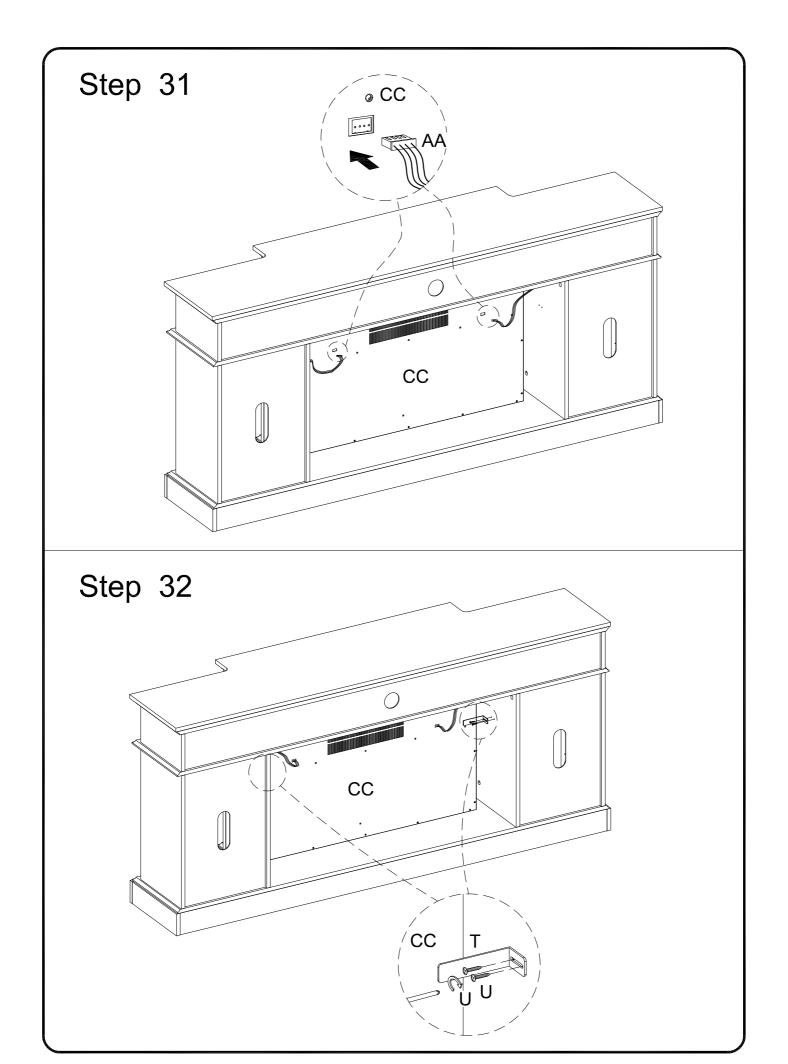


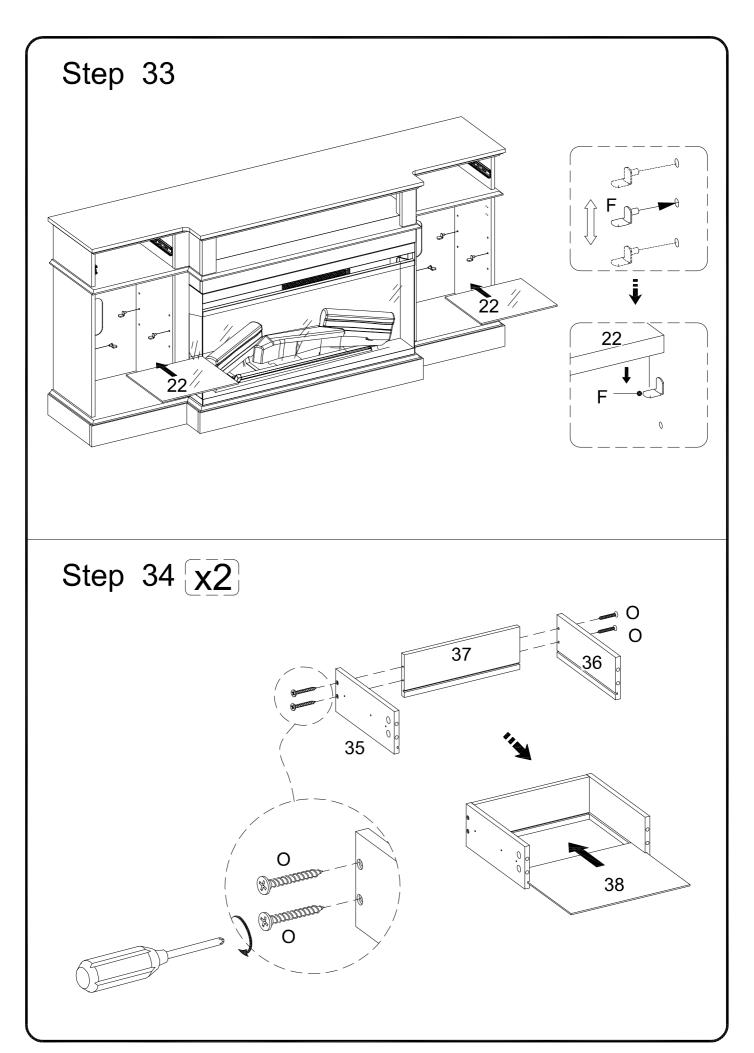

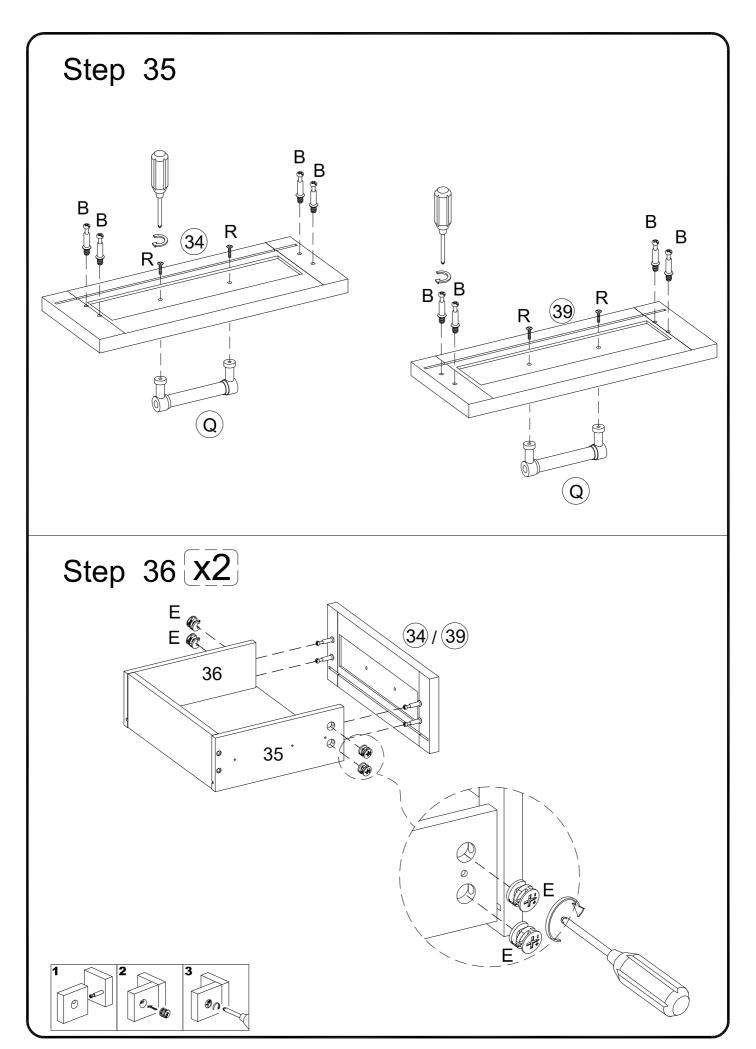

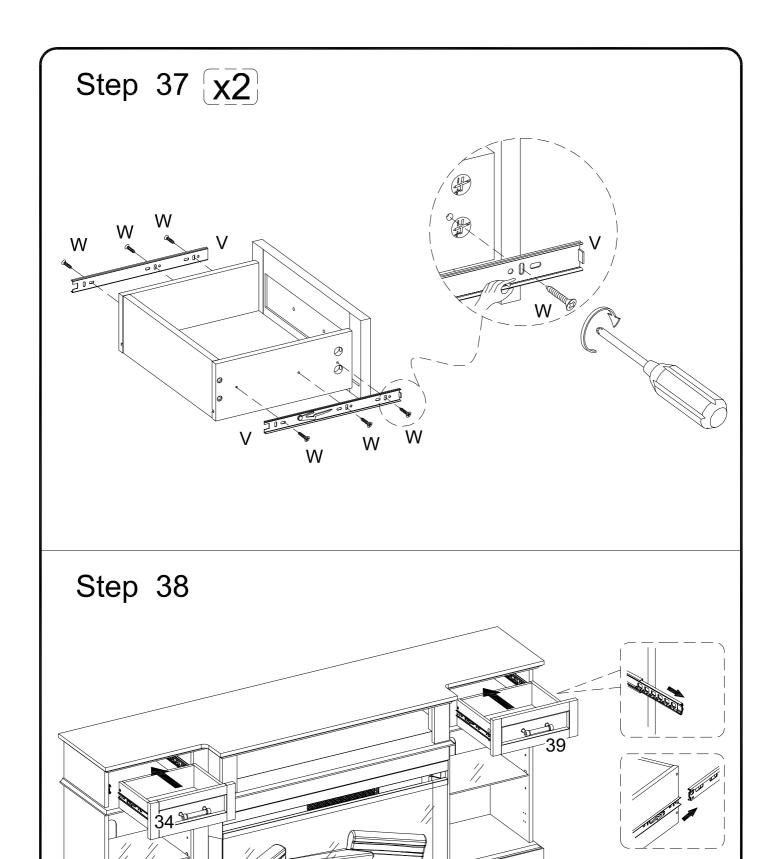

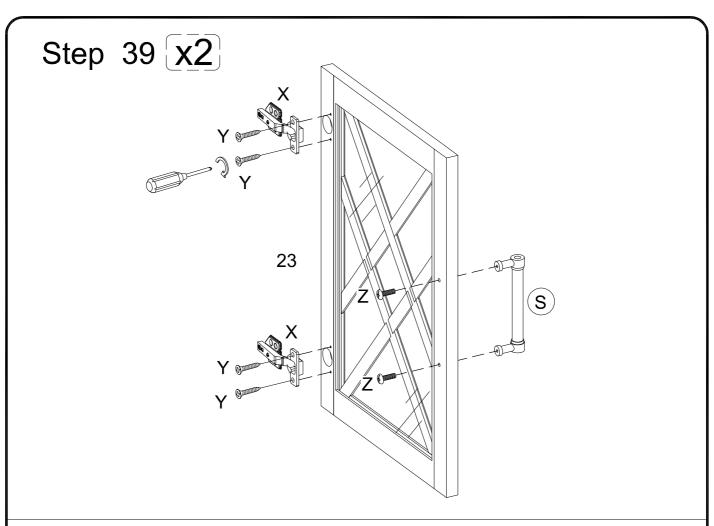


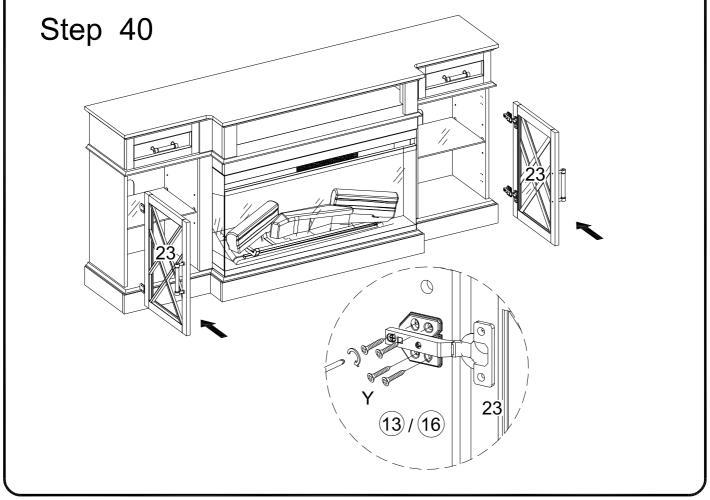


Step 41

WARNING

 Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

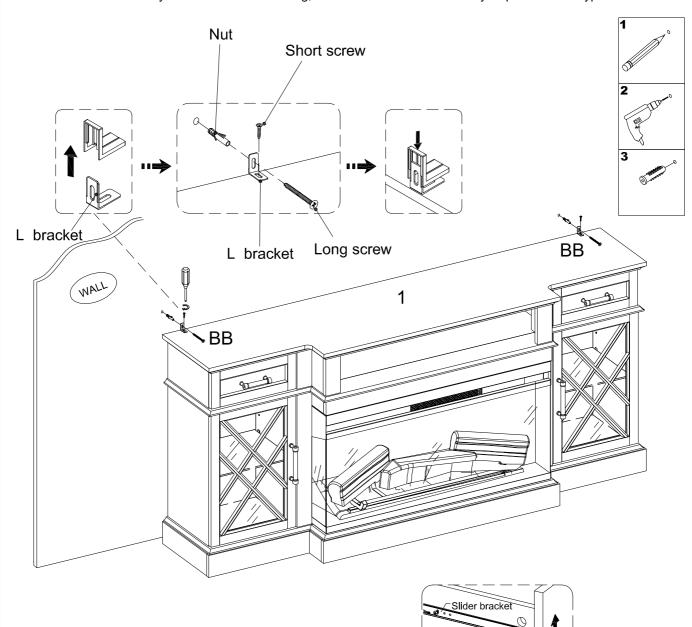



Stick stickers(D) on cam locks(C,E)

Note

If the drawer does not go in smoothly.

Press or lift the plastic release lever.

Pull out the slider bracket from the slider arm.

Loosen the screws (W) on slider brackets,

You can adjust up or down by a few mm.

Then tighten back up.

Finally re-assembled the drawer until they were going in smoothly well.

Final Assembly