 


AI-ILSC70FP30

 
Assembly Instructions

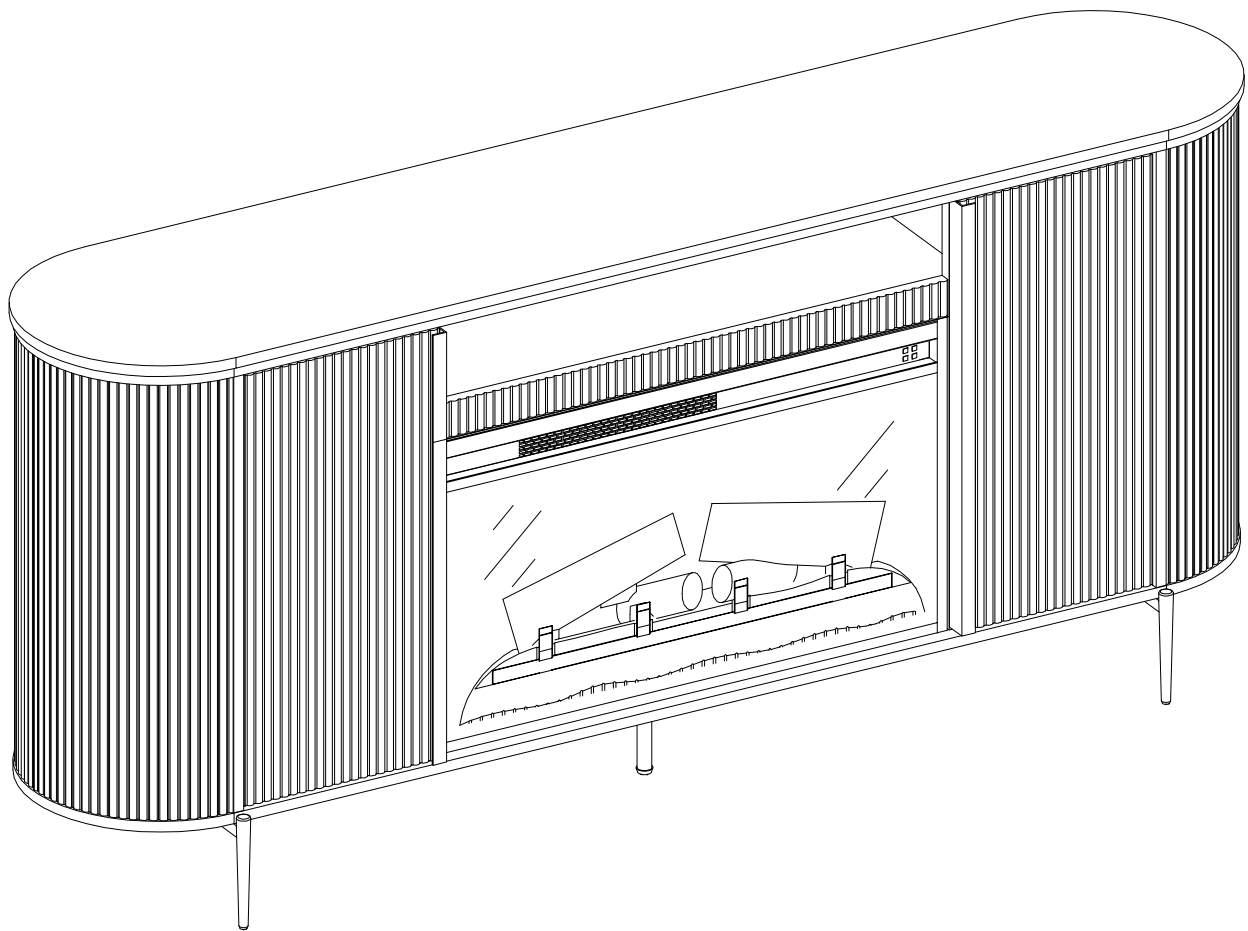


Customer Service E-mail Address : ymyjfurniture@163.com

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

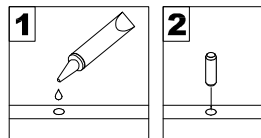

 
In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

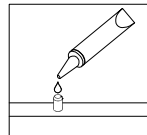

 
- VI. A Phillips head screwdriver is required for the assembly of this product.

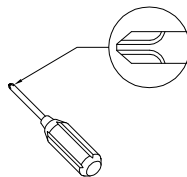

 
- VII. Power tools should not be used to assemble this product.

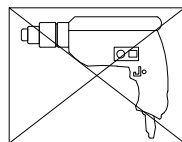

 
- VIII. Drill may be needed for securing product to wall.
- IX. Concealed hinges are three-way adjustable.

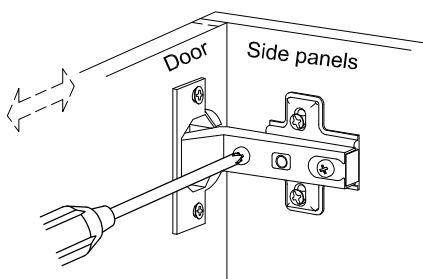

Horizontal
by screw adjustment

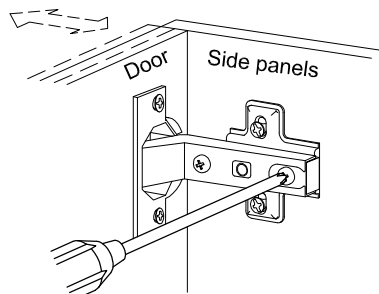 


  In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

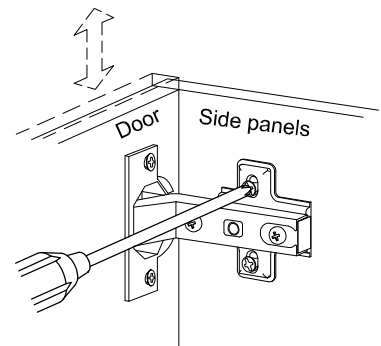
 




 

 


 
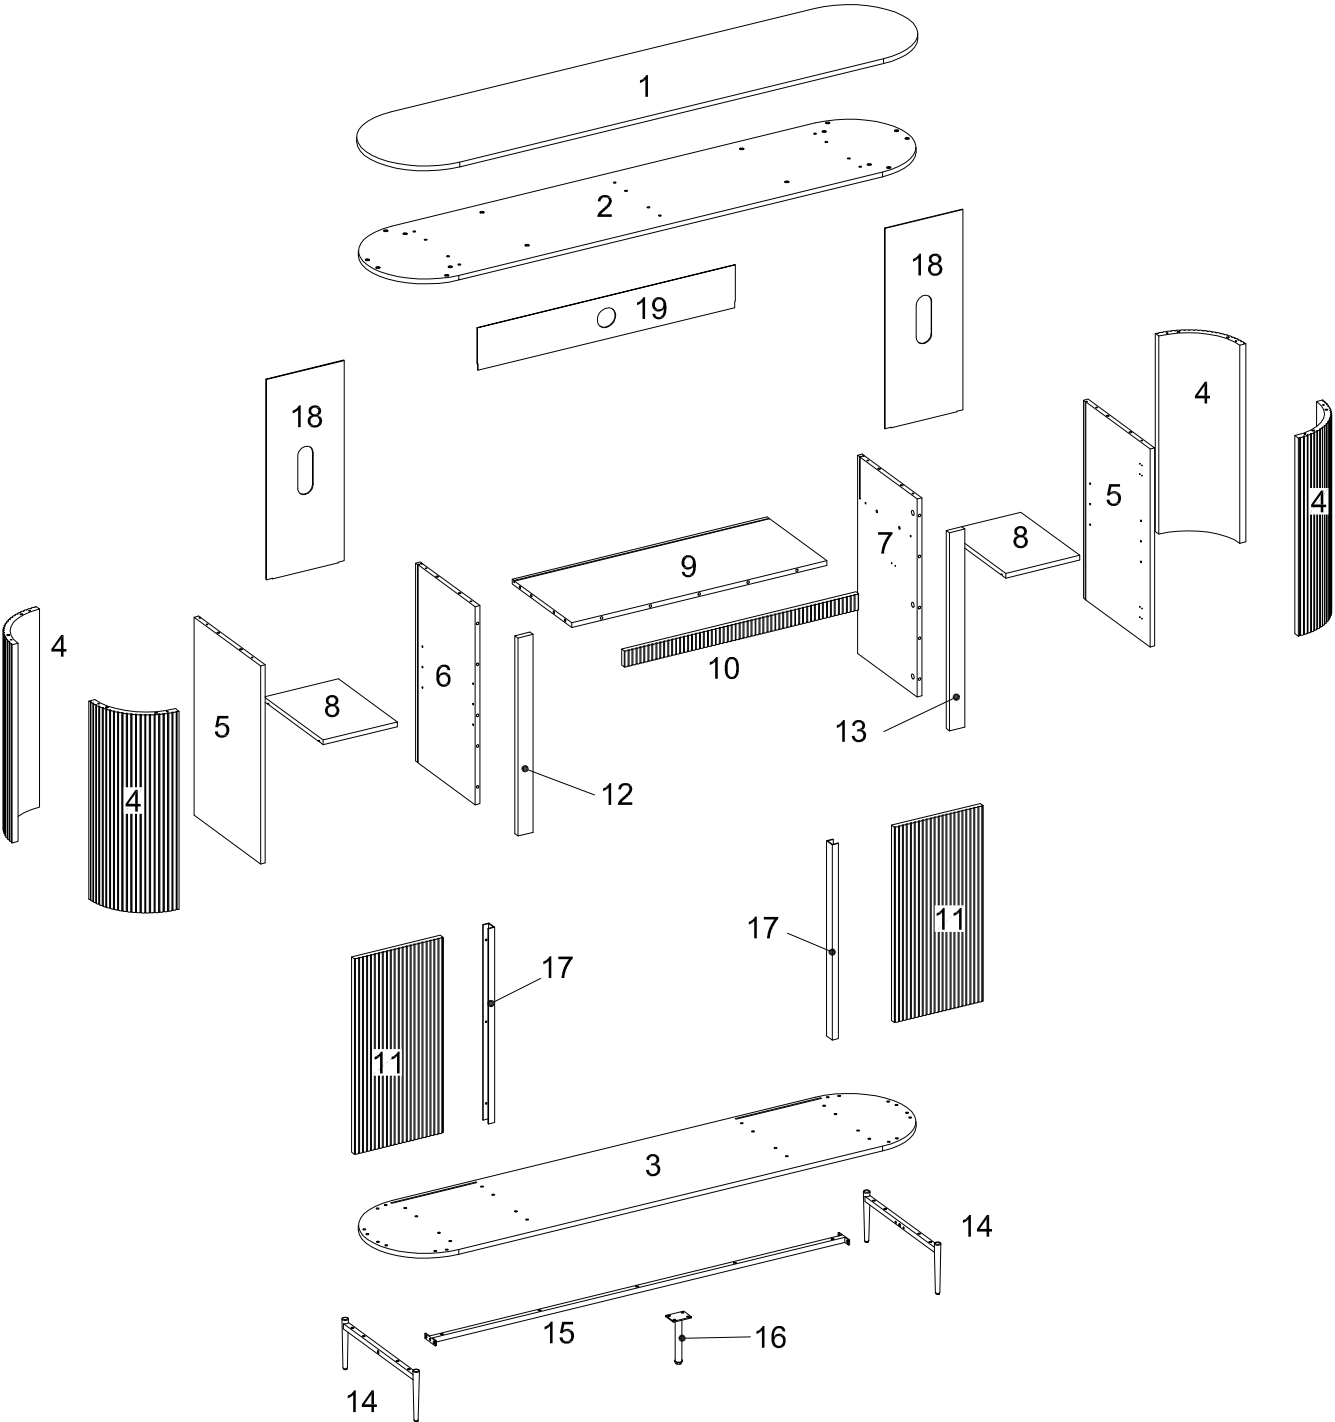 

 




 
 

 



Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List




Hardware List

| | | | | |
|---|---|--------------|----------------------------|--------|
| A |  | Ø8x30mm | Long dowel | 42 pcs |
| B |  | Ø6x35mm | Cam bolt | 13 pcs |
| C |  | Ø8x5x16mm | Shelf pin | 8 pcs |
| D |  | Ø30mm | Cam cover | 13 pcs |
| E |  | | Glue | 1 pc |
| F |  | | Plastic bracket | 16 pcs |
| G |  | Ø3x17mm | Flat-head screw | 16 pcs |
| H |  | Ø8x20mm | Short dowel | 6 pcs |
| J |  | Ø3.5x14mm | Handle Screw | 6 pcs |
| K |  | Ø15x11mm | Cam lock | 13 pcs |
| L |  | Ø6x22mm | Bolt | 6 pcs |
| M |  | Ø6x50mm | Screw | 32 pcs |
| N |  | Ø3.5x14mm | Screw | 4 pcs |
| P |  | M 4 | Allen wrench | 1 pcs |
| Q |  | Ø6x13mm | Bolt | 8 pcs |
| R |  | Ø6x25mm | Bolt | 15 pcs |
| S |  | | Metal plate | 2 pcs |
| T |  | | Tipping Restraint Hardware | 2 set |
| U |  | | Soft hinge | 4 pcs |
| V |  | Ø3.5x14mm | Hinge screw | 24 pcs |
| W |  | | L shape bracket | 2 pcs |
| X |  | Ø4x12mm | Screw | 4 pcs |
| Y |  | RV30V80L-MT1 | Fireplace Insert | 1 pcs |


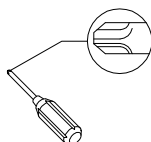 


Philips head screwdriver required for assembly
(not included)


 
Step 1

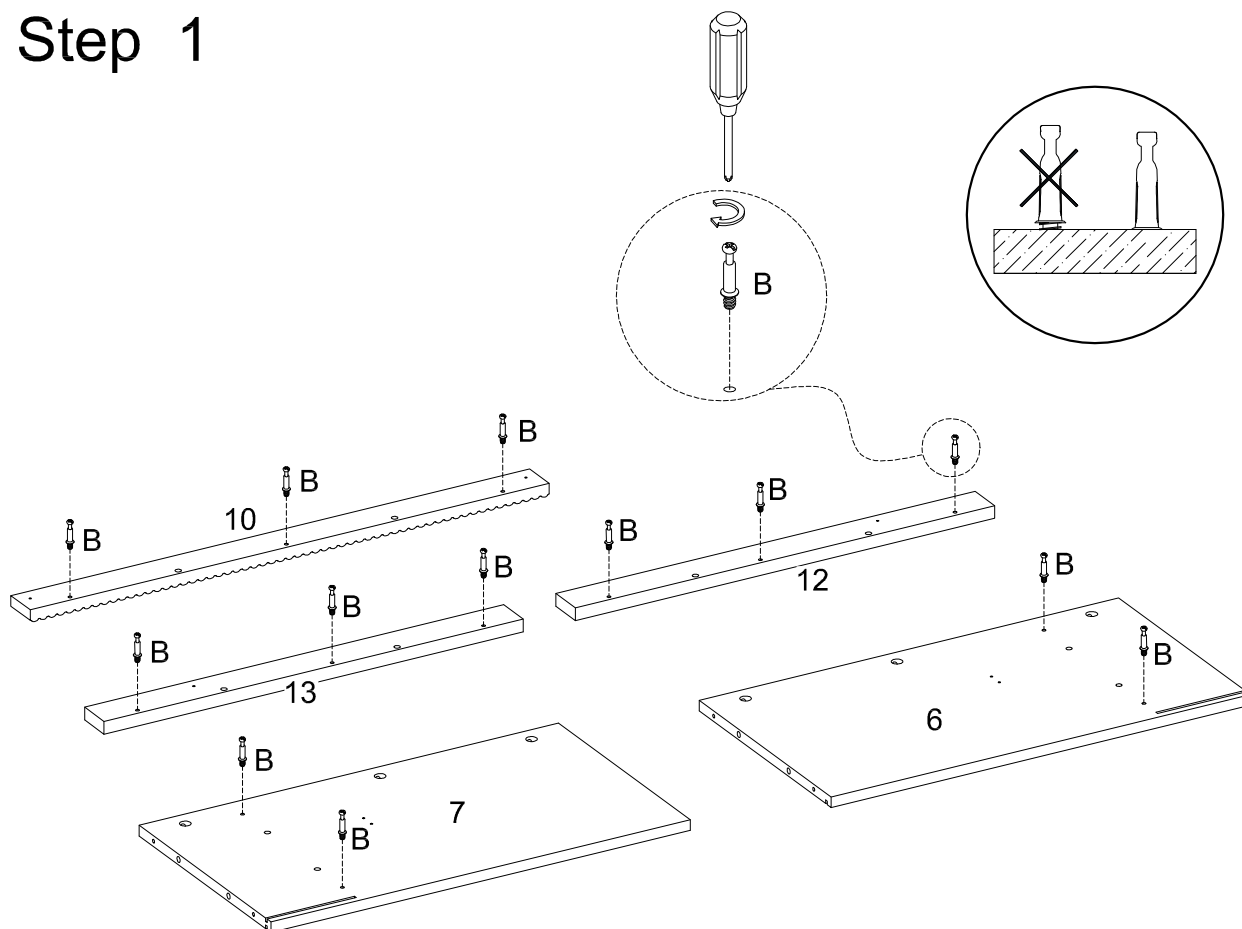

 
 
Step 2

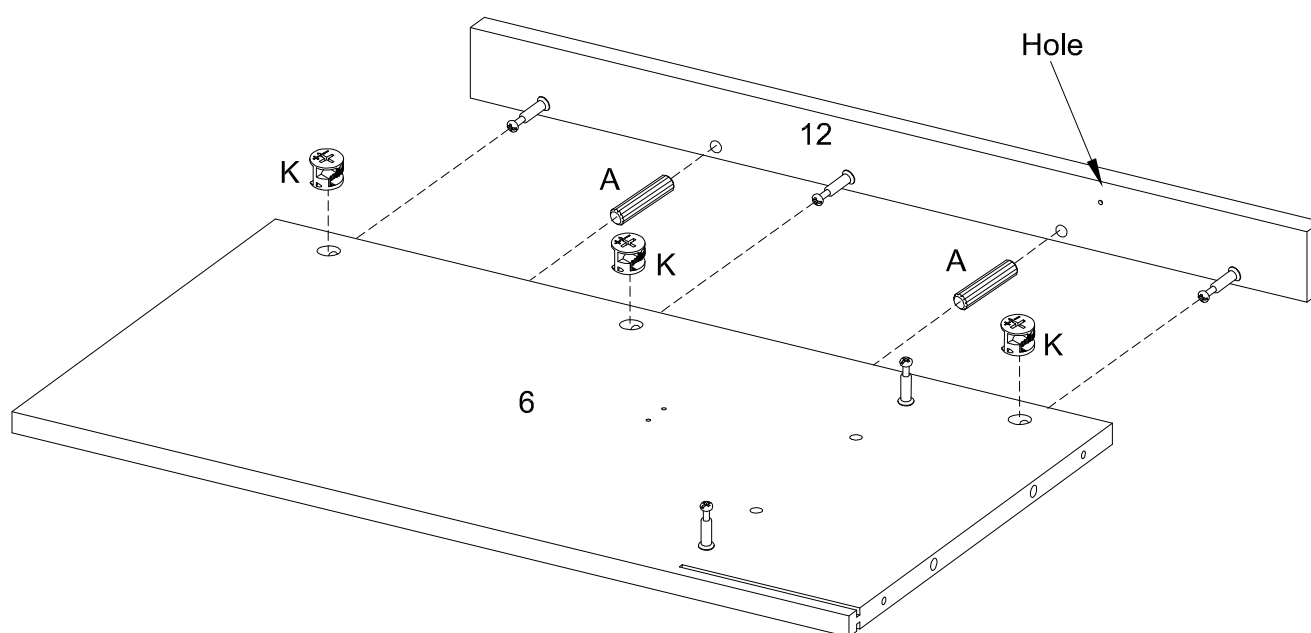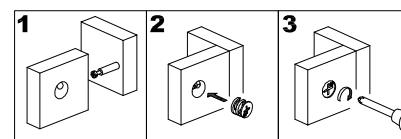

 
 
Step 3

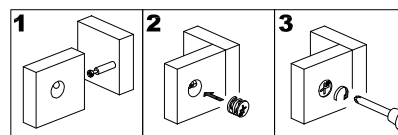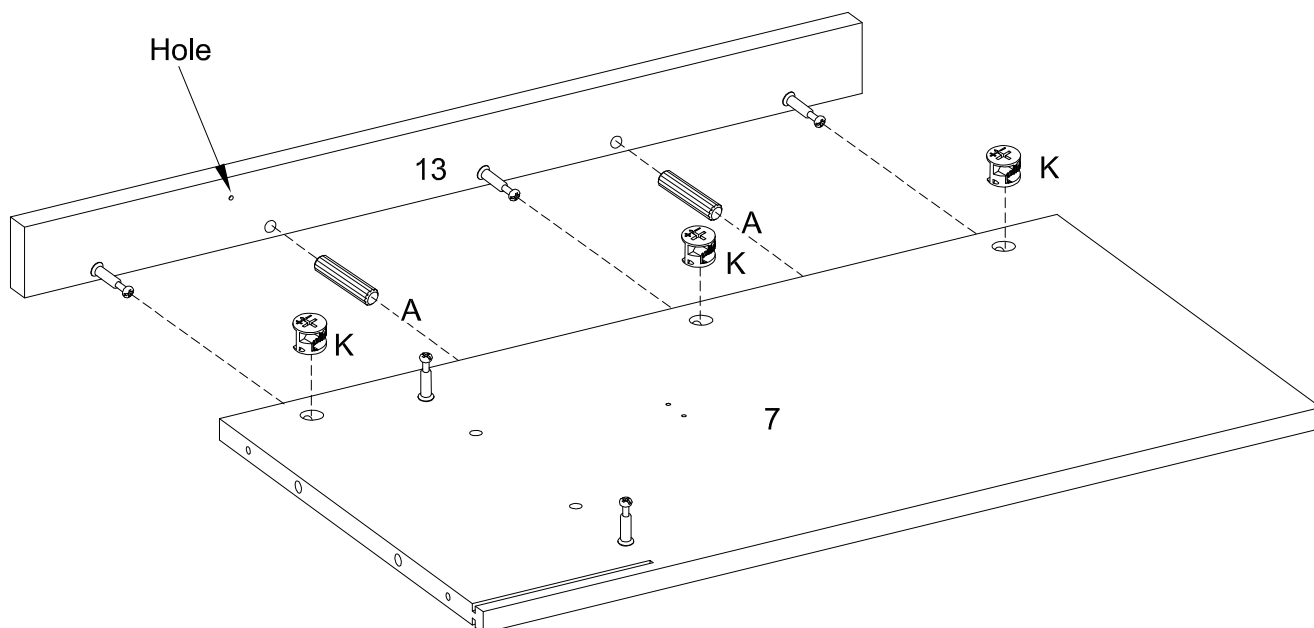

  
Step 4

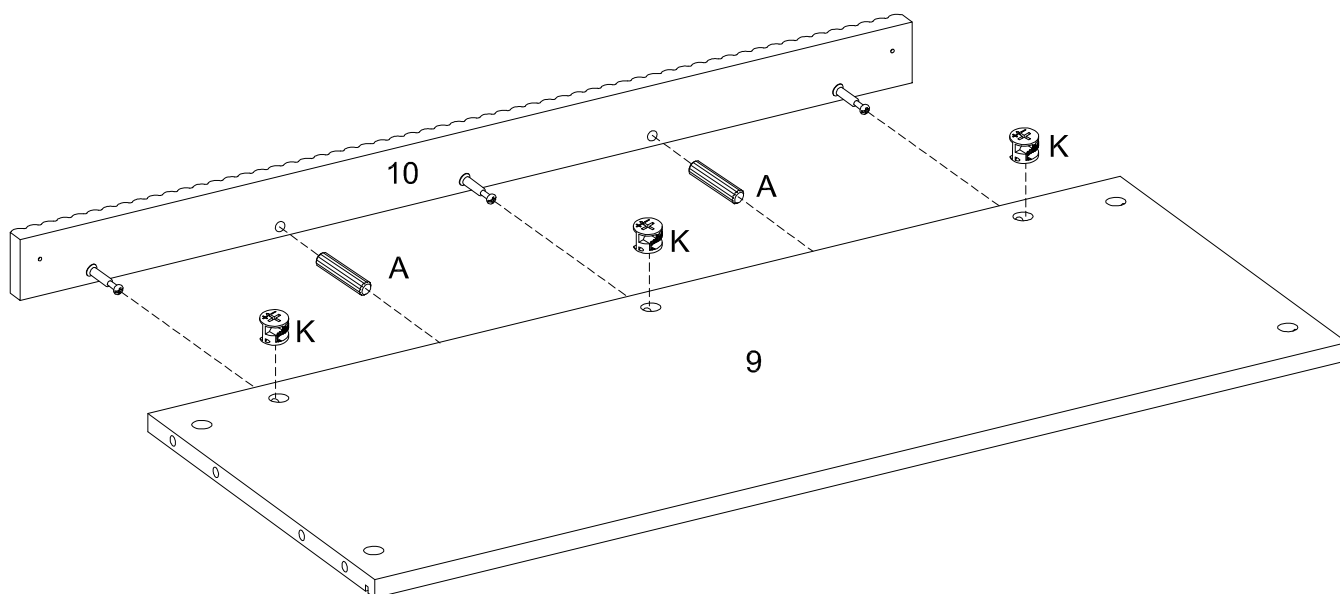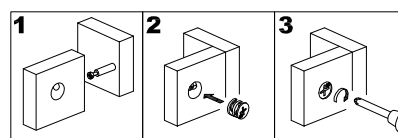

  
Step 5

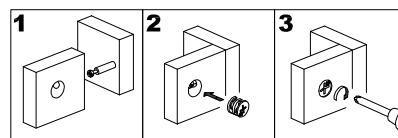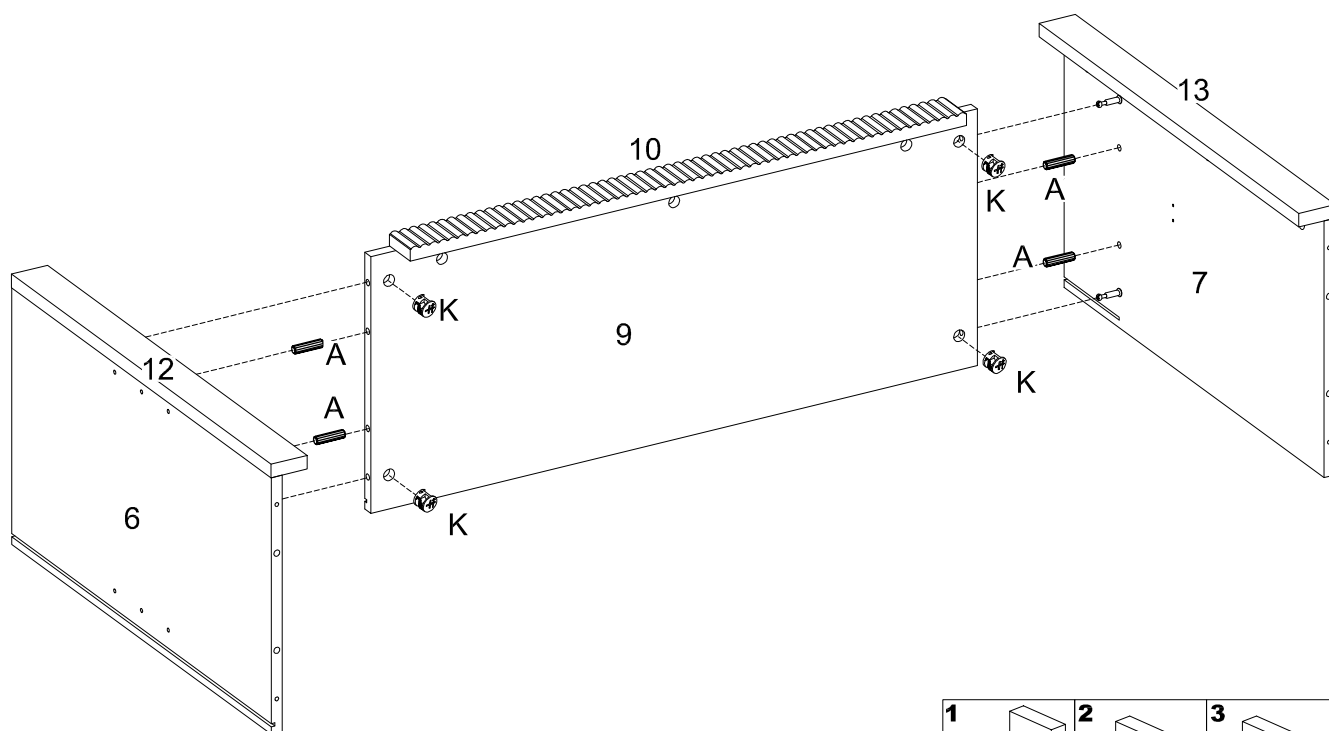

 
Step 6

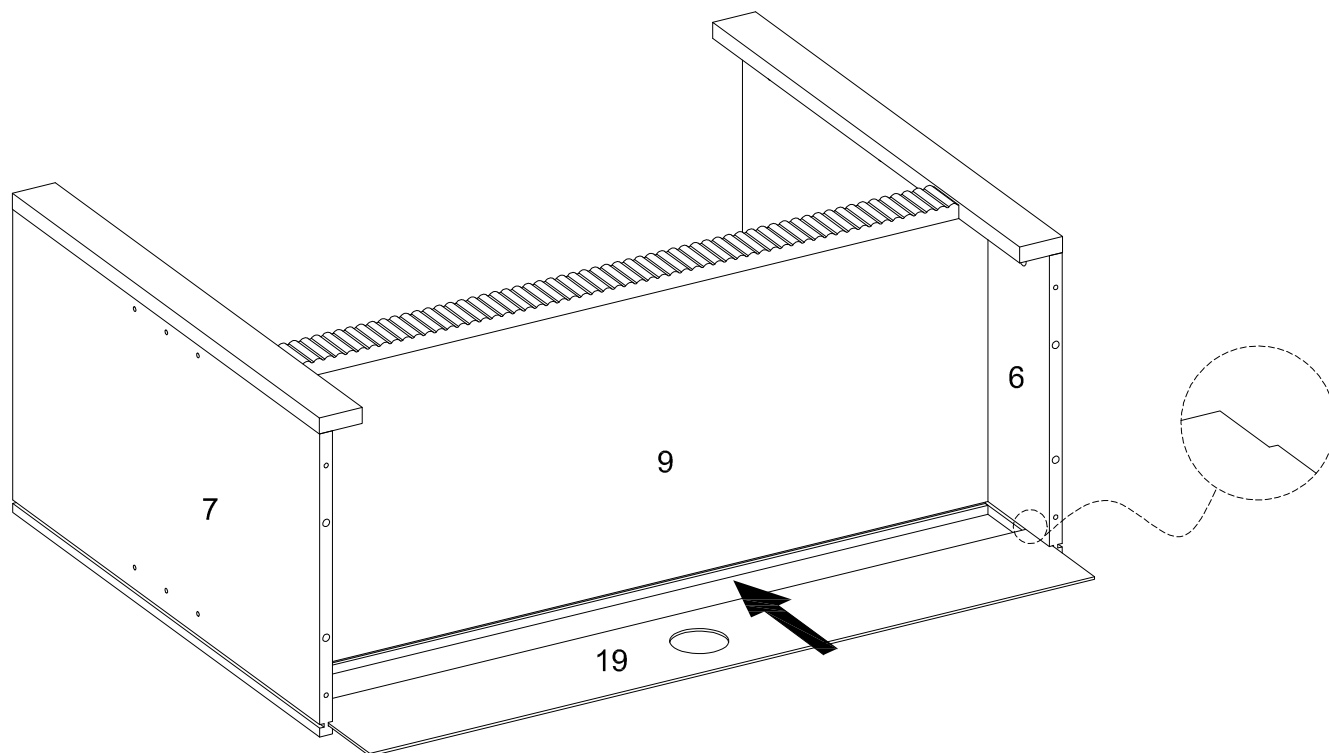

 
Step 7

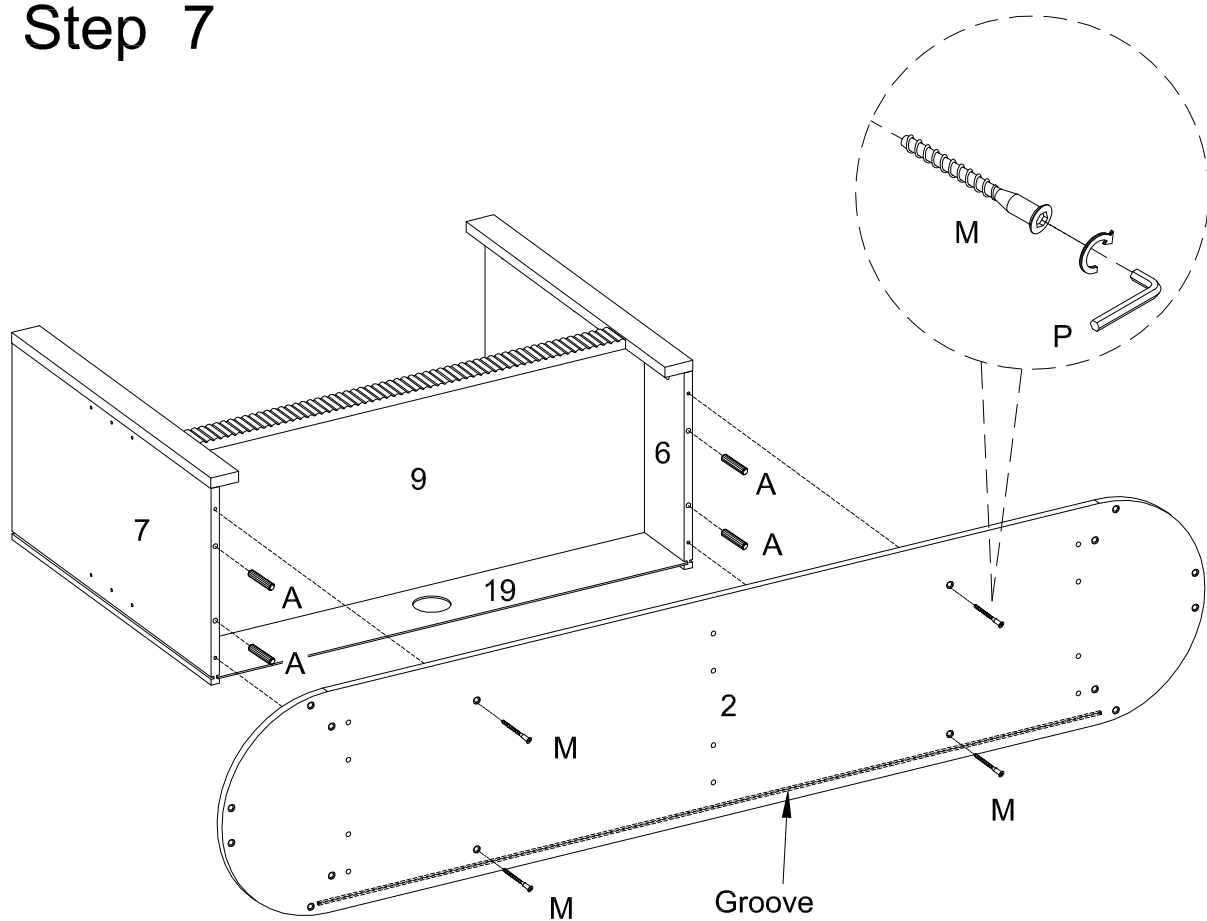

 
Step 8

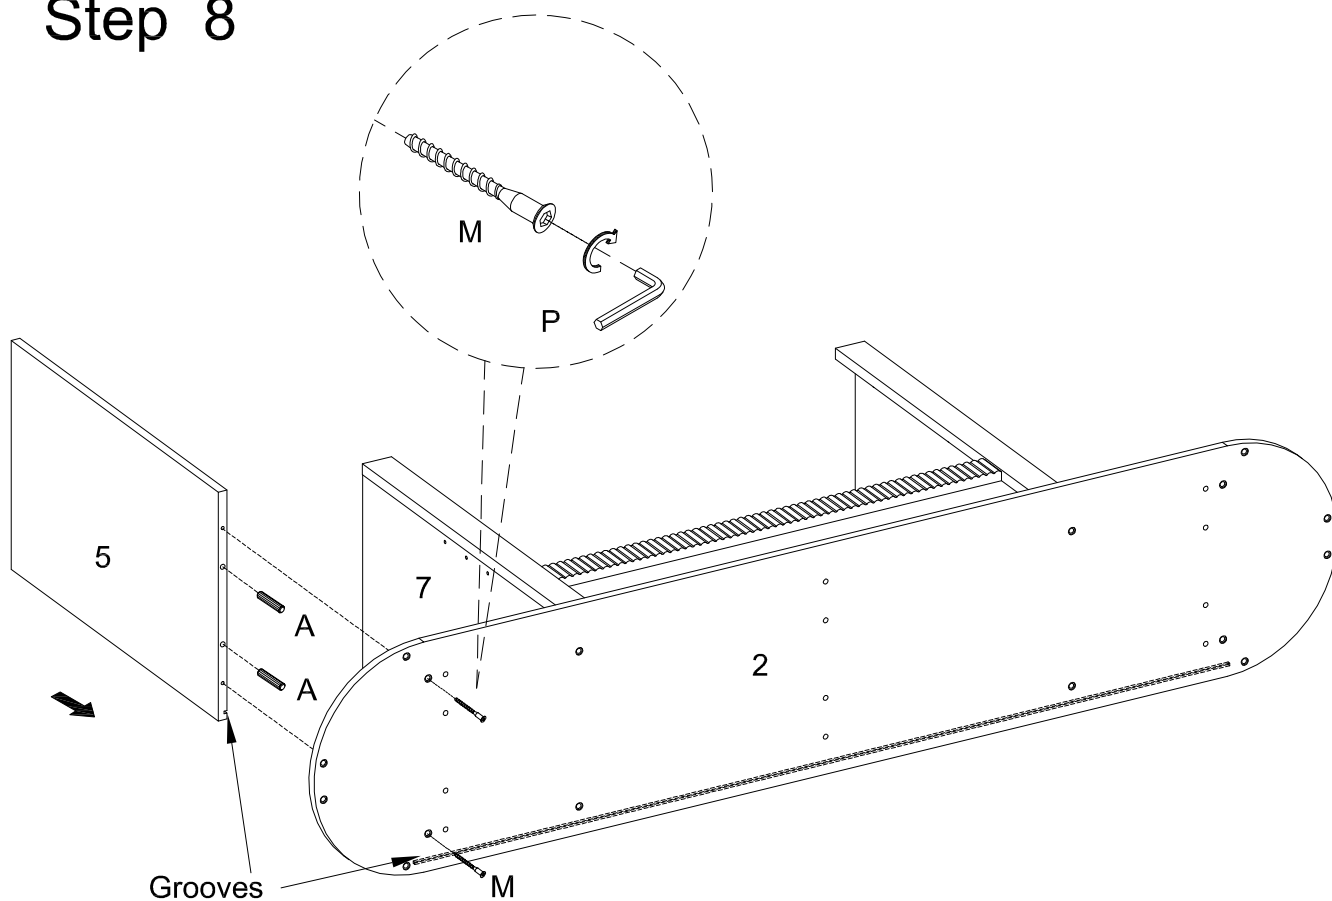

 
Step 9

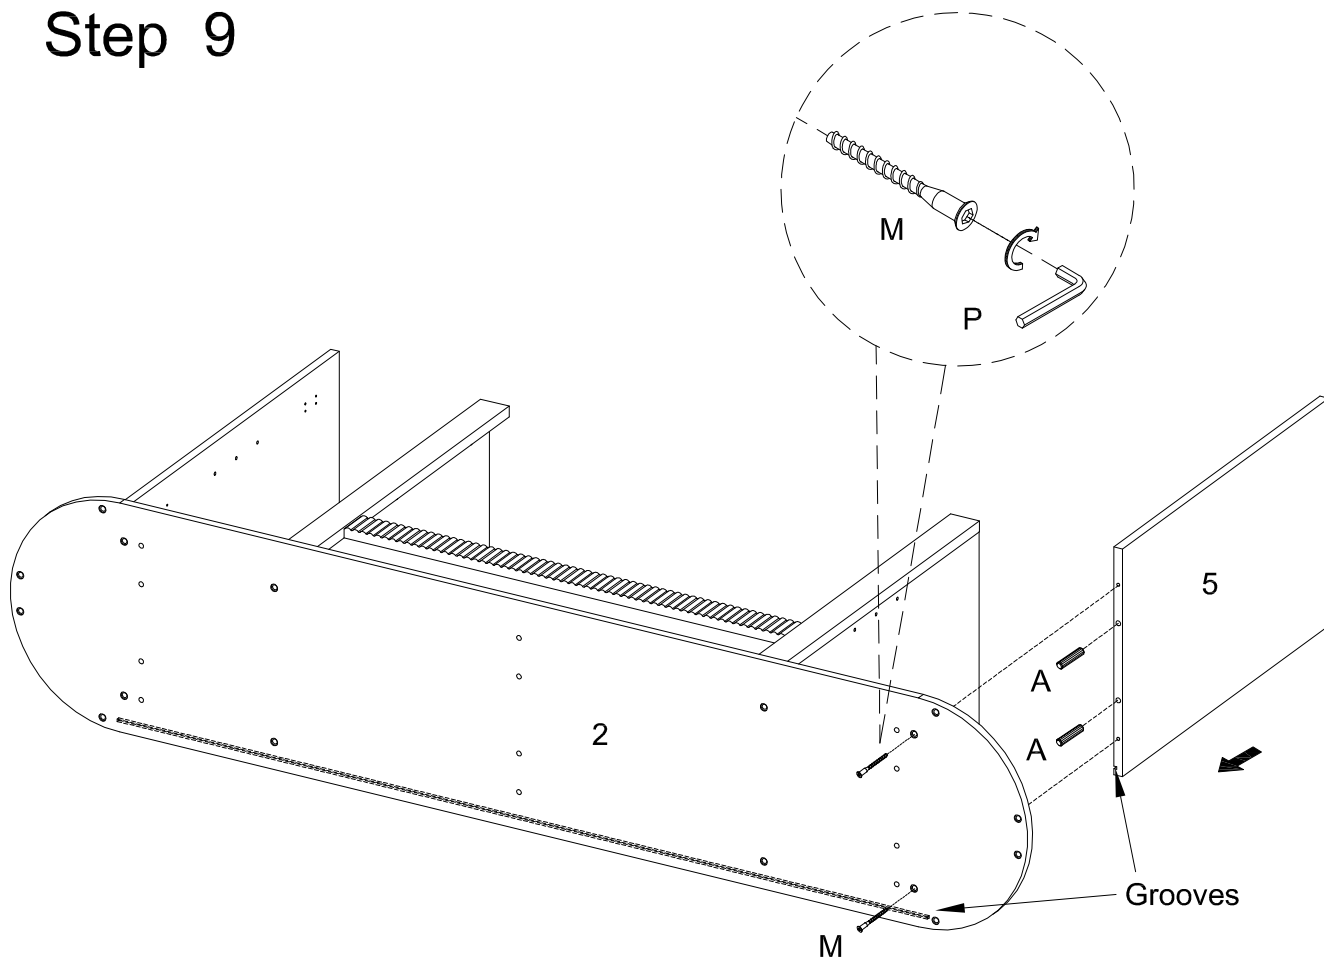

 
Step 10

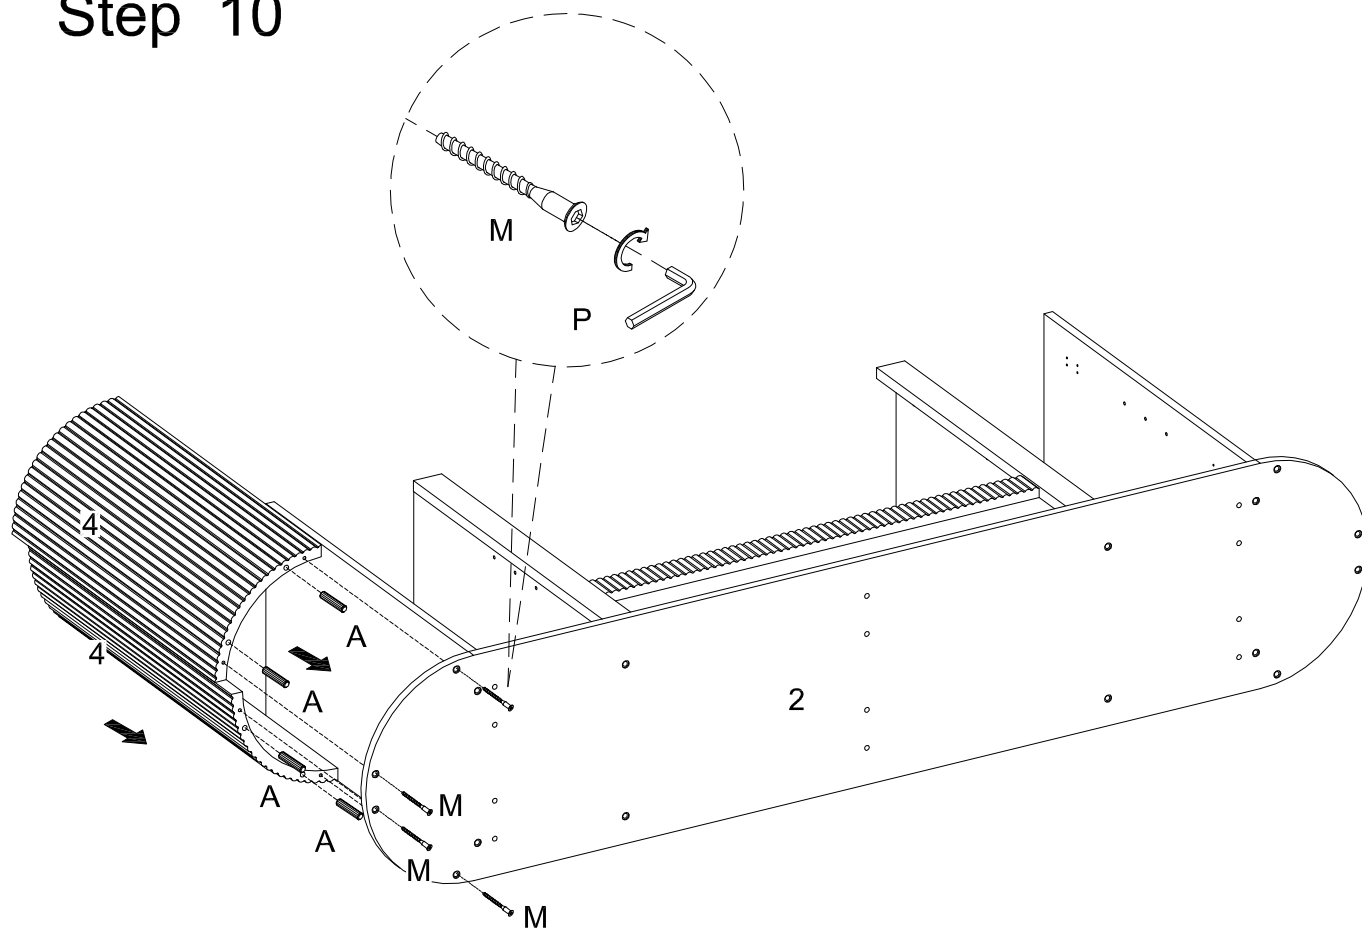

 
Step 11

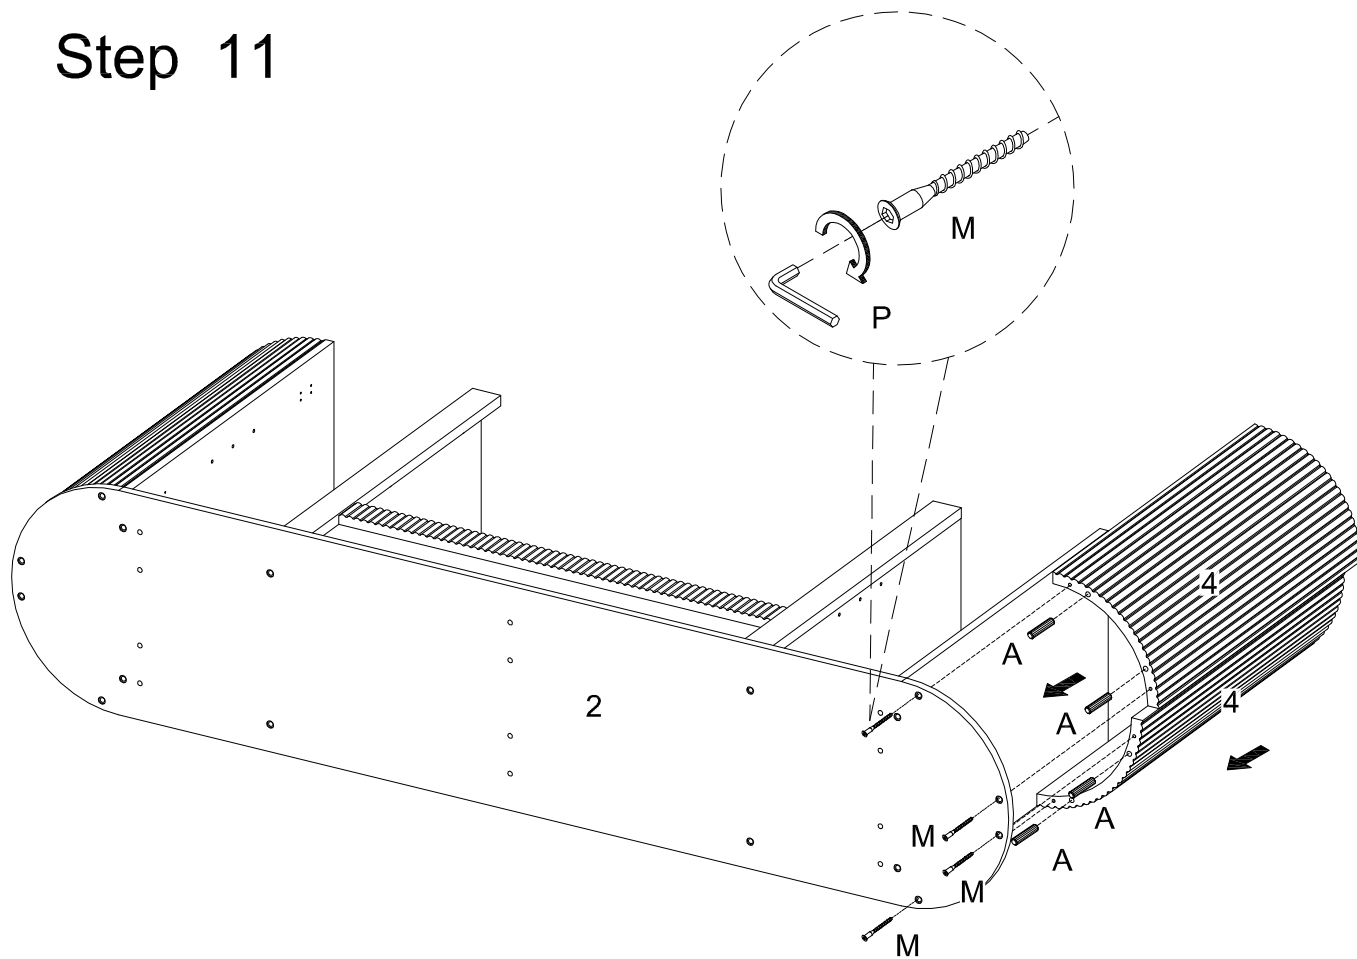

 
Step 12

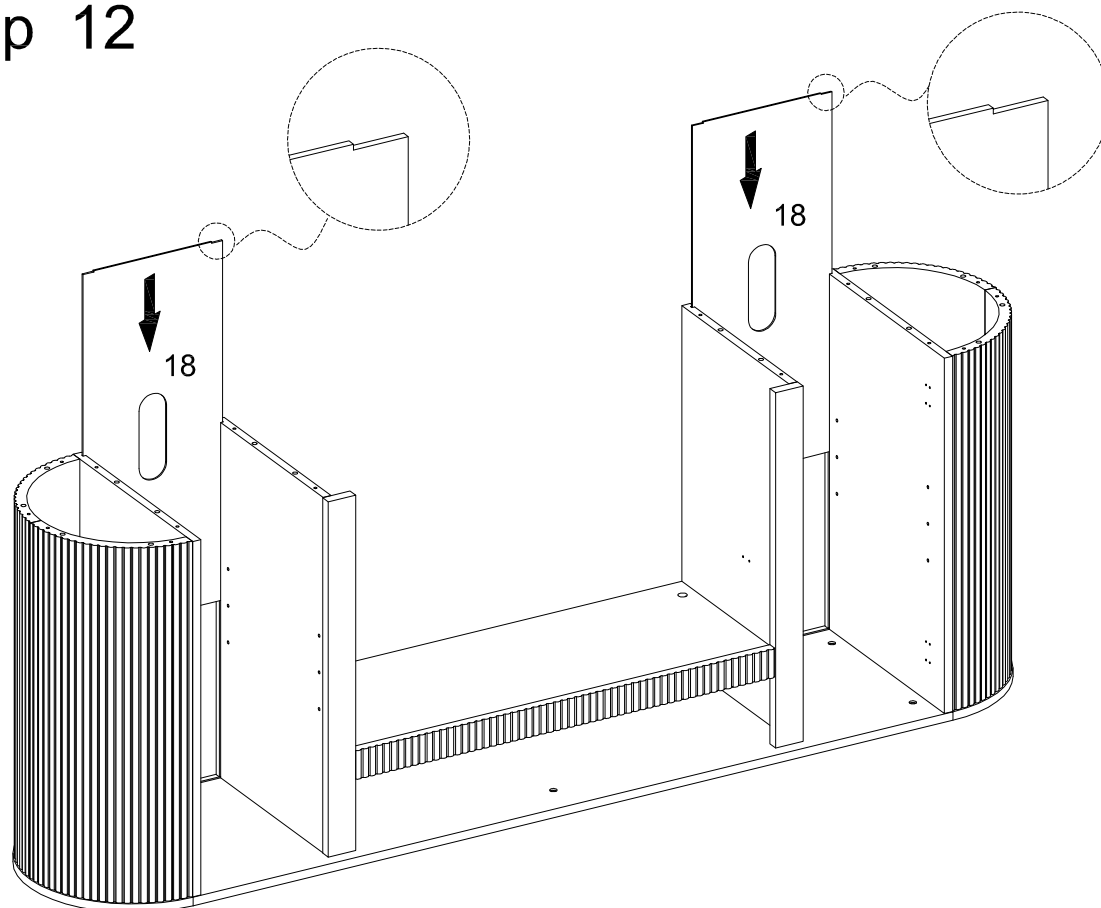

 
Step 13

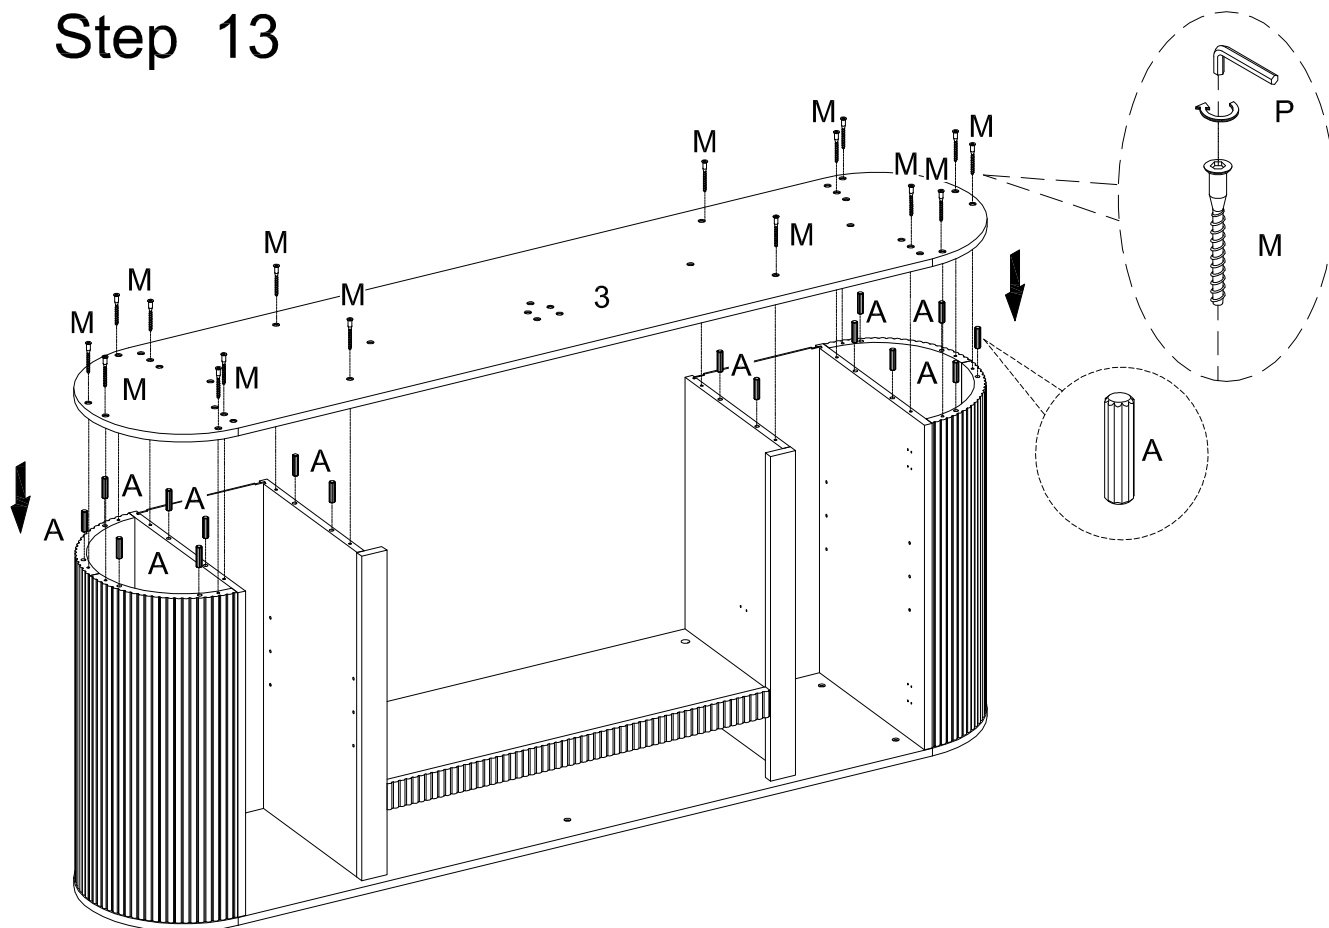

 
Step 14

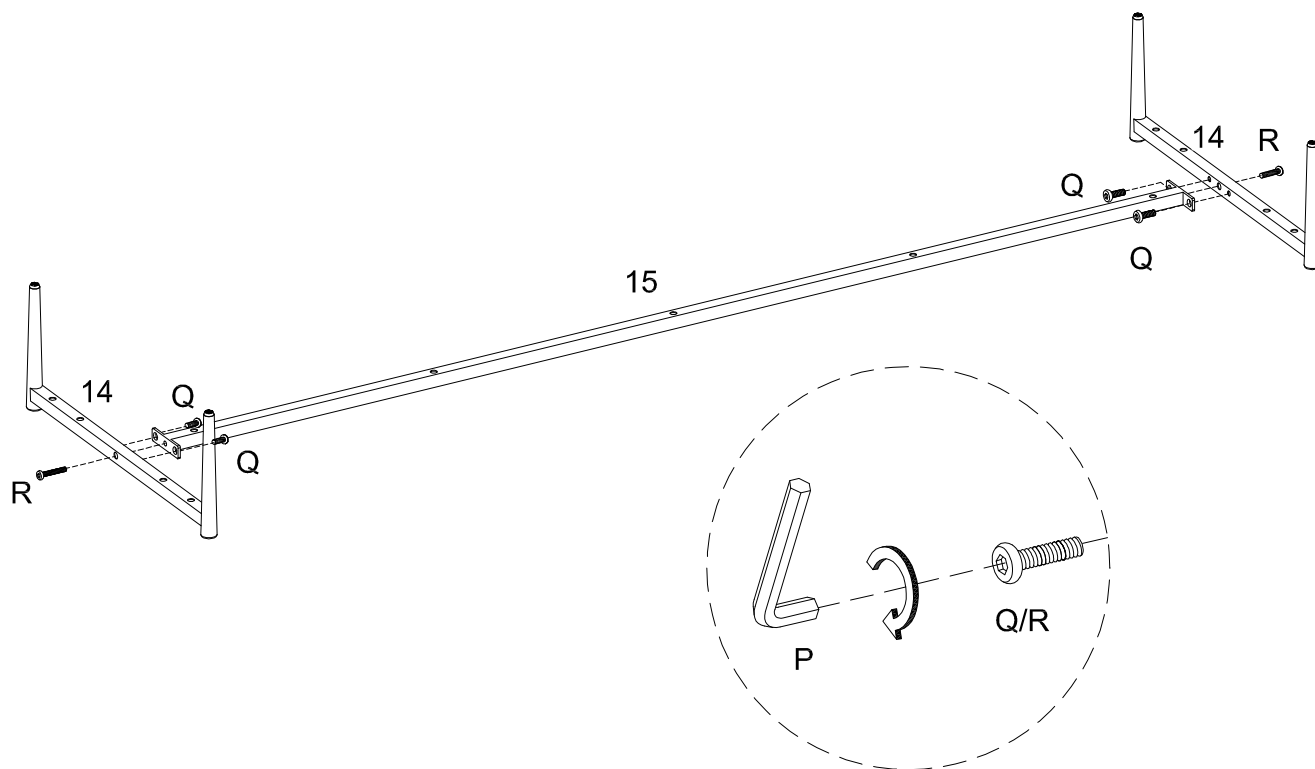

 
Step 15

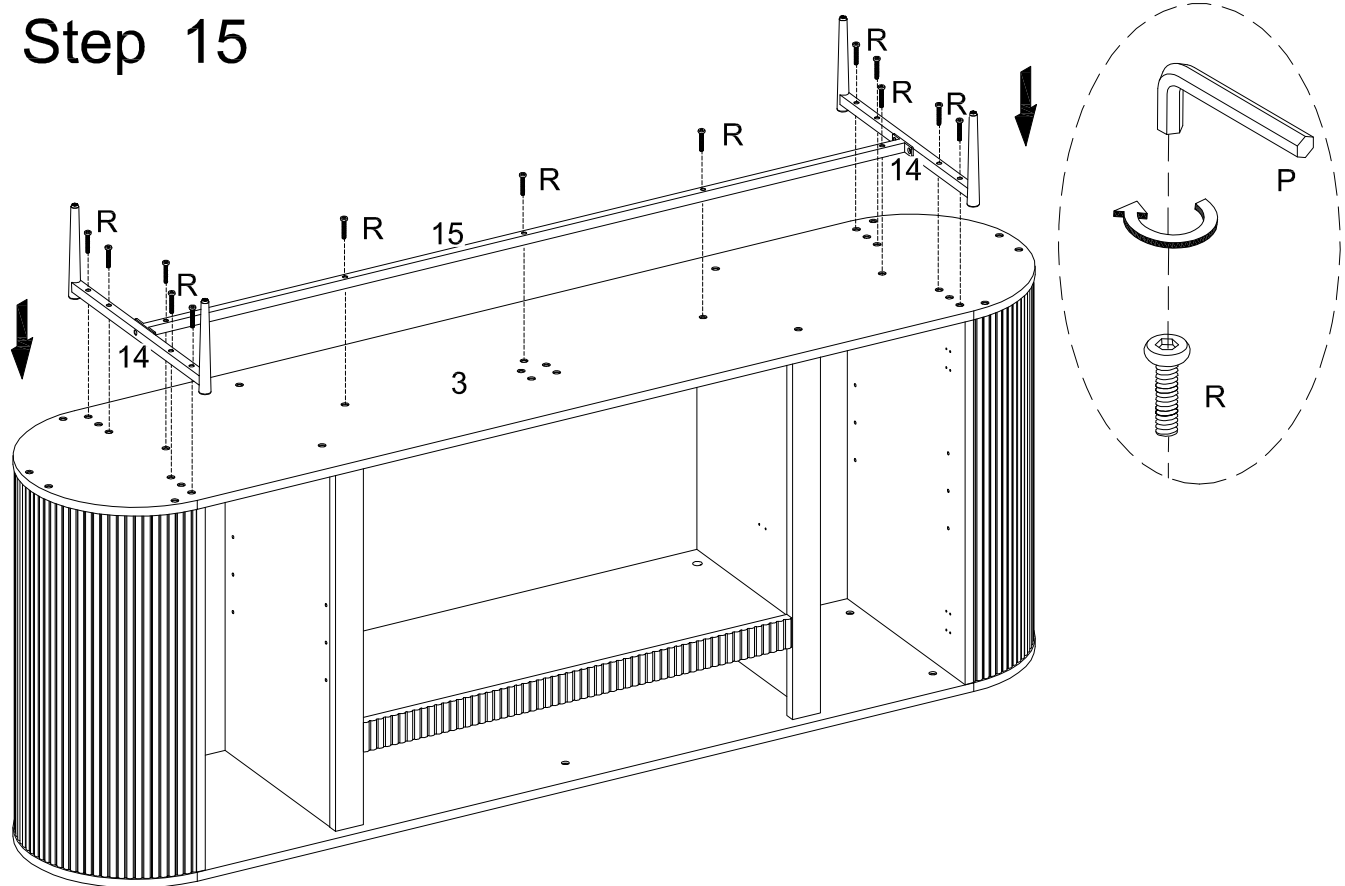

 
Step 16

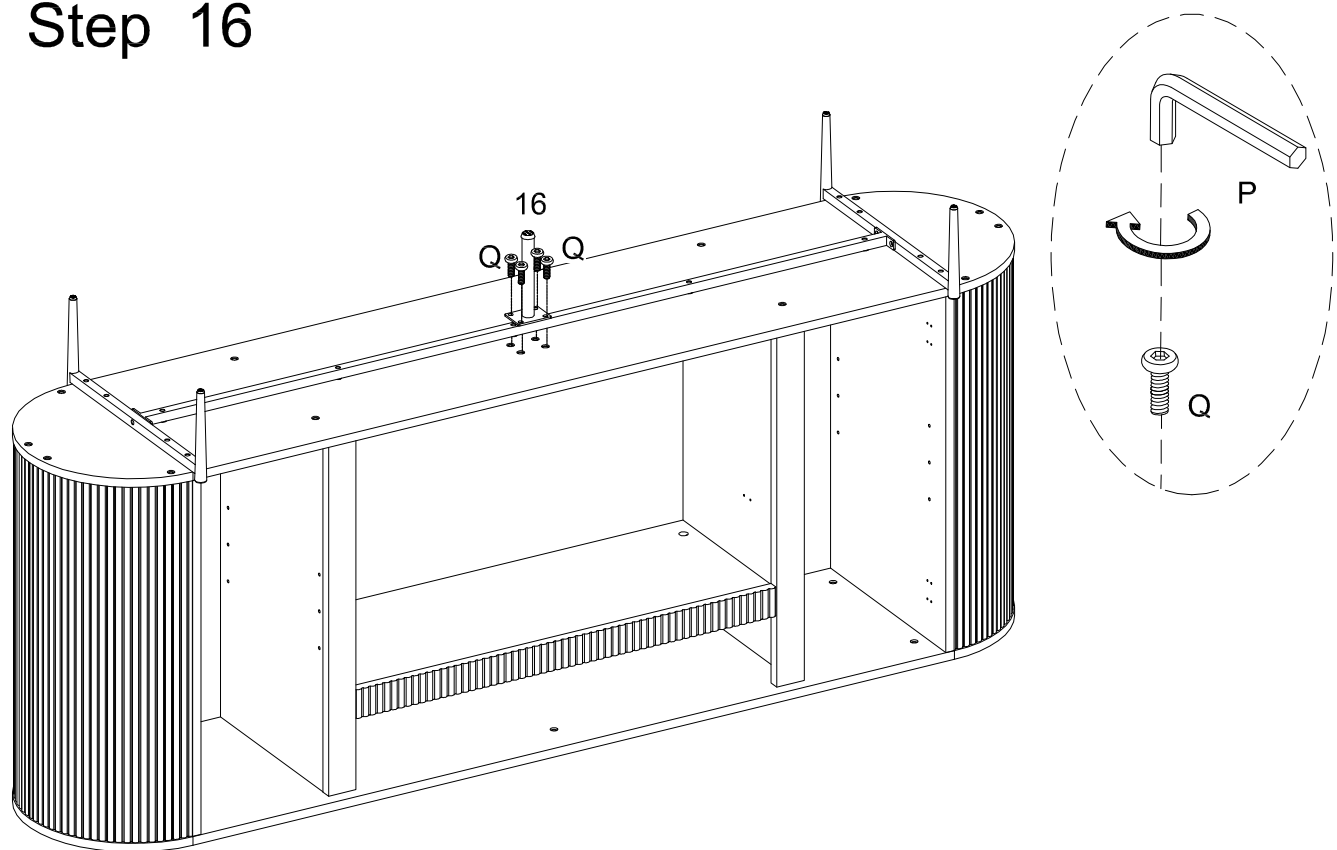

 
Step 17

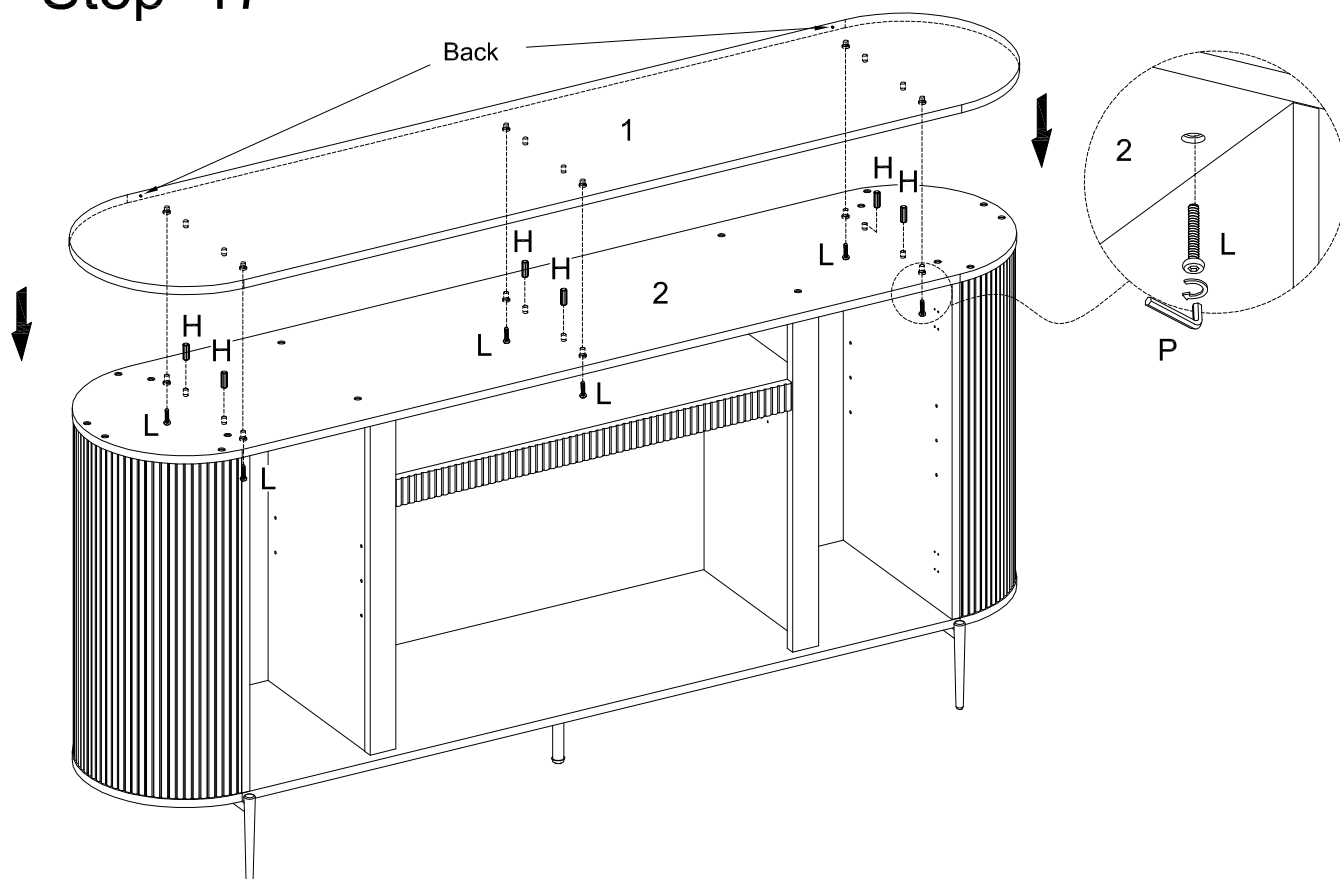

 
Step 18

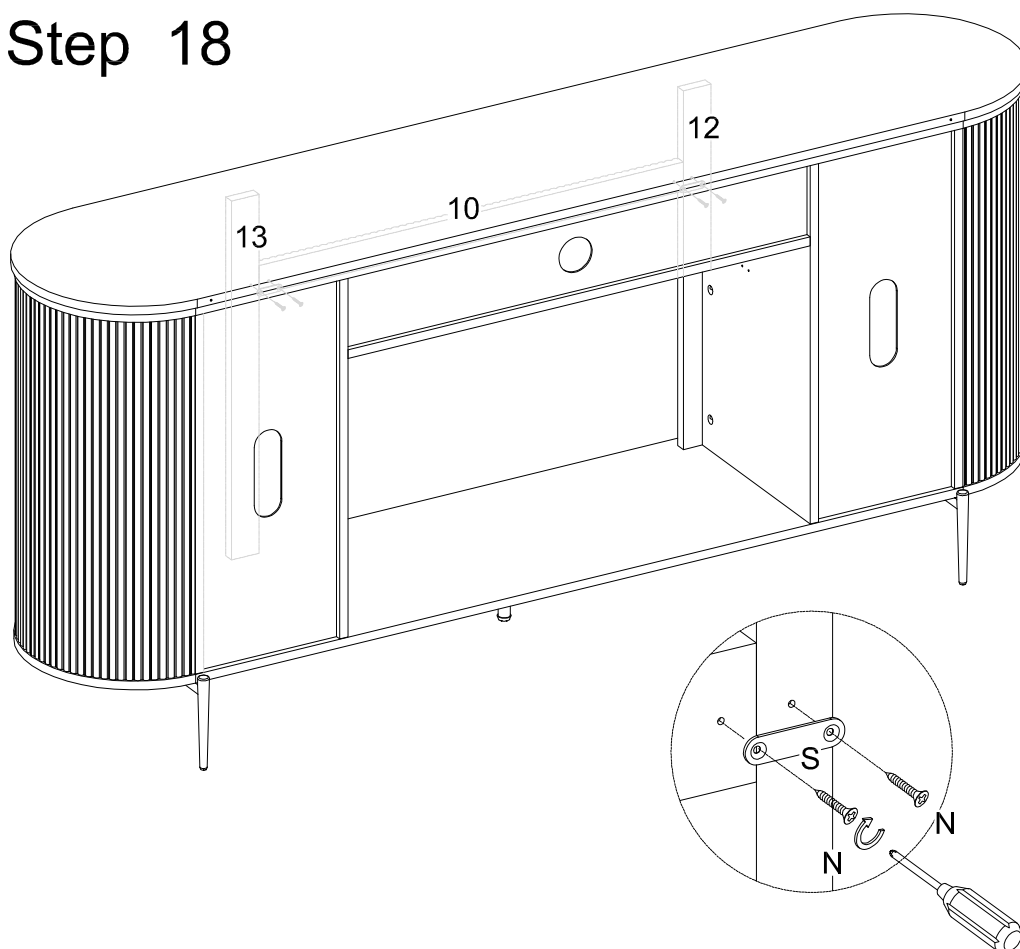

 
Step 19

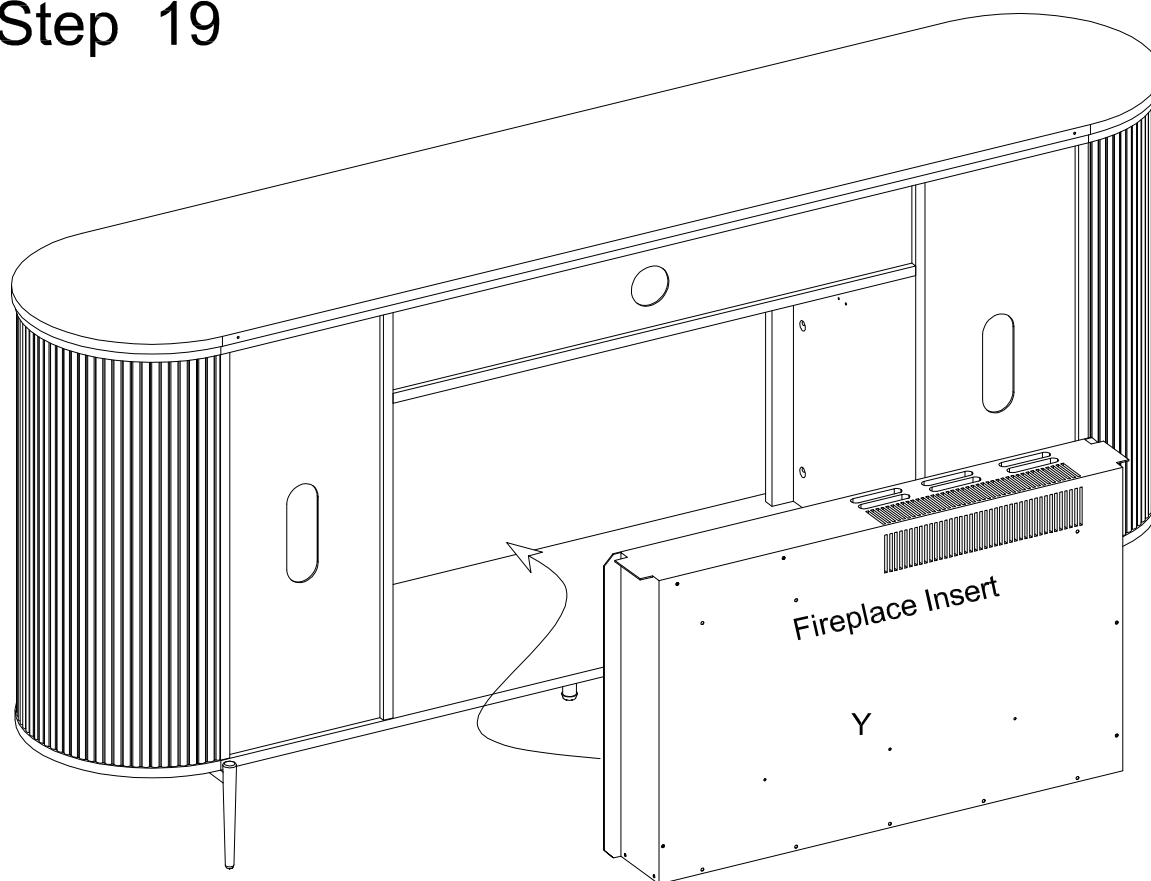

 
Step 20

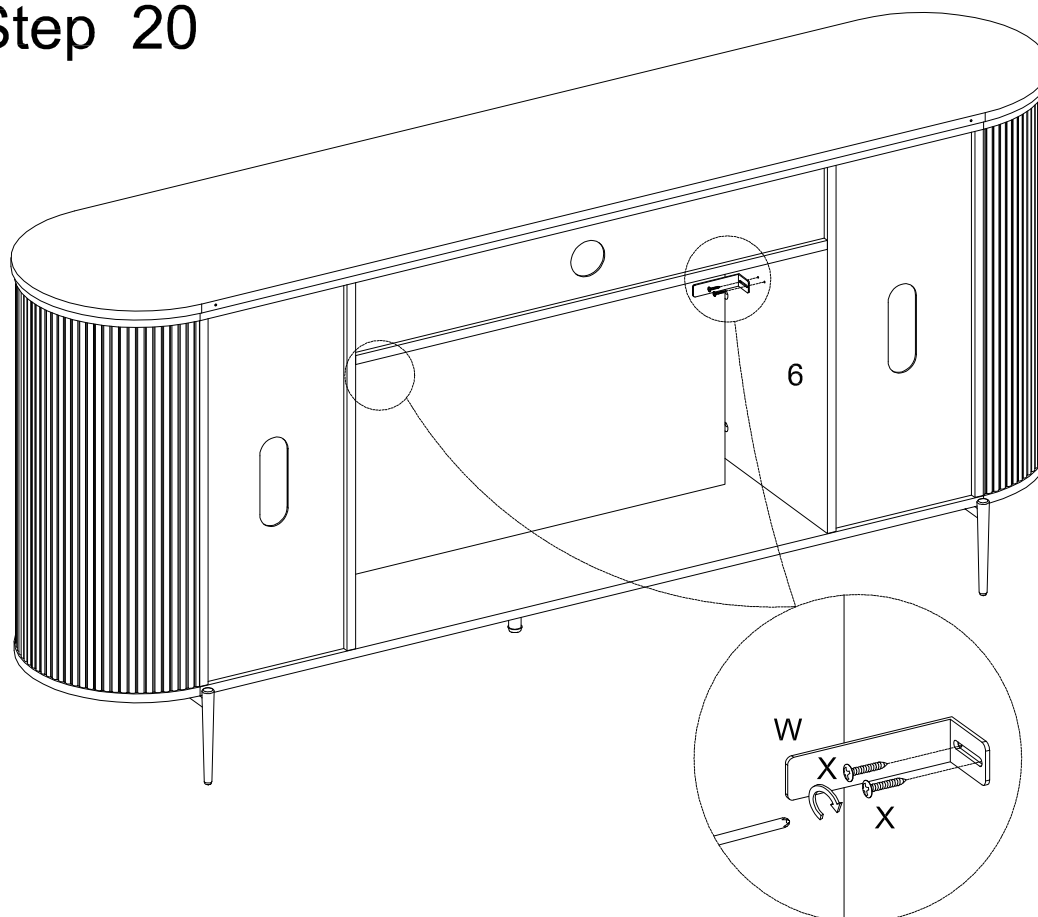

 
Step 21

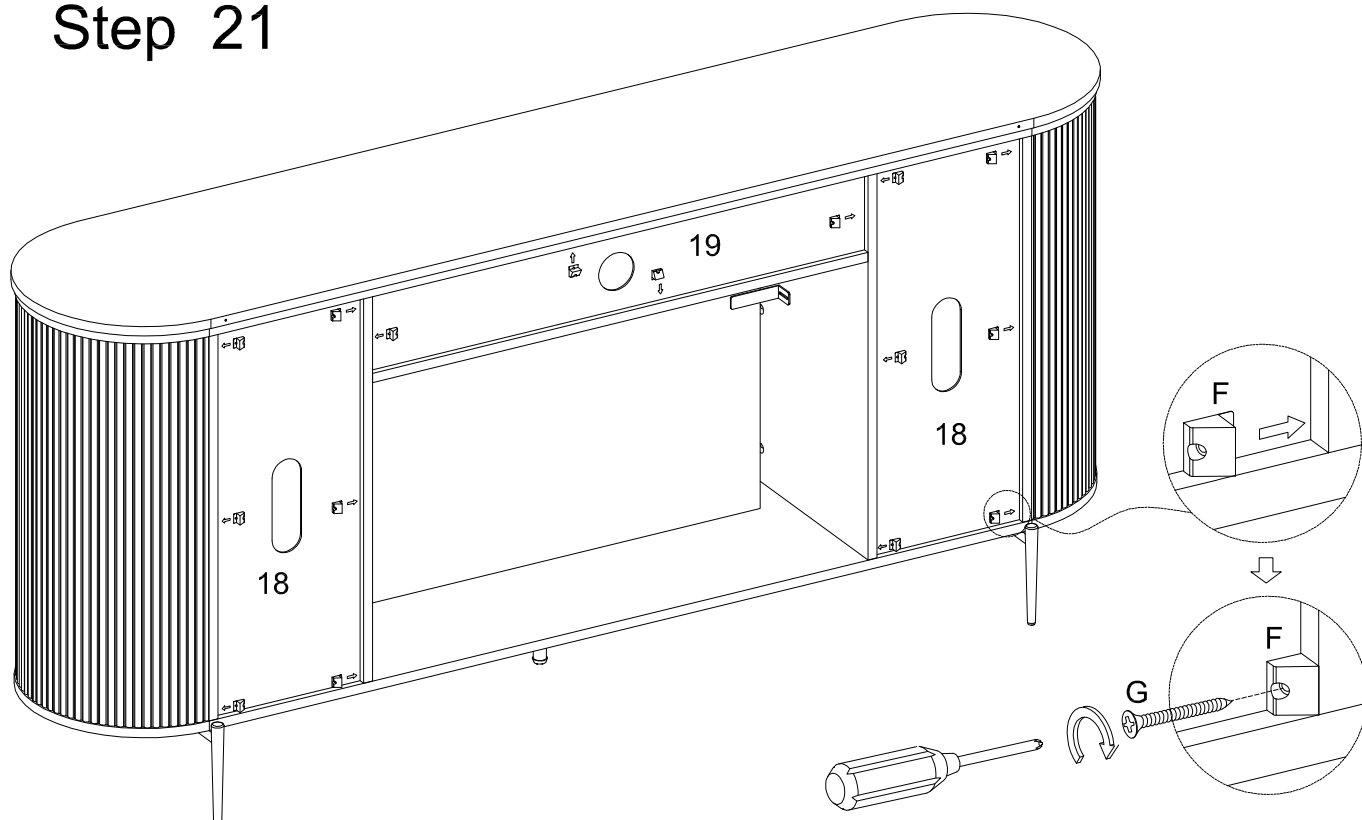

 
Step 22

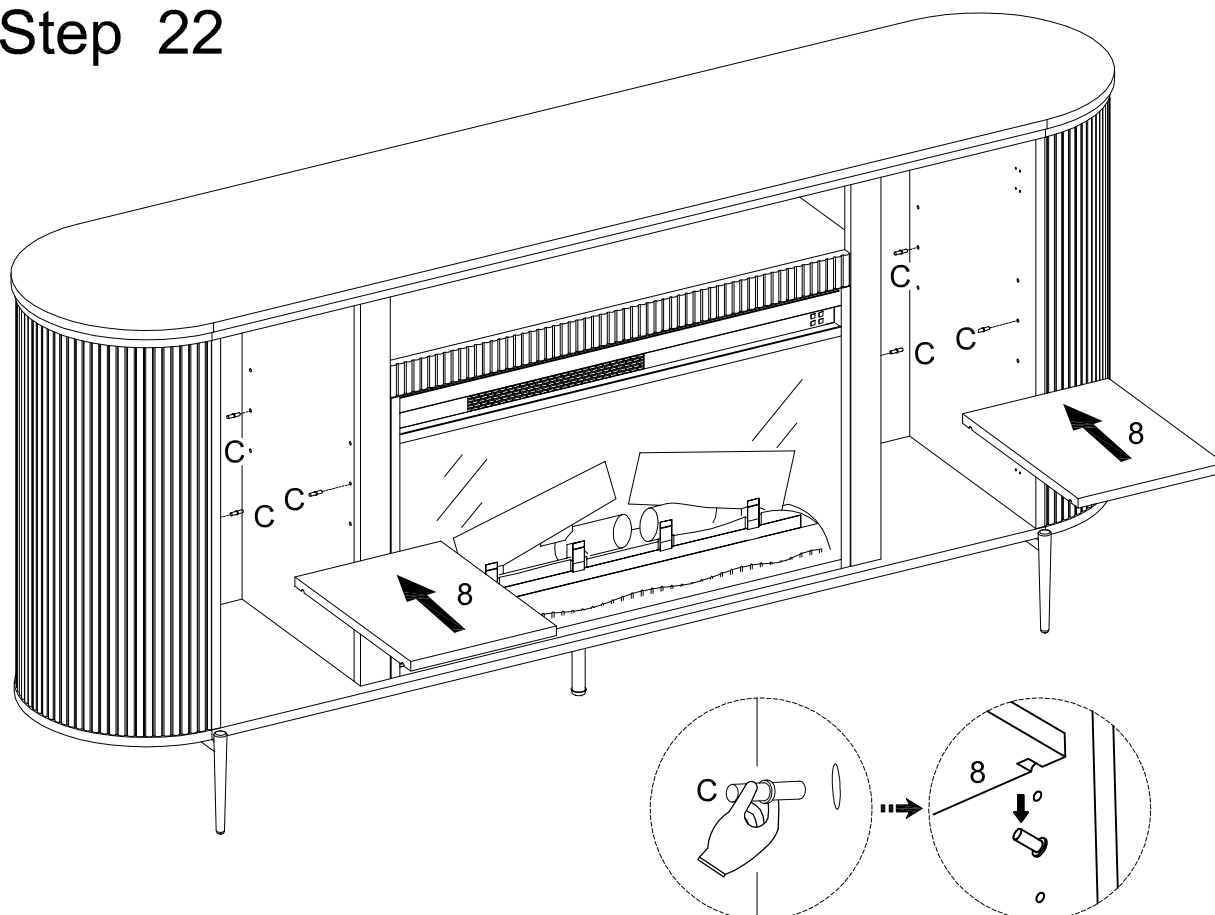

 Step 23 x2

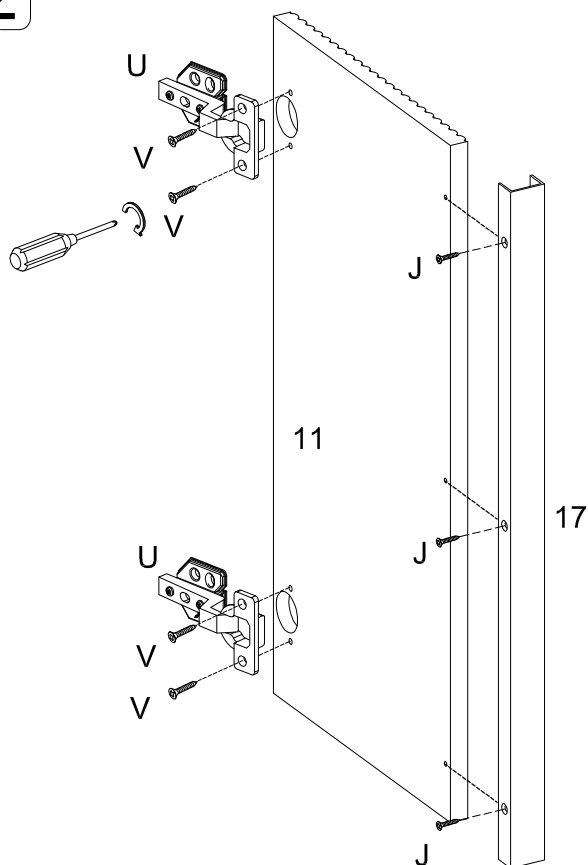



 
Step 24

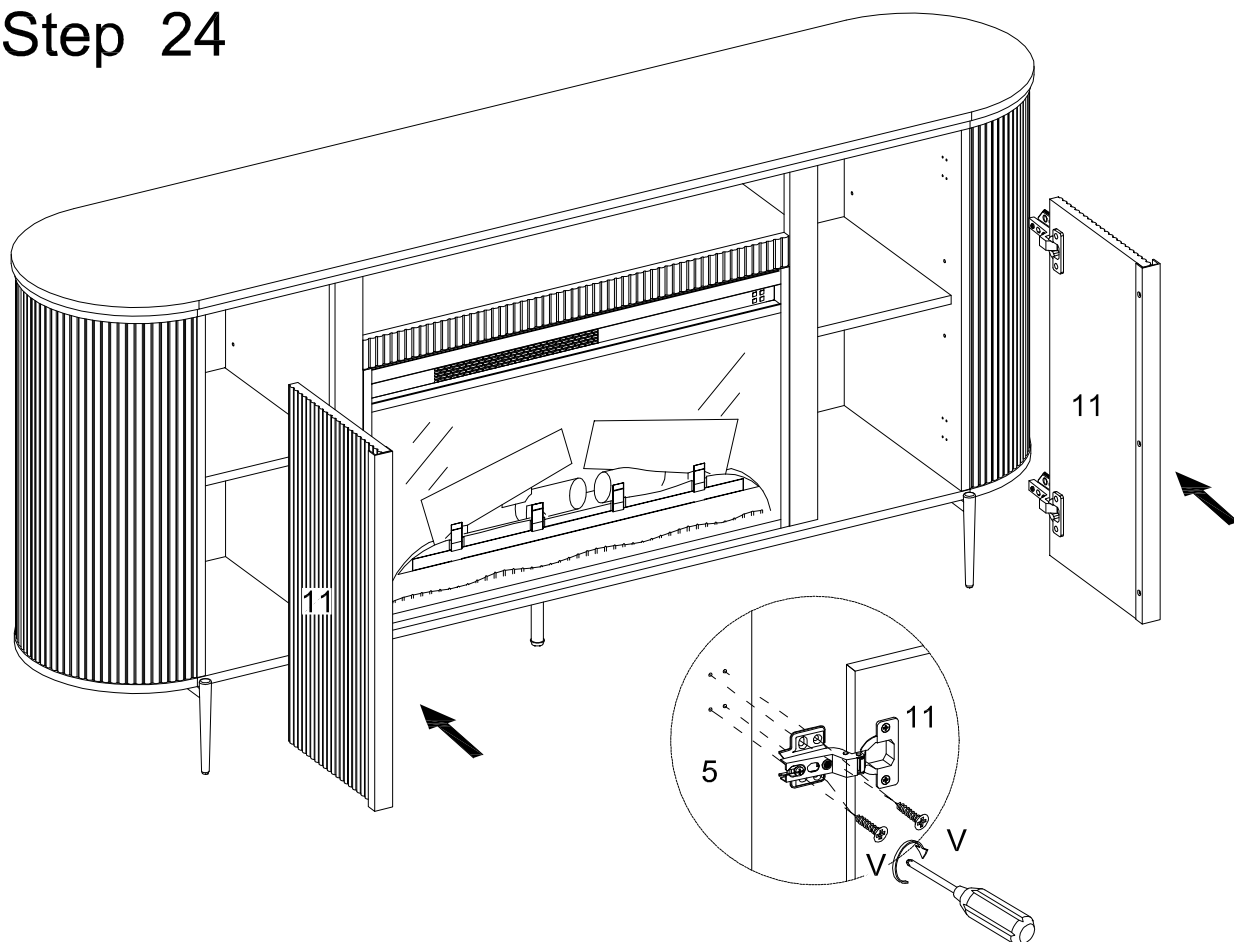

Step 25

WARNING

   You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.

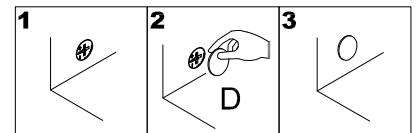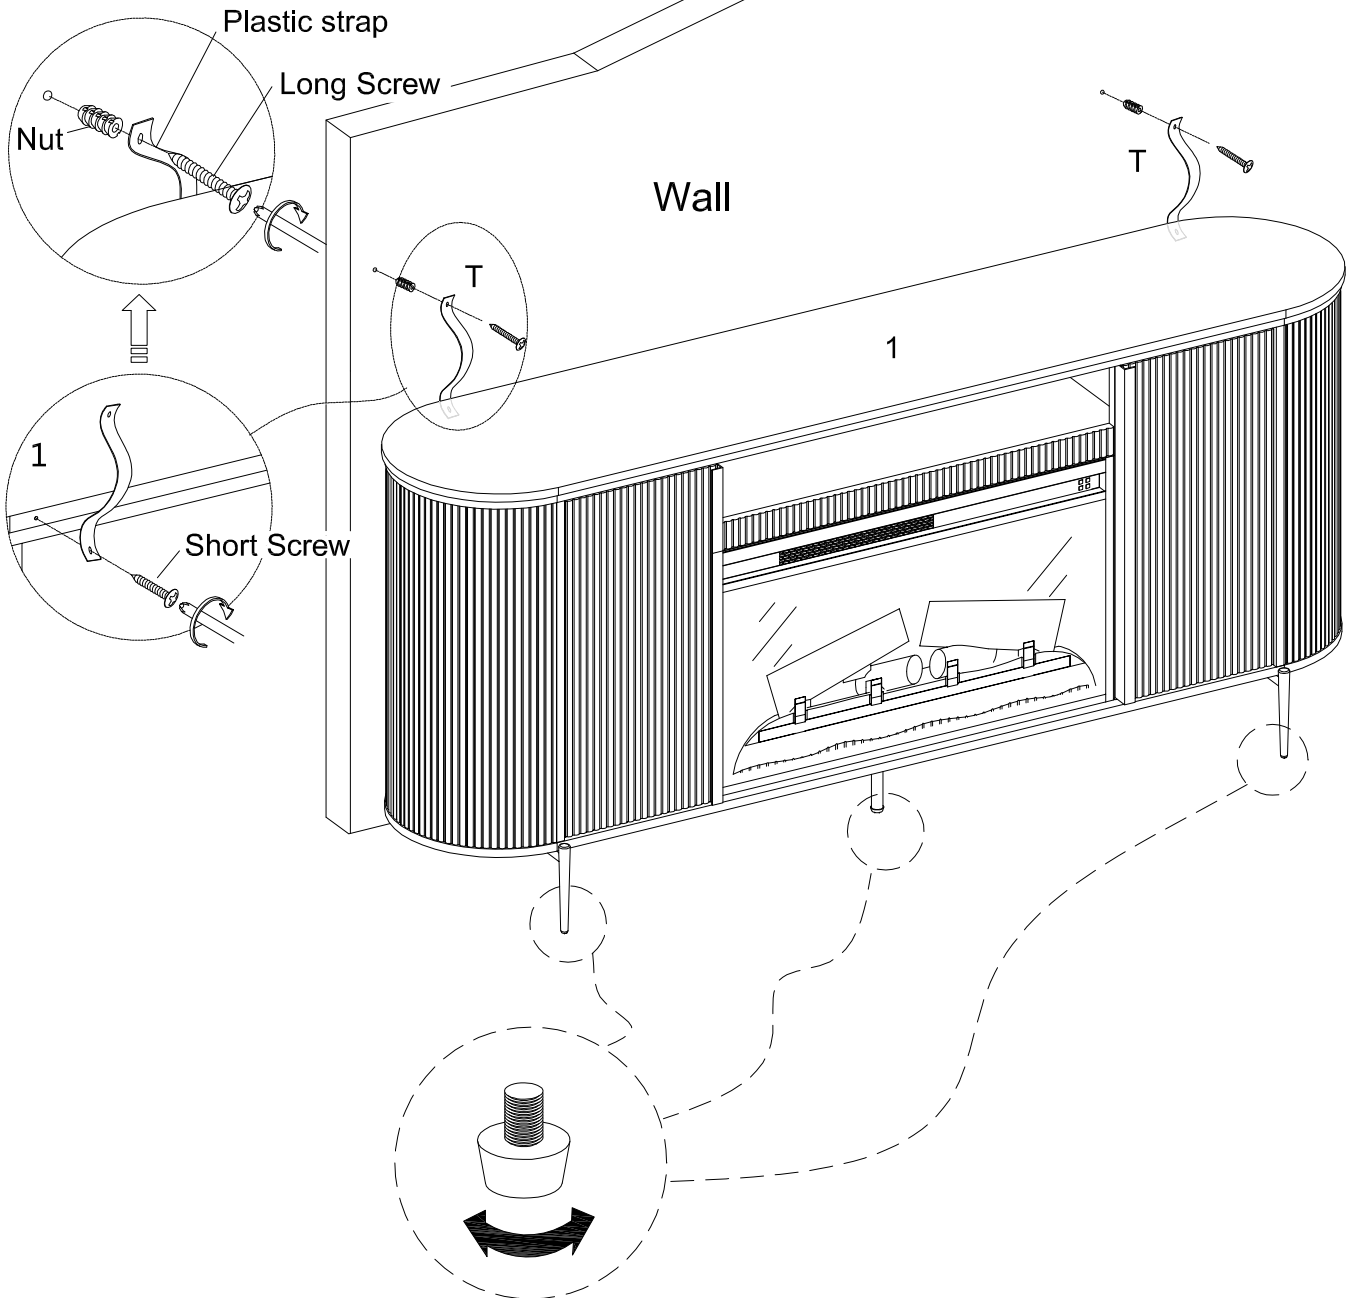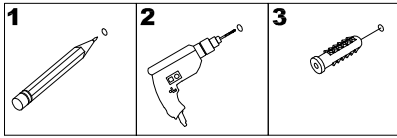

Final Assembly