
Assembly Instructions

Caution: You must read this before you proceed

| Care & Maintenance | | | | | |
|--------------------|---|--|--|--|--|
| Ø | Not for commercial use. For residential use only. | | | | |
| > 🖟 | Furniture may scratch floors. We recommend using furniture pads to protect your floors. | | | | |
| Ø <u></u> | Do not put hot items directly on furniture surface. | | | | |
| Ø 🖣 | Do not clean furniture with harsh cleansers or polish. | | | | |
| 0 O | Do not place furniture under direct sunlight. | | | | |
| ⊘ ■ | Do not place furniture near heating or cooling vents. | | | | |
| 0 1 | Do not write on furniture without a padded barrier to protect the surface. | | | | |
| Ø 💭 | Do not place furniture outside . For indoor use only. | | | | |
| ⊘ □ | Stains may be removed with mild soap solution and damp cloth. | | | | |
| Ø 🟋 | Children should not climb or jump on the furniture. | | | | |
| 1 | Dust and pick-up spills using a clean, non-colored, lint-free cloth. | | | | |

Club Chair

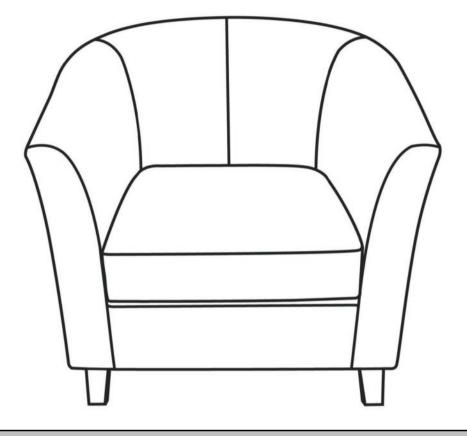


| Part List | | | | | |
|-----------|---------|-------------|-----|--|--|
| Label | Picture | Description | QTY | | |
| Α | | Chair | 1 | | |
| В | | Wooden Leg | 4 | | |

| <u>Hardware</u> | | | | | | |
|-----------------|---------|-------------|-----|--|--|--|
| Label | Picture | Description | QTY | | | |
| 1) | | Washer Ring | 7 | | | |

Assembly Preparation

Before Beginning Assembly:

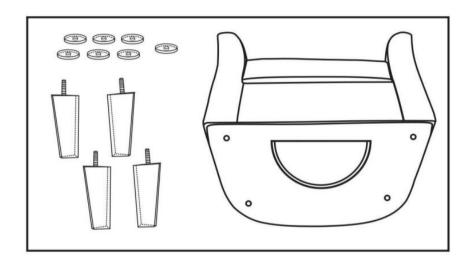



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

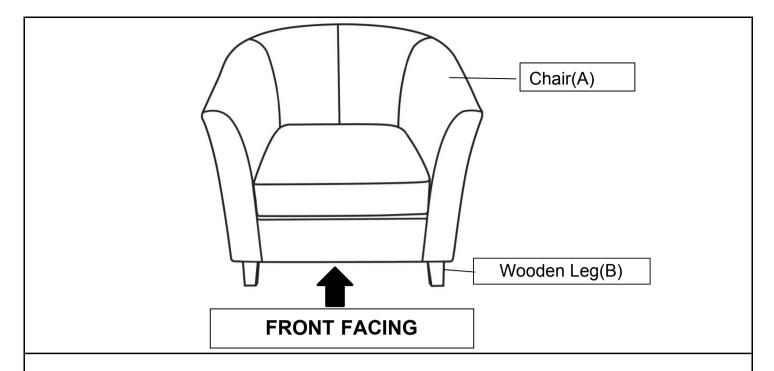


This Club Chair has multiple parts and may require up to some 30 minutes to assemble.

To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

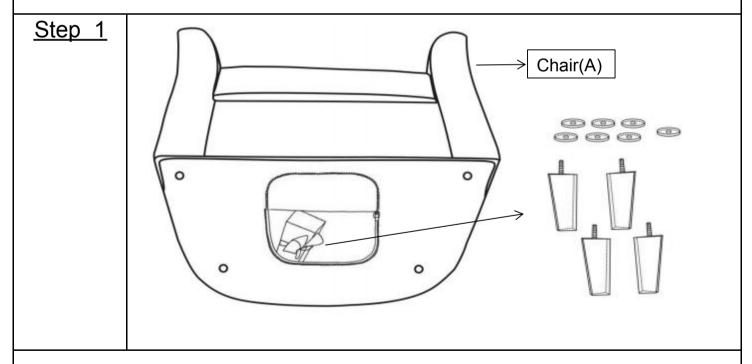

Position the Chair on its back, as shown.


Unzip to open and remove the 4 wooden legs. Close the Poket.

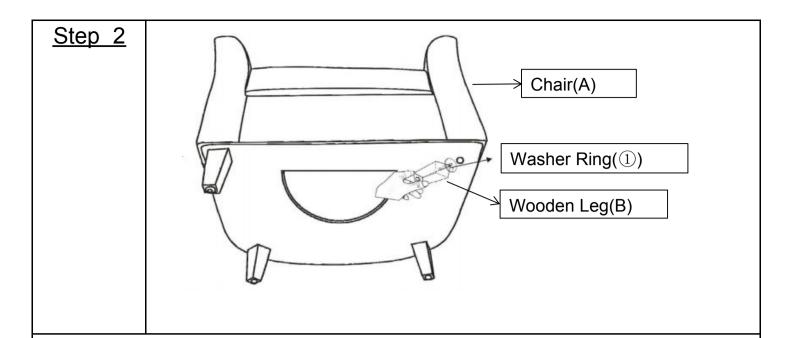

Install Wooden Leg(B) into the Chair by putting a Washer Ring(1) on the threaded stem and then insert the threaded stem into the threaded hole at each corner of the bottom of the Chair.

Tighten by turning Leg clockwise. Repeat the same step to install the other three Legs.

When assembling the Legs, must angle bevel inside and should be same position for both FRONT and BACK pair for both LEFT and RIGHT Legs.

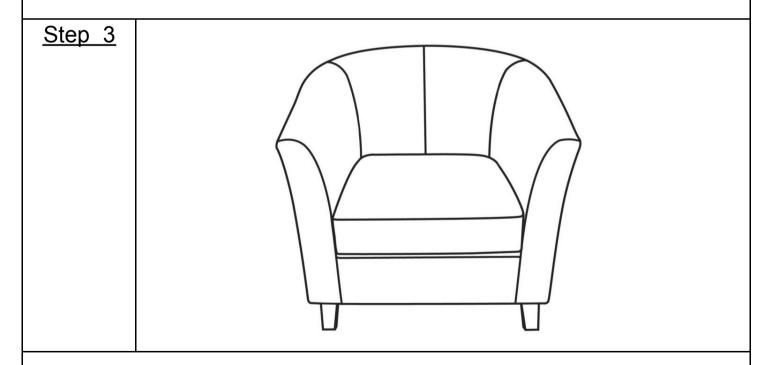

Your Club Chair is ready for use.

This Club Chair can only be used on a flat, level surface.