 
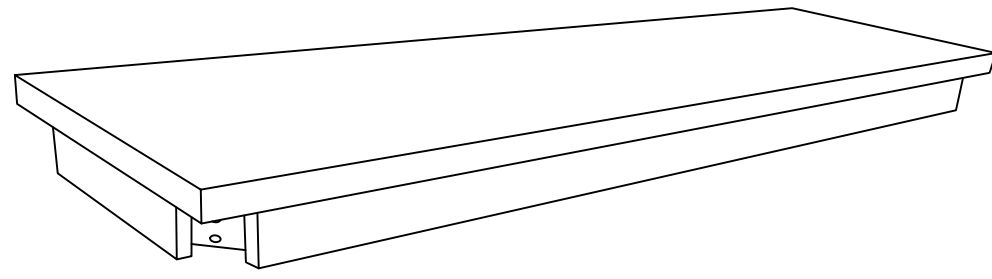 
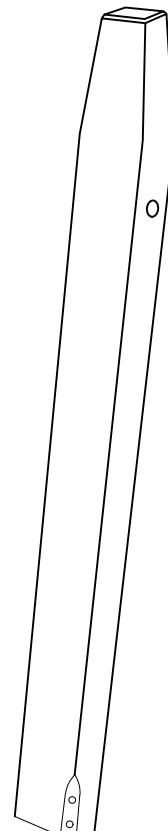 
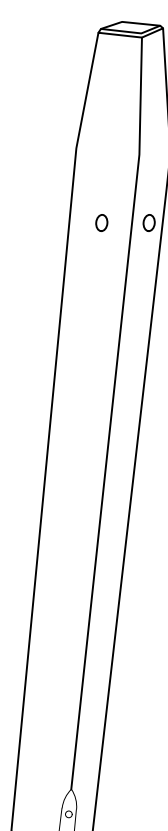 
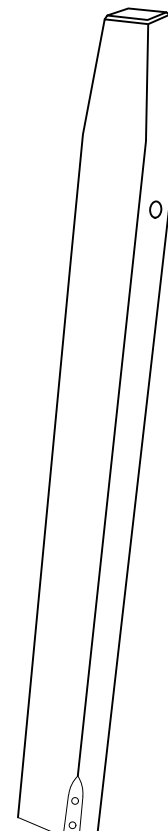 
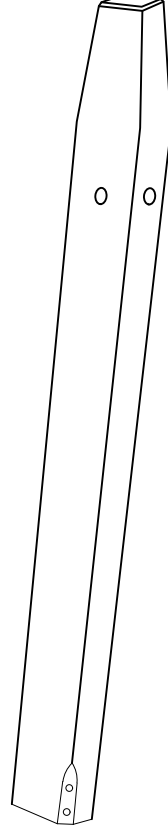 
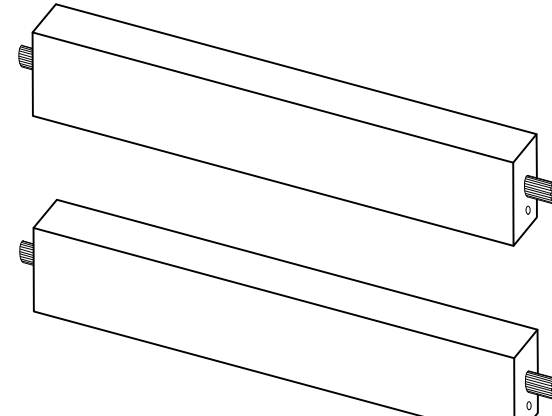 
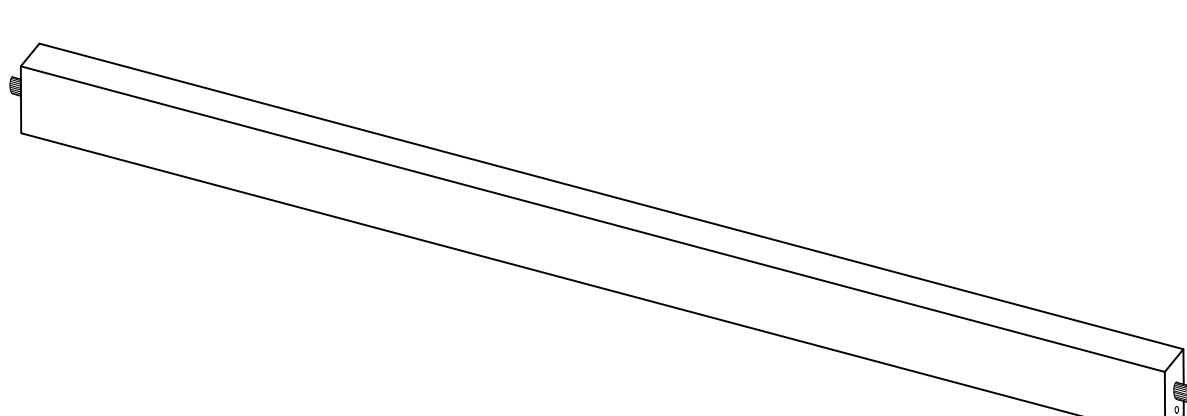 
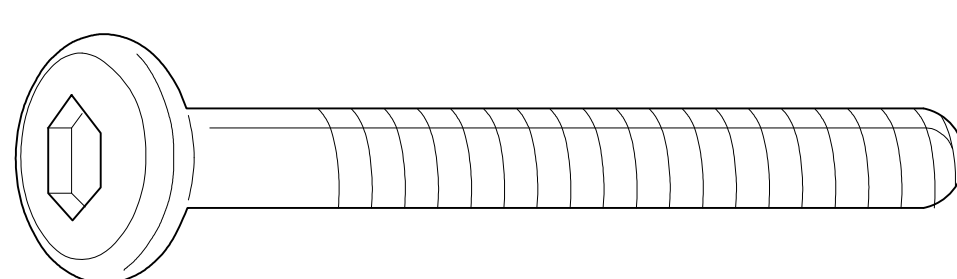 
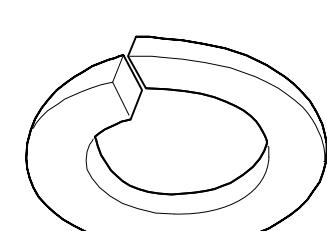 
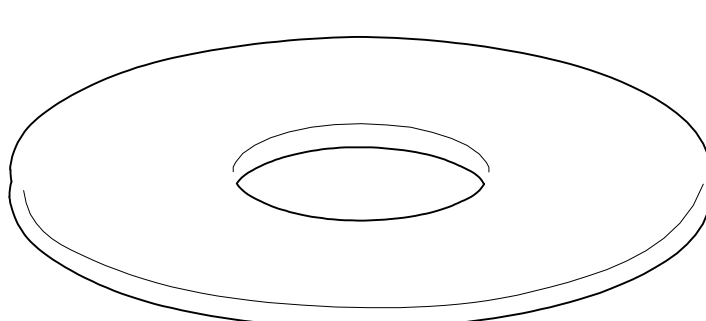 
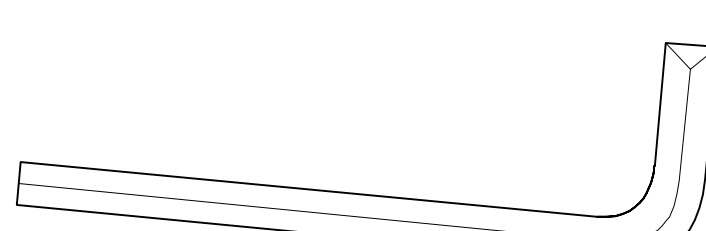 
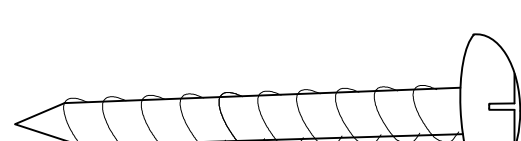 


# ASSEMBLY INSTRUCTIONS

 
## COUNTER HEIGHT TABLE

<b>A</b> Table Top	<b>B</b> Table Leg FL	<b>C</b> Table Leg BL	<b>D</b> Table Leg FR
			
1 pc	1 pc	1 pc	1 pc
<b>E</b> Table Leg BR	<b>F</b> Side Support	<b>G</b> Cross Bar	<b>H</b> JCBC Bolt M6 x 60mm
			
1 pc	2 pcs	1 pc	8 pcs
<b>I</b> Spring Washer M6	<b>J</b> Flat Washer M6	<b>K</b> Allen Key M4 x 110mm	<b>L</b> Pan Head Screw M4 x 38mm
			
8 pcs	8 pcs	1 pc	6 pcs

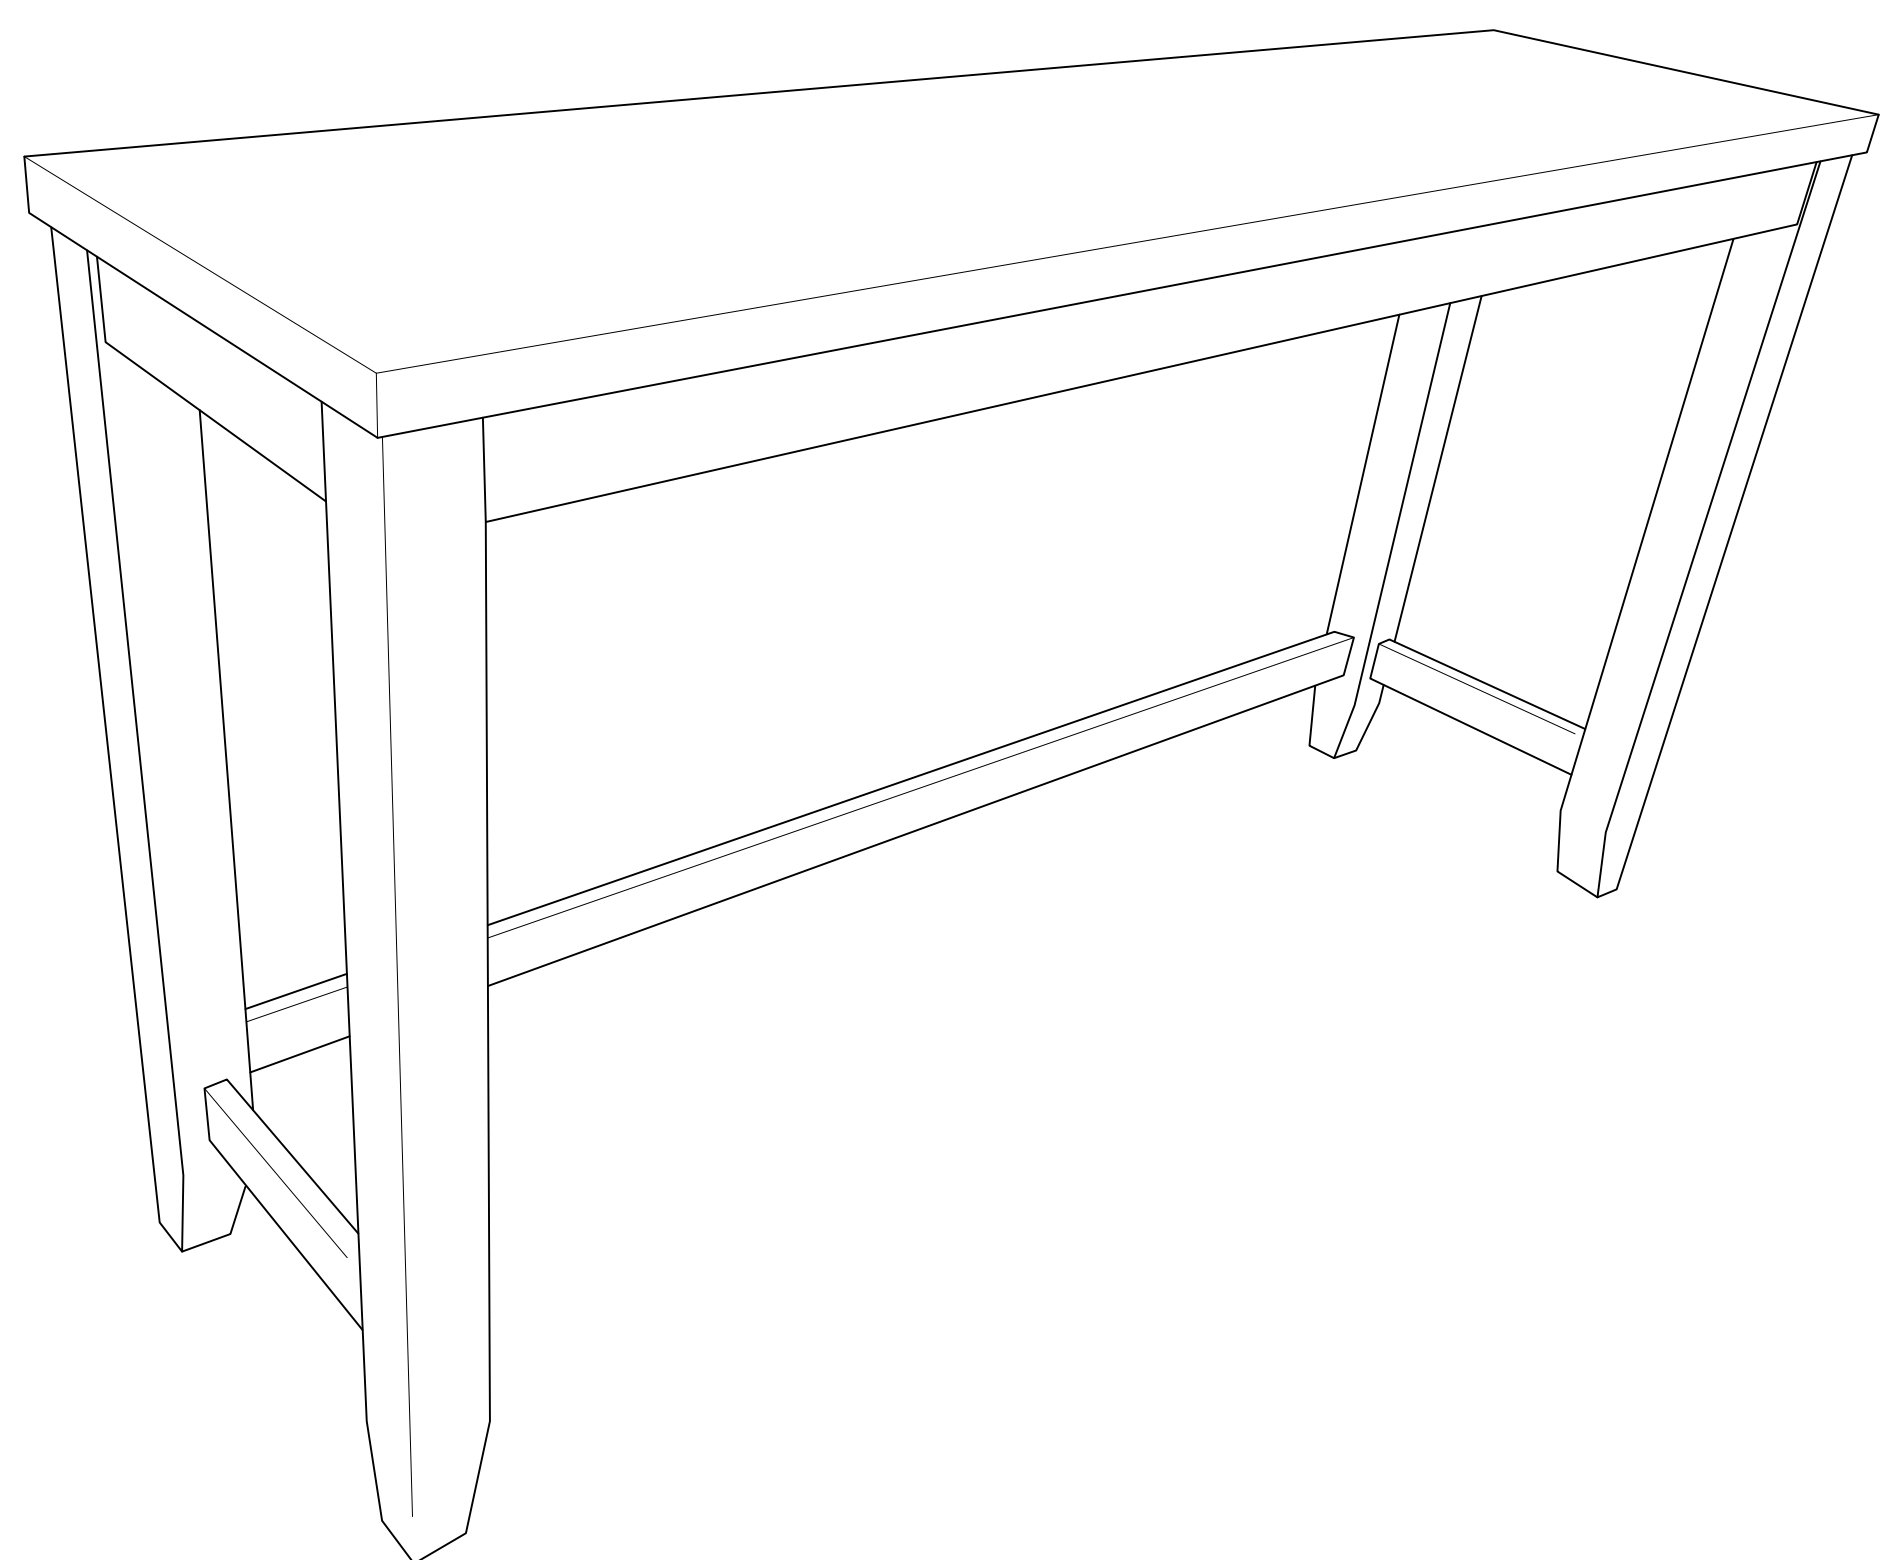


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach the Table Leg FL (B) to the Table Top (A) using JCBC Bolt (H), Spring Washer (I) and Flat Washer (J) with the Allen Key (K).

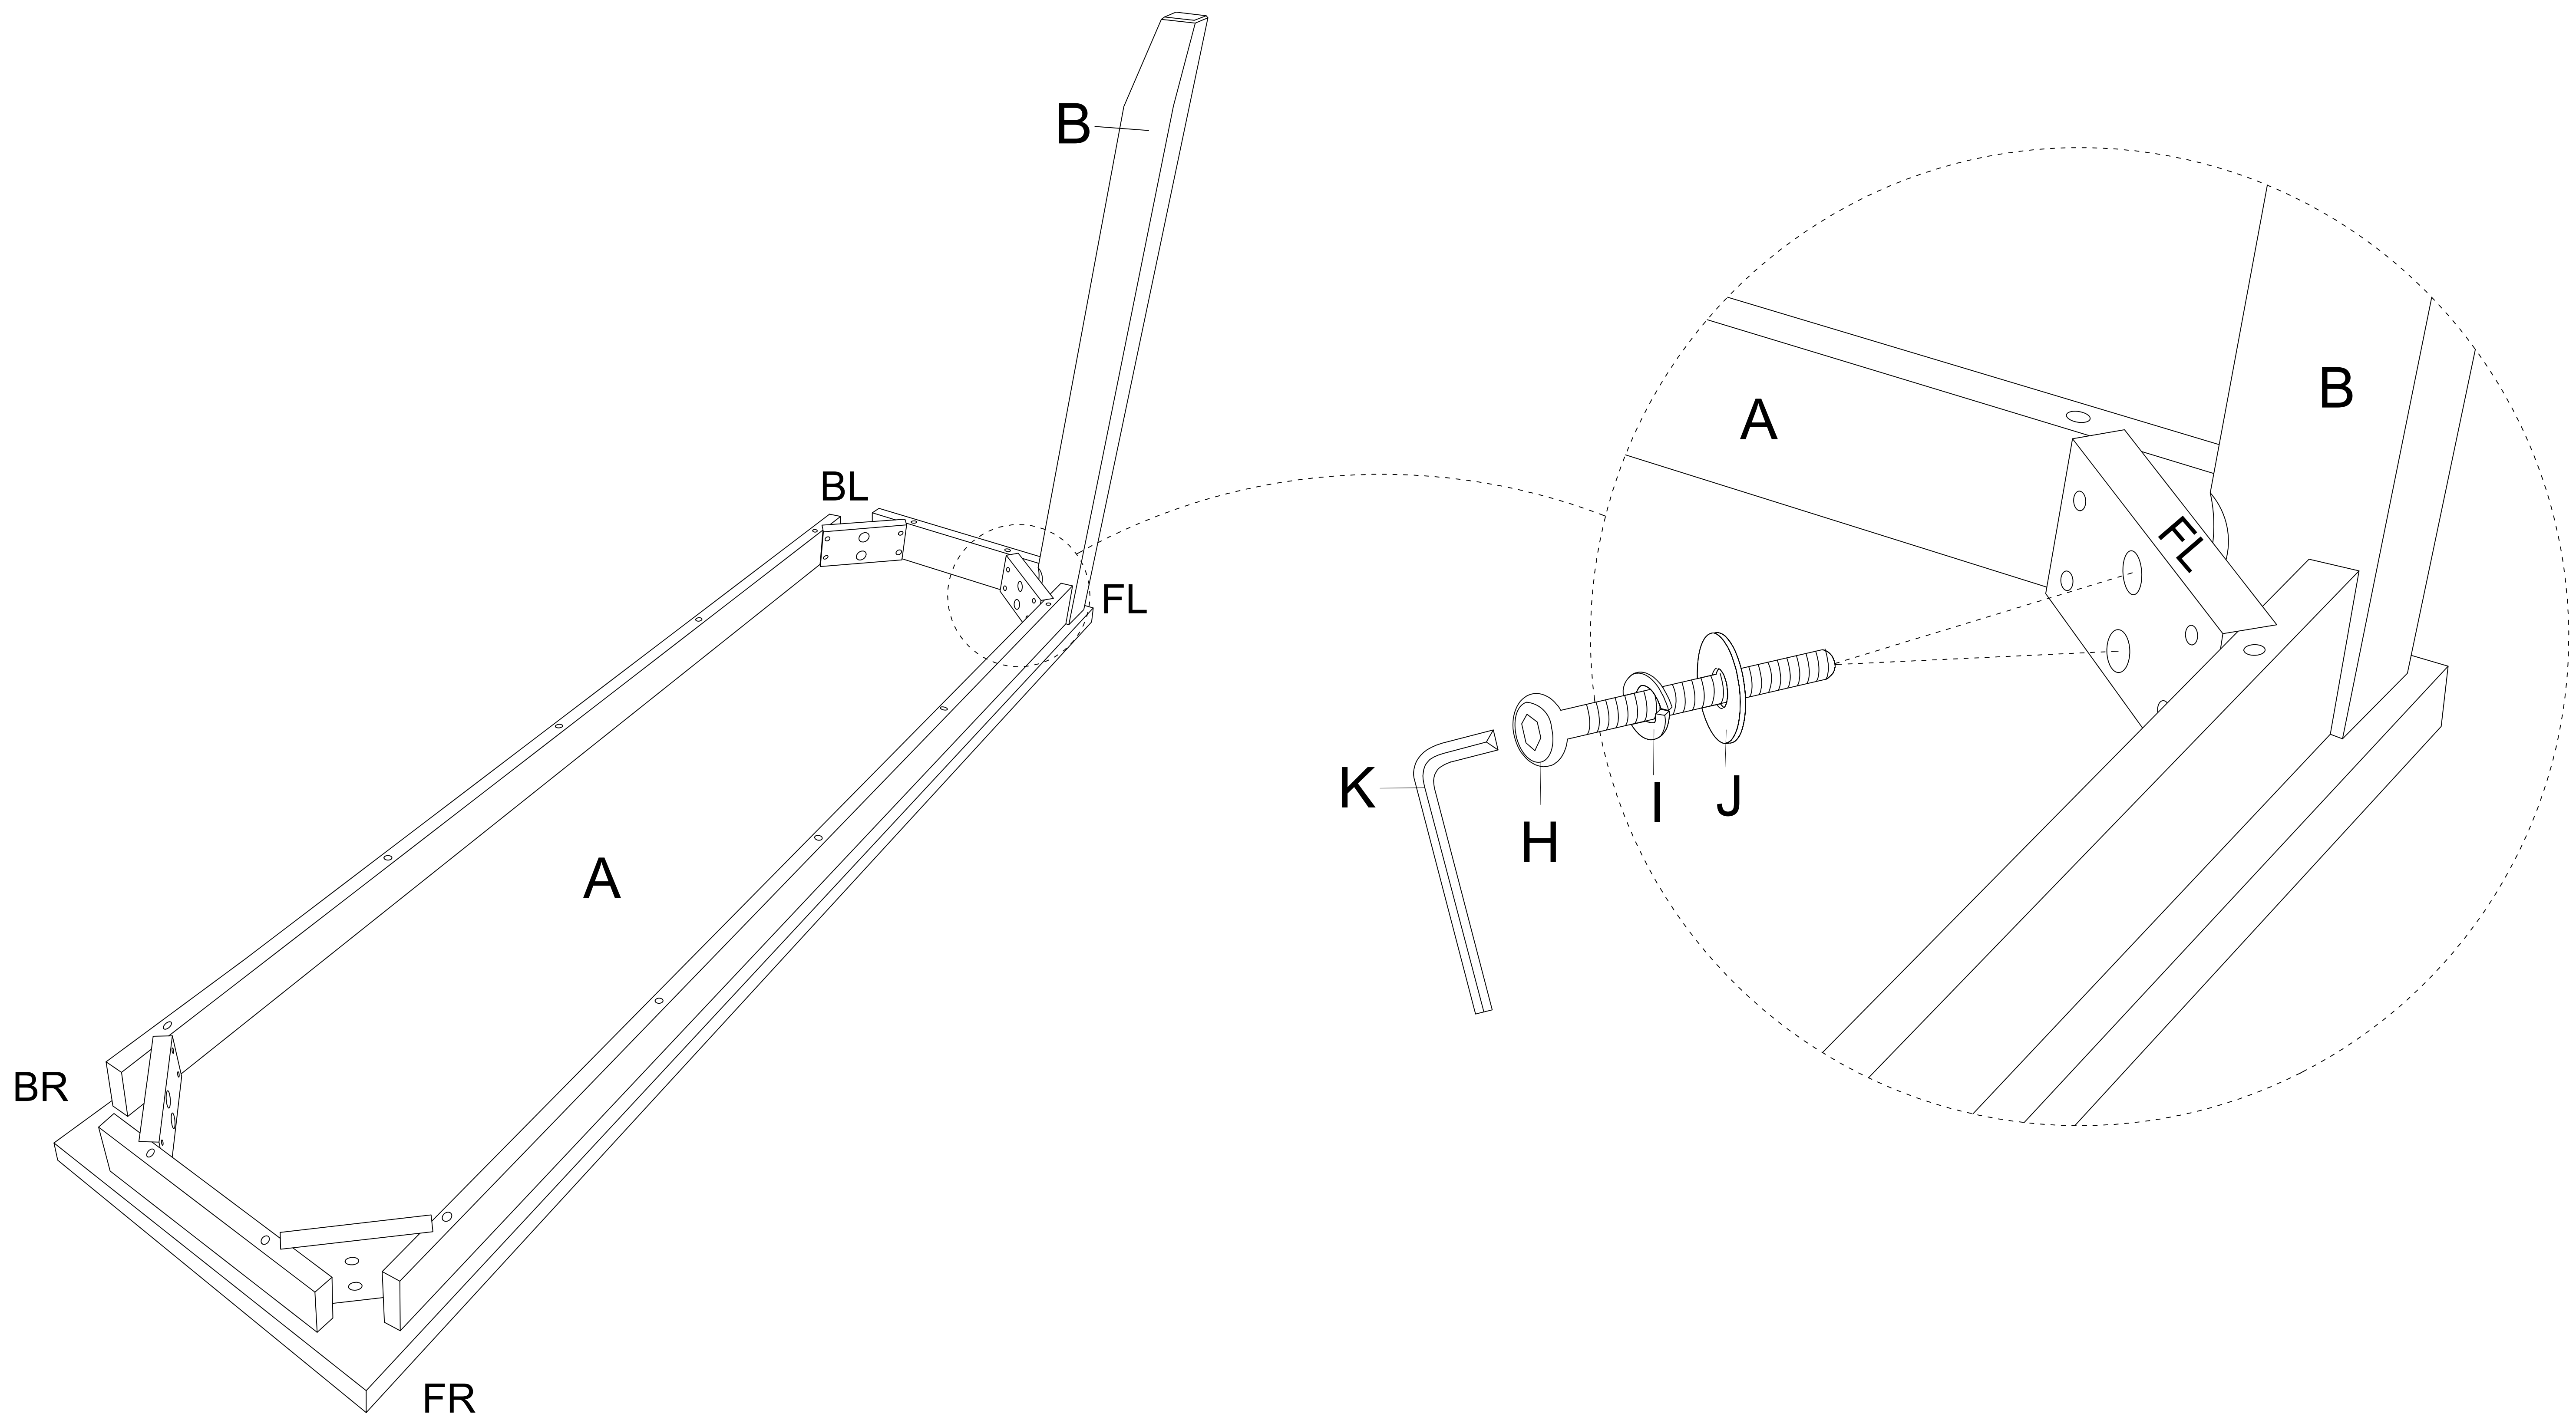

 
- 2** Attach the Table Leg BL (C) to the Table Top (A) using JCBC Bolt (H), Spring Washer (I) and Flat Washer (J) with the Allen Key (K). Before tightening the bolts, attach the Side Support (F) between the Table Leg (B & C).

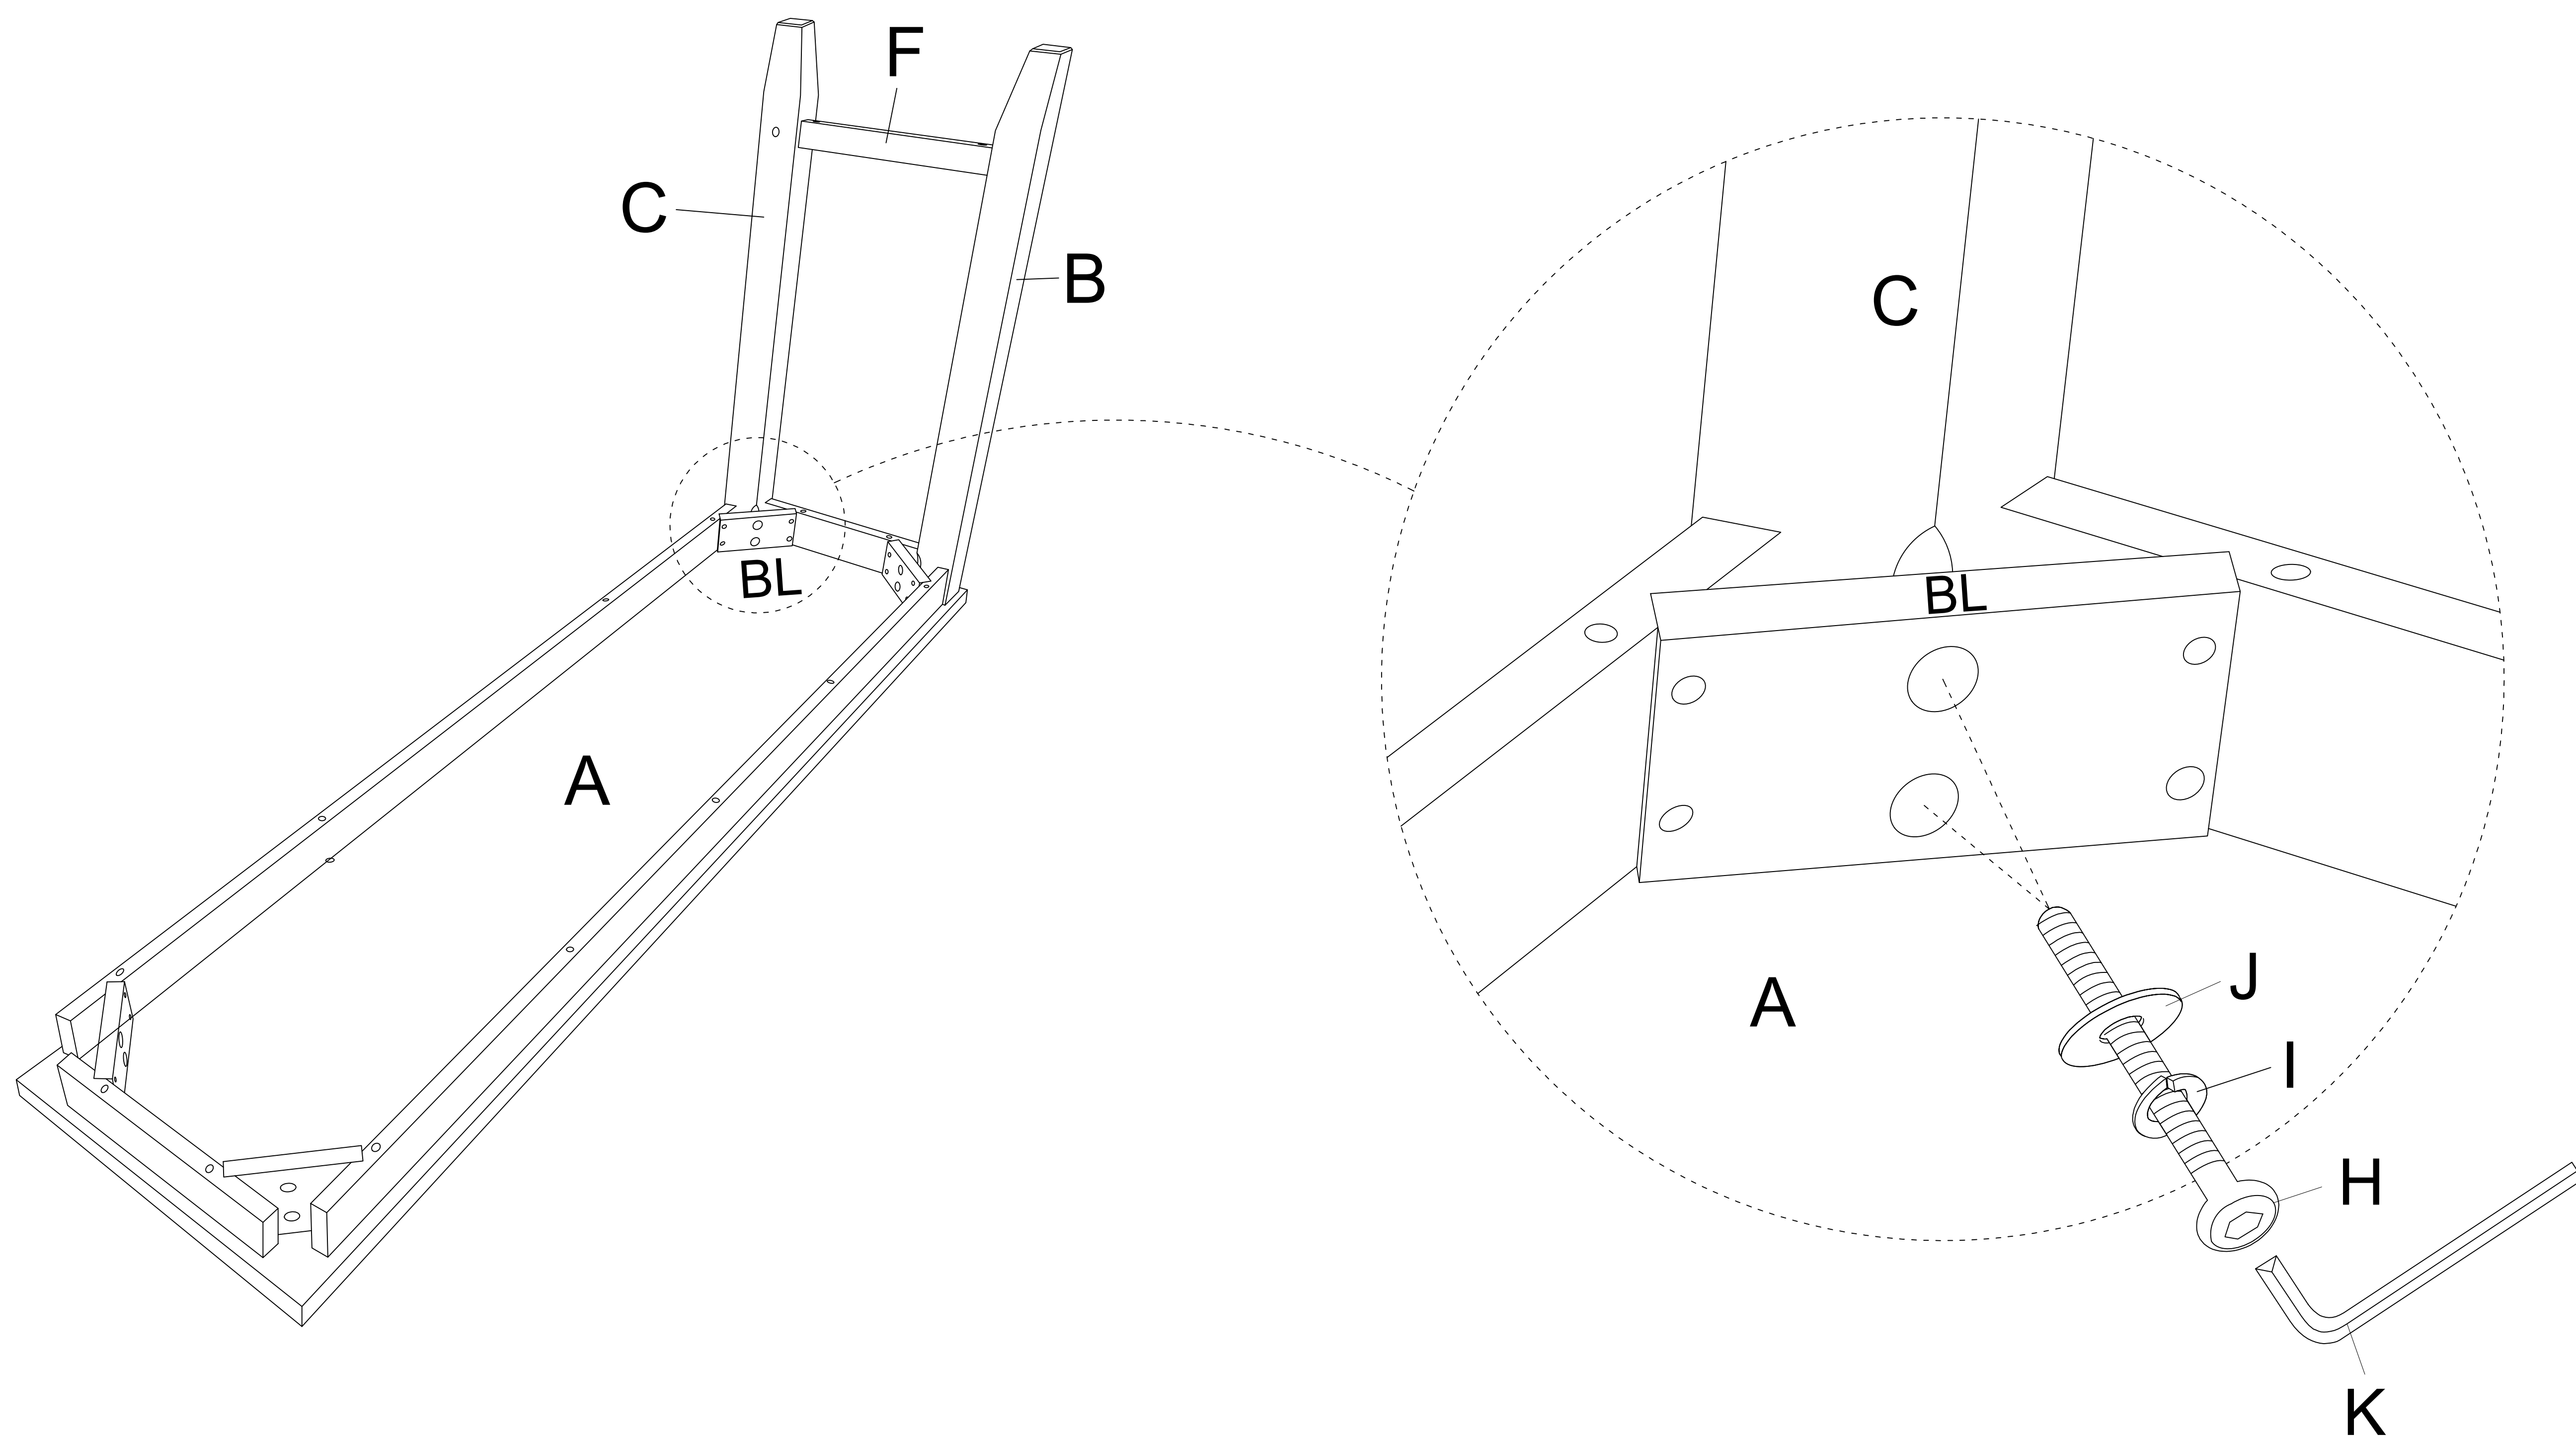

 - 3** Attach the Table Leg BR (E) to the Table Top (A) using JCBC Bolt (H), Spring Washer (I) and Flat Washer (J) with the Allen Key (K). Before tightening the bolts, attach the Cross Bar (G) between the Table Leg (C & E).

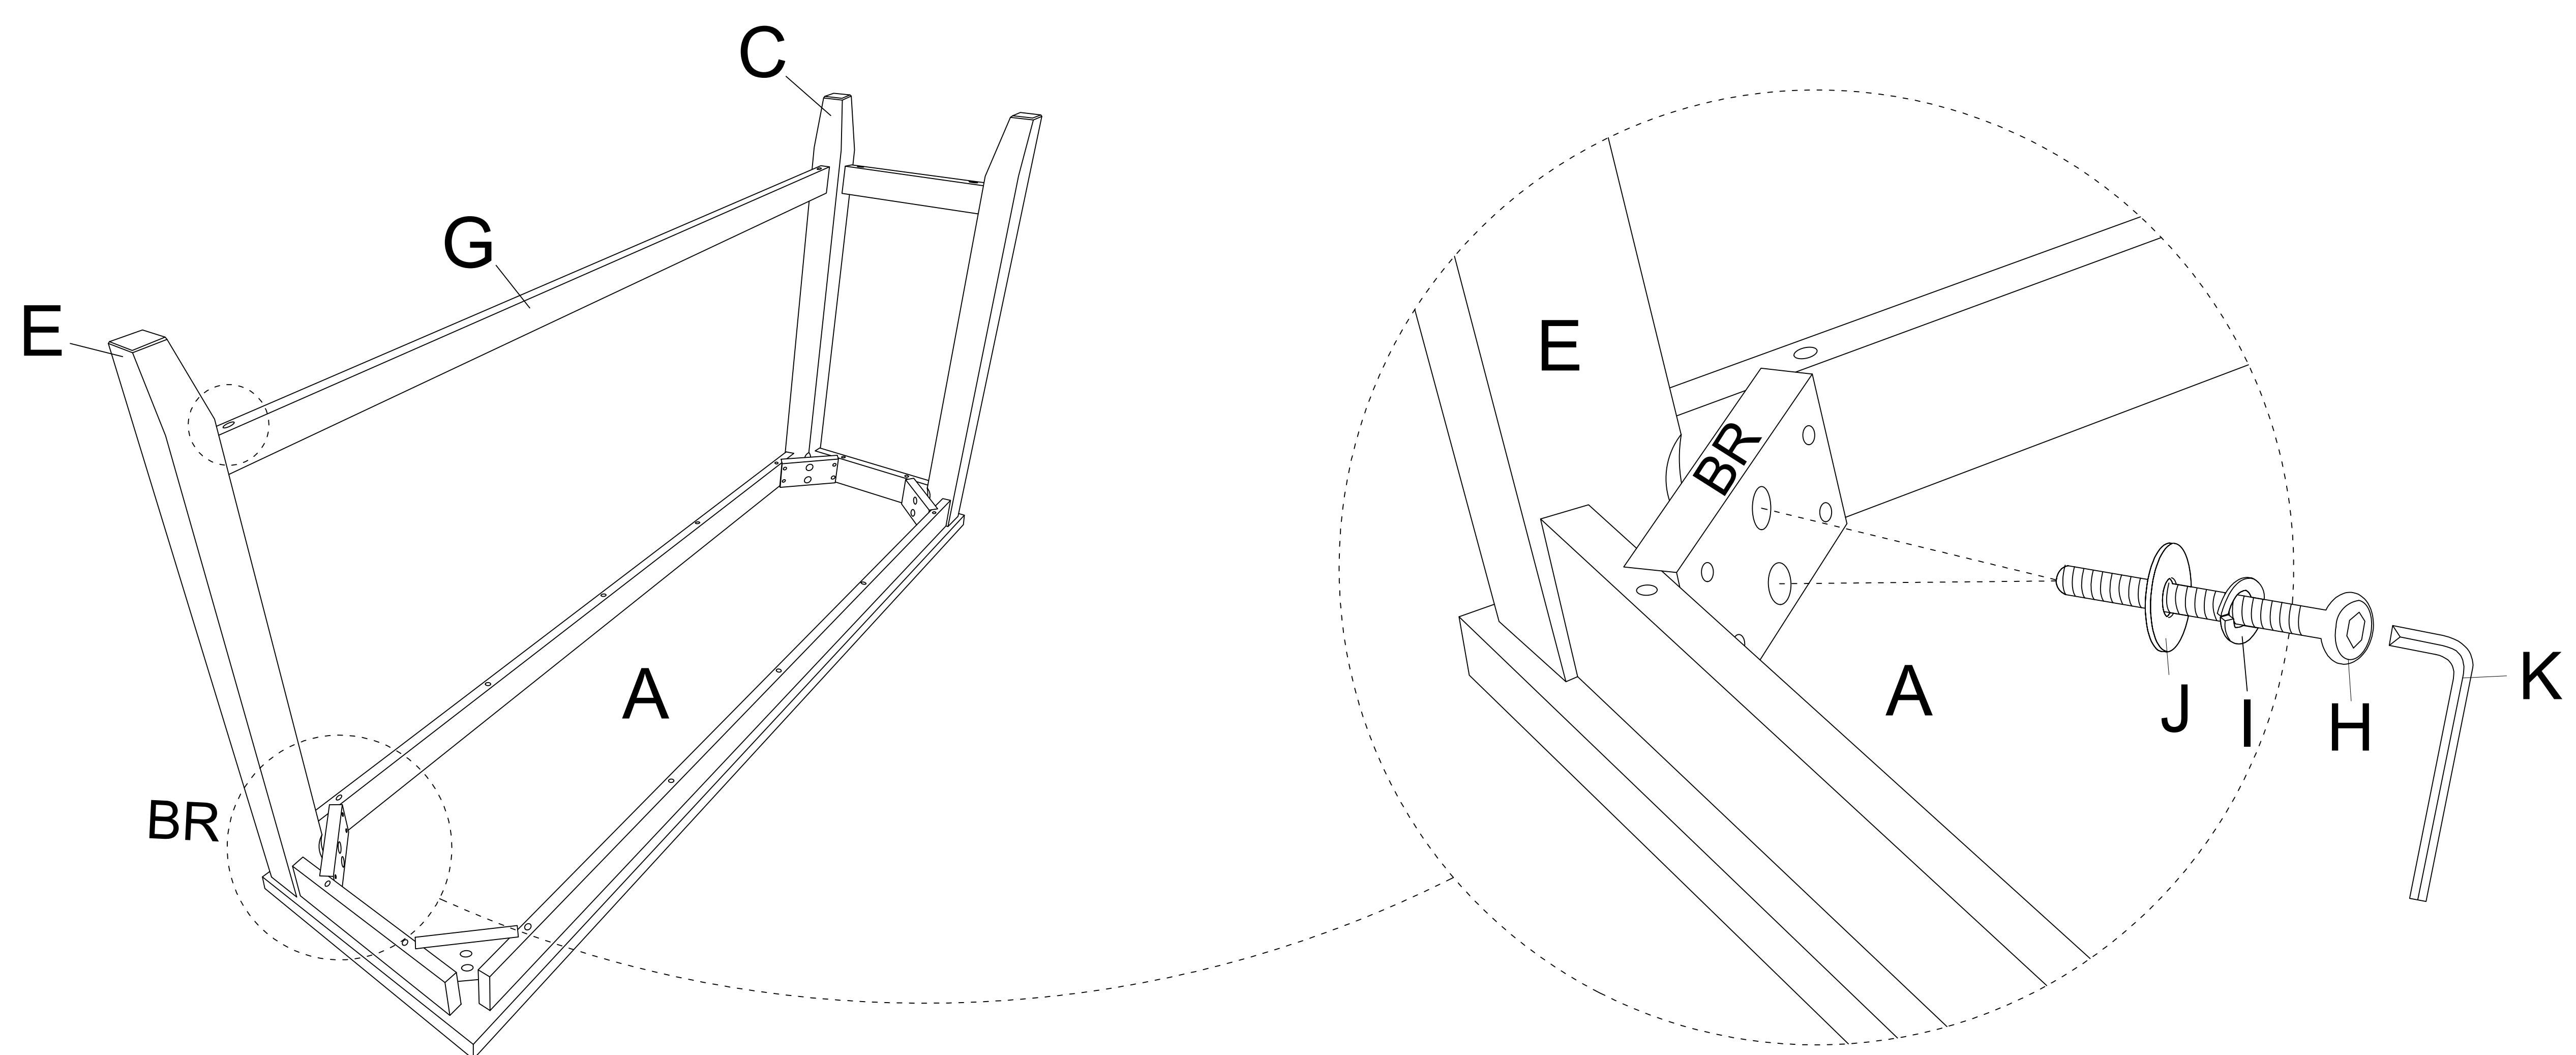

 - 4** Attach the Table Leg FR (D) to the Table Top (A) using JCBC Bolt (H), Spring Washer (I) and Flat Washer (J) with the Allen Key (K). Before tightening the bolts, attach the Side Support (F) between the Table Leg (D & E). Finally, secure the Side Support (F) and the Cross Bar (G) using Pan Head Screw (L) with a screwdriver (not provided).

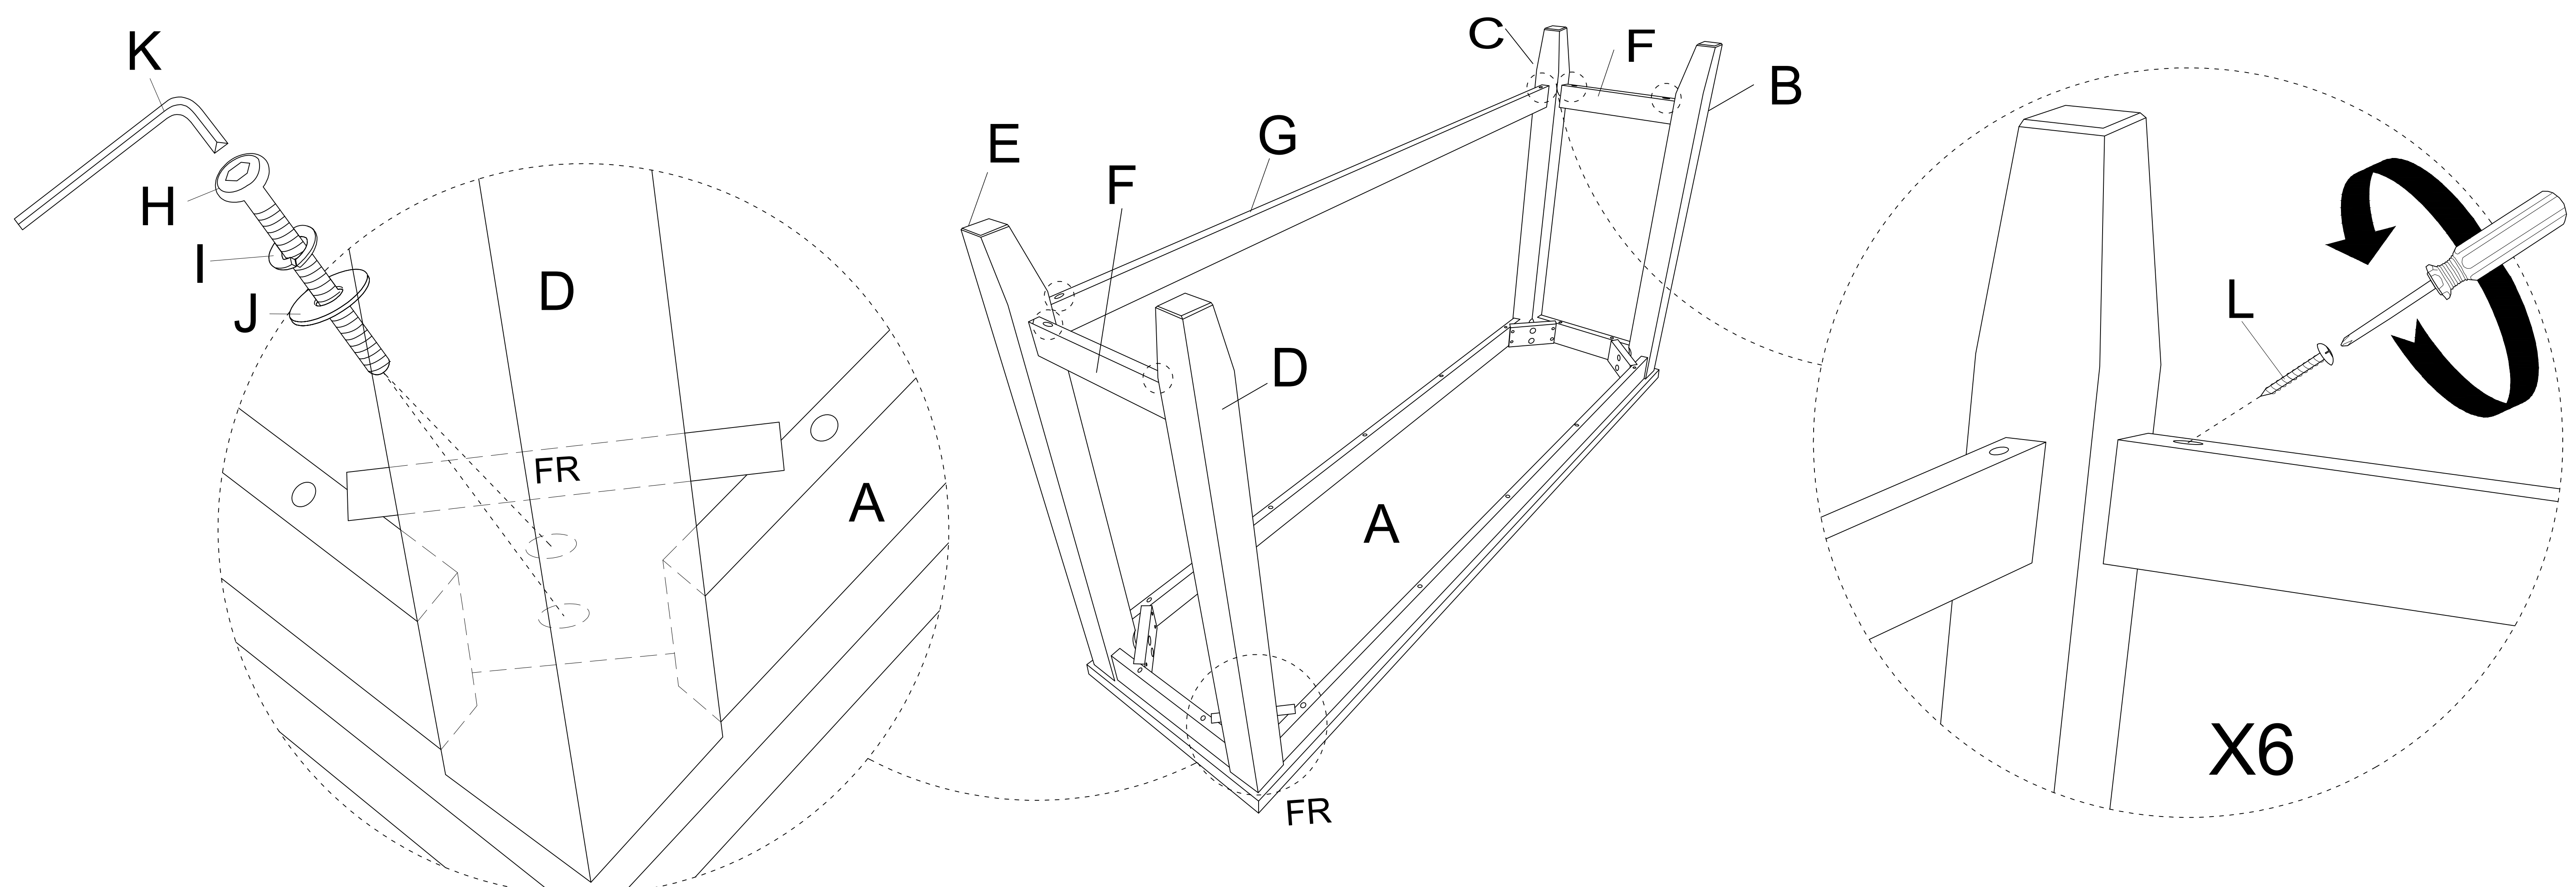





Stand the table on an even surface and check for balance. If the table wobbles slightly, apply downward pressure on the uneven leg and tighten all bolts to correct the imbalance. Once the table is balanced, apply downward pressure evenly in the center of the table and tighten all bolts, being careful not to over-tighten beyond the hole depth.

#### Cleaning & Care

    Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# ASSEMBLY INSTRUCTIONS

## STORAGE UNIT

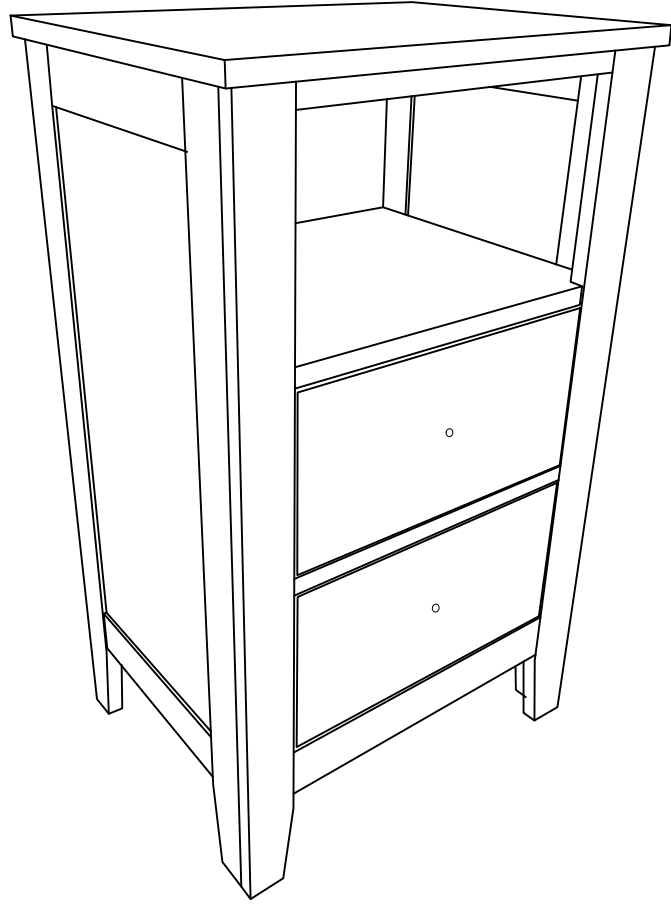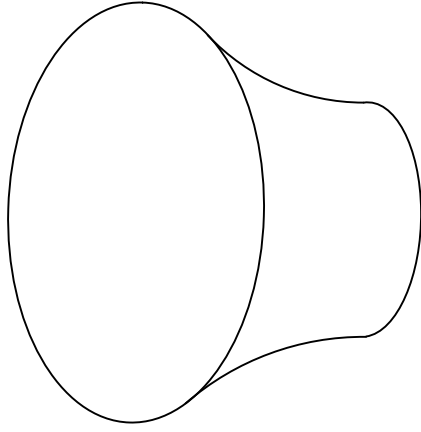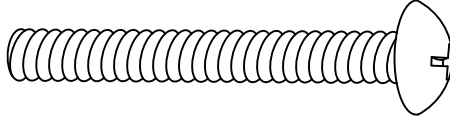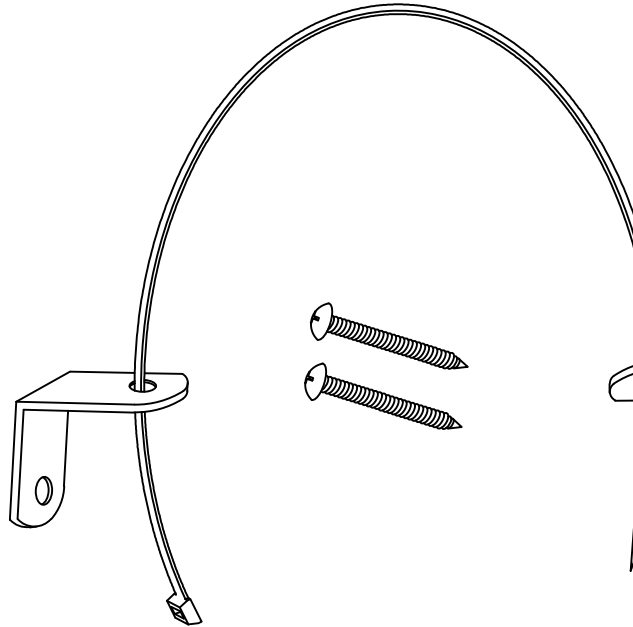
<b>A</b> Storage	<b>B</b> Knob (Inside The drawer)	<b>C</b> Screw	<b>D</b> Anti-Tip Kit
			
1 pc	1 pc	1 pc	1 set




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.



- 1 Open all the drawers and loosen the Screw (C) of the Knob (B) to re-assemble the Knob (B) with a screwdriver (not provided).

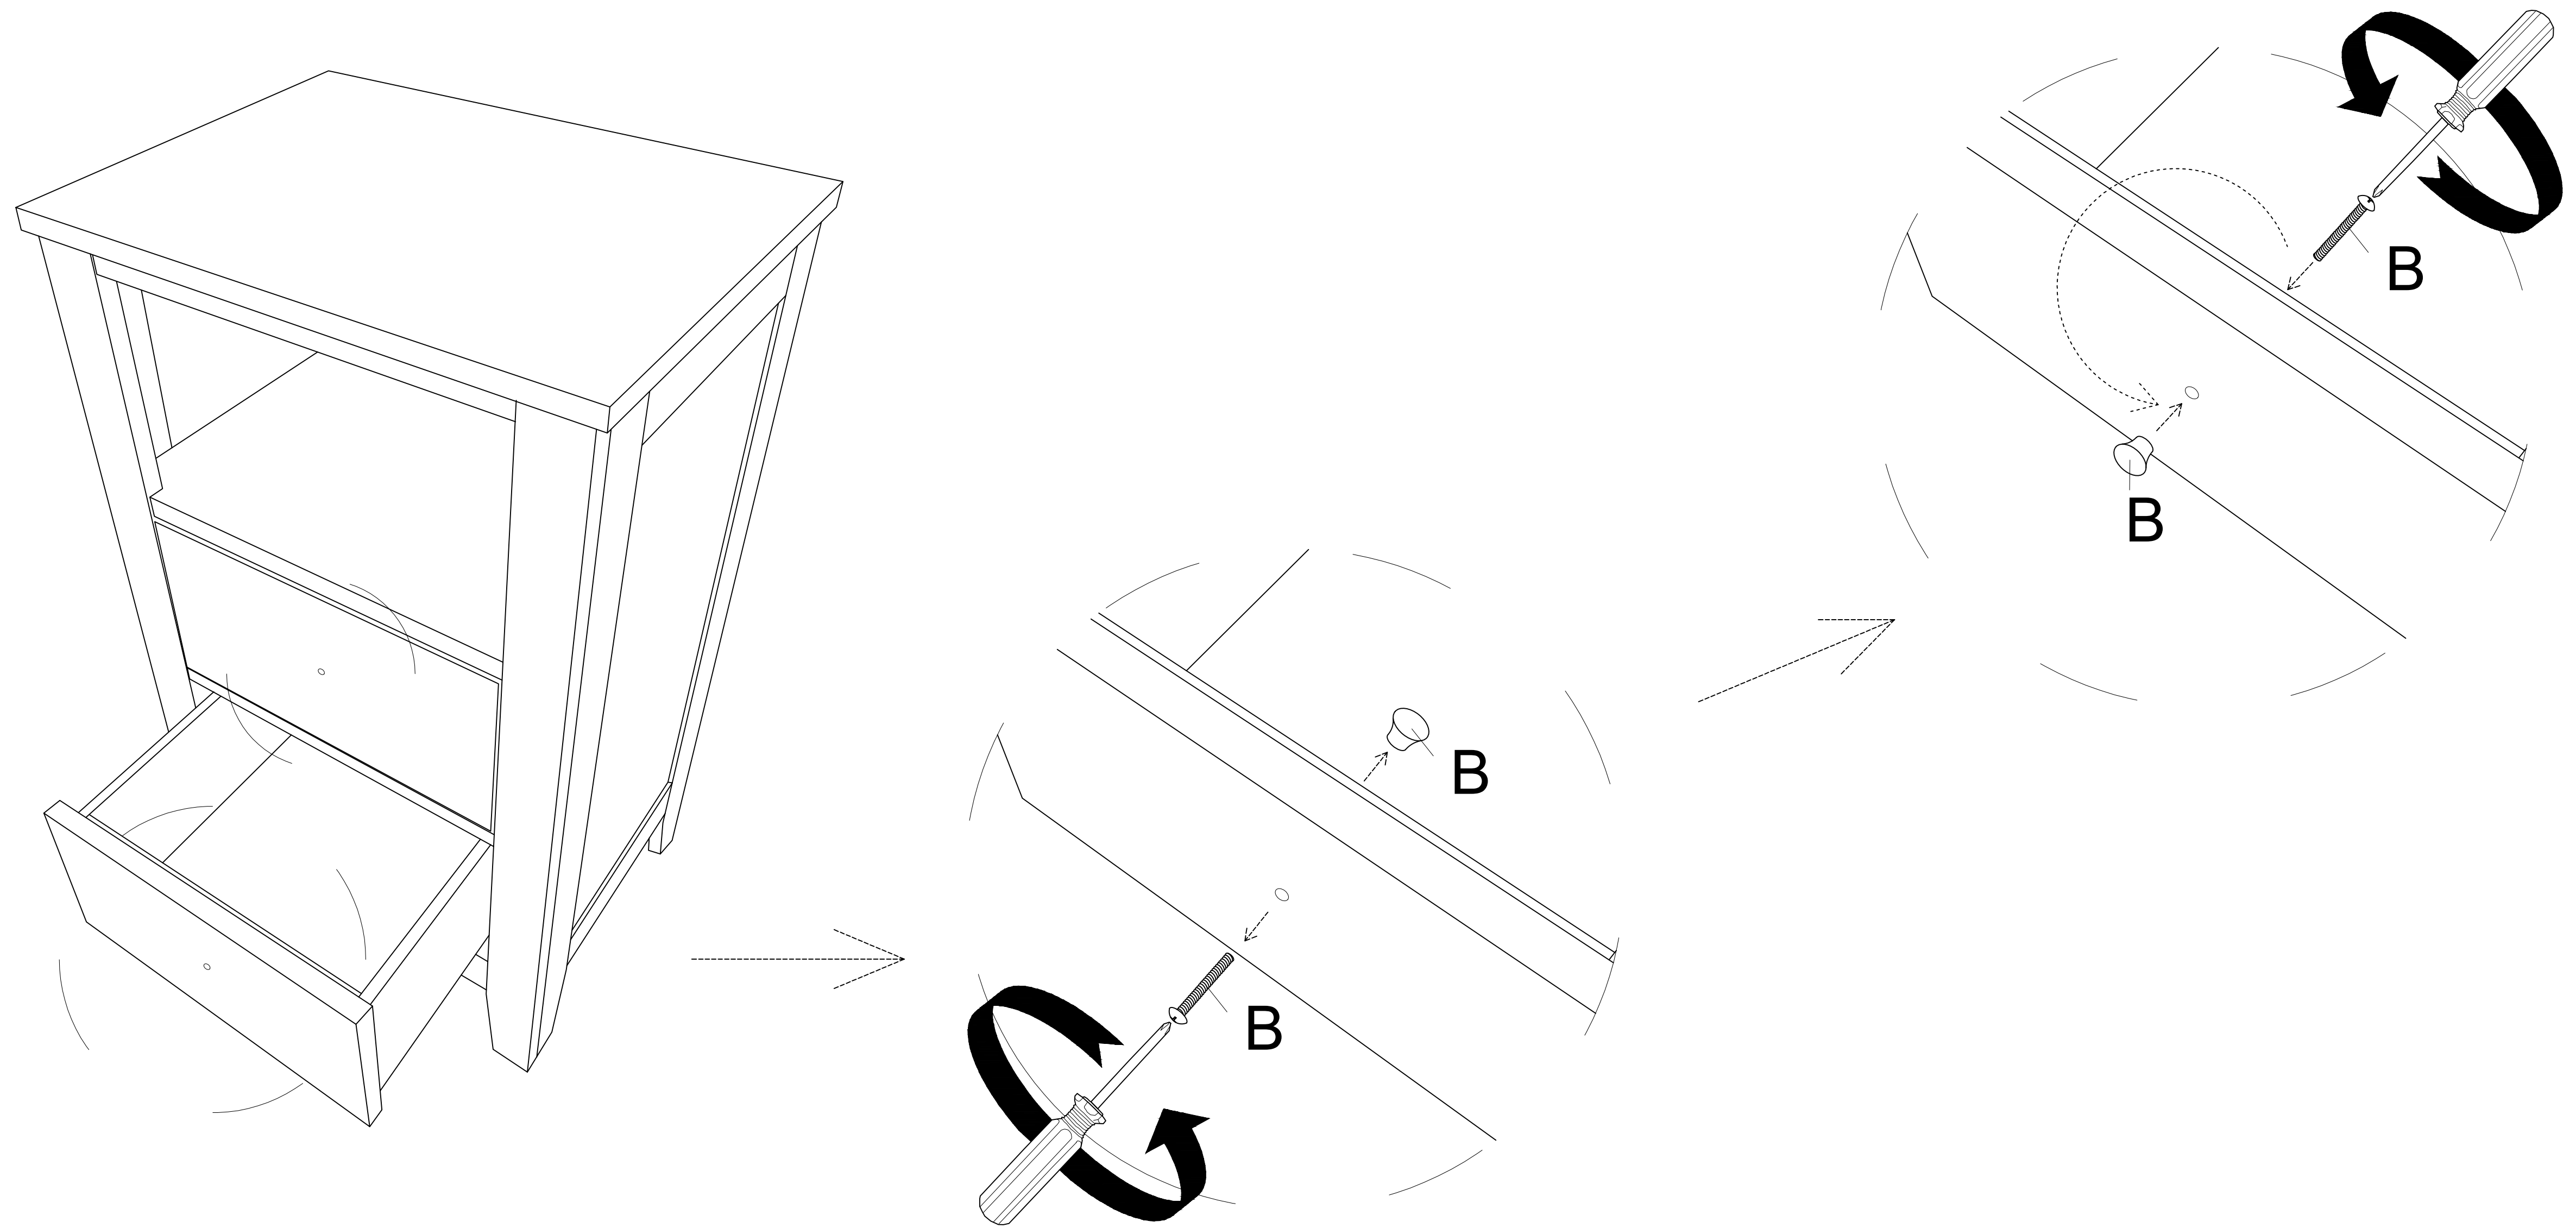

- 2 Attach Anti-Tip Kit (D) to the wall. Mount the bracket vertically on the wall using the long screw. Then, secure the bracket vertically on the furniture back below the top using the short screw. Place the bracket as close to the center of the furniture back as possible, considering the wall stud and desired position in the room. Move the furniture to its final position. Thread the strap through the bracket and pull it tight.

 
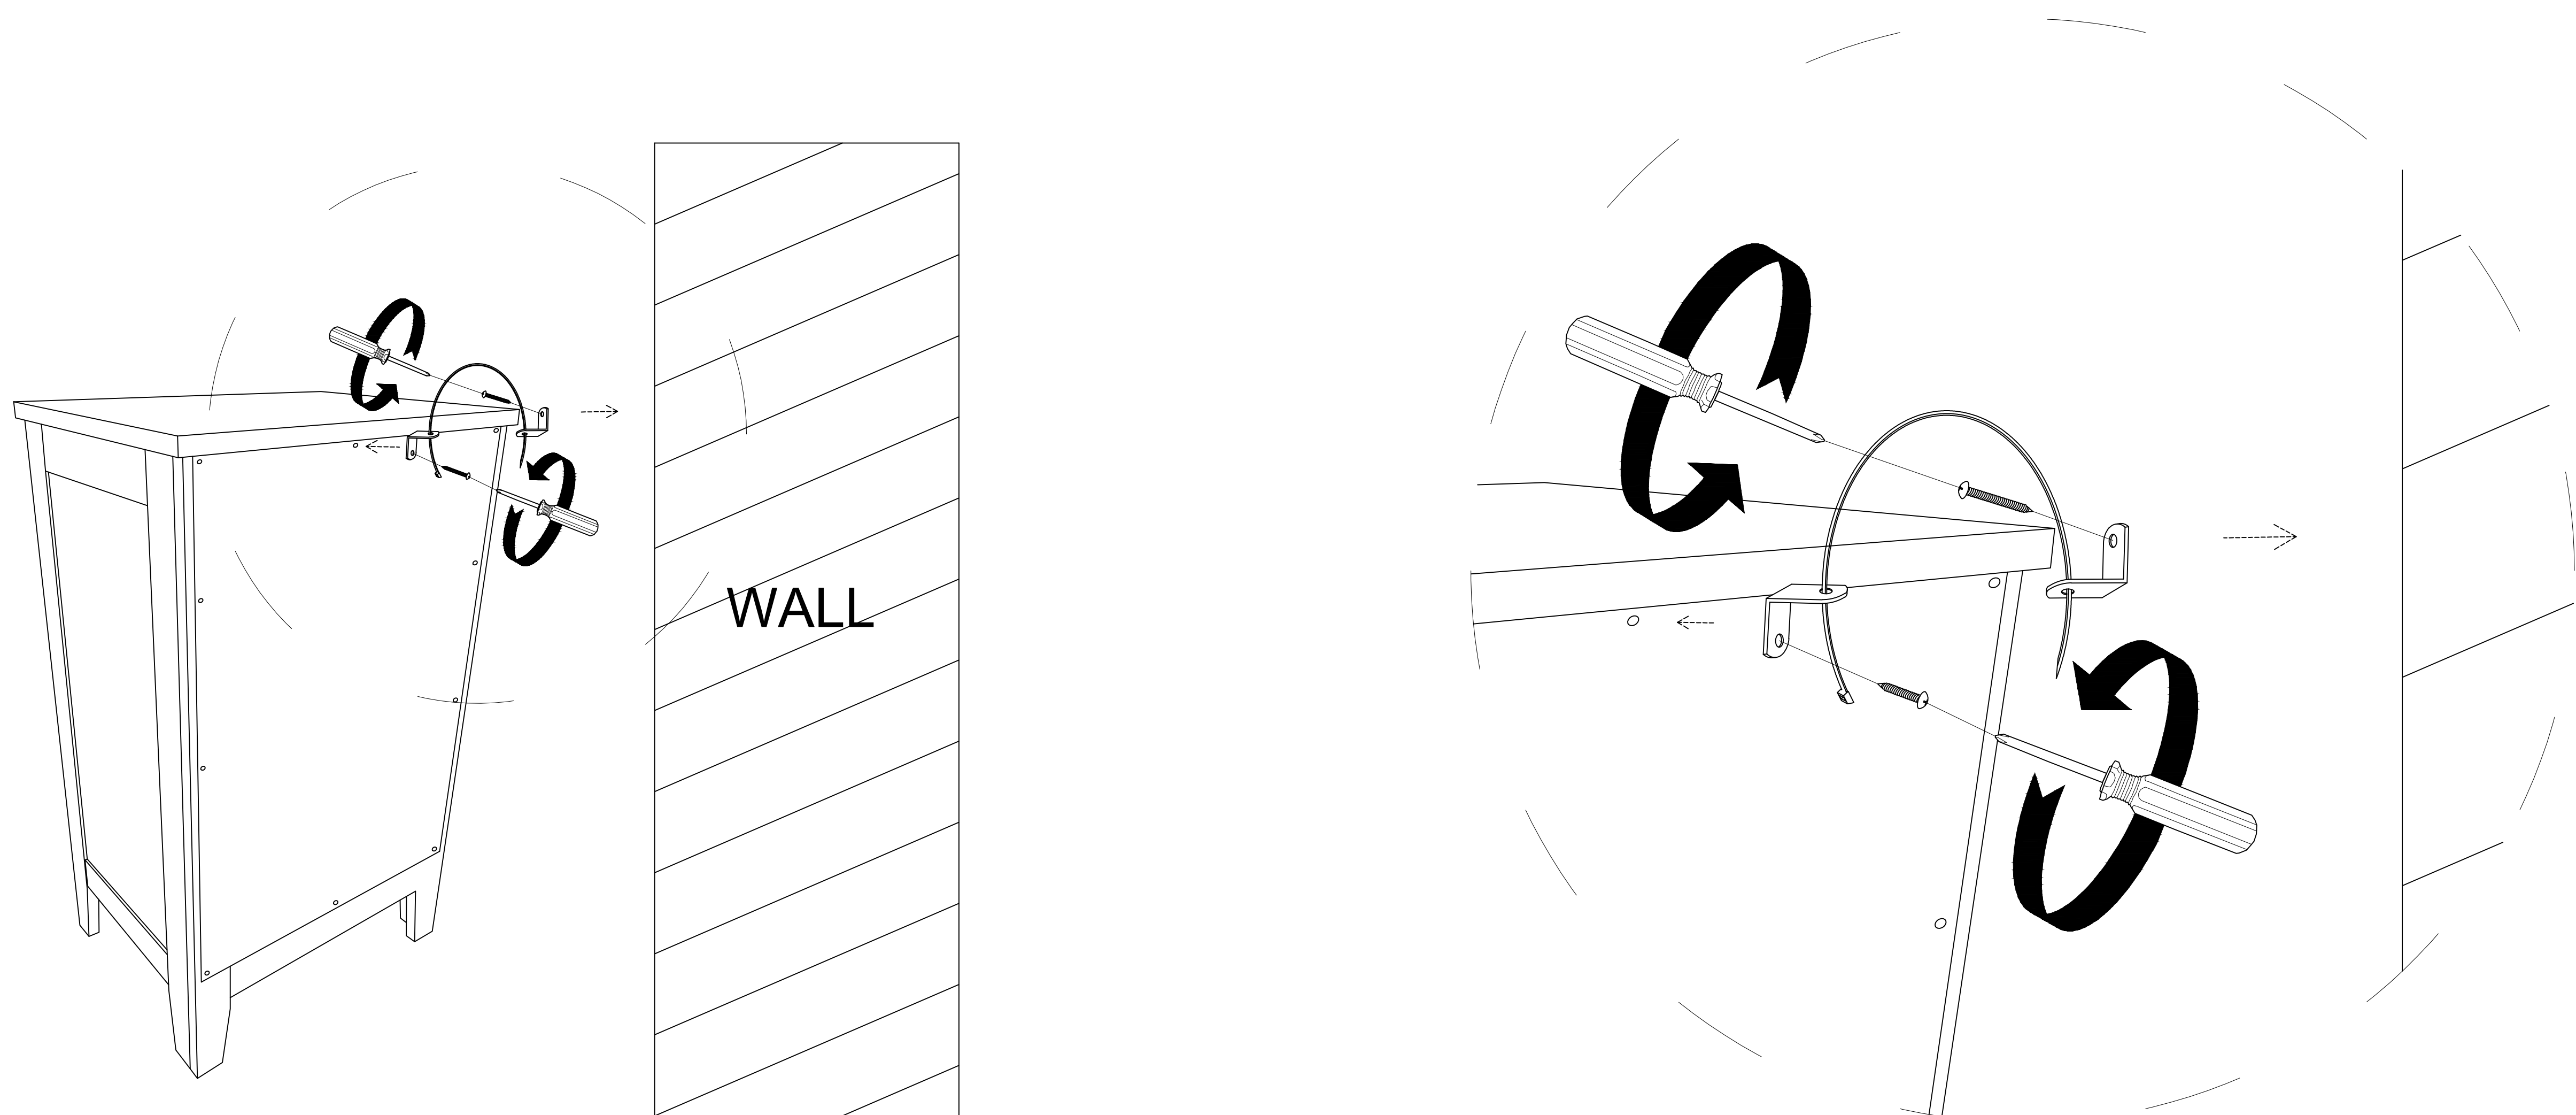 

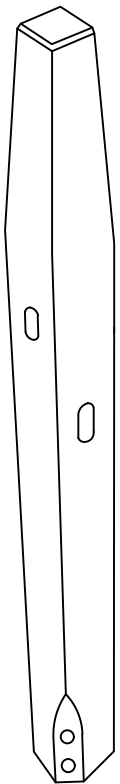 
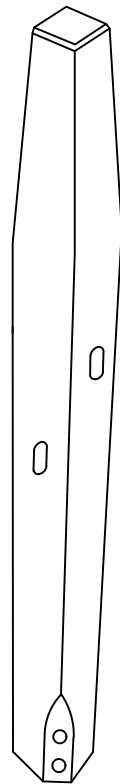 
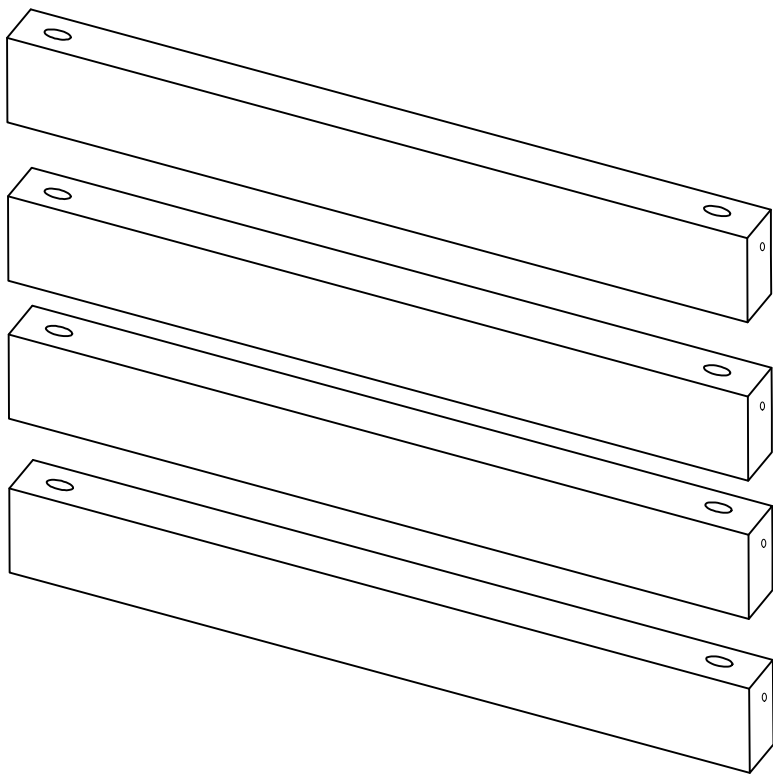 
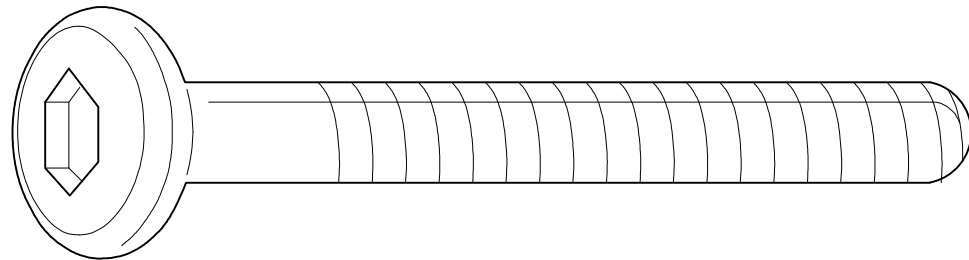 
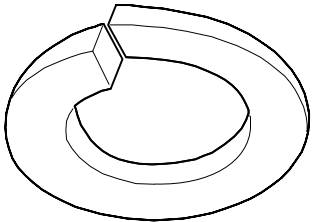 
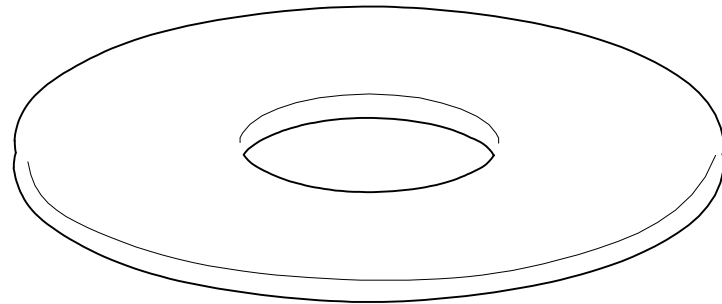 
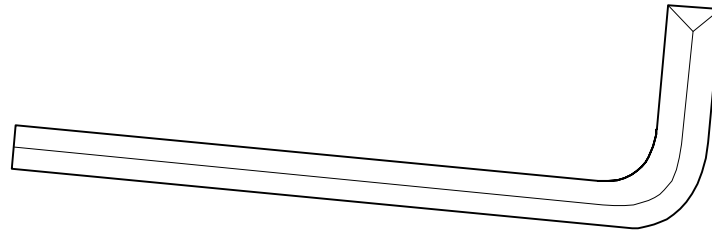 
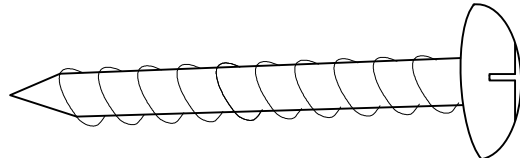 



### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# ASSEMBLY INSTRUCTIONS


## 24" COUNTER HEIGHT STOOL
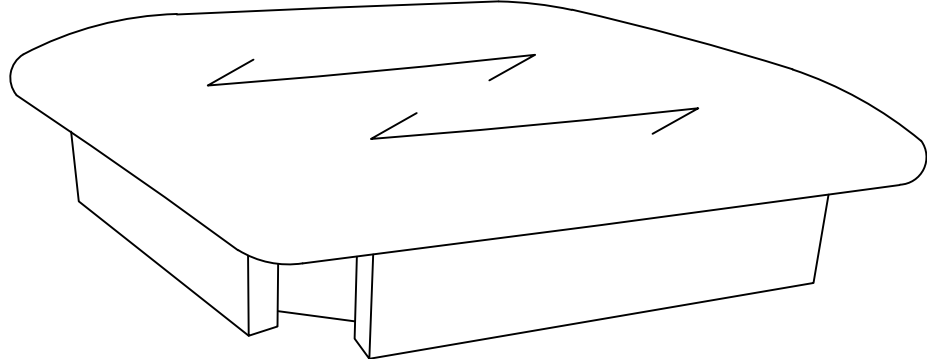 
<b>A</b> Seat	<b>B</b> Leg Front Left	<b>C</b> Leg Back Left	<b>D</b> Leg Front Right
			
1 pc	1 pc	1 pc	1 pc
<b>E</b> Leg Back Right	<b>F</b> Strecher	<b>G</b> JCBC Bolt M6 x 60mm	<b>H</b> Spring Washer M6
			
1 pc	4 pcs	8 pcs	8 pcs
<b>I</b> Flat Washer M6	<b>J</b> Allen Key M4 x 110mm	<b>K</b> Pan Head Screw M4 x 38mm	
			
8 pcs	1 pc	8 pcs	

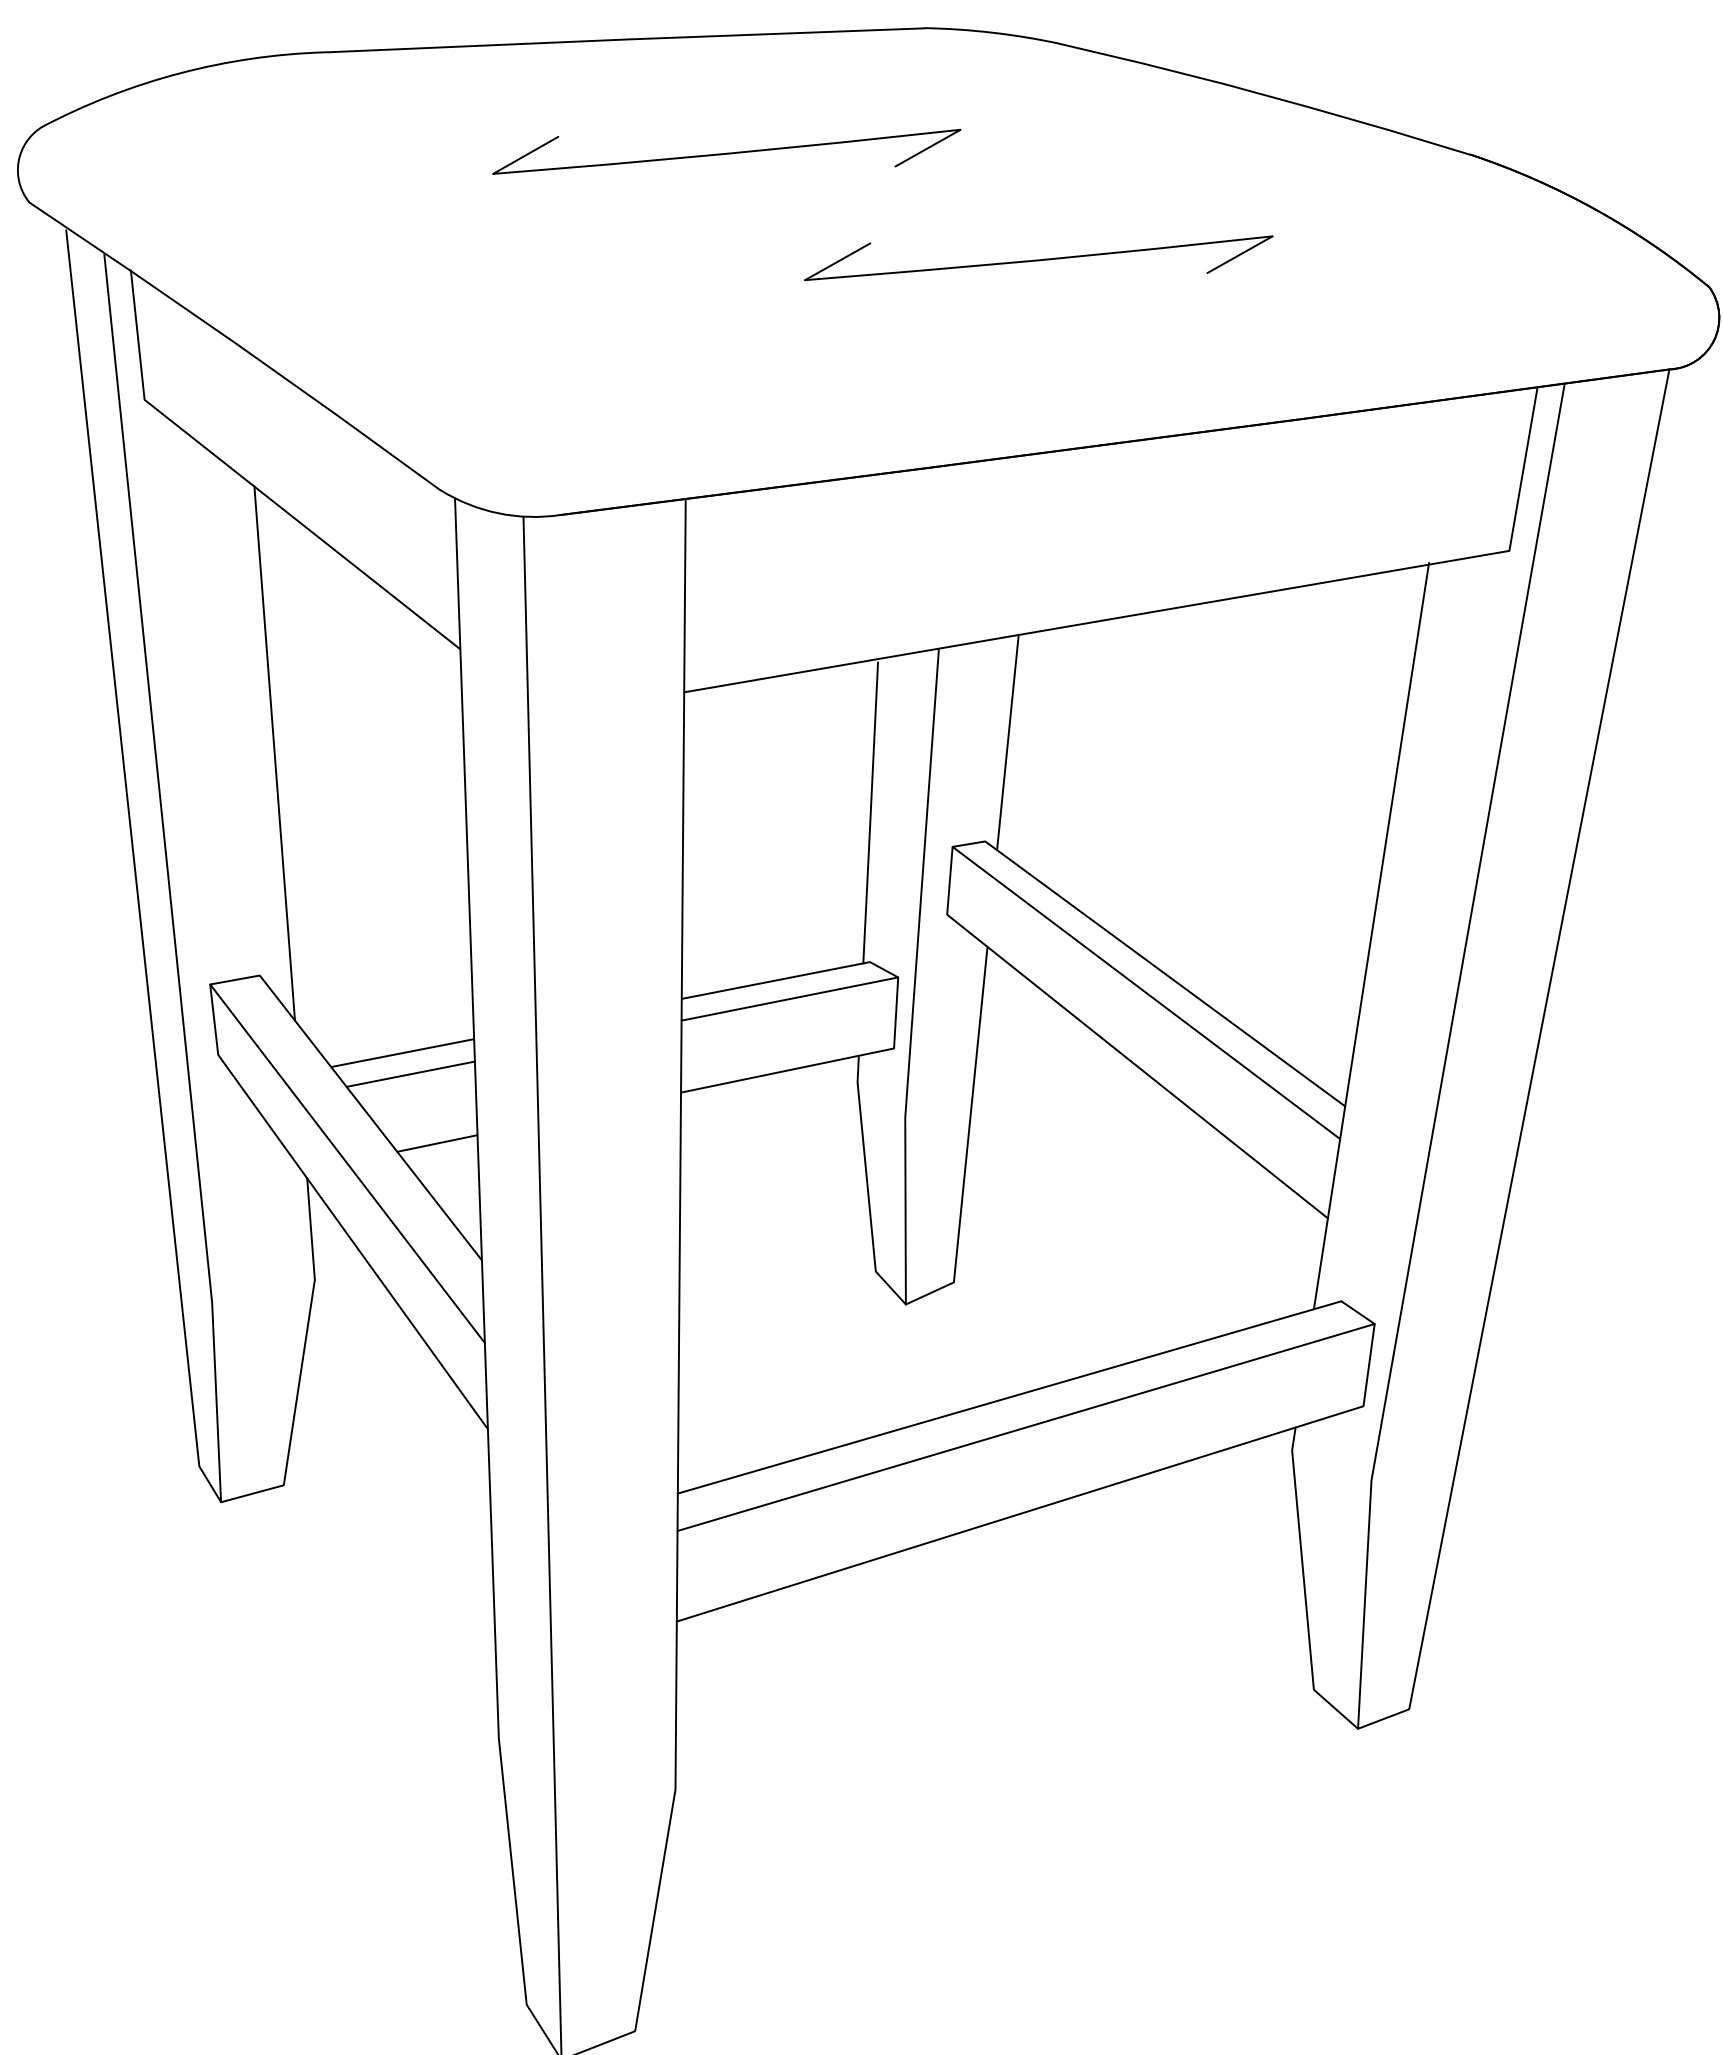


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 - 1 Attach the Leg Back Right (E) to the Seat (A) using JCBC Bolt (G), Spring Washer (H) and Flat Washer (I) with the Allen Key (J).

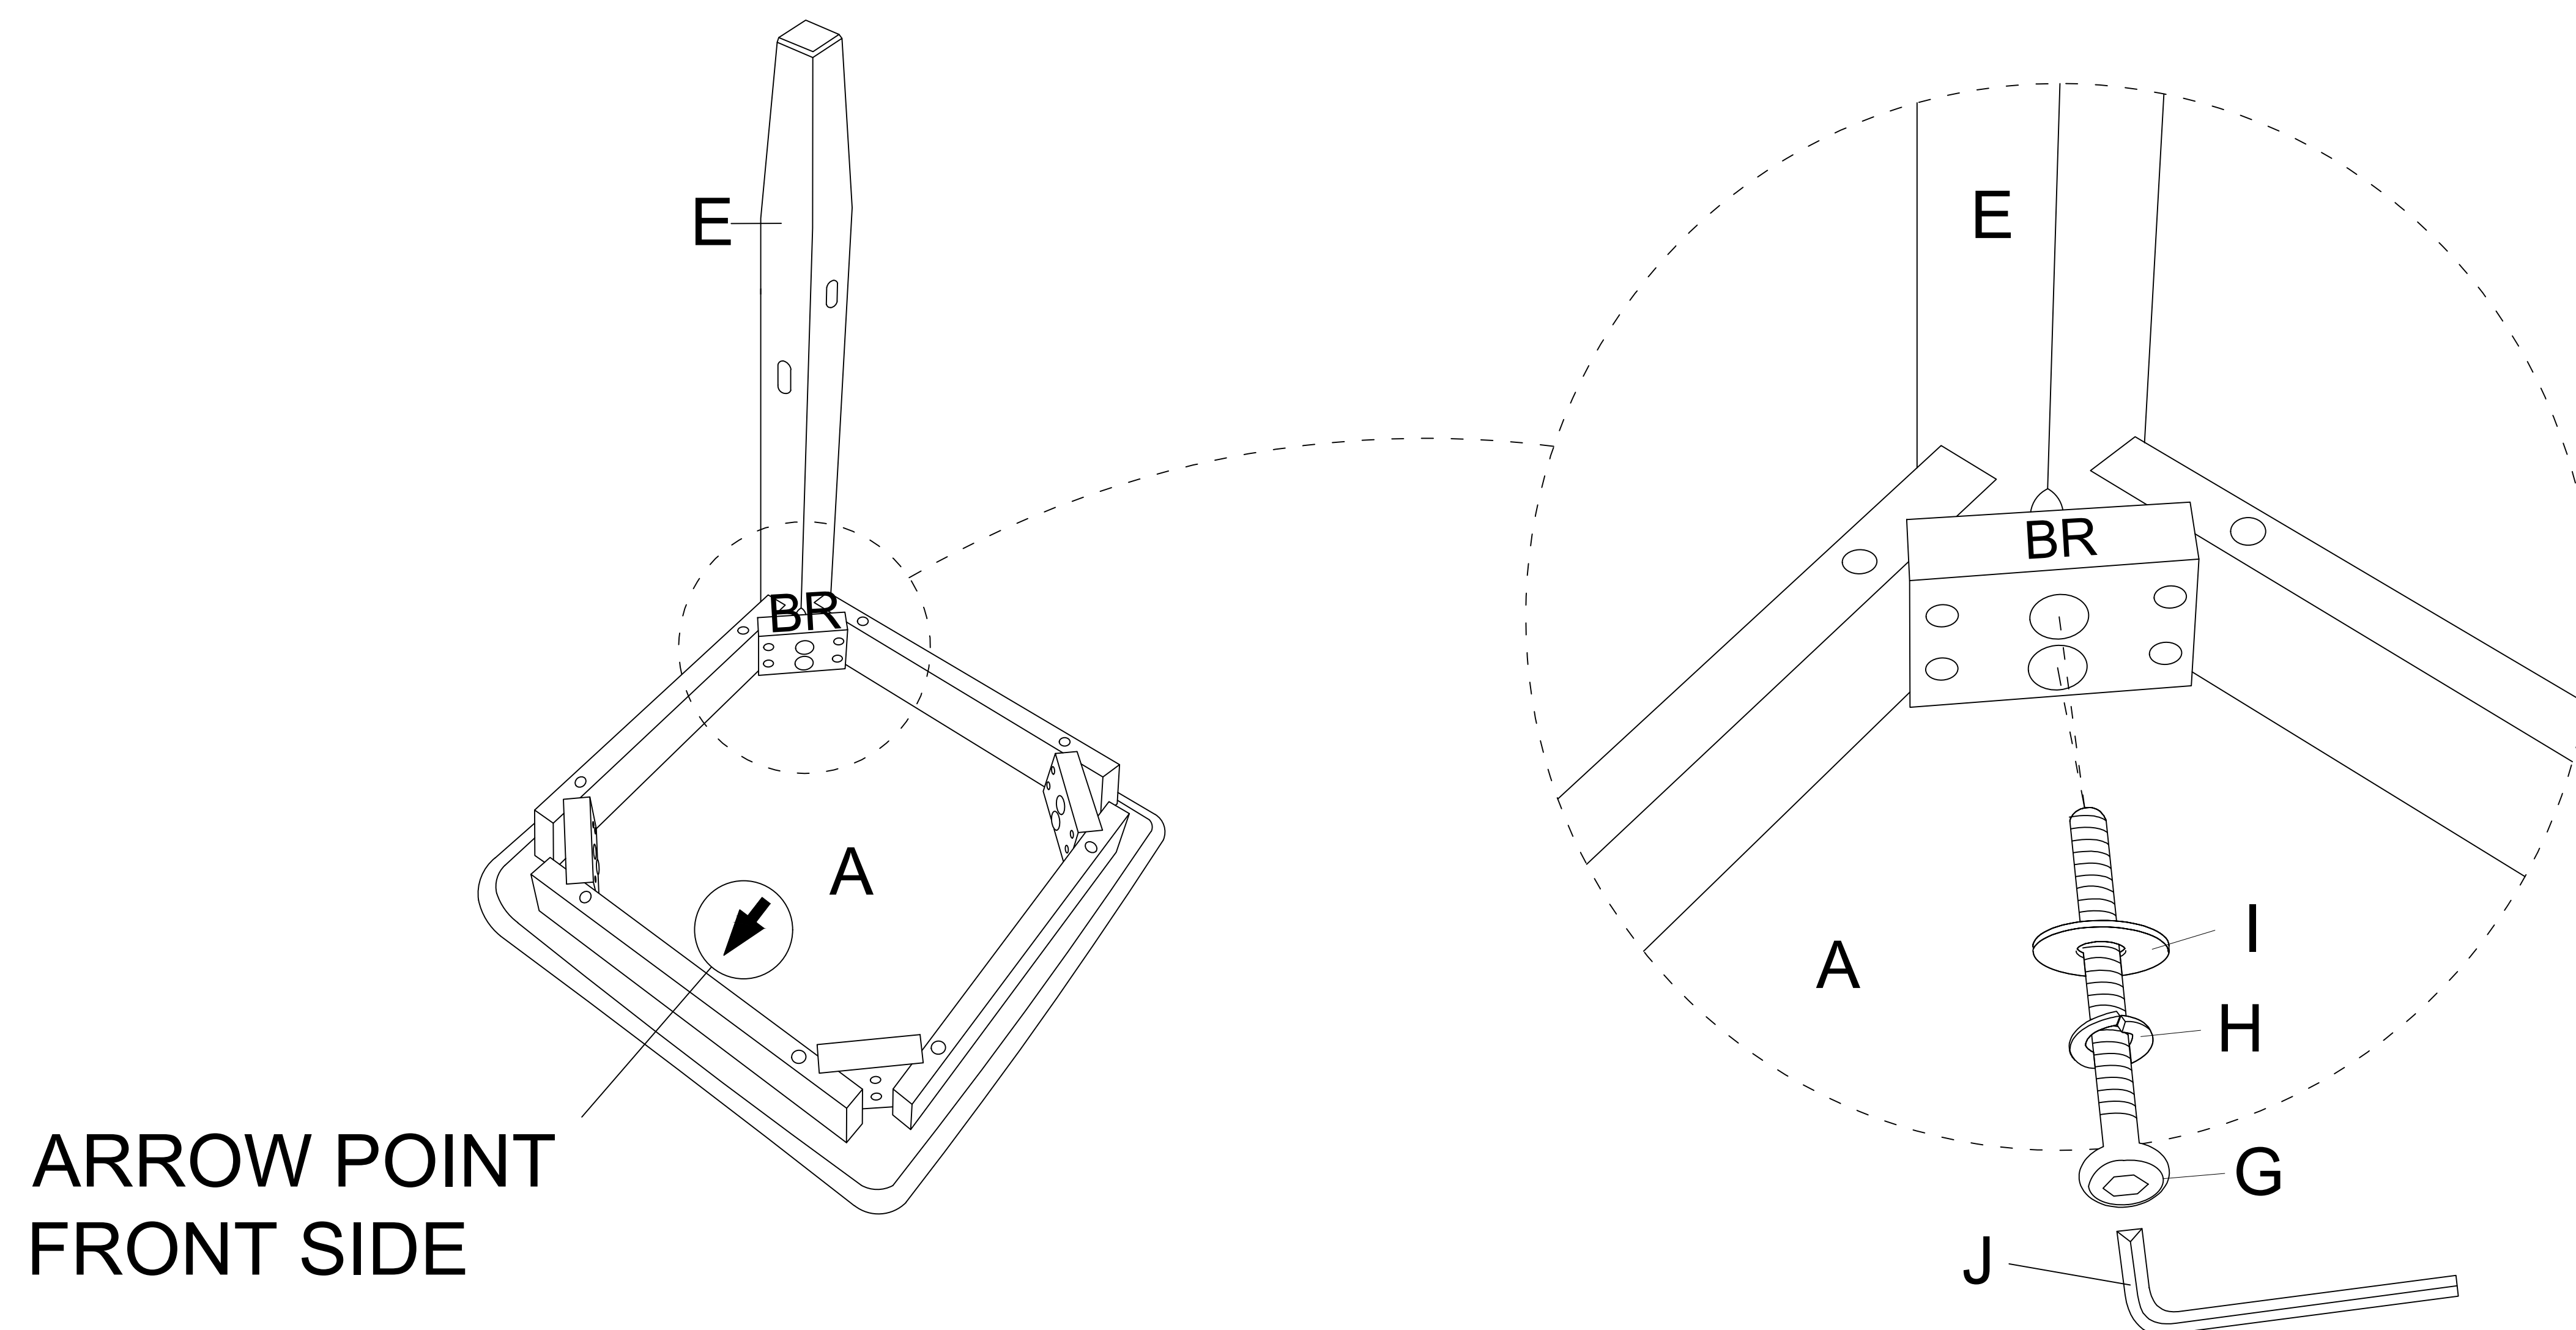


Take the Allen Key and turn the bolts until the legs are secured.  
**DO NOT TIGHTEN THE BOLTS COMPLETELY.**  
Stop when you feel you are adding force to tighten the bolts.

 - 2 Attach the Leg Back Left (C) to the Seat (A) using JCBC Bolt (G), Spring Washer (H) and Flat Washer (I) with the Allen Key (J). Before tightening the bolts, attach the Strecher (F) between the Leg Back Left (C) & Leg Back Right (E).

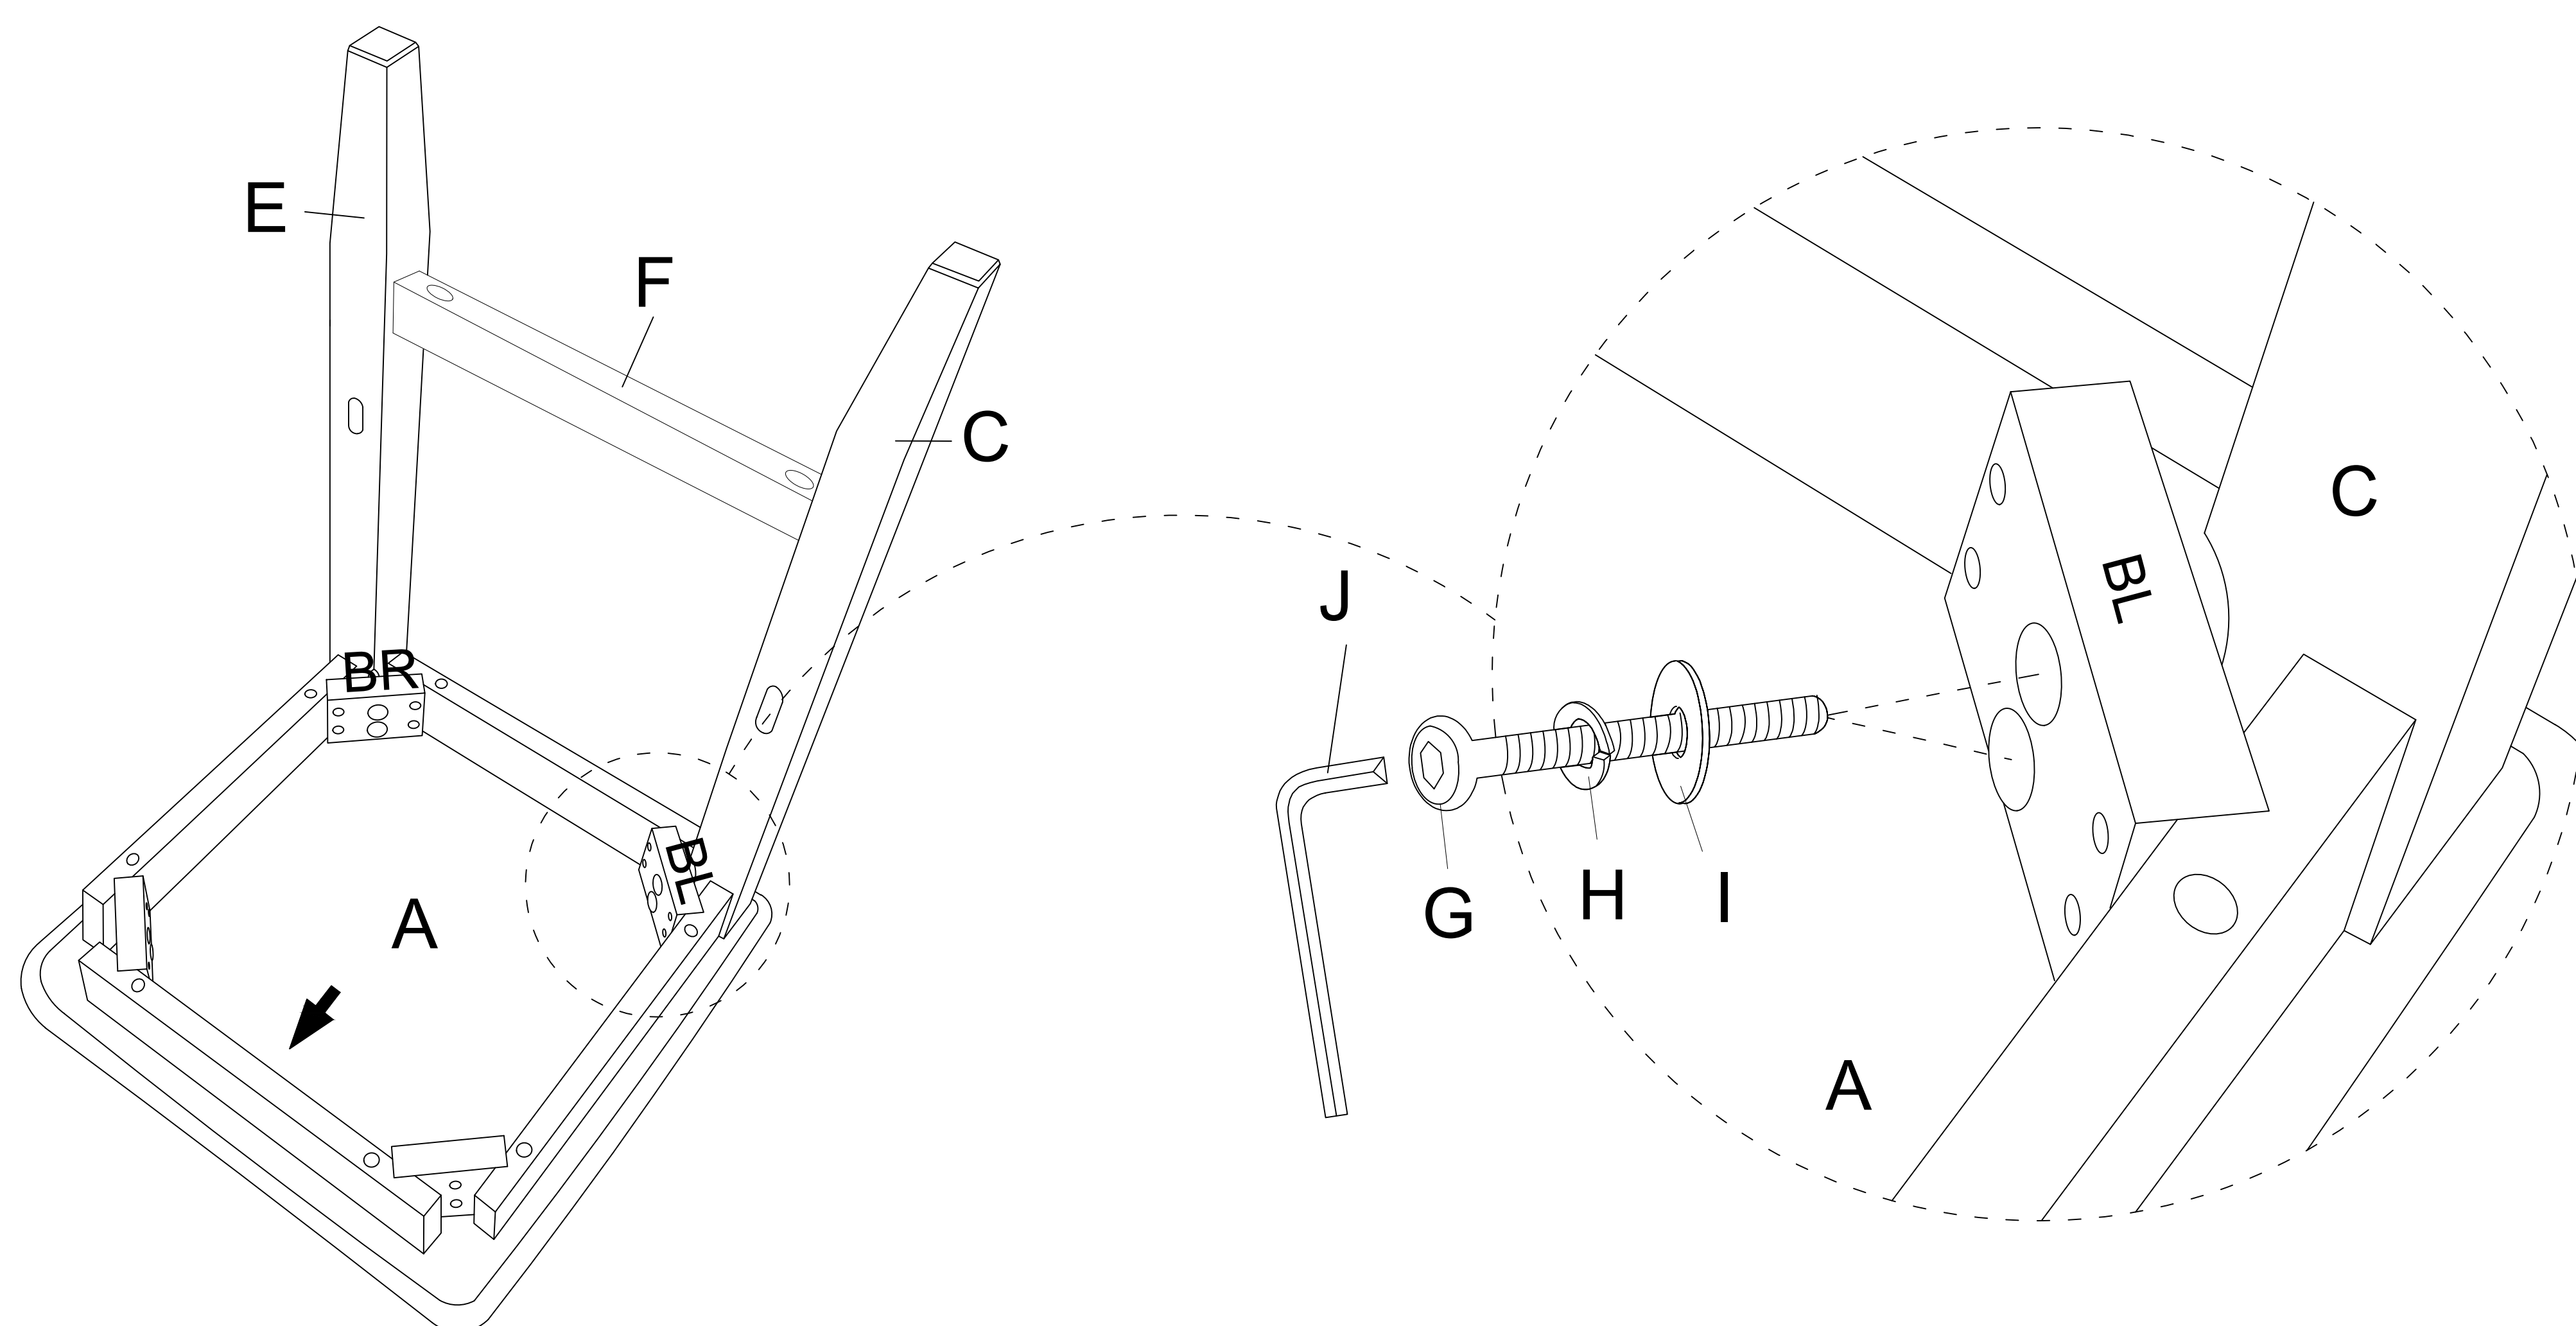




 - 3** Attach the Leg Front Left (B) to the Seat (A) using JCBC Bolt (G), Spring Washer (H) and Flat Washer (I) with the Allen Key (J). Before tightening the bolts, attach the Strecher (F) between the Leg Front Left (B) & Leg Back Left (C).

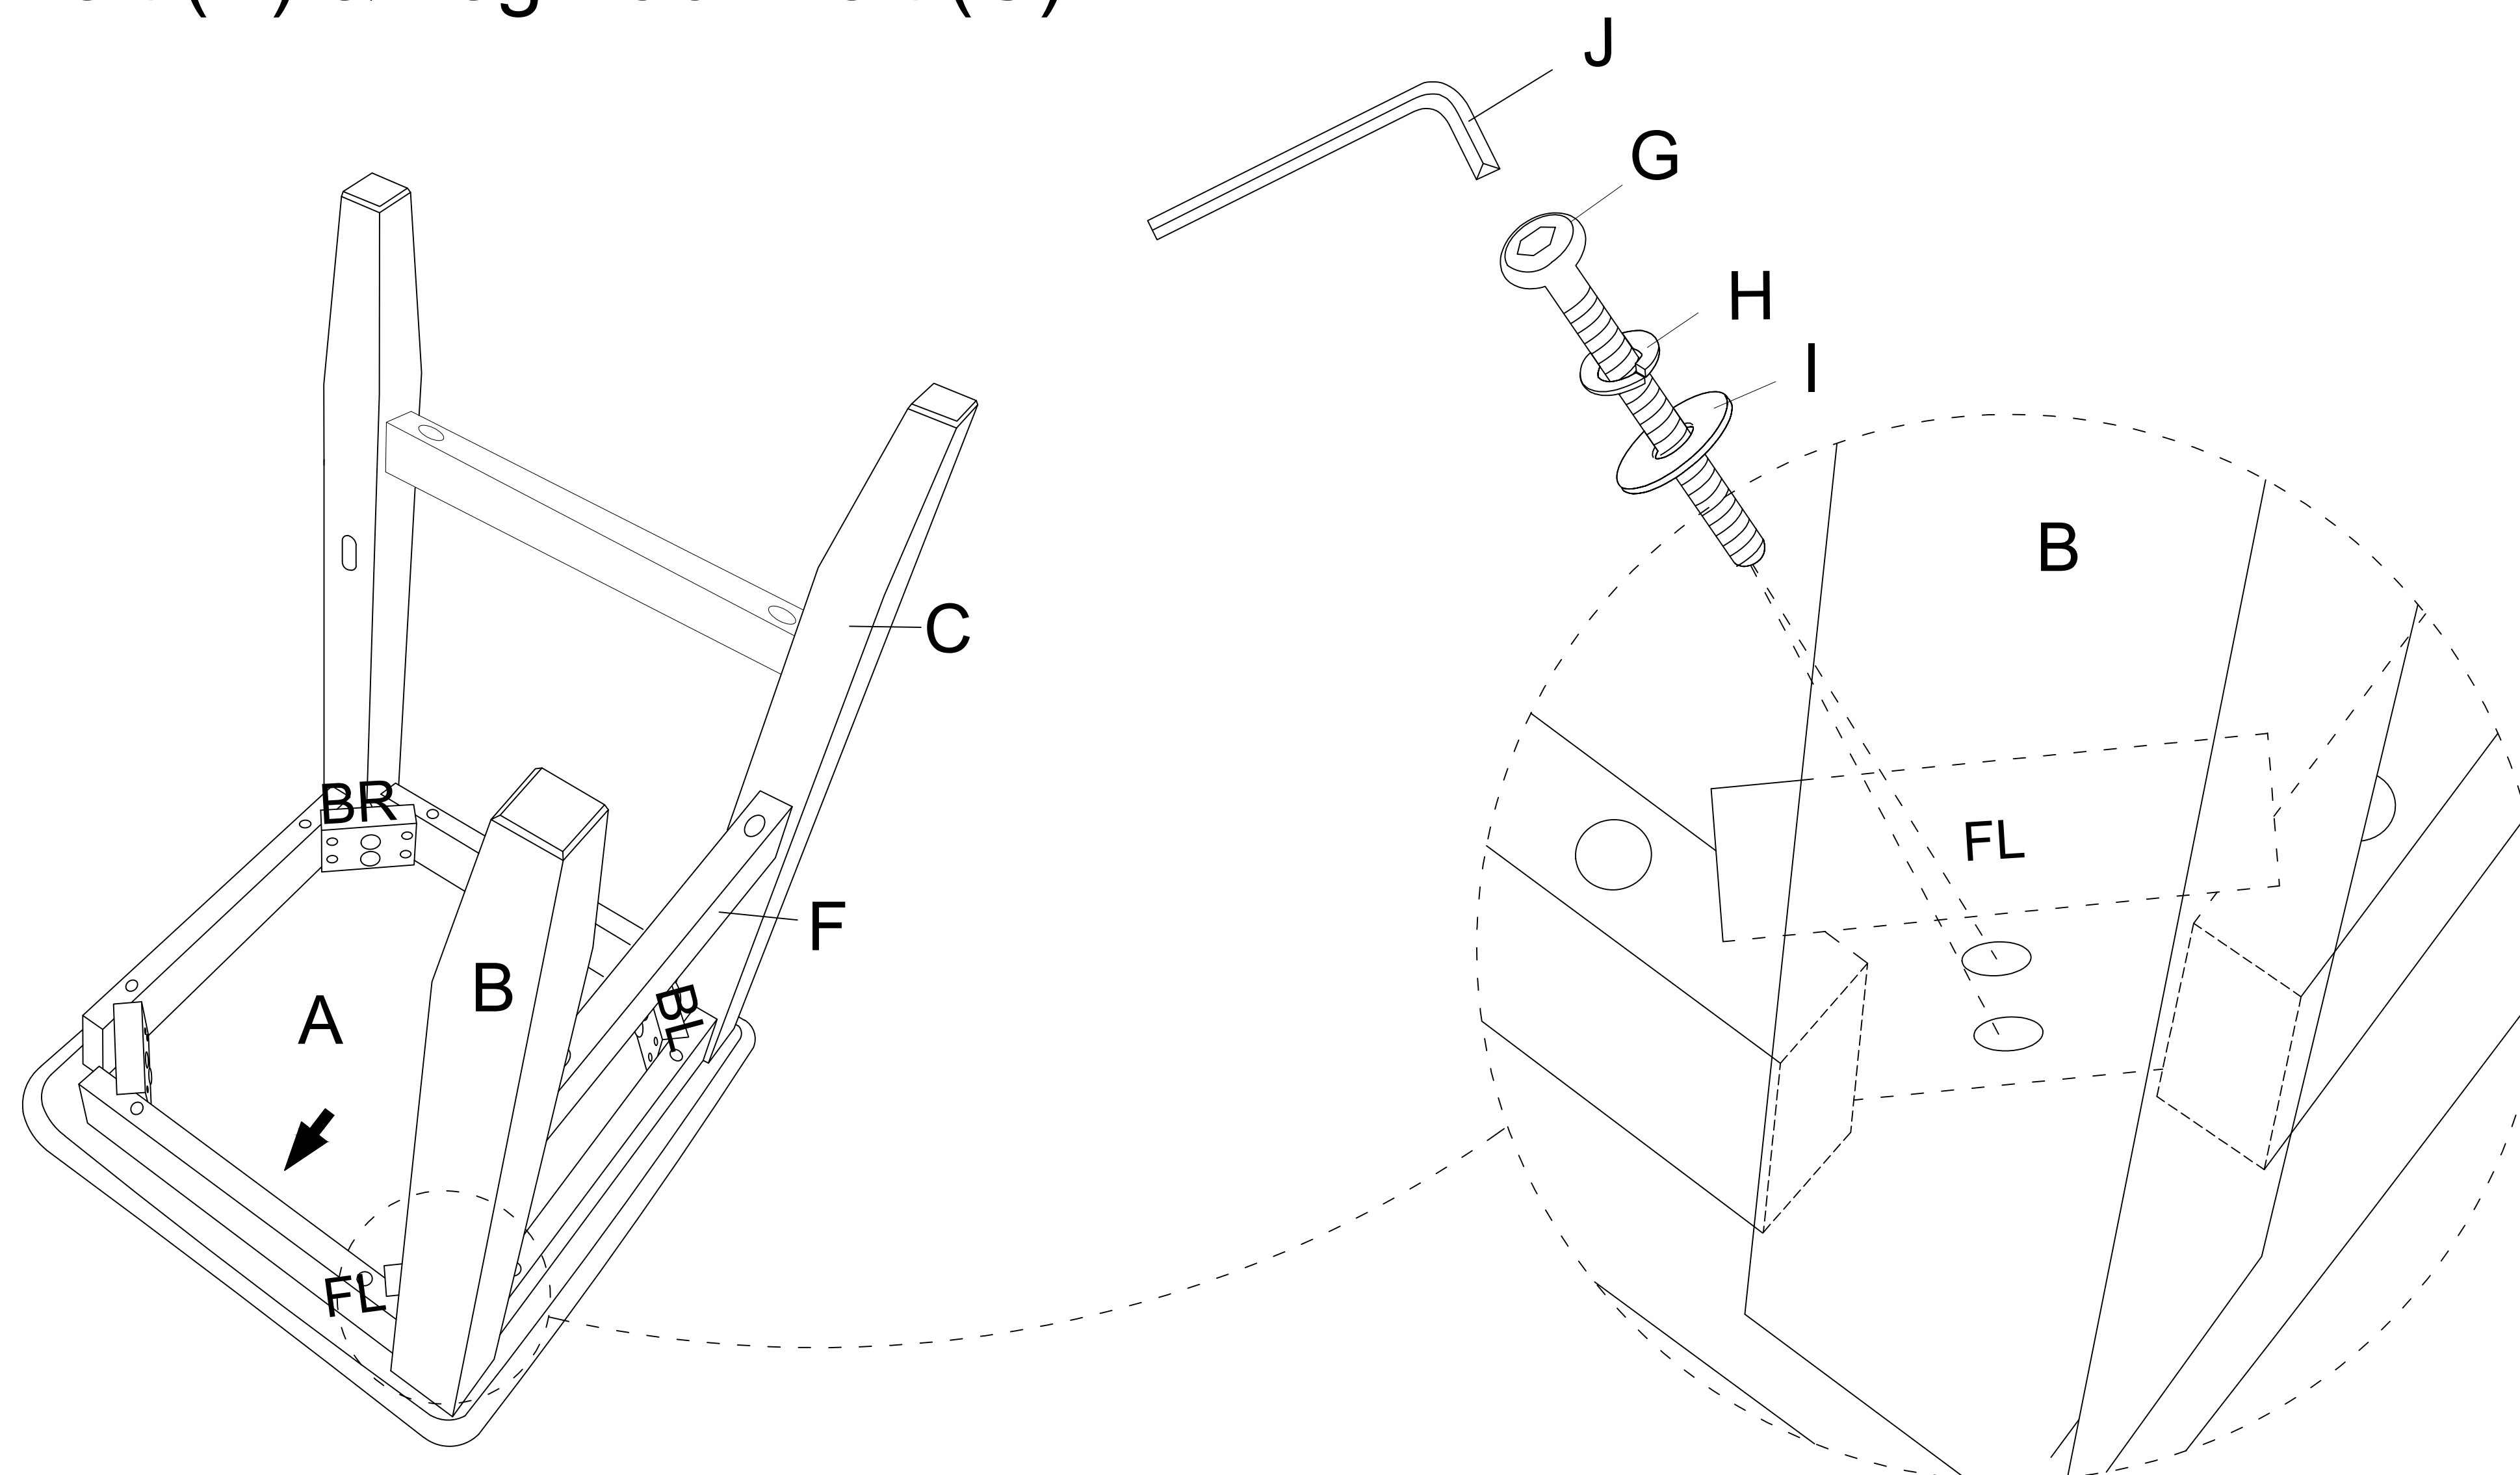

 - 4** Attach the Leg Front Right (D) to the Seat (A) using JCBC Bolt (G), Spring Washer (H) and Flat Washer (I) with the Allen Key (J). Before tightening the bolts, attach the Strecher (F) between the Leg Front Left (B) & Leg Front Right (D) and Leg Front Right (D) & Leg Back Right (E). Finally, secure the Strecher (F) using Pan Head Screw (K) with a screwdriver (not provided).

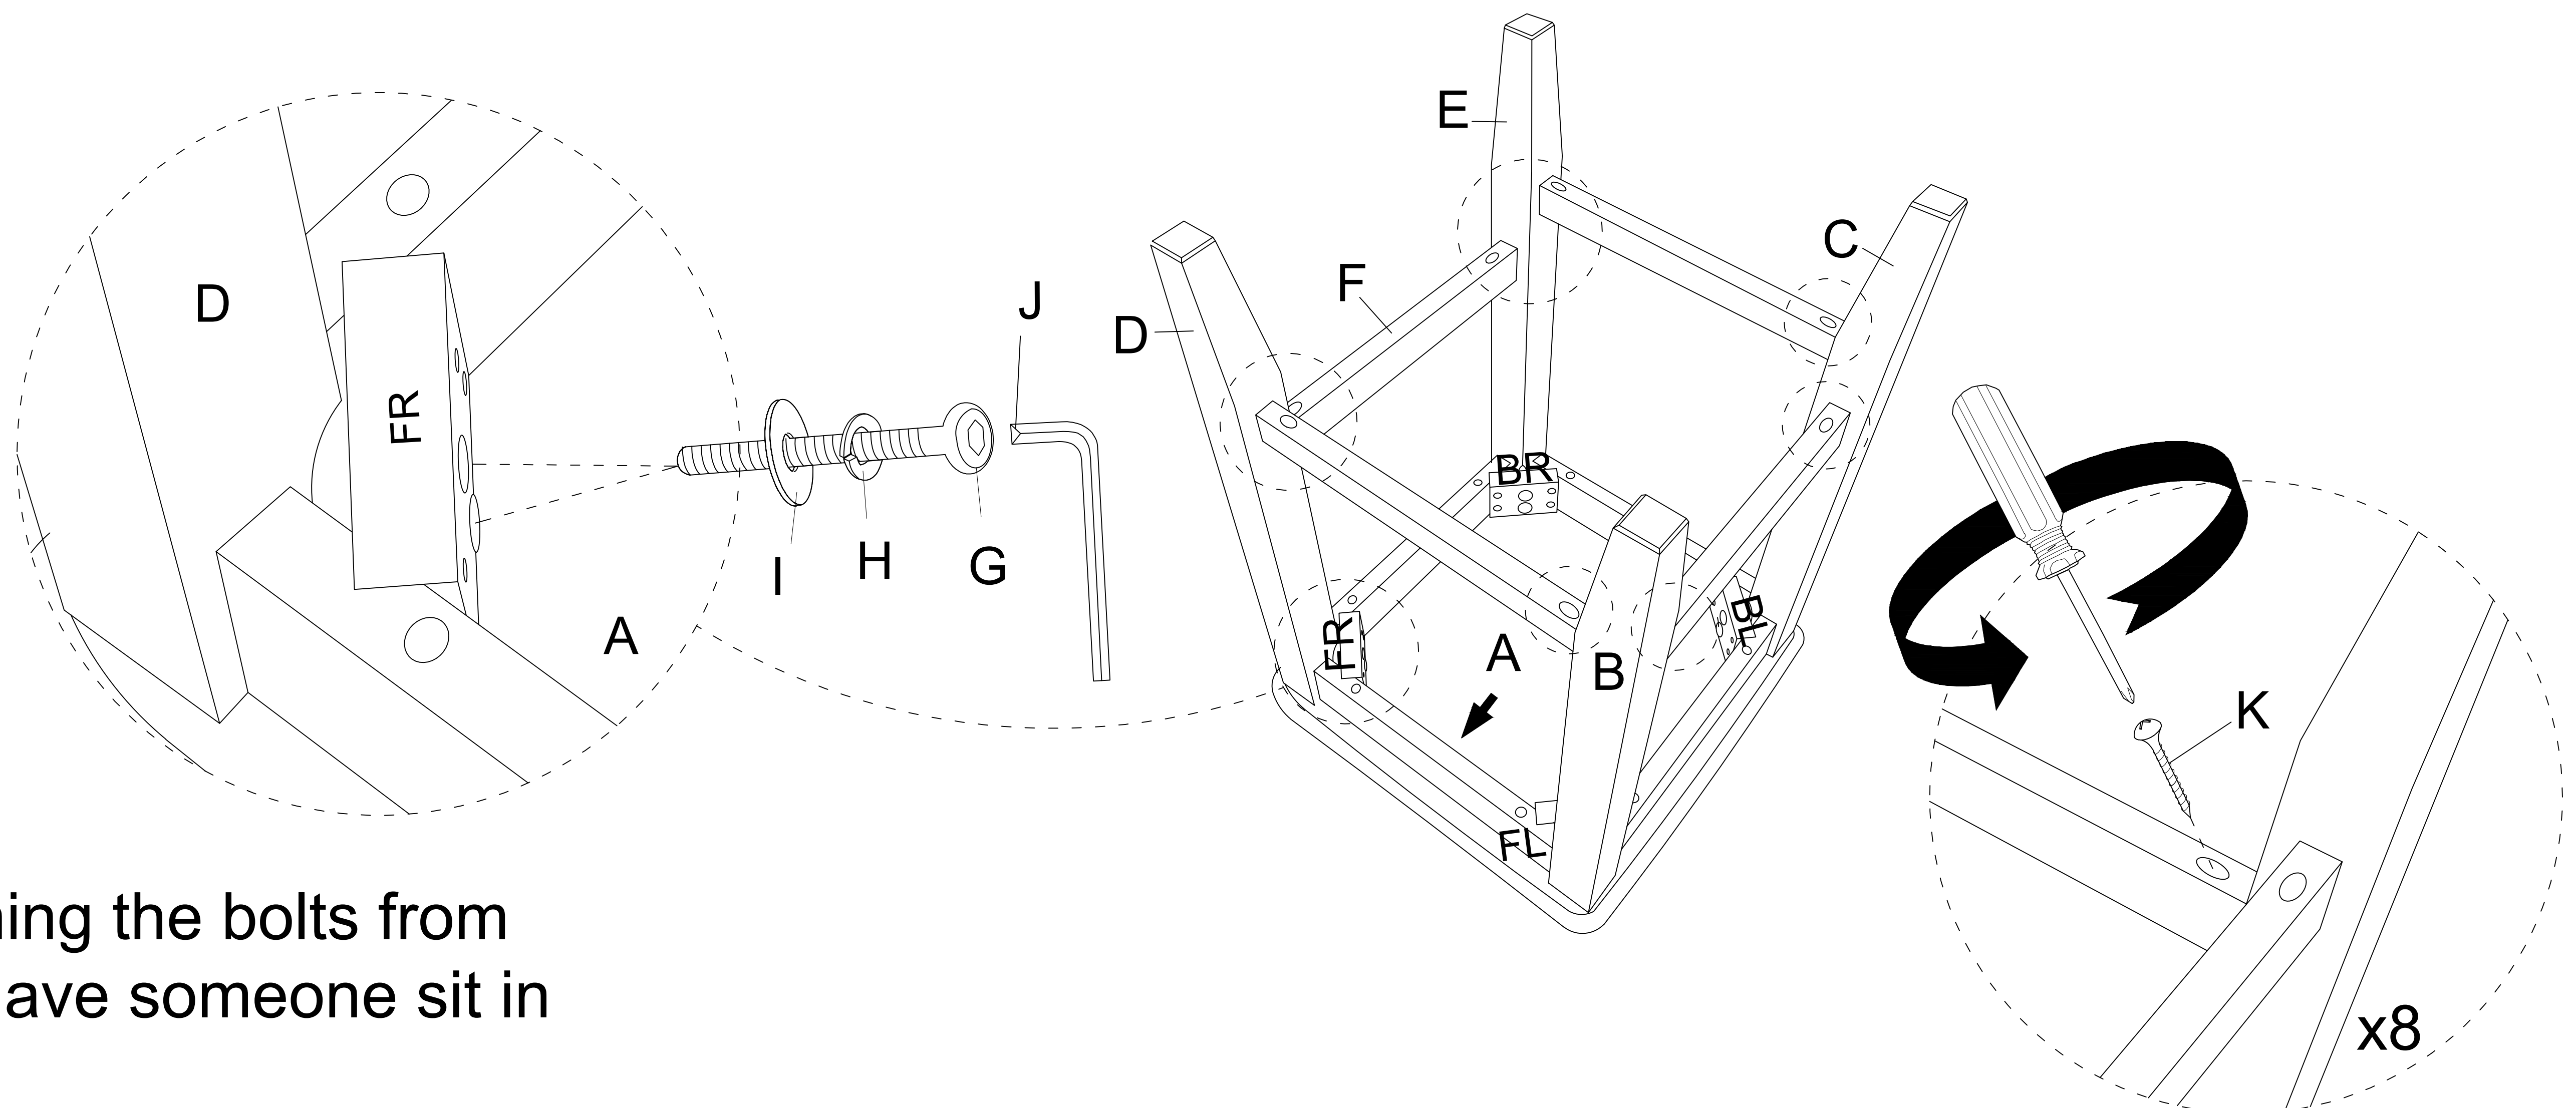

#### Helpful Tips

\*While tightening the bolts from underneath, have someone sit in the stool.

Stand the stool on an even surface and check for balance. If the stool wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the stool is balanced, apply downward pressure evenly in the center of the stool and tighten all bolts, being careful not to over-tighten beyond the hole depth.

#### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.