

ASSEMBLY INSTRUCTIONS



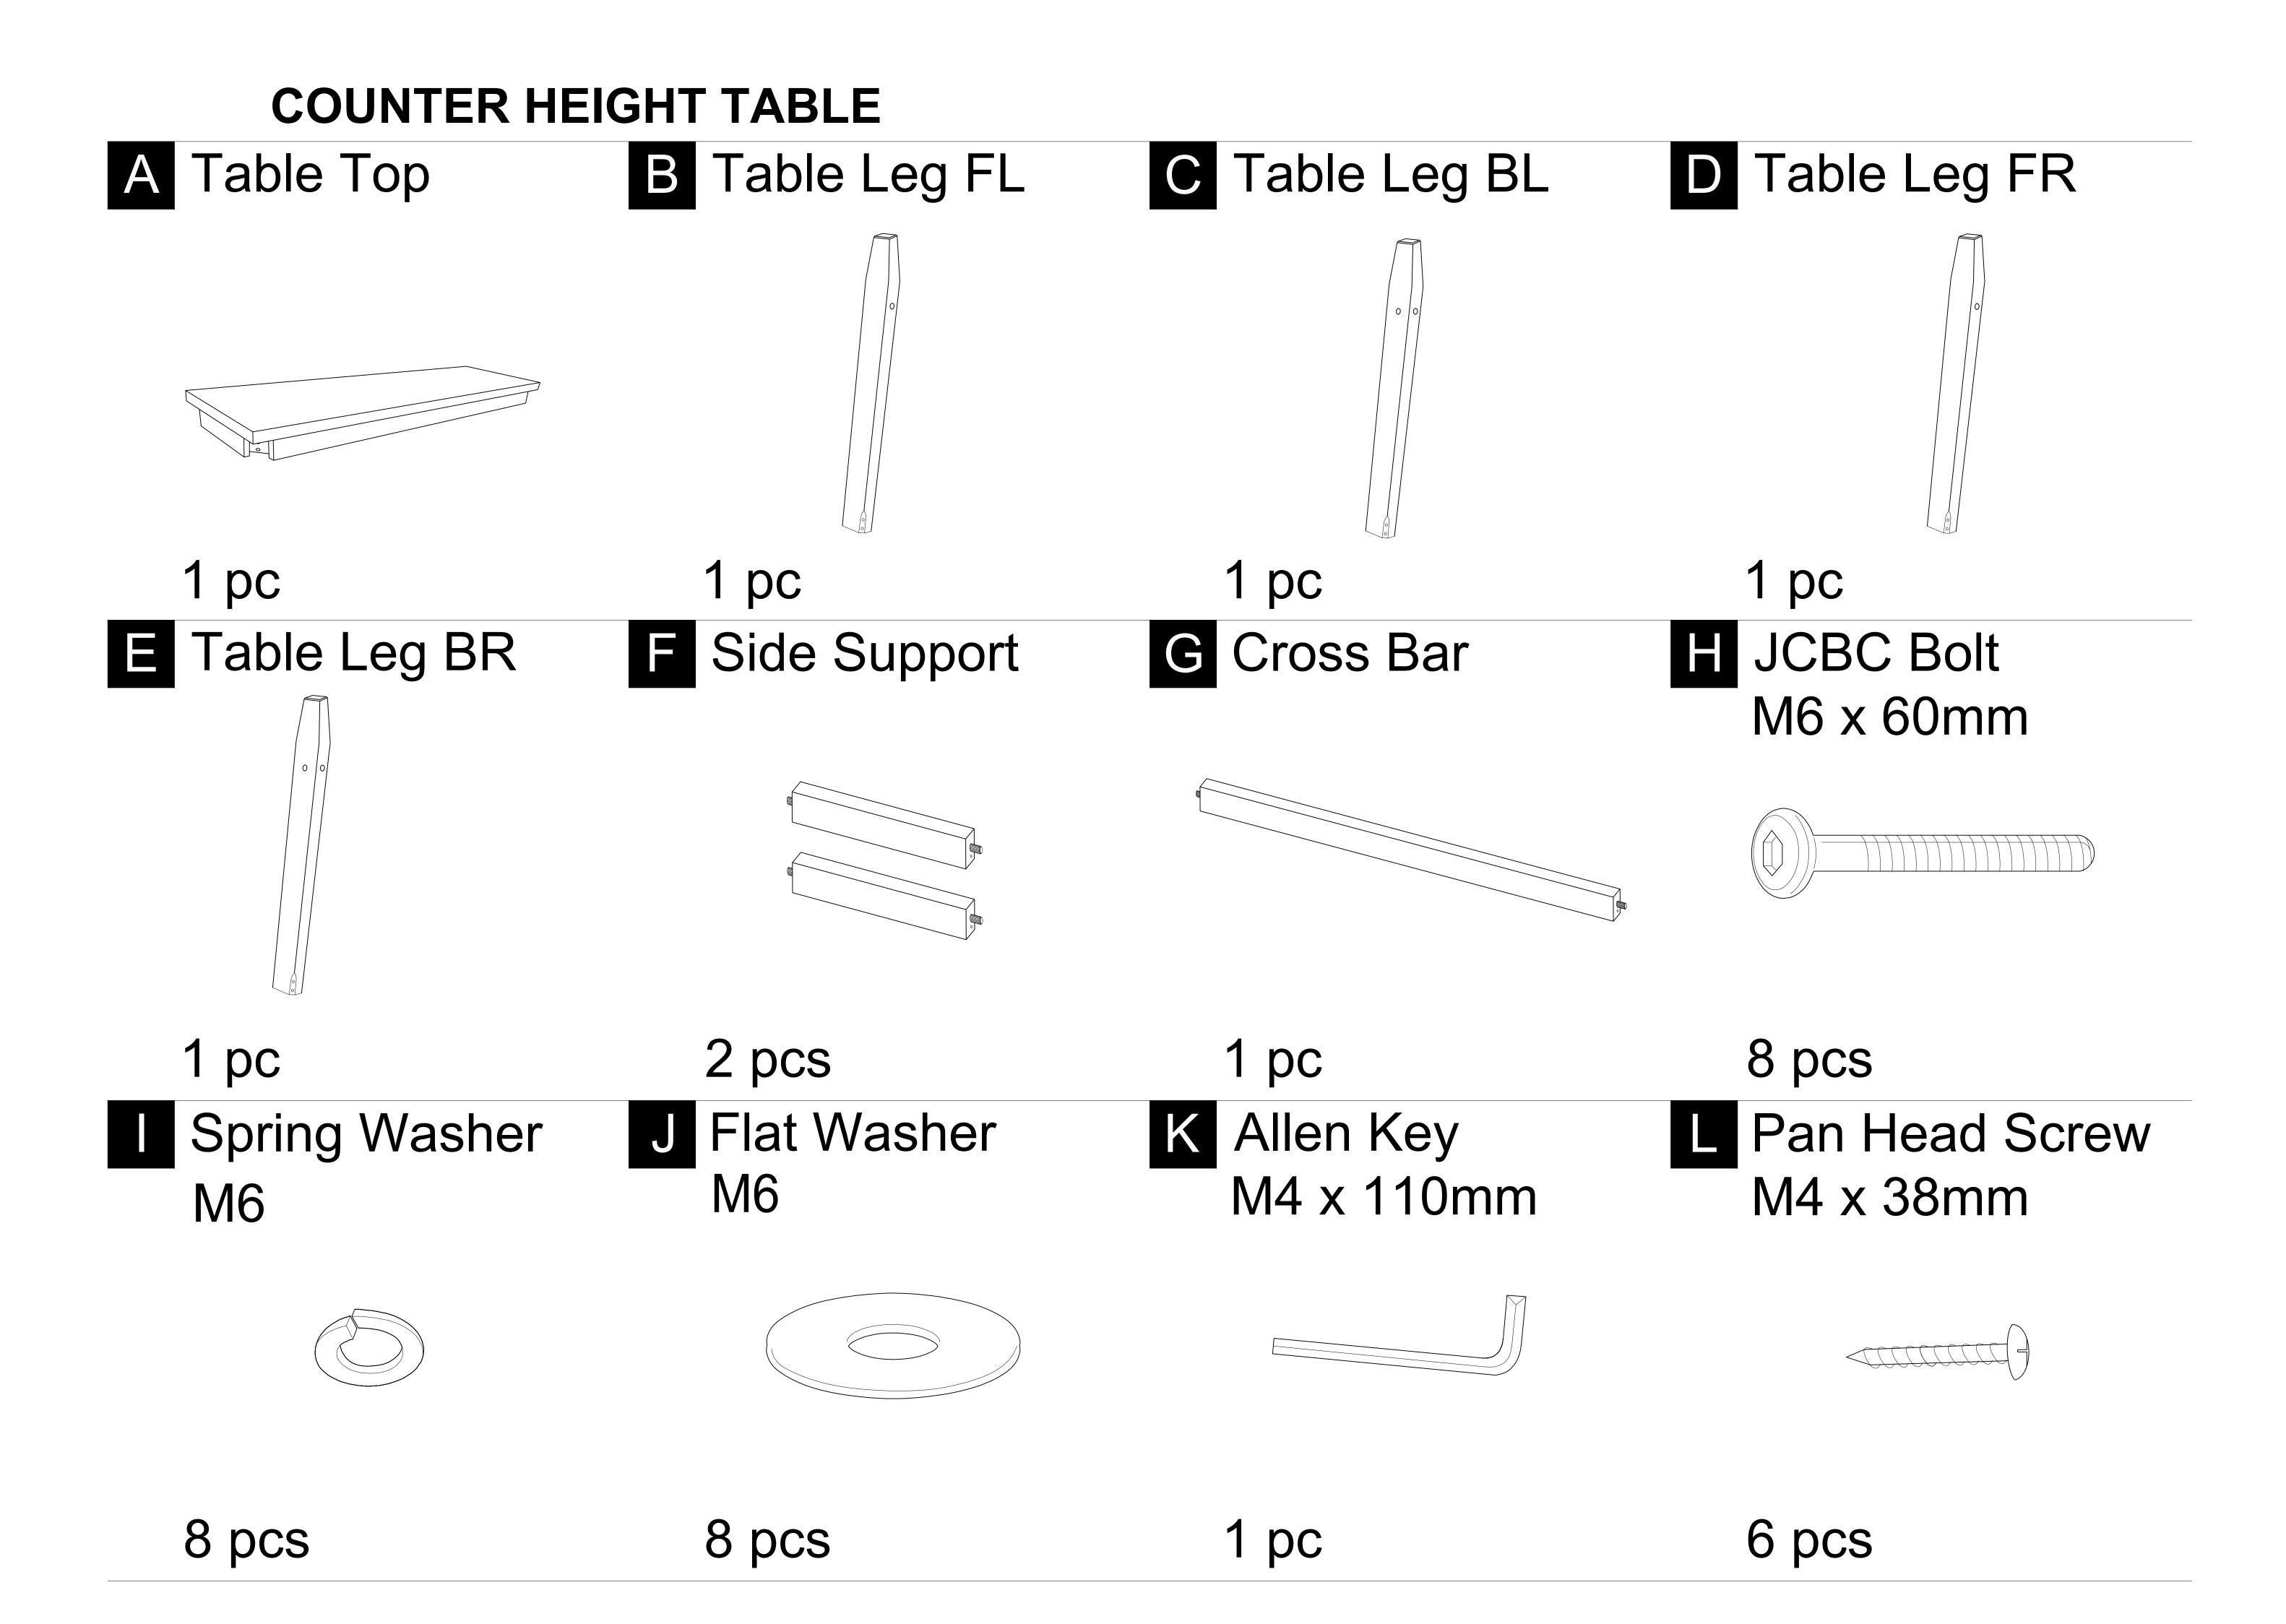


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Attach the Table Leg FL (B) to the Table Top (A) using JCBC Bolt (H), Spring Washer (I) and Flat Washer (J) with the Allen Key (K).

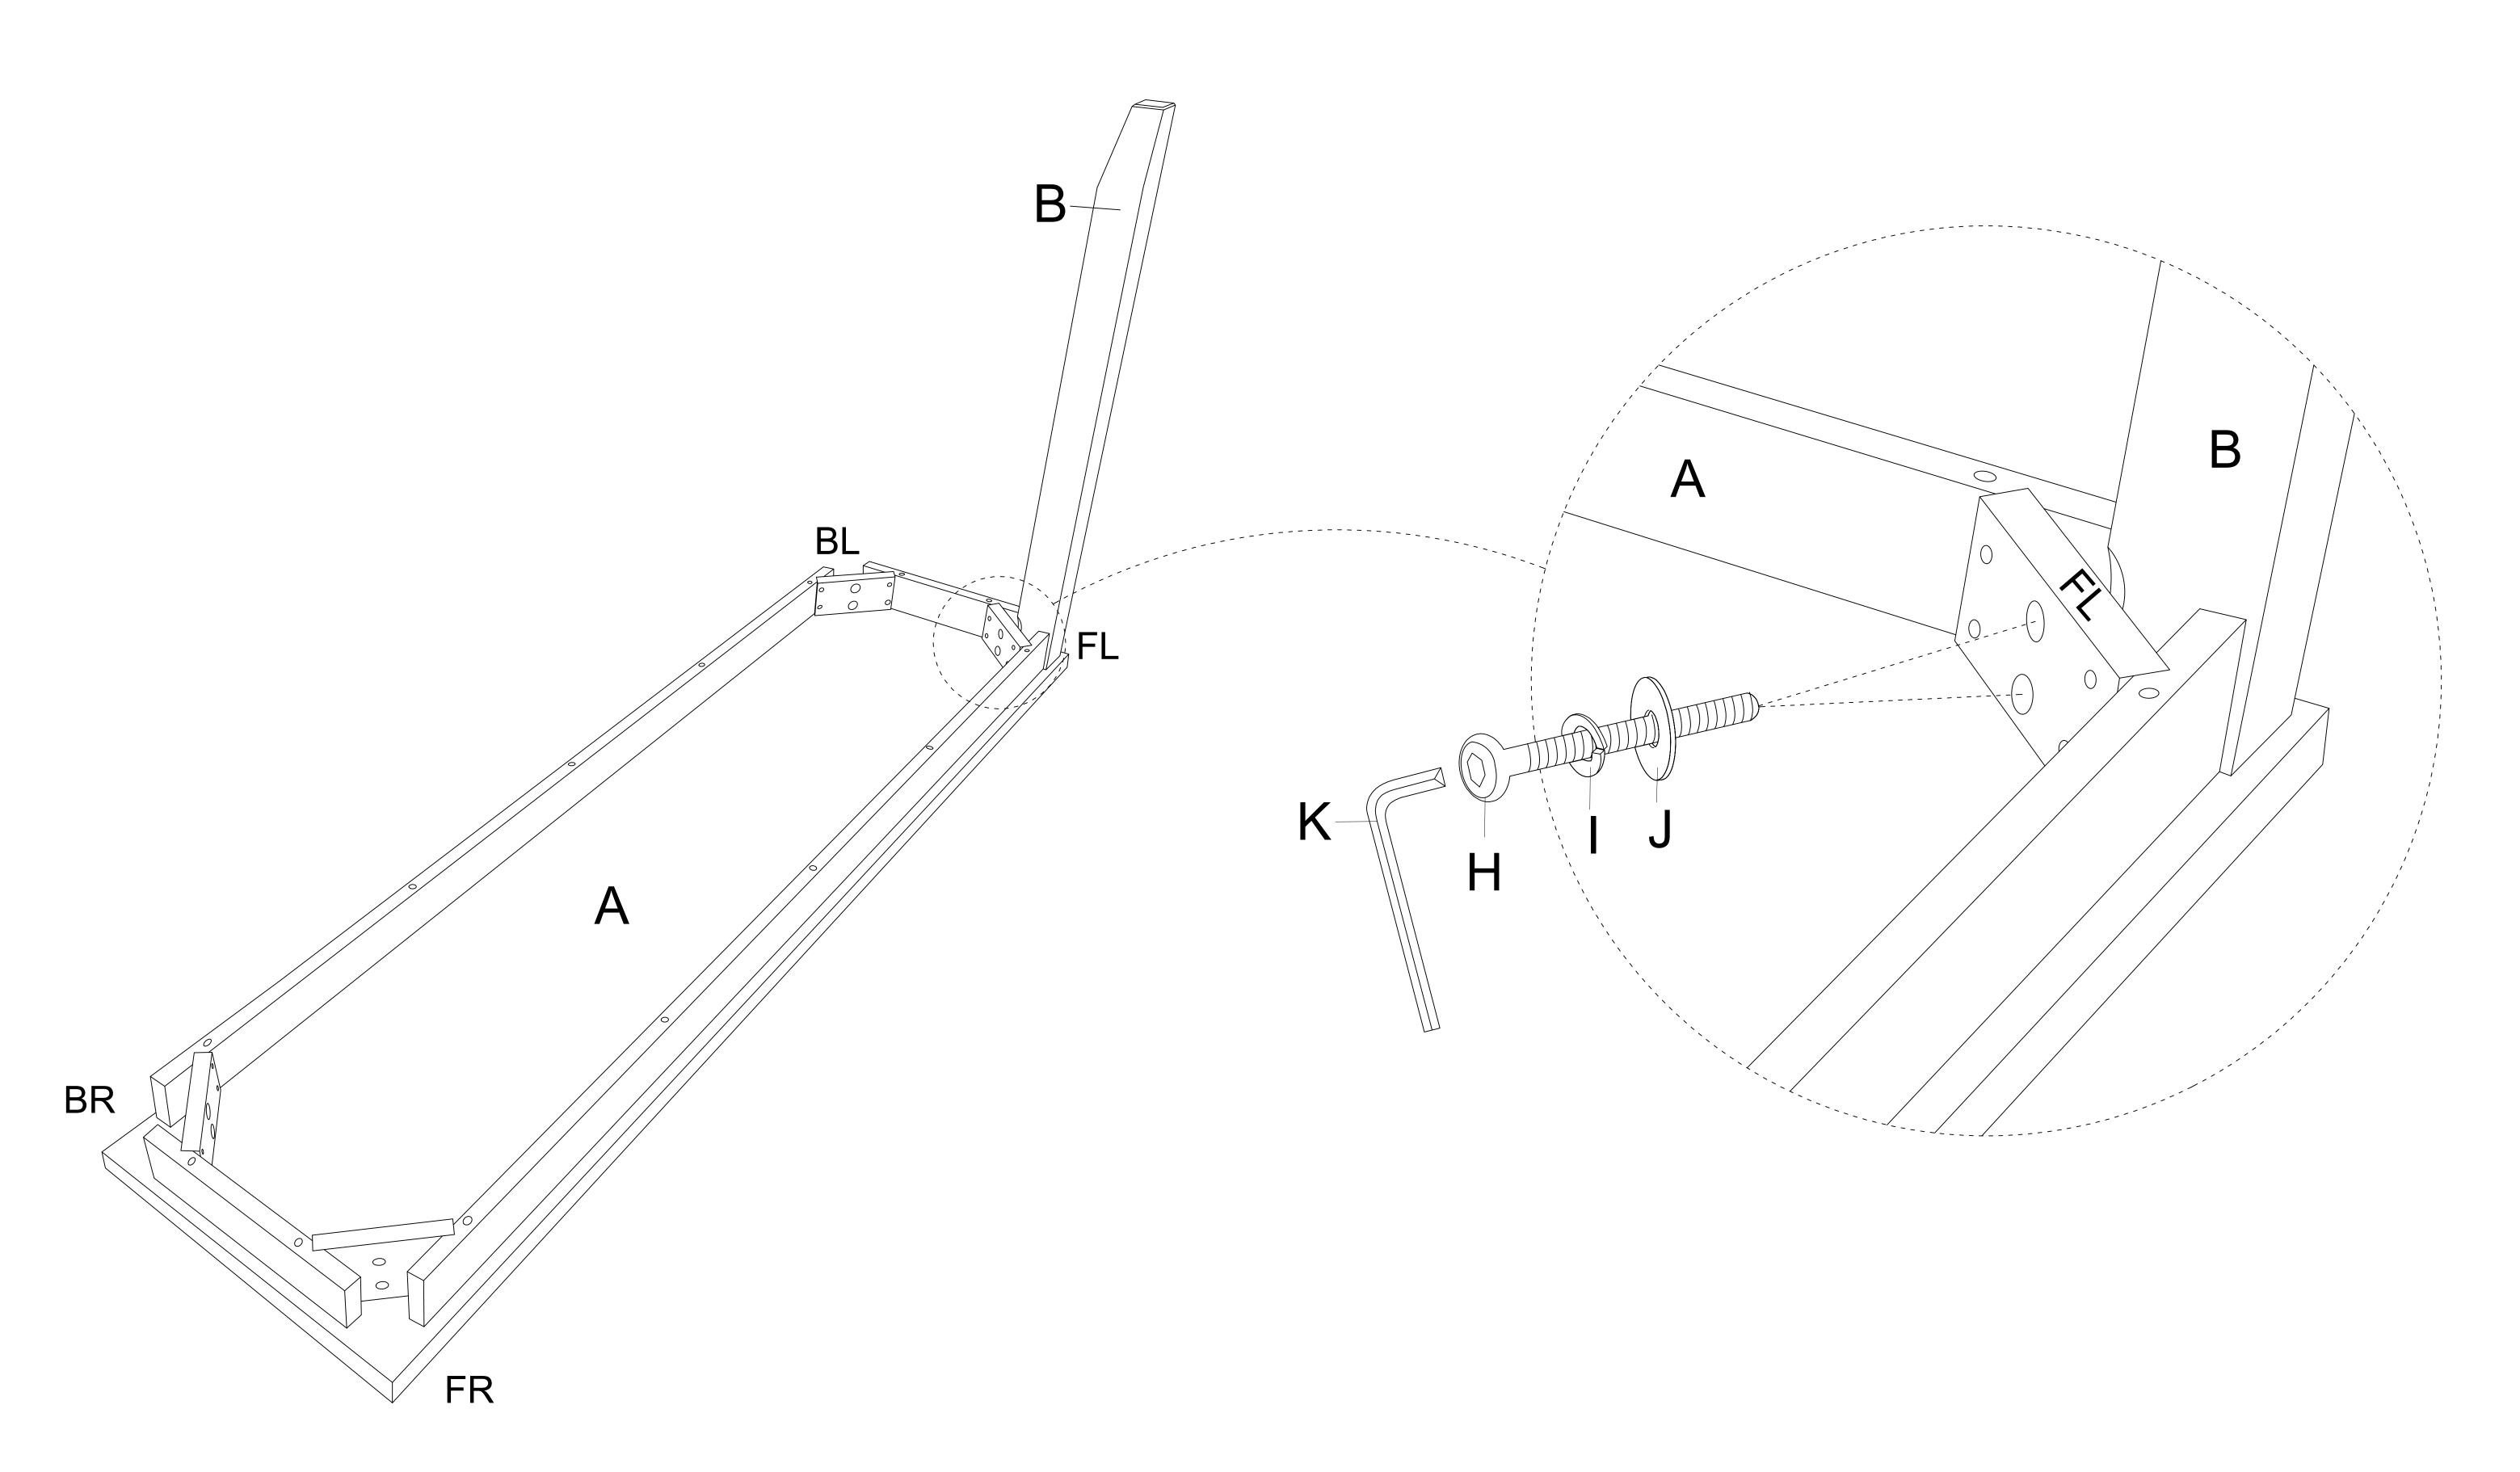


Attach the Table Leg BL (C) to the Table Top (A) using JCBC Bolt (H), Spring Washer (I) and Flat Washer (J) with the Allen Key (K). Before tightening the bolts, attach the Side Support (F) between the Table Leg (B & C).

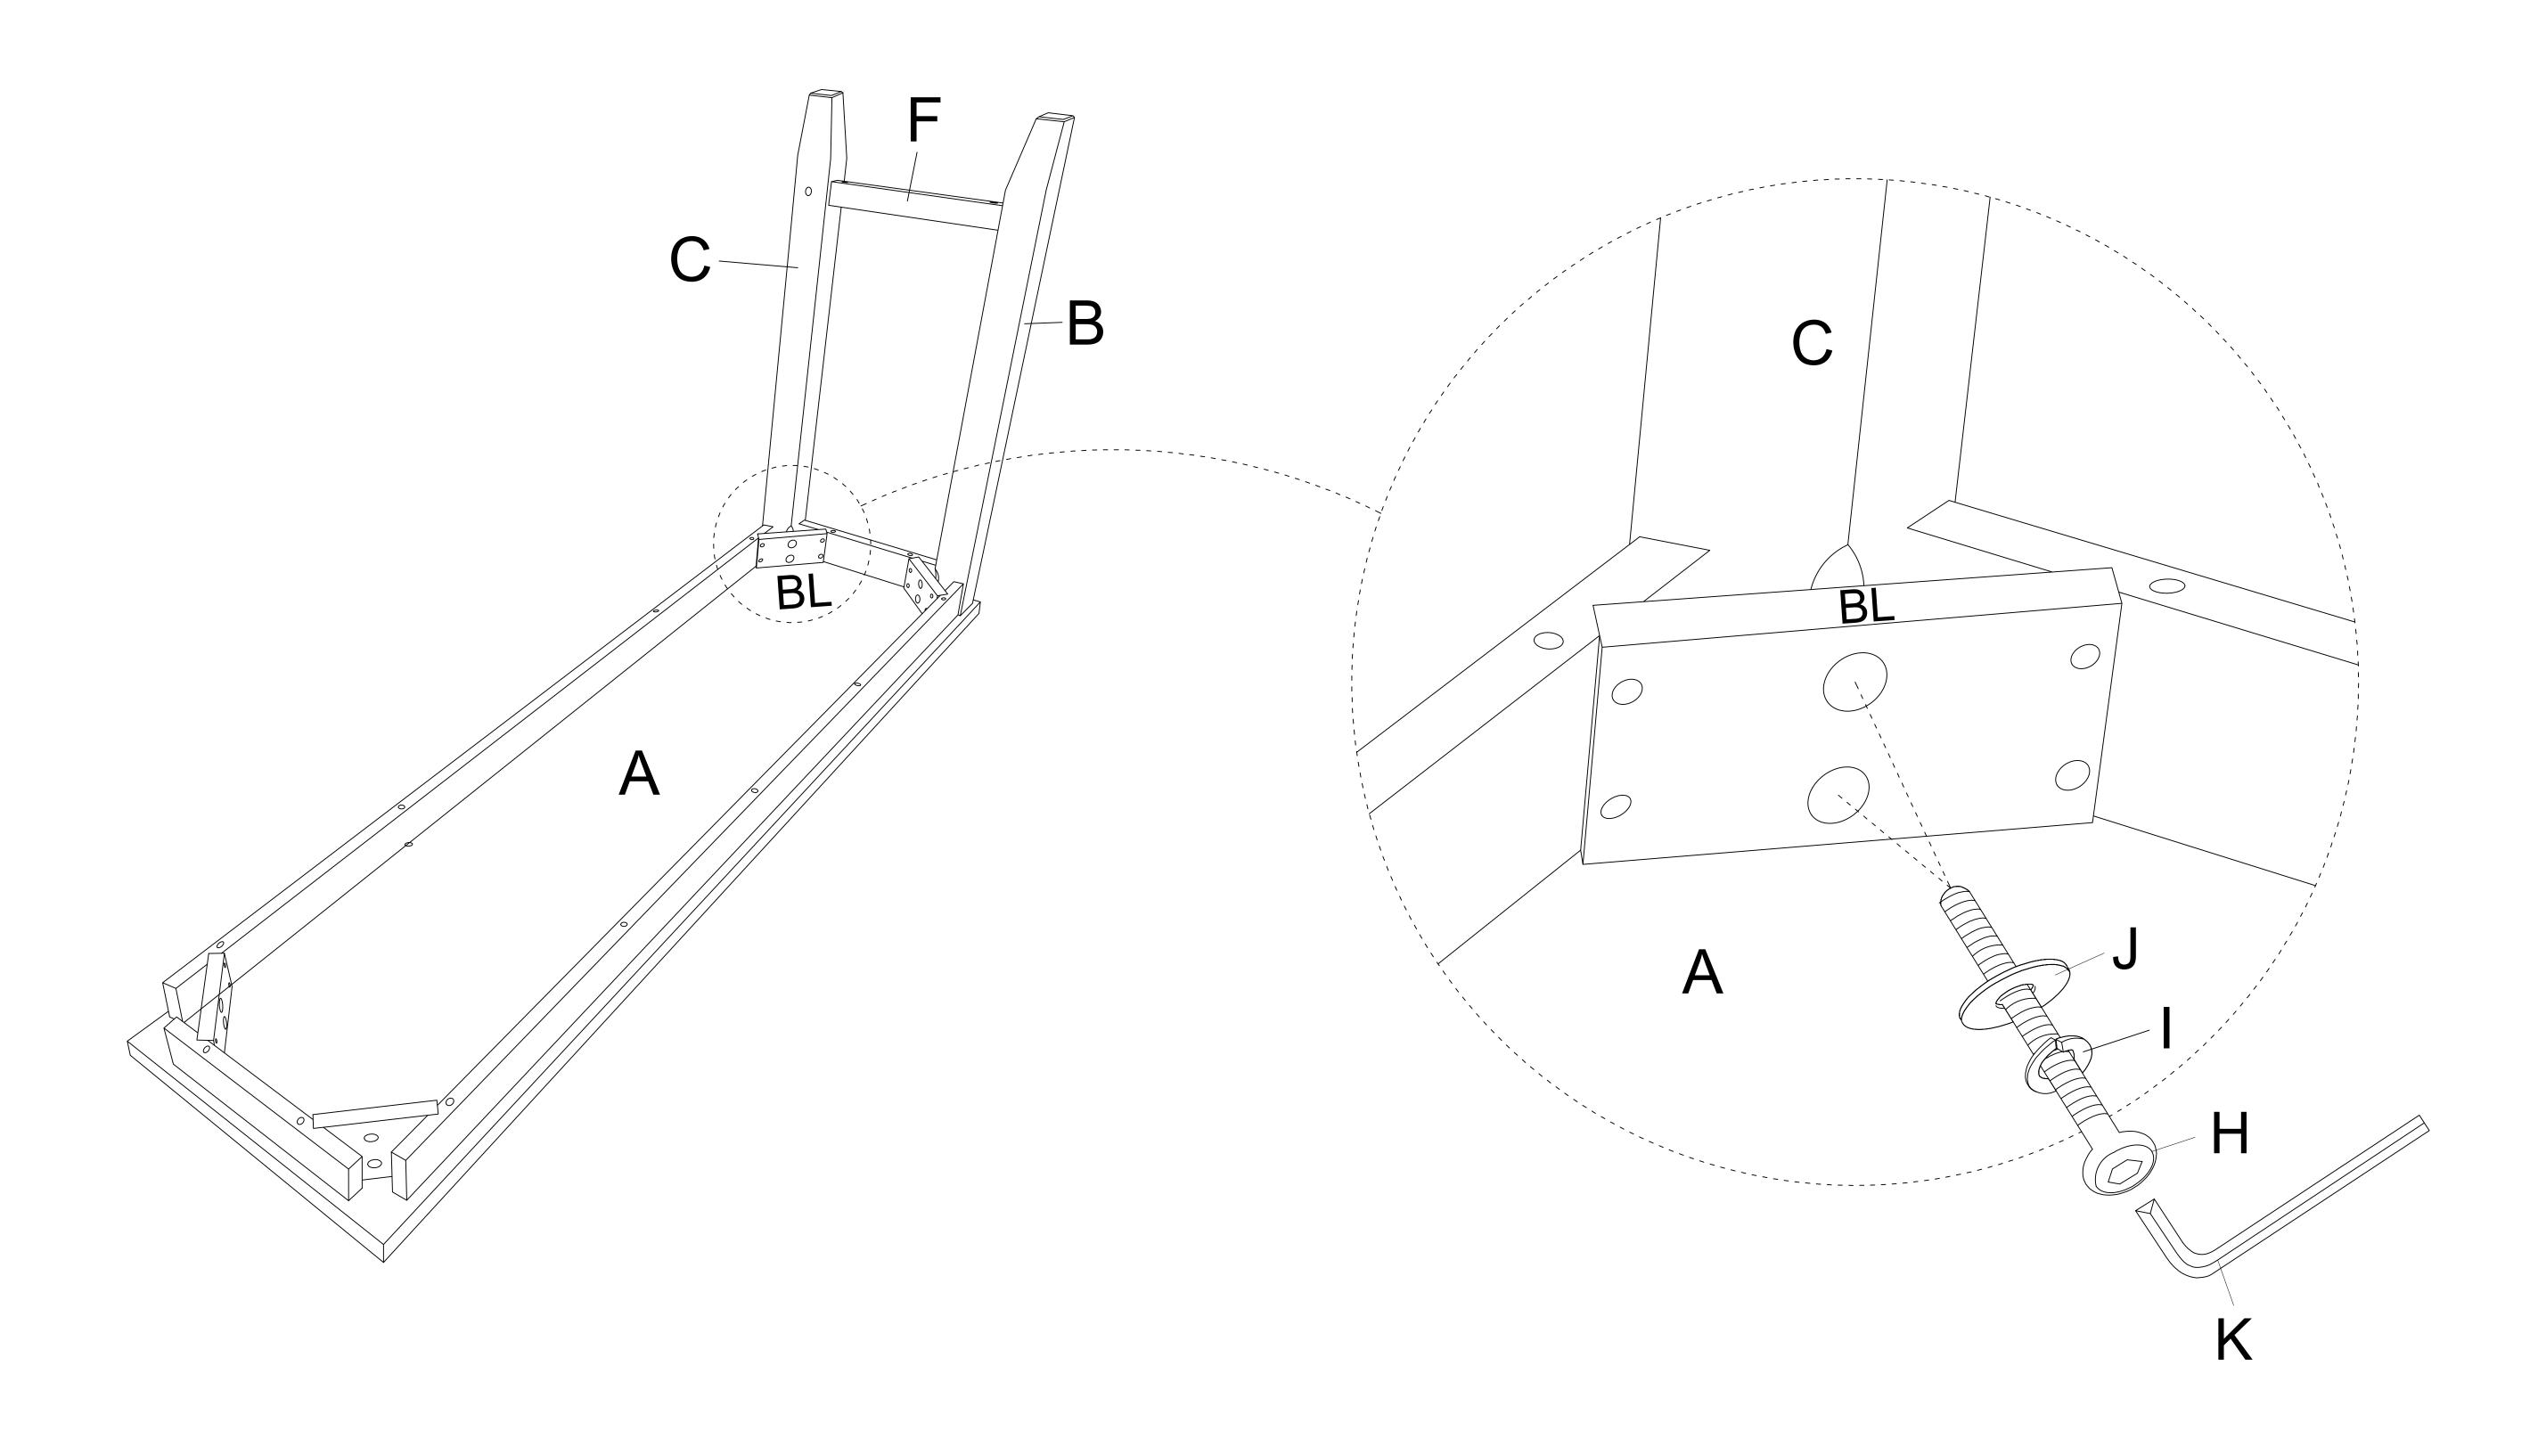


3

Attach the Table Leg BR (E) to the Table Top (A) using JCBC Bolt (H), Spring Washer (I) and Flat Washer (J) with the Allen Key (K). Before tightening the bolts, attach the Cross Bar (G) between the Table Leg (C & E).

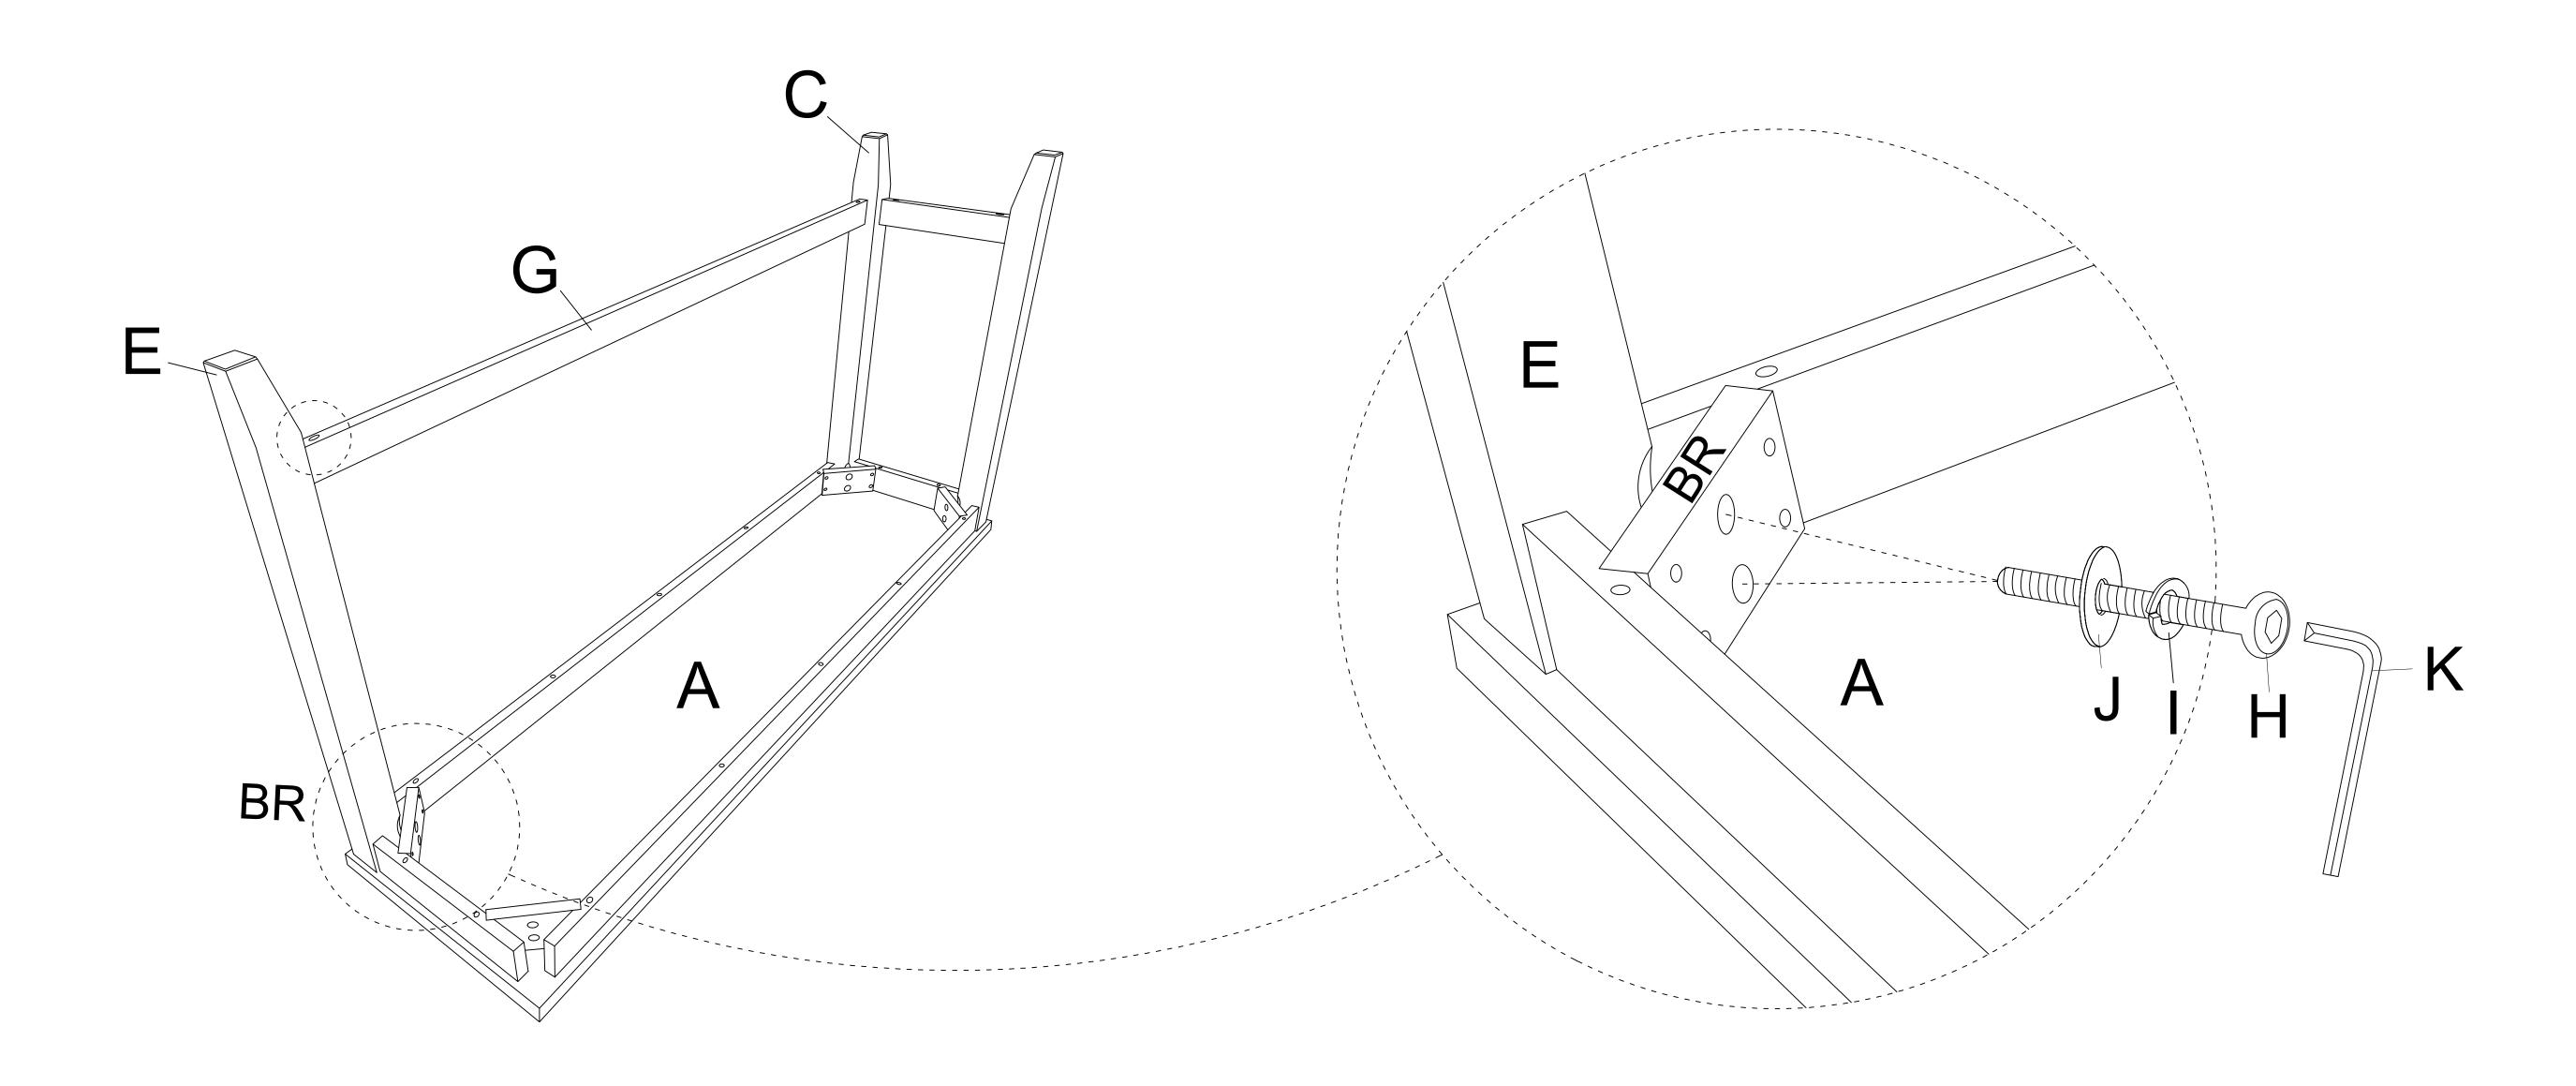

Attach the Table Leg FR (D) to the Table Top (A) using JCBC Bolt (H), Spring Washer (I) and Flat Washer (J) with the Allen Key (K). Before tightening the bolts, attach the Side Support (F) between the Table Leg (D & E). Finally, secure the Side Support (F) and the Cross Bar (G) using Pan Head Screw (L) with a screwdriver (not provided).

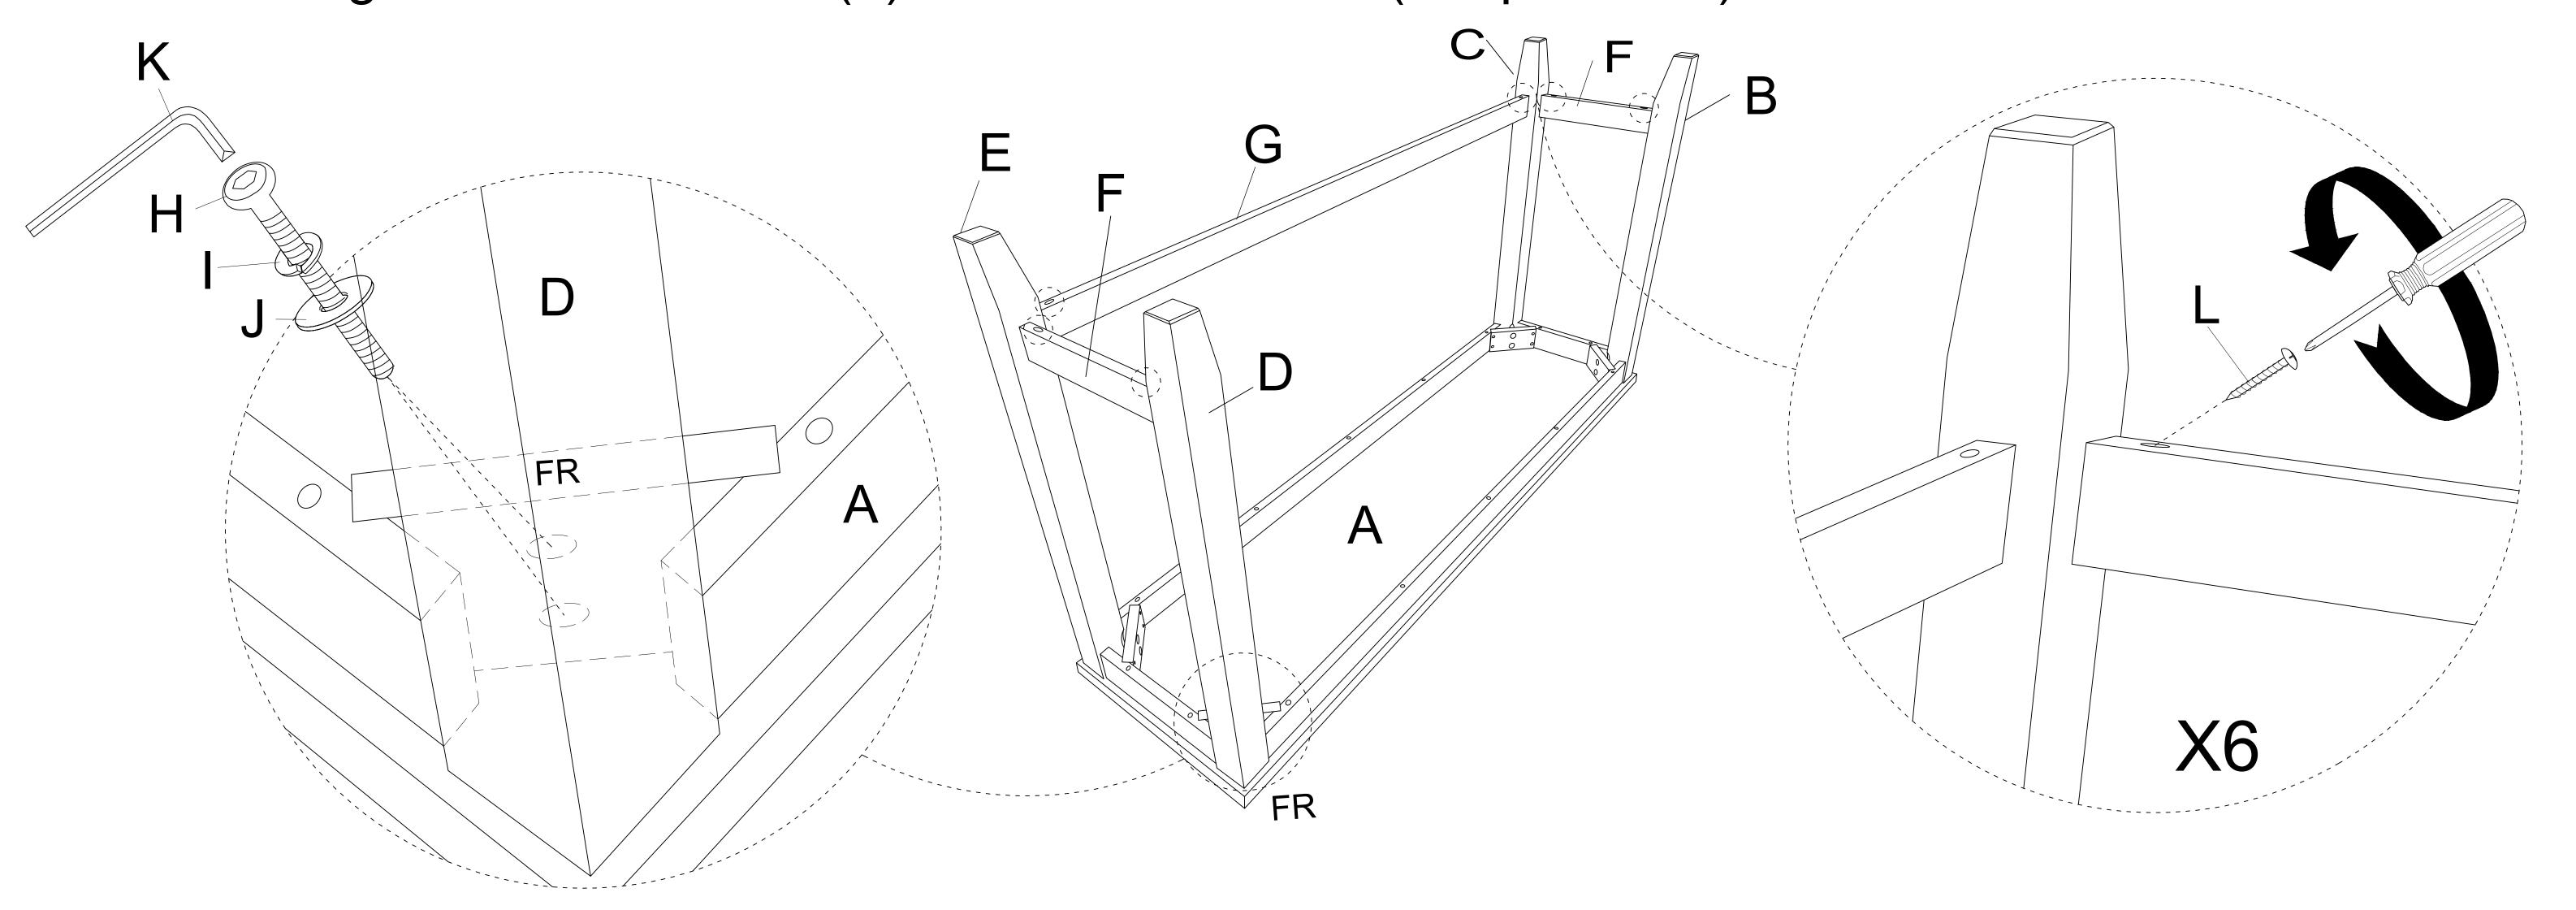


Stand the table on an even surface and check for balance. If the table wobbles slightly, apply downward pressure on the uneven leg and tighten all bolts to correct the imbalance. Once the table is balanced, apply downward pressure evenly in the center of the table and tighten all bolts, being careful not to over-tighten beyond the hole depth.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS


STORAGE UNIT

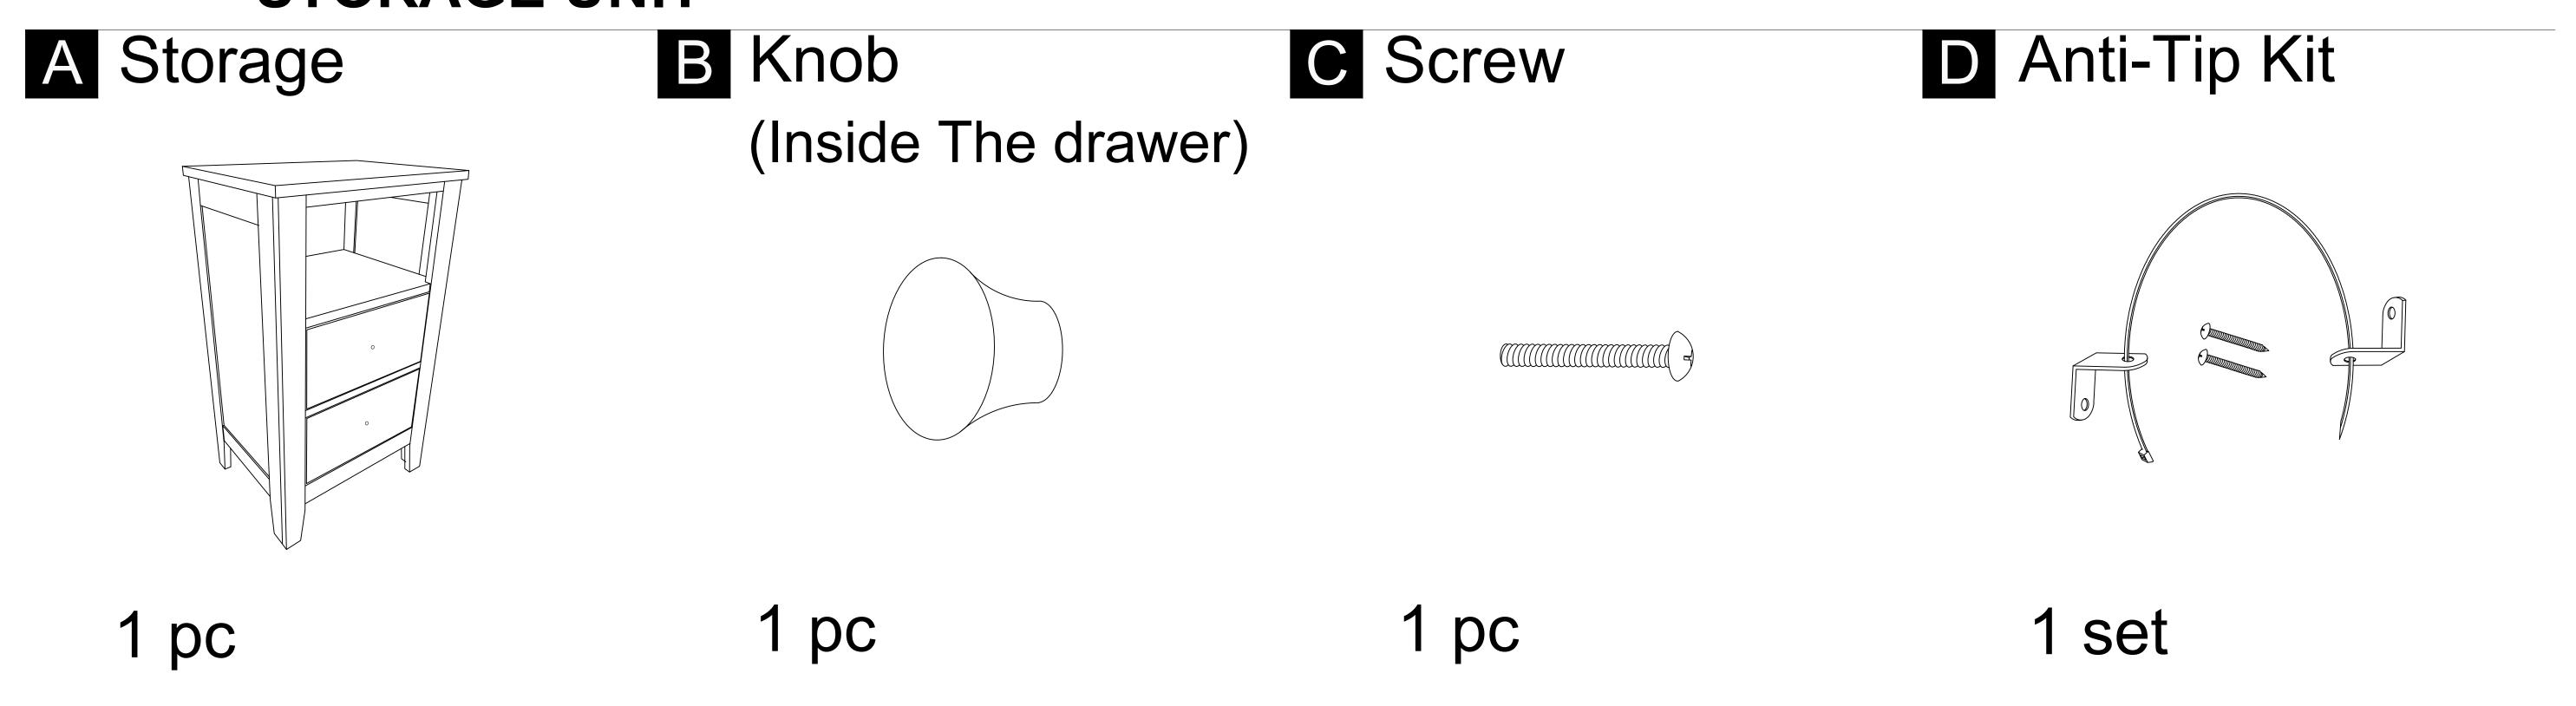




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Open all the drawers and loosen the Screw (C) of the Knob (B) to re-assemble the Knob (B) with a screwdriver (not provided).

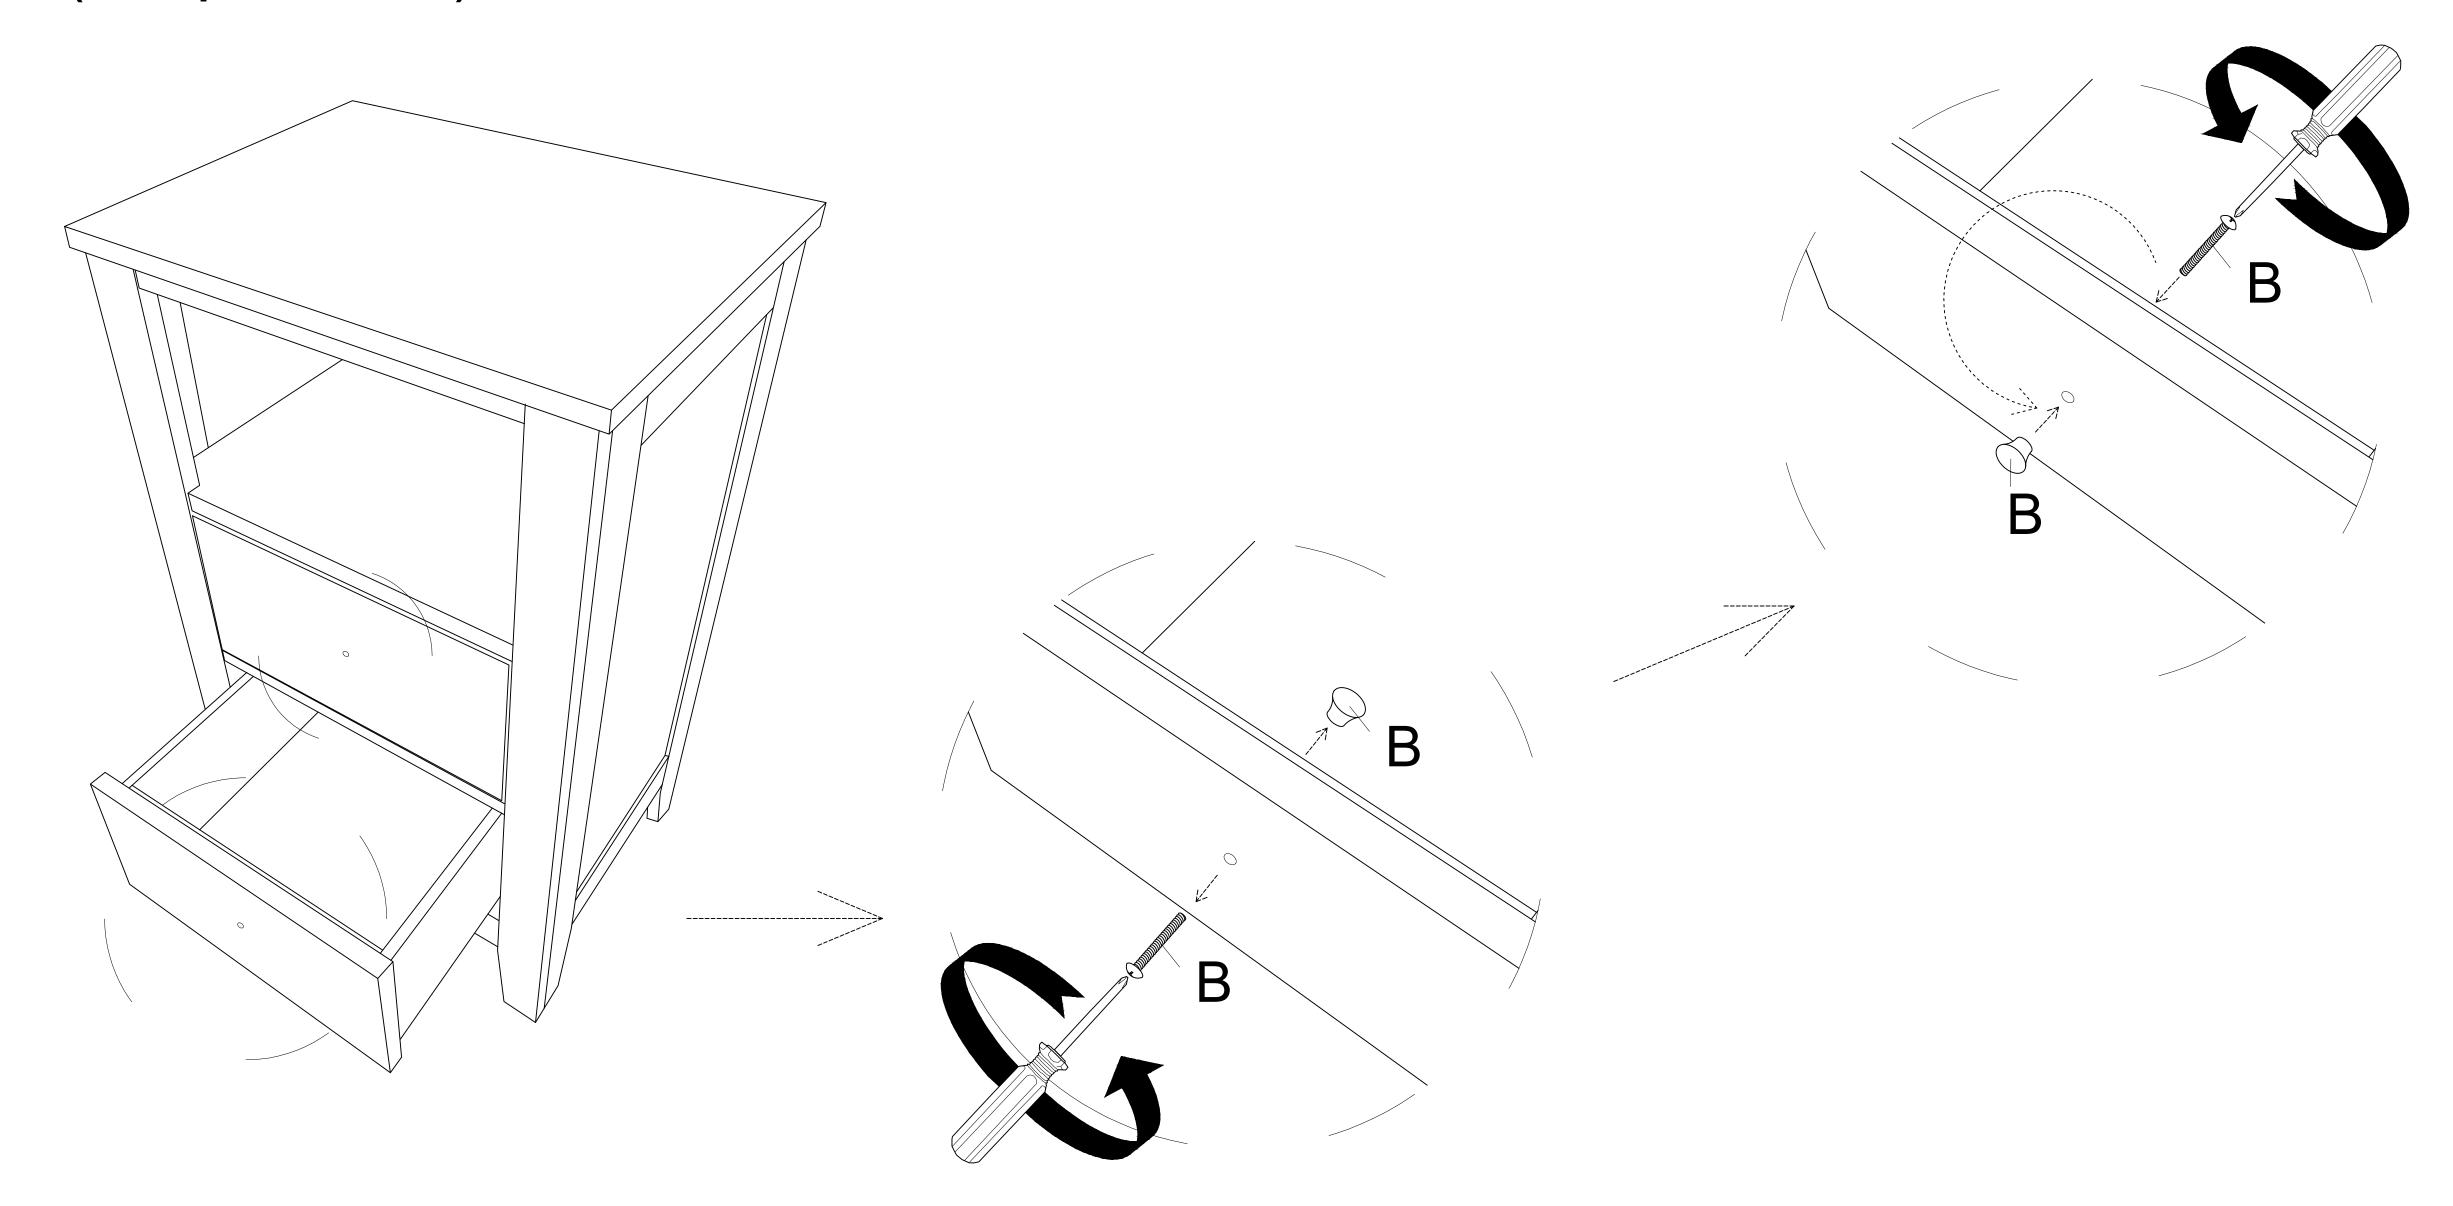

Attach Anti-Tip Kit (D) to the wall. Mount the bracket vertically on the wall using the long screw. Then, secure the bracket vertically on the furniture back below the top using the short screw. Place the bracket as close to the center of the furniture back as possible, considering the wall stud and desired position in the room. Move the furniture to its final position. Thread the strap through the bracket and pull it tight.

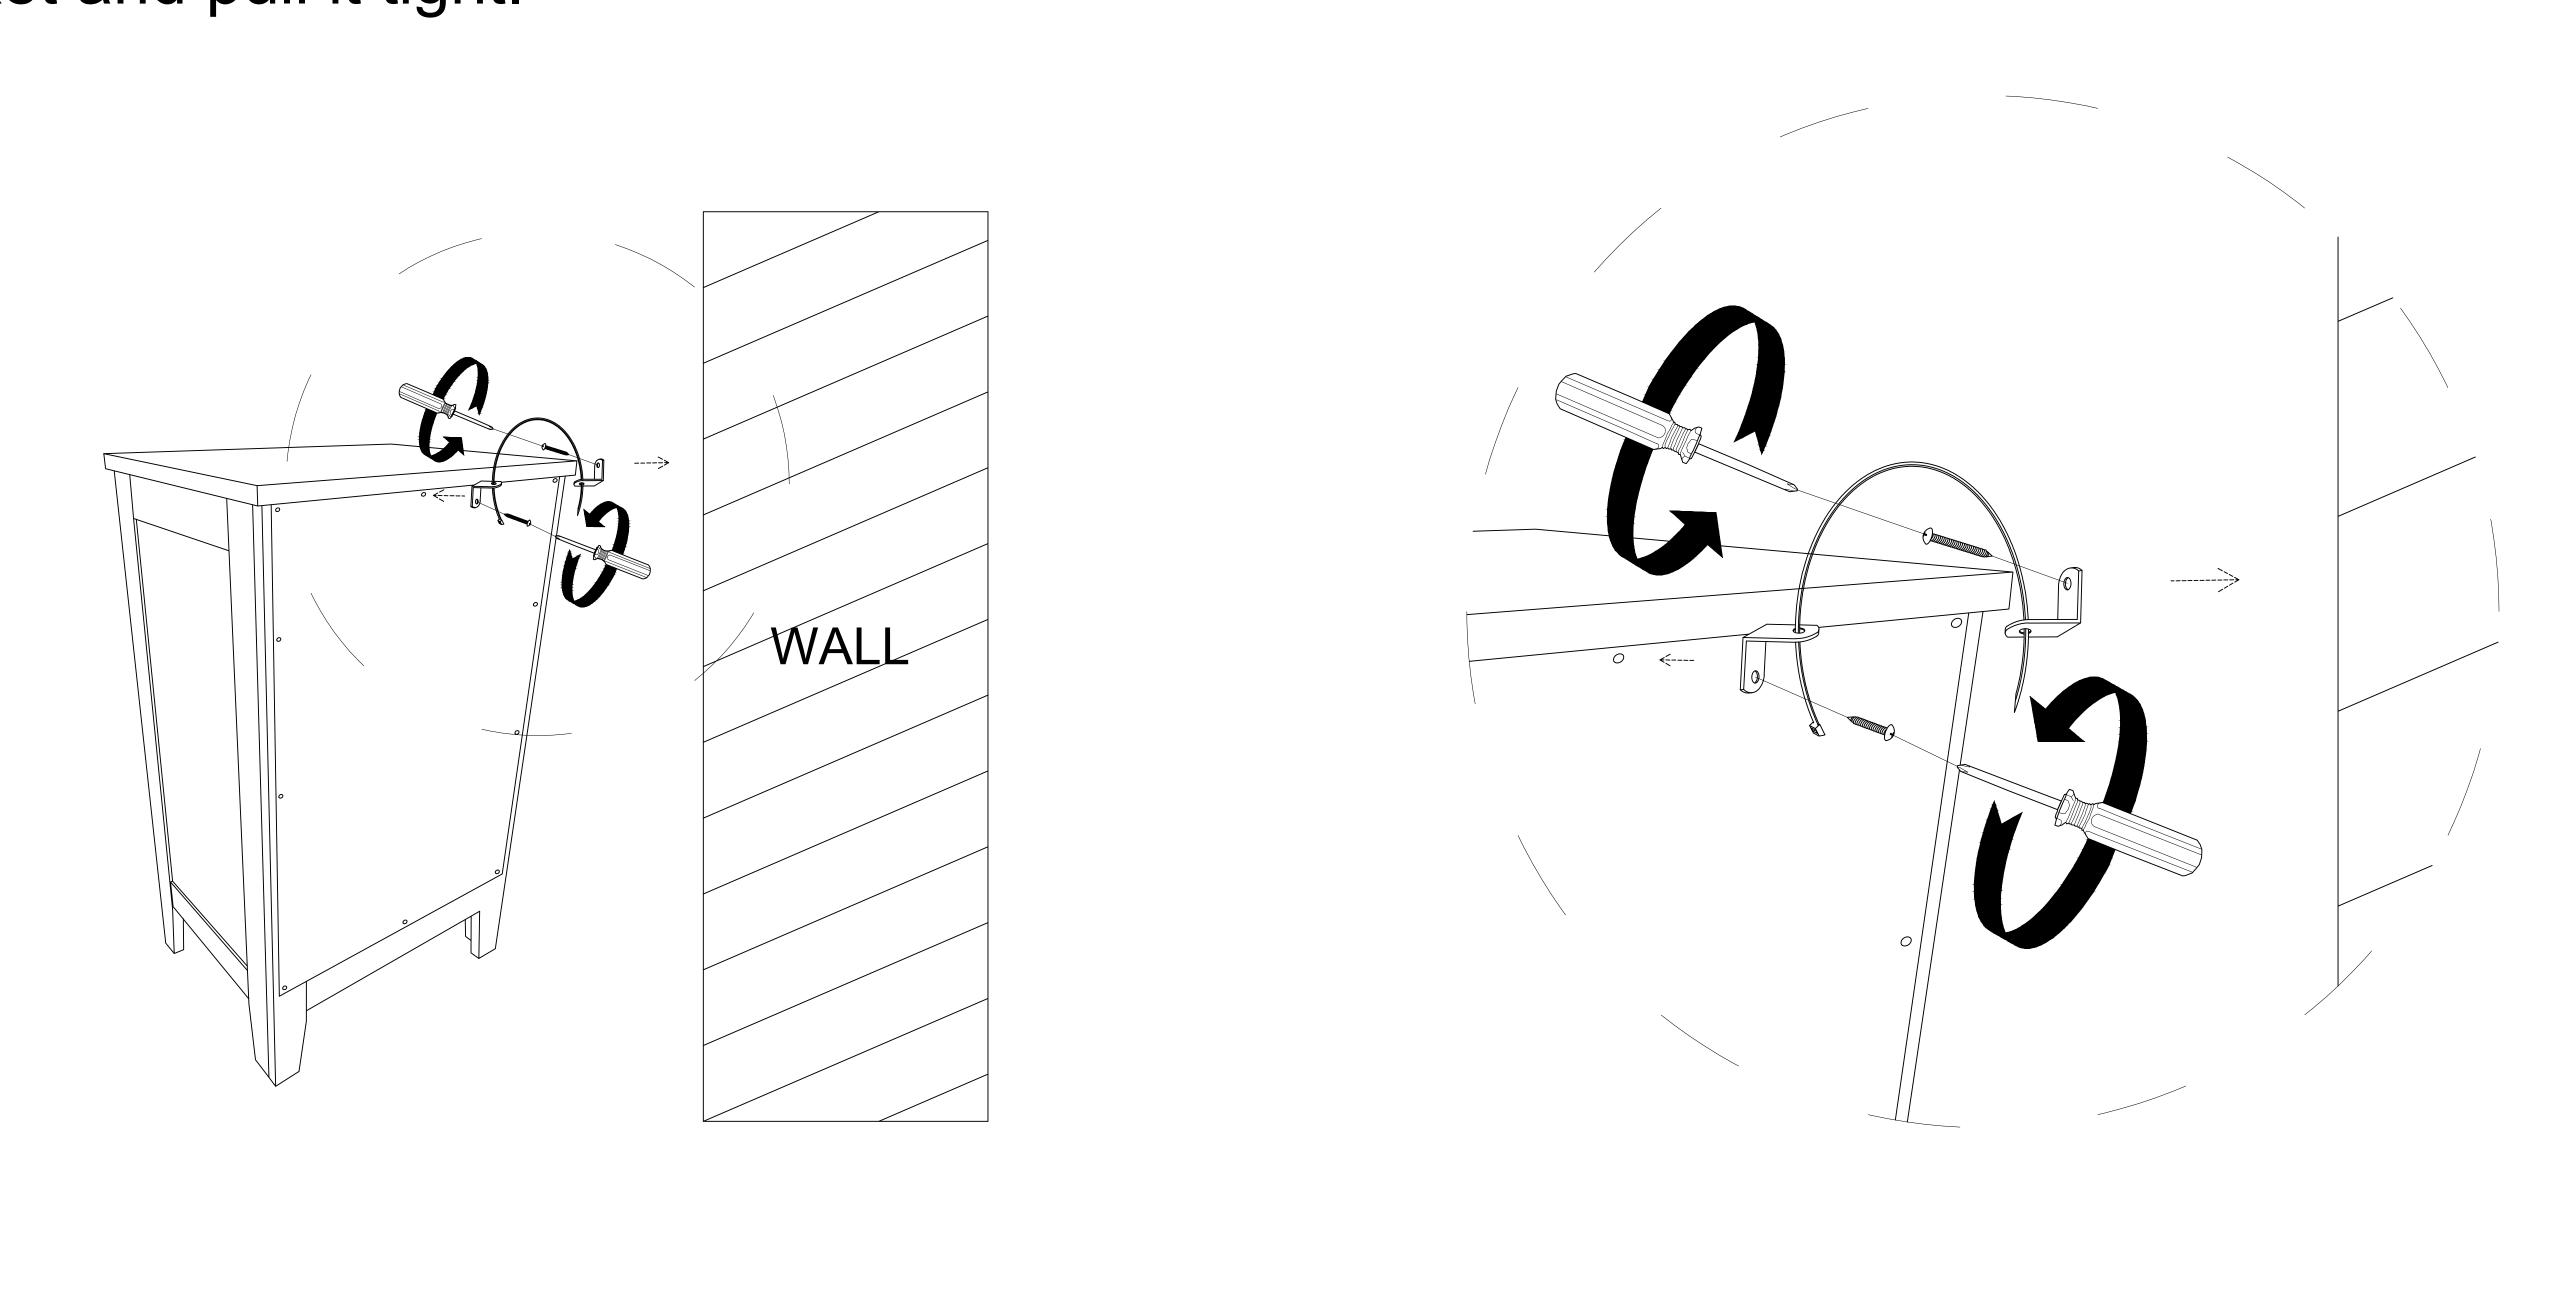

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.