ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Allen Wrench (Included)



2 - People

ASSEMBLY RATING



EASY ----- DIFFICULT

The Assembly Rating is a 5-point system showing the level of the effort needed to assemble a specific product.



| Are you | ı missing anything? | Check out our Quick Tips! |
|-----------|--|---|
| | heck all parts, hardware and ies listed are all acccounted for. | We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then! |
| Are there | we send any replacements? any irregularities or flaws in the e can send replacements! | Prep Time! Please review the assembly instructions and all diagrams prior to assembling. |

PRE ASSEMBLY INSTRUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move aroung during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly, and insert screws or bolts into their respective holes.



Use the appropiate handtools or powertools for assembly. Select steps, such as tightrning screws and/or bolts, may require handtools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instruction and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO WOOBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY USE SERIOUS INJURY.

SIDE CHAIR




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

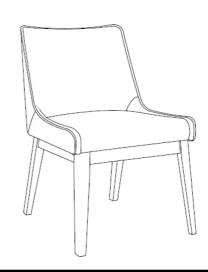

PARTS


1

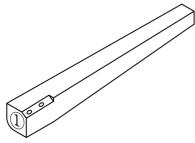

FRONT LEG (LEFT)


1pc. x2

4

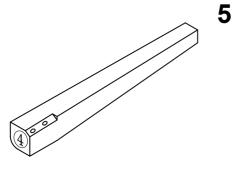


BACK LEG (LEFT)

1pc. x2

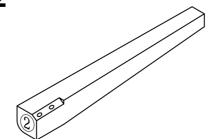

FRONT LEG (RIGHT)


1pc. x2

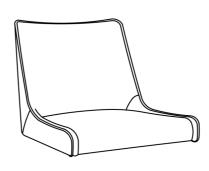

CUSHION CHAIR

1pc. x2



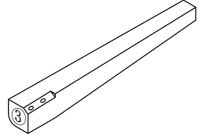


BACK LEG (RIGHT)

1pc. x2

HARDWARE

В

 A



JCBC M6 x 60mm + S/W M6

+ F/W M6 x 19mm


8pcs. x2




ALLEN KEY M4 (BALL SHAPE)

1pc.

ASSEMBLY INSTRUCTIONS

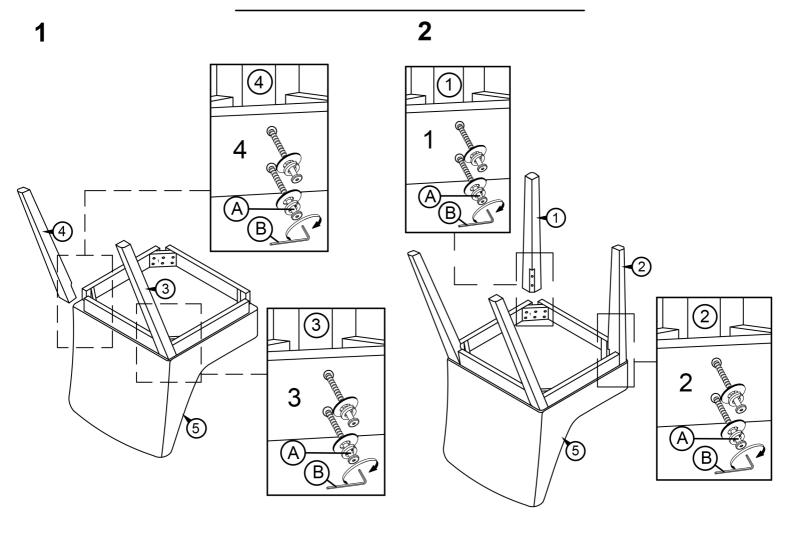

3

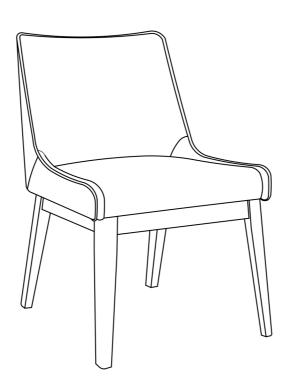

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product woobles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

√ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.