ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Screwdriver (Not included)



Allen Wrench (Included)



2 - People

ASSEMBLY RATING









EASY -

→ DIFFICULT

The Assembly Rating is a 5-point system showing the level of the effort needed to assemble a specific product.



Are you missing anything? Double-check all parts, hardware and accessories listed are all acccounted for.	Check out our Quick Tips! We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INSTRUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move aroung during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly, and insert screws or bolts into their respective holes.



Use the appropiate handtools or powertools for assembly. Select steps, such as tightrning screws and/or bolts, may require handtools to avoid causing damage during assembly.

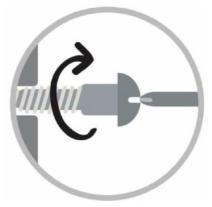

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instruction and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO WOOBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY USE SERIOUS INJURY.

COUNTER HT STOOL



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

 


 
PARTS

1

2

3







SIDE FRAME (LEFT) 1pc. x2

5

SIDE FRAME (RIGHT)

1pc. x2

BOX FRAME 1pc. x2

6



FRONT & BACK RAIL 2pcs. x2



TOP REST 1pc. x2



CUSHION SEAT 1pc. x2


HARDWARE


В ALLEN KEY M4 JCBC M6 x 70mm + S/W M6 + F/W M6 x 13mm (BALL SHAPE) JCBC M6 x 25mm 4pcs. x2 4pcs. x2 1pc. D E F $\angle UUUU(X)$ PH SCREW M4 x 12mm FH SCREW #8 x 32mm L BRACKET 4pcs. x2 4pcs. x2 8pcs. x2 G WOOD DOWEL M8 x 25mm

2pcs. x2

ASSEMBLY INSTRUCTIONS


1 2

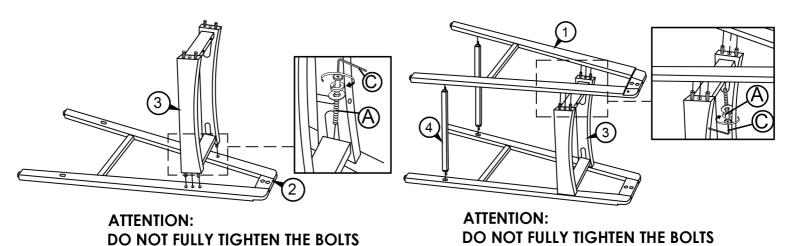


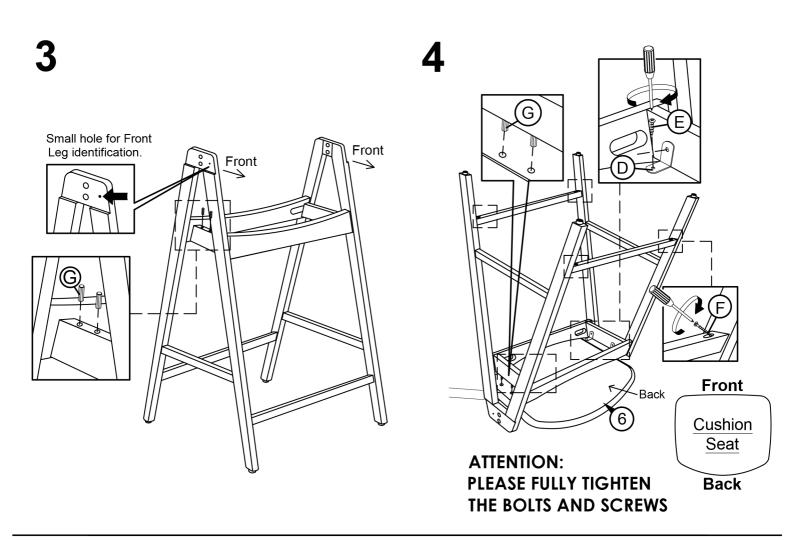


ASSEMBLY INSTRUCTIONS

5

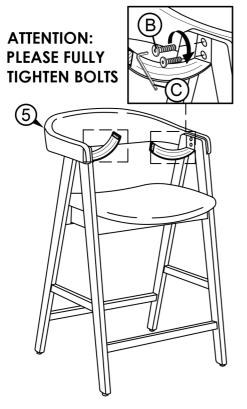

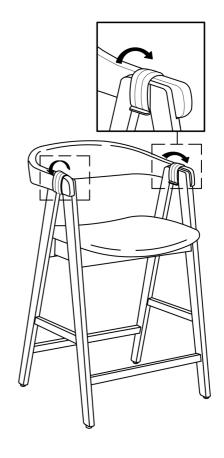

7

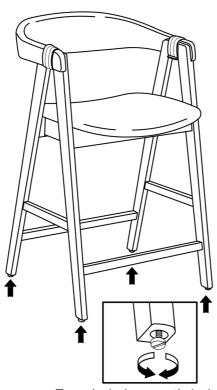

Turn clockwise or anti-clockwise to adjust leg leveller.

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product woobles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.