

 
Assembly Instructions

909331 TV Stand - White


Product Issues? Please Call Us Before Contacting Your Retailer At 1-800-549-3300.

Email customerservice@mshome.co, or visit www.mshome.co


We can help with Assembly Issues, Part Requests, Damages, & All Other Product Related Questions

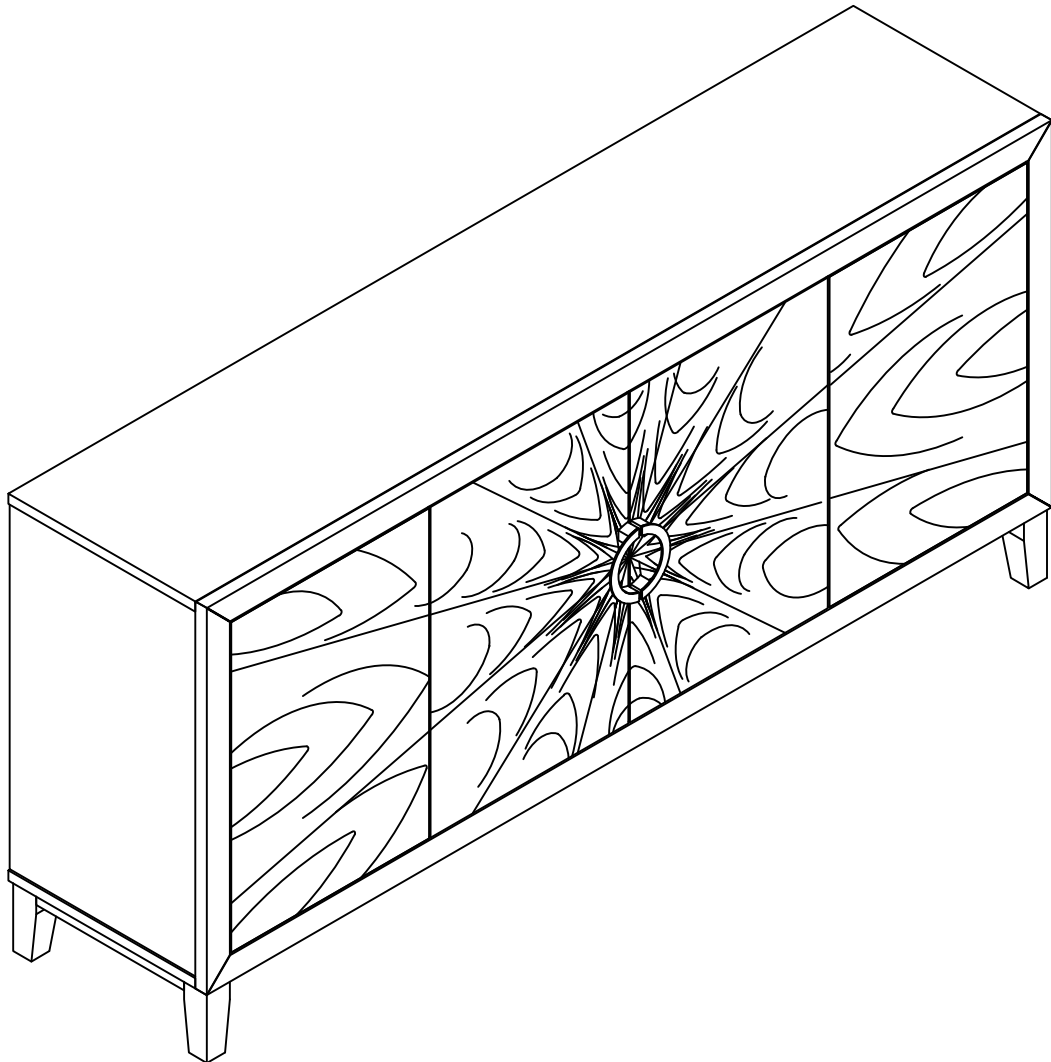



MSH - USA

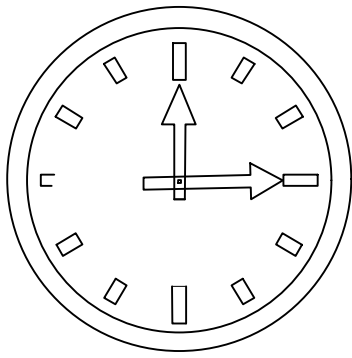 

15 min

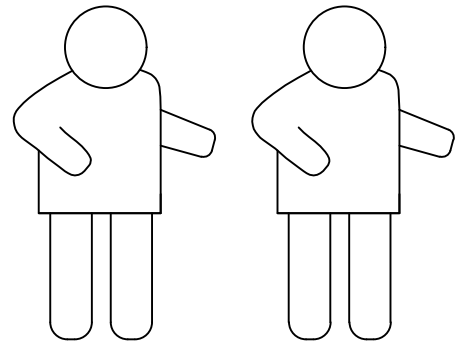 

Two People Required
for Assembly

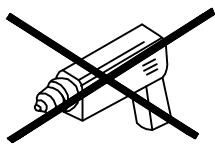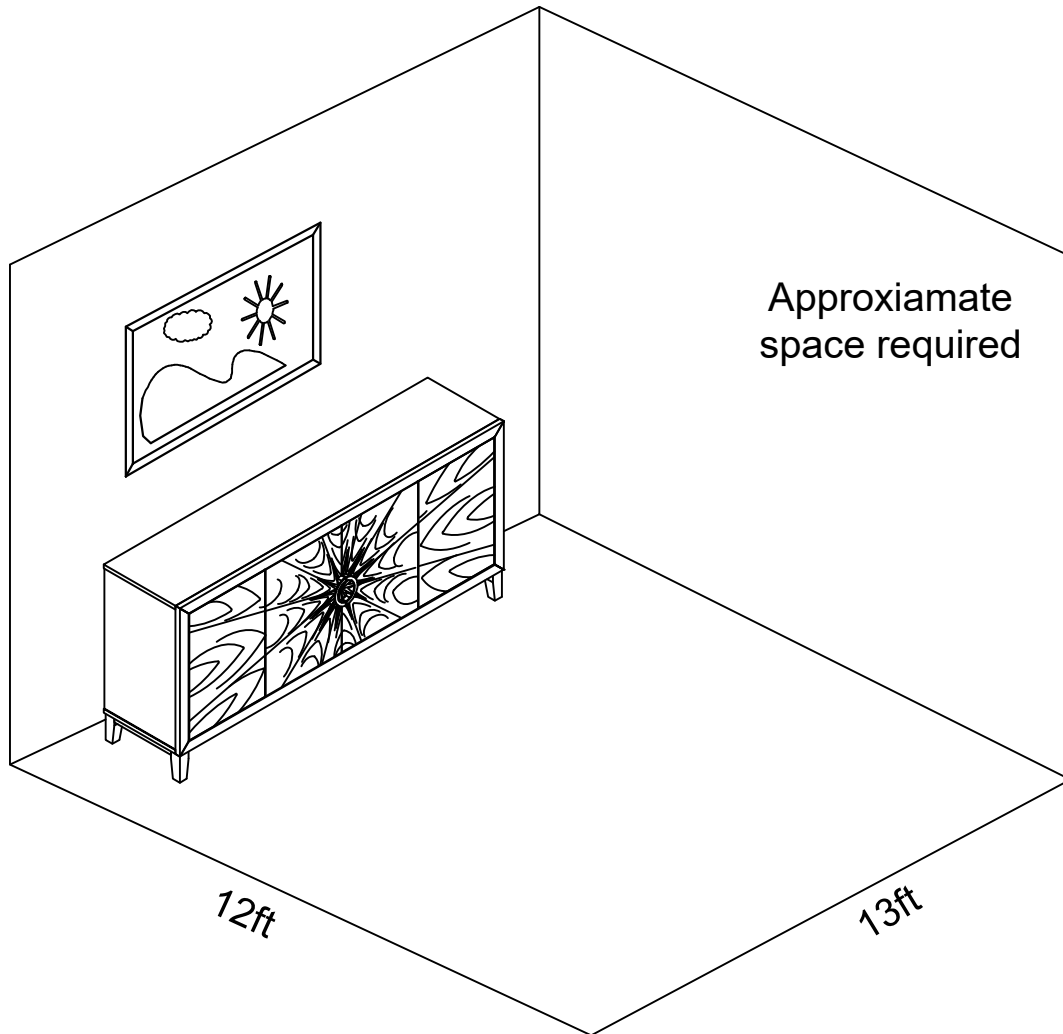  


Do Not Use Power Tools







 
 

Phillips Head
Not Provided

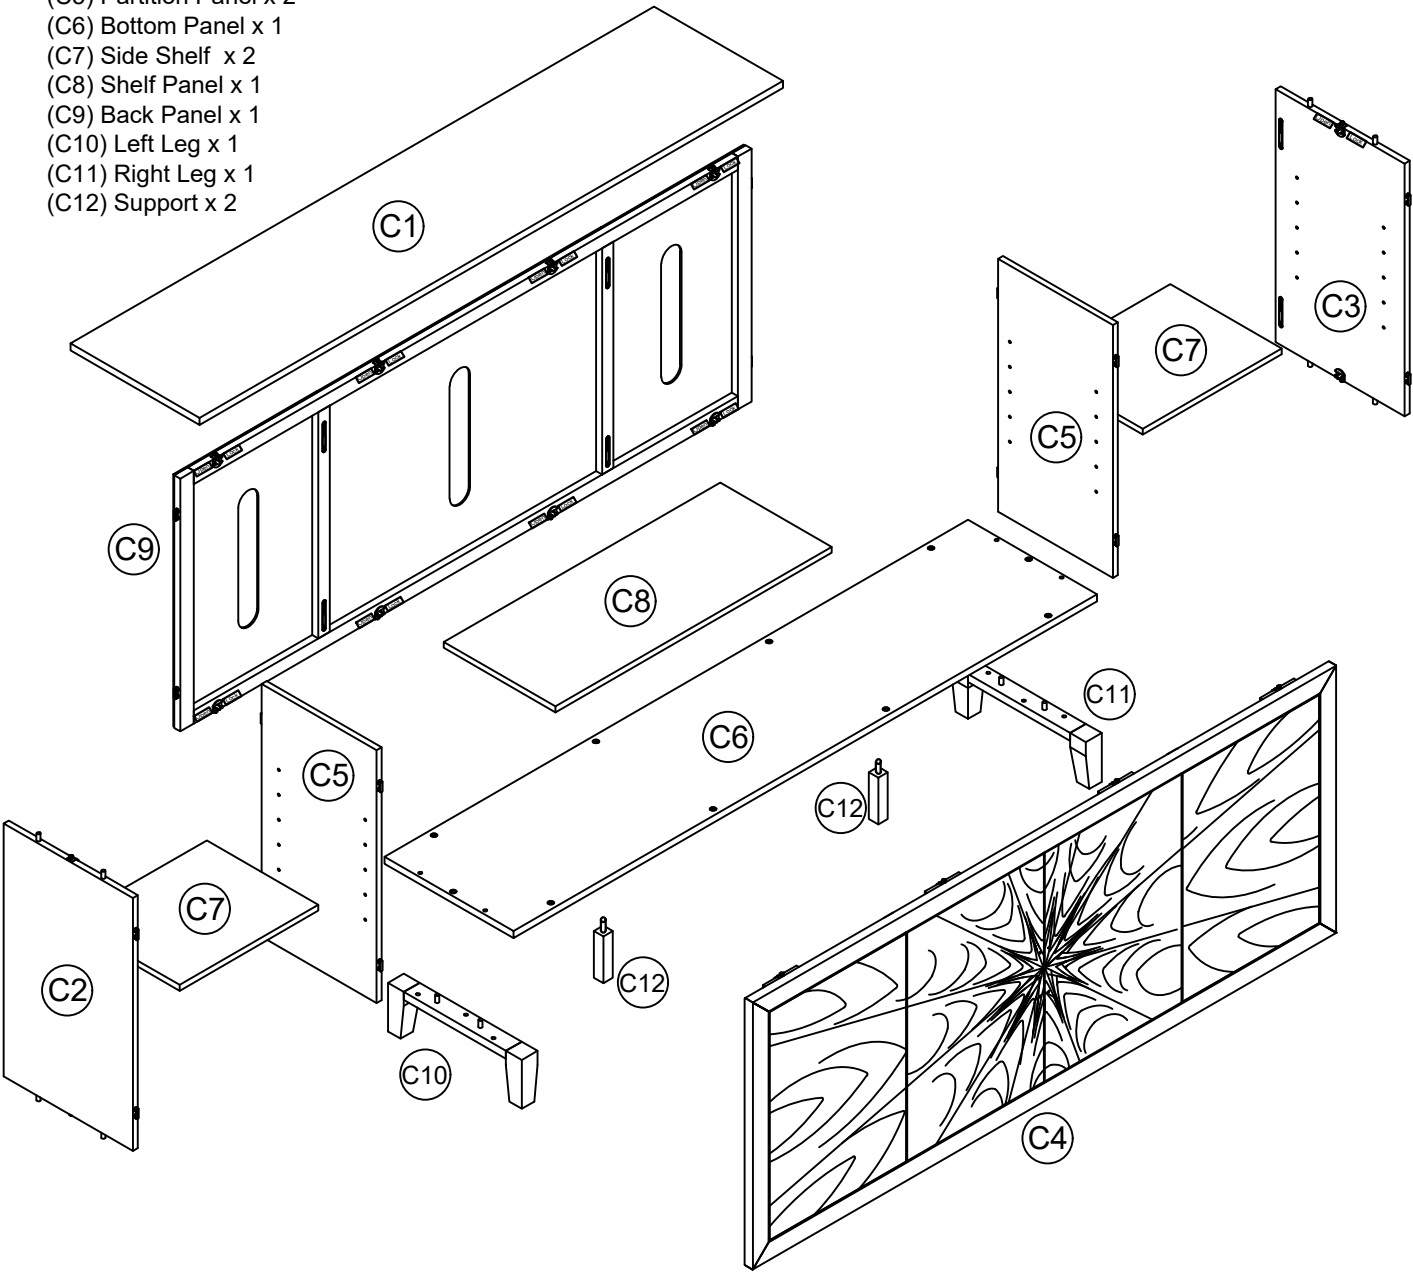PARTS INCLUDED: 909331


- (C1) Top Panel x 1
- (C2) Left side panel x1
- (C3) Right side panel x 1
- (C4) Front Frame x1
- (C5) Partition Panel x 2
- (C6) Bottom Panel x 1
- (C7) Side Shelf x 2
- (C8) Shelf Panel x 1
- (C9) Back Panel x 1
- (C10) Left Leg x 1
- (C11) Right Leg x 1
- (C12) Support x 2




Hardware Pack:

A  12pcs	B  Ø3.5x15 (mm) 12pcs	C  2 pcs	D  Ø4x30 (mm) 4pcs	E  Ø6x30 (mm) 6pcs
F  1pc	ANTI-TIP SET 			

 
- 1 - Please lay all components on smooth flat surface to prevent scratches.
- Use the EPE foam to protect the plastic hardware before assembly.

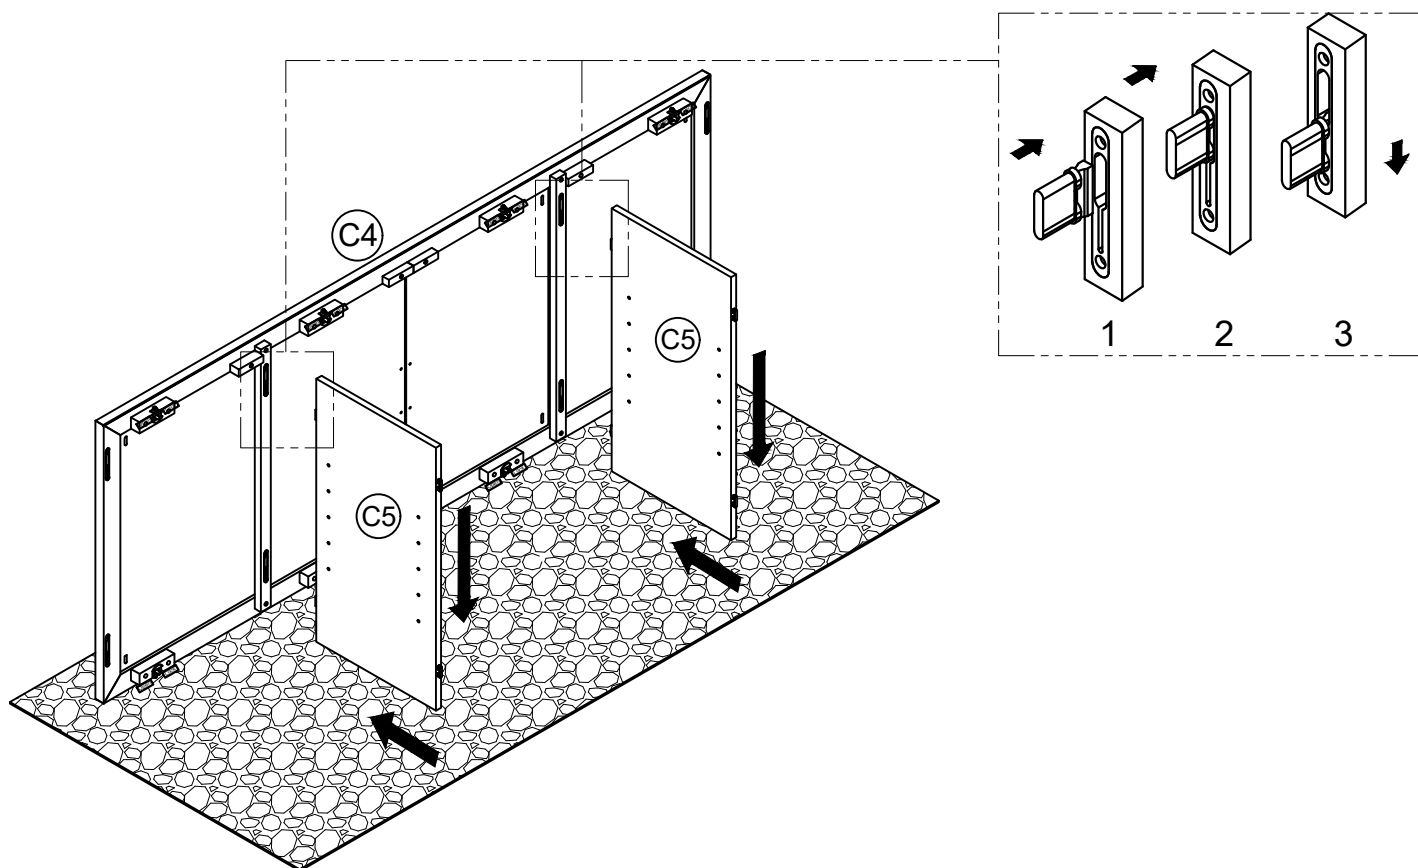


2

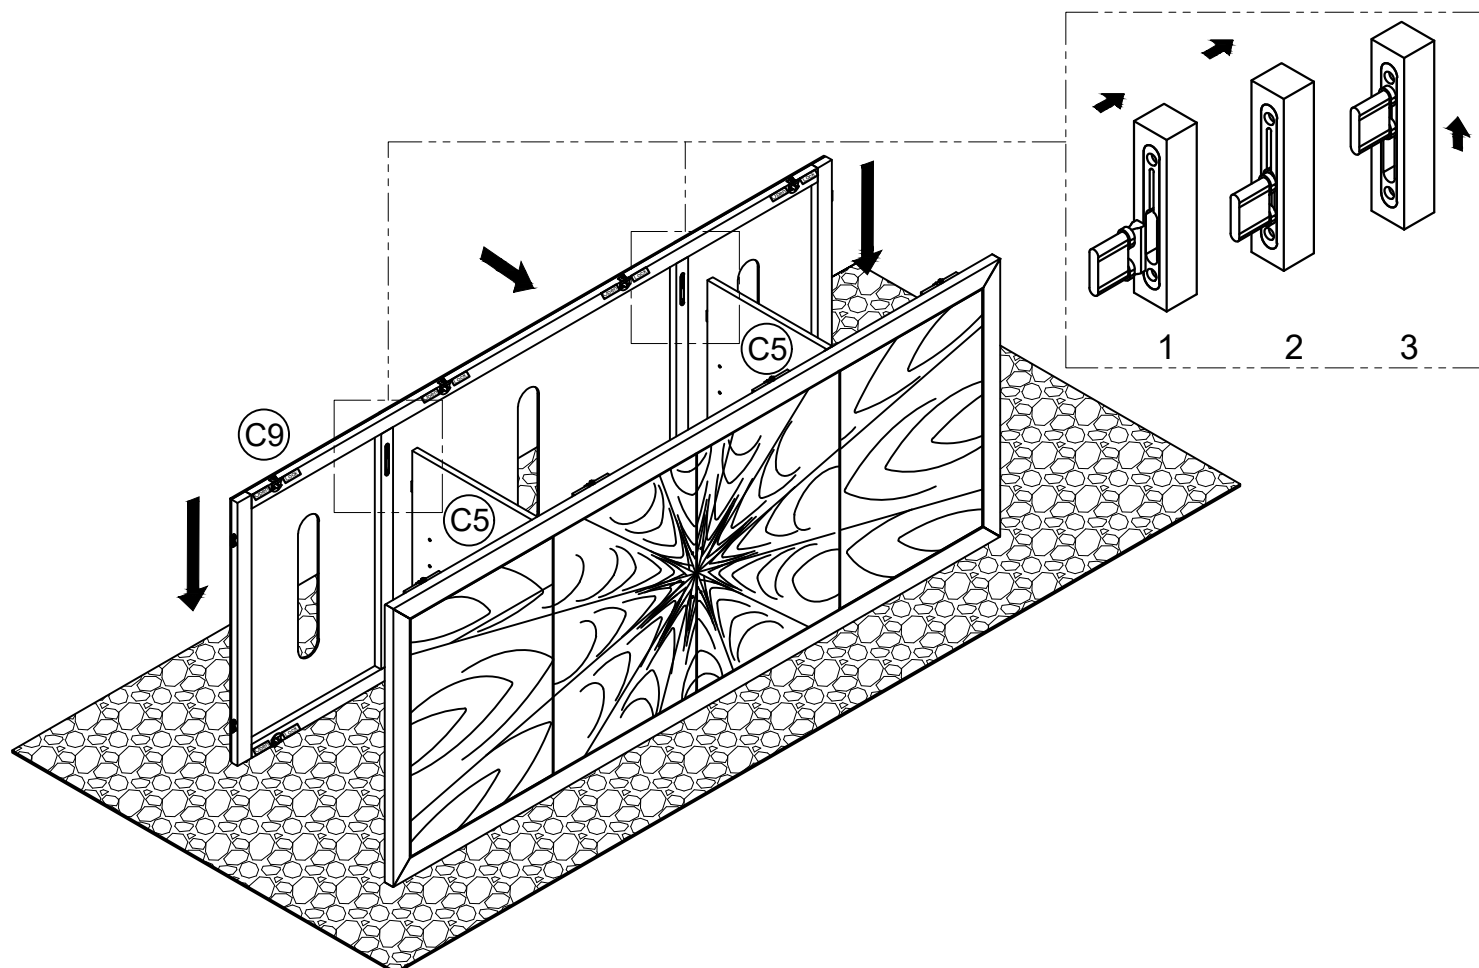 


3

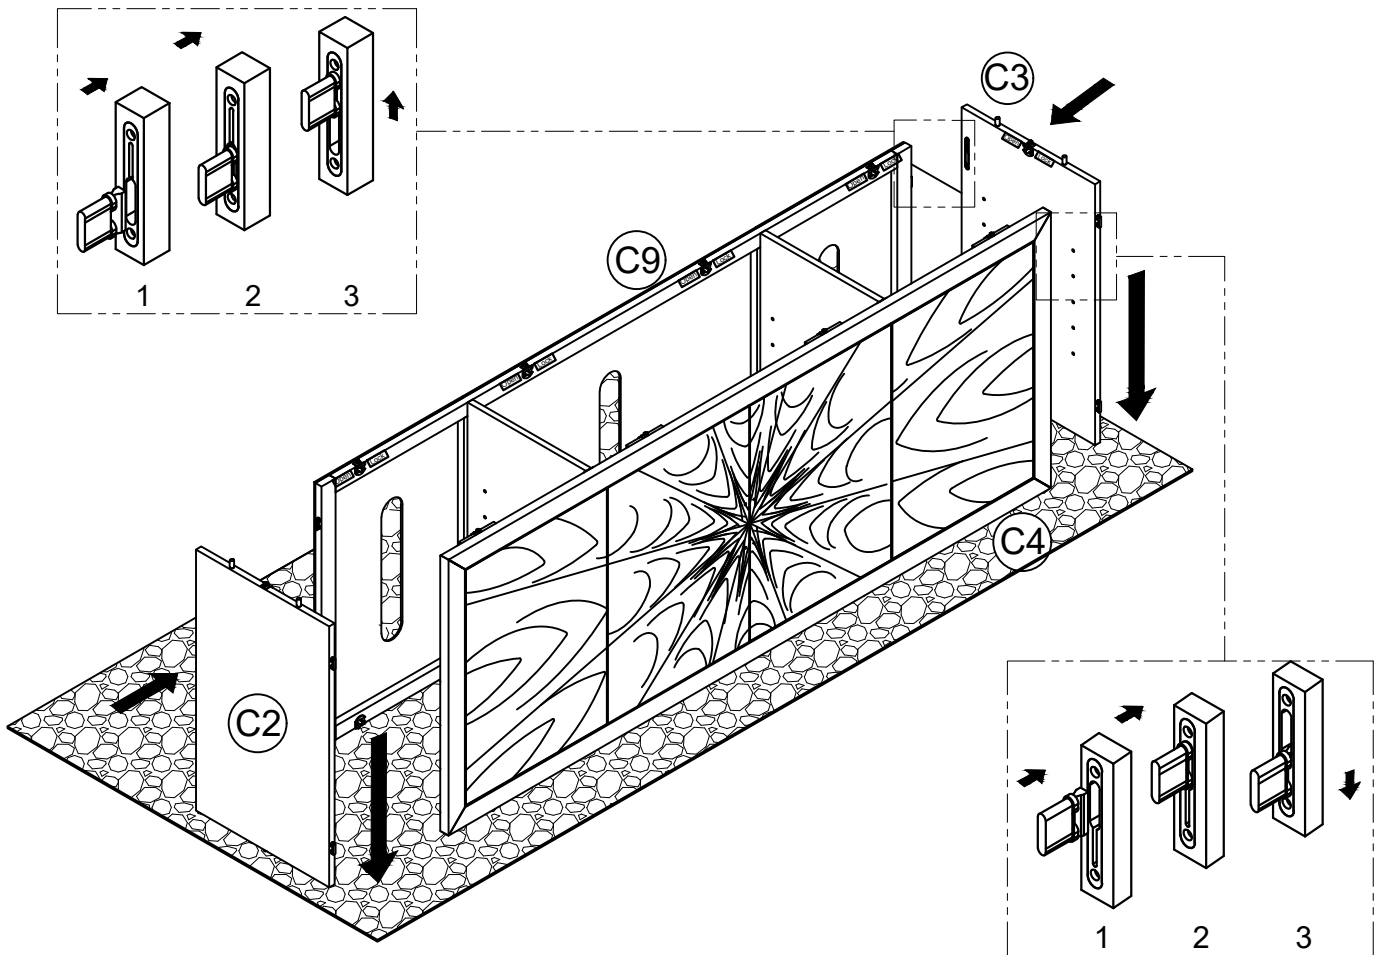 

4

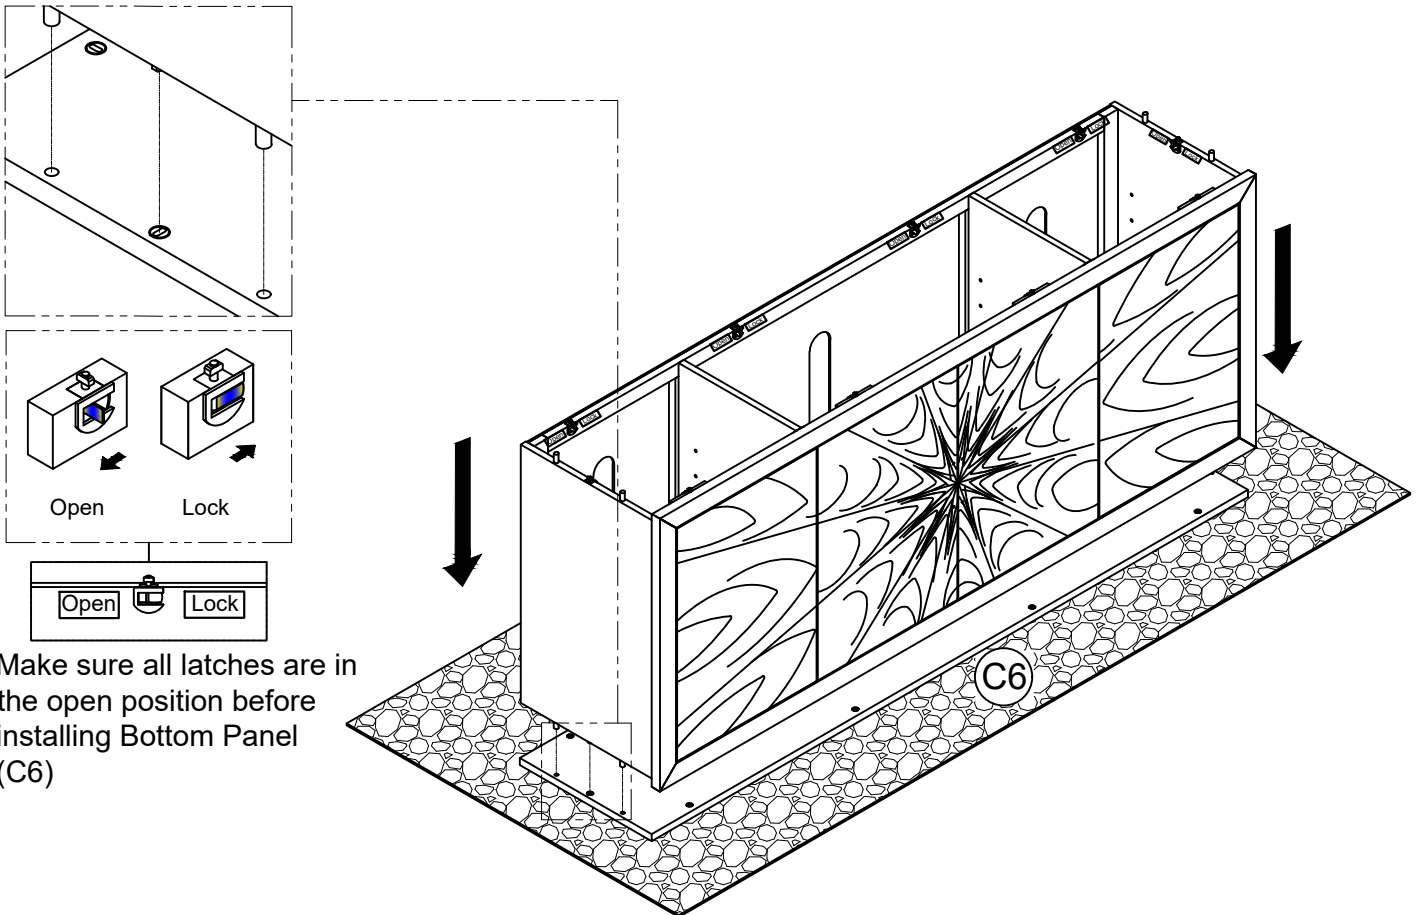 


5

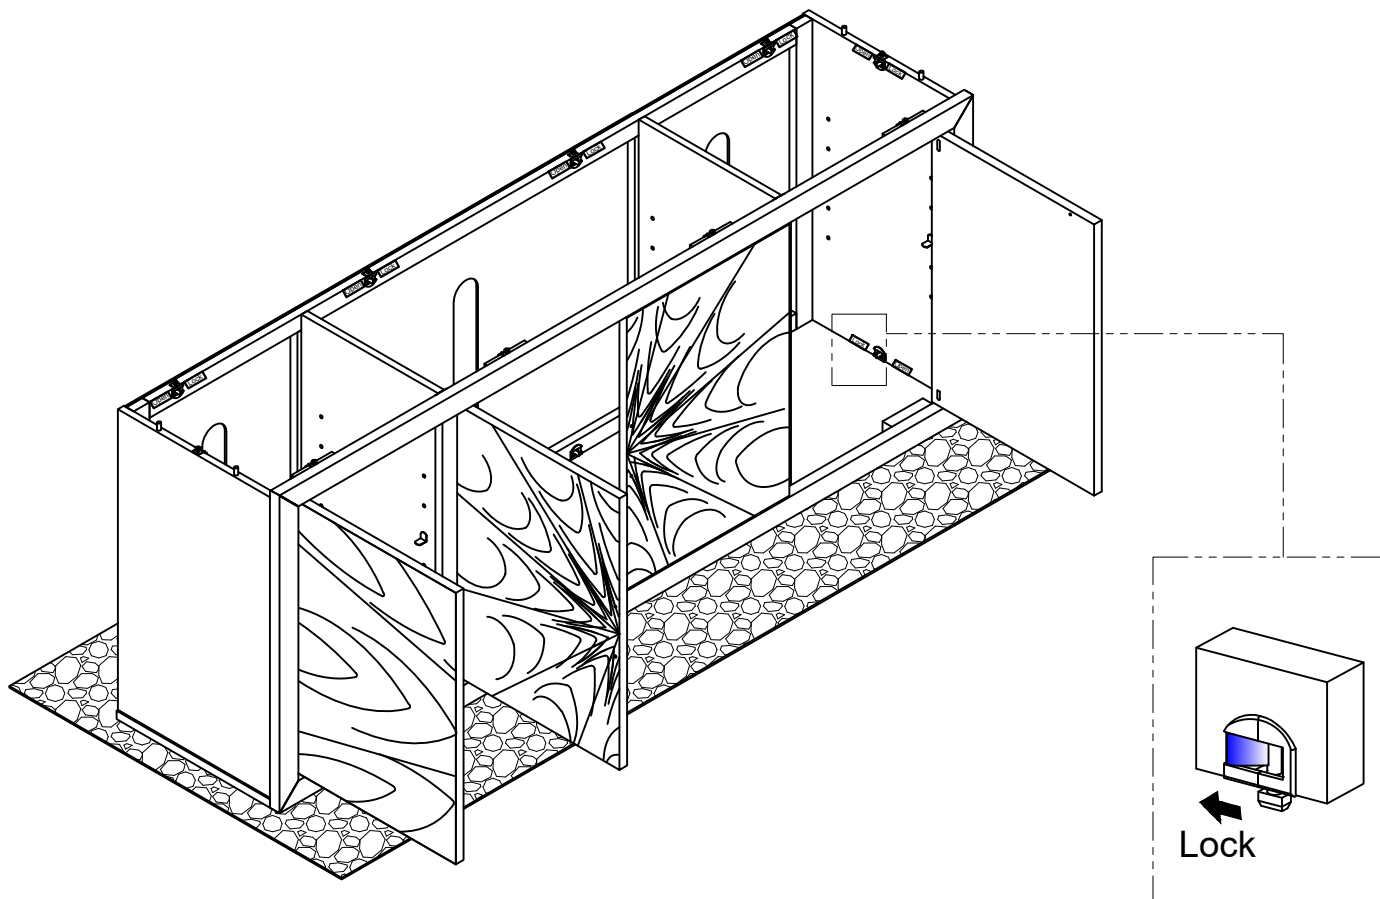 

Make sure all latches are in the locked position

 6

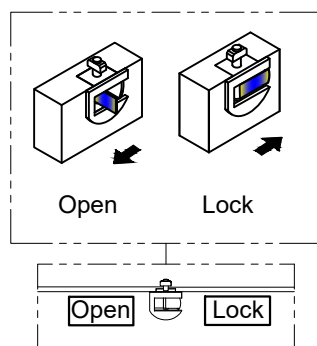

Make sure all latches are in the open position before installing Top Panel (C1)

7

D x 4

 


Ø4x30 (mm) 4pcs

C x 2



2 pcs

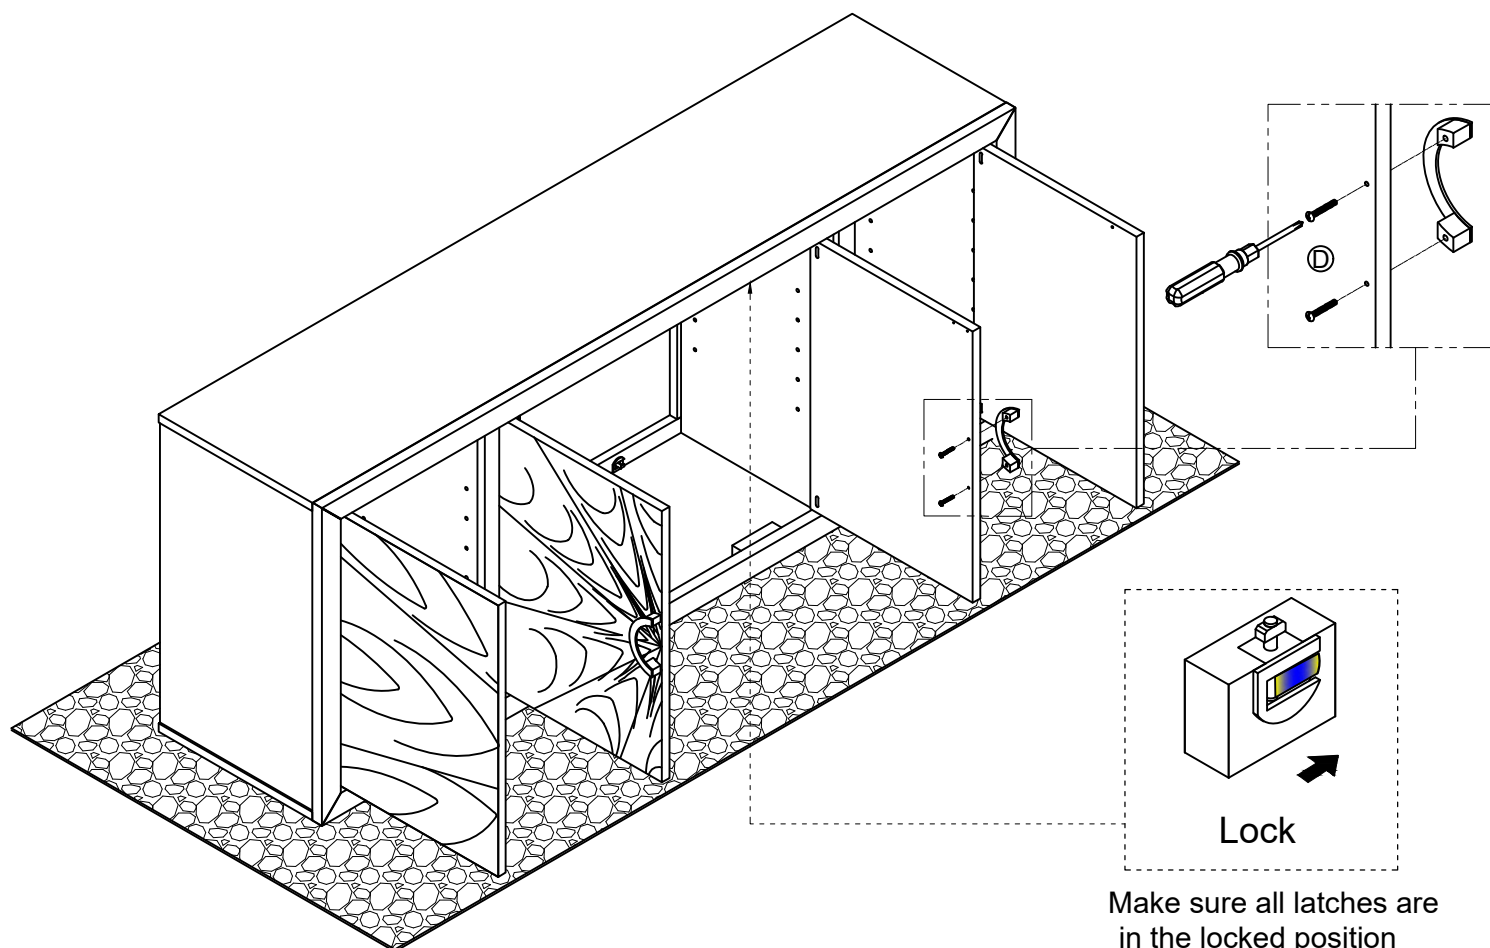



8

E x 6



Ø6x30 (mm)

  F x 1

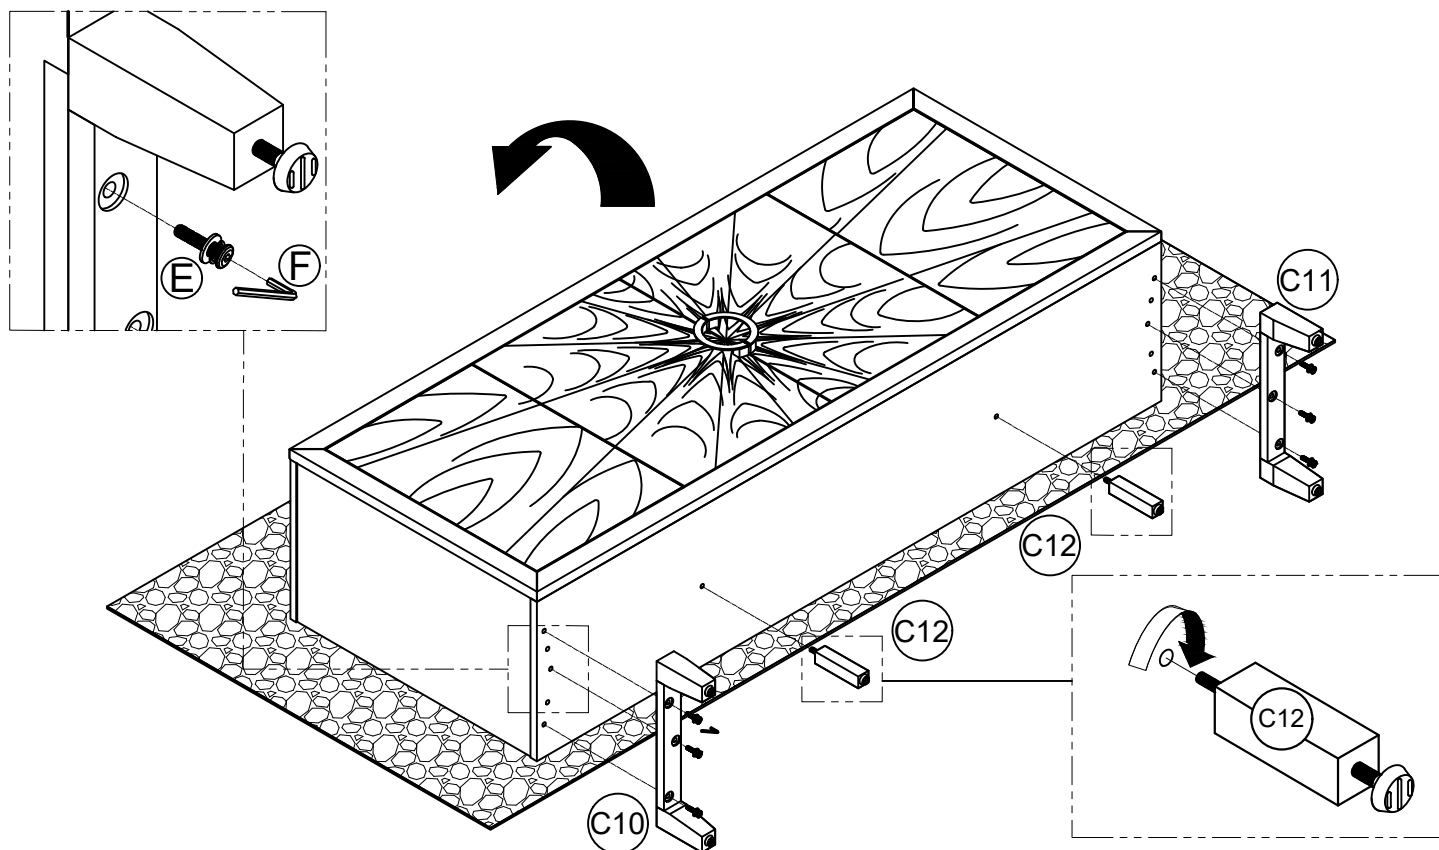

9

 
A x 12




B x 12



Ø3.5x15 (mm)

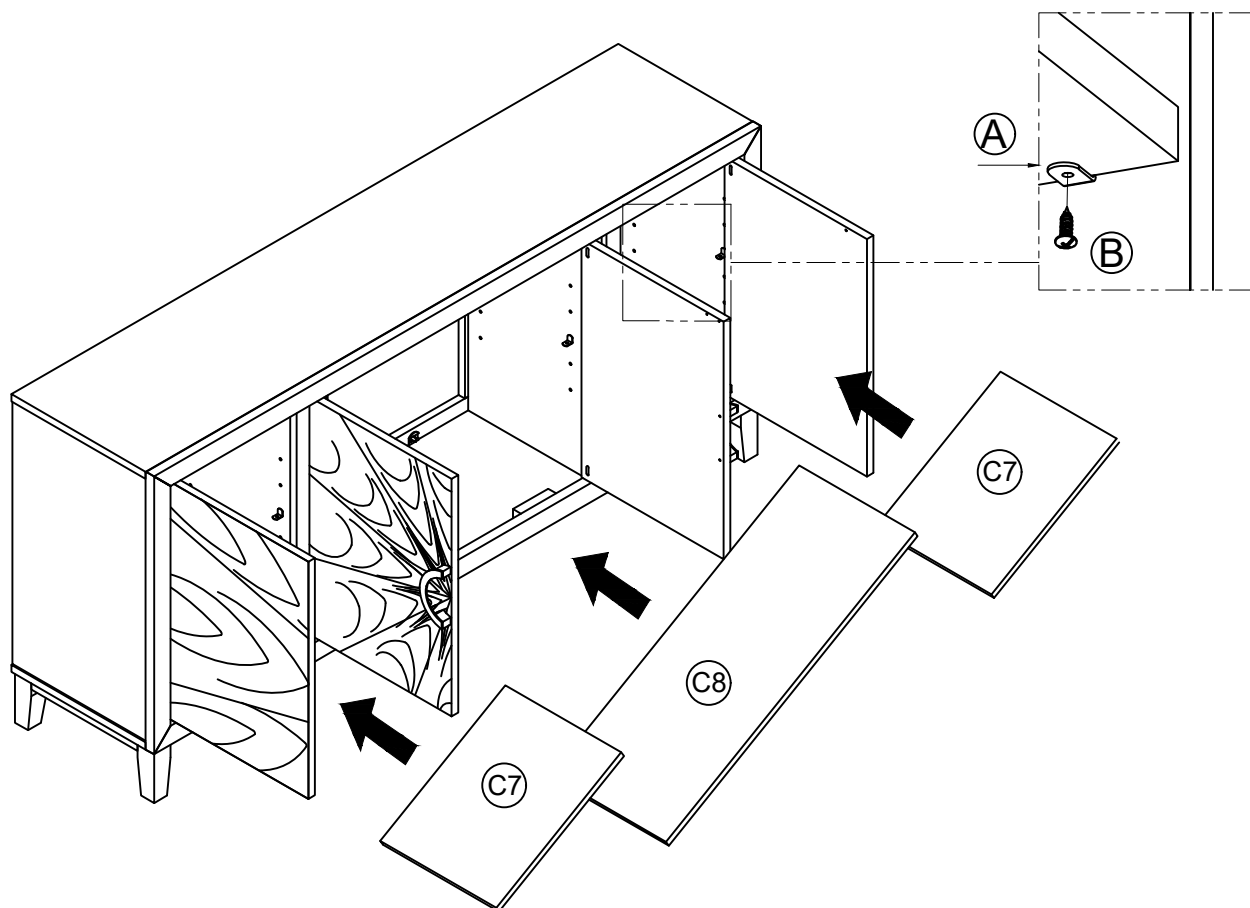

10

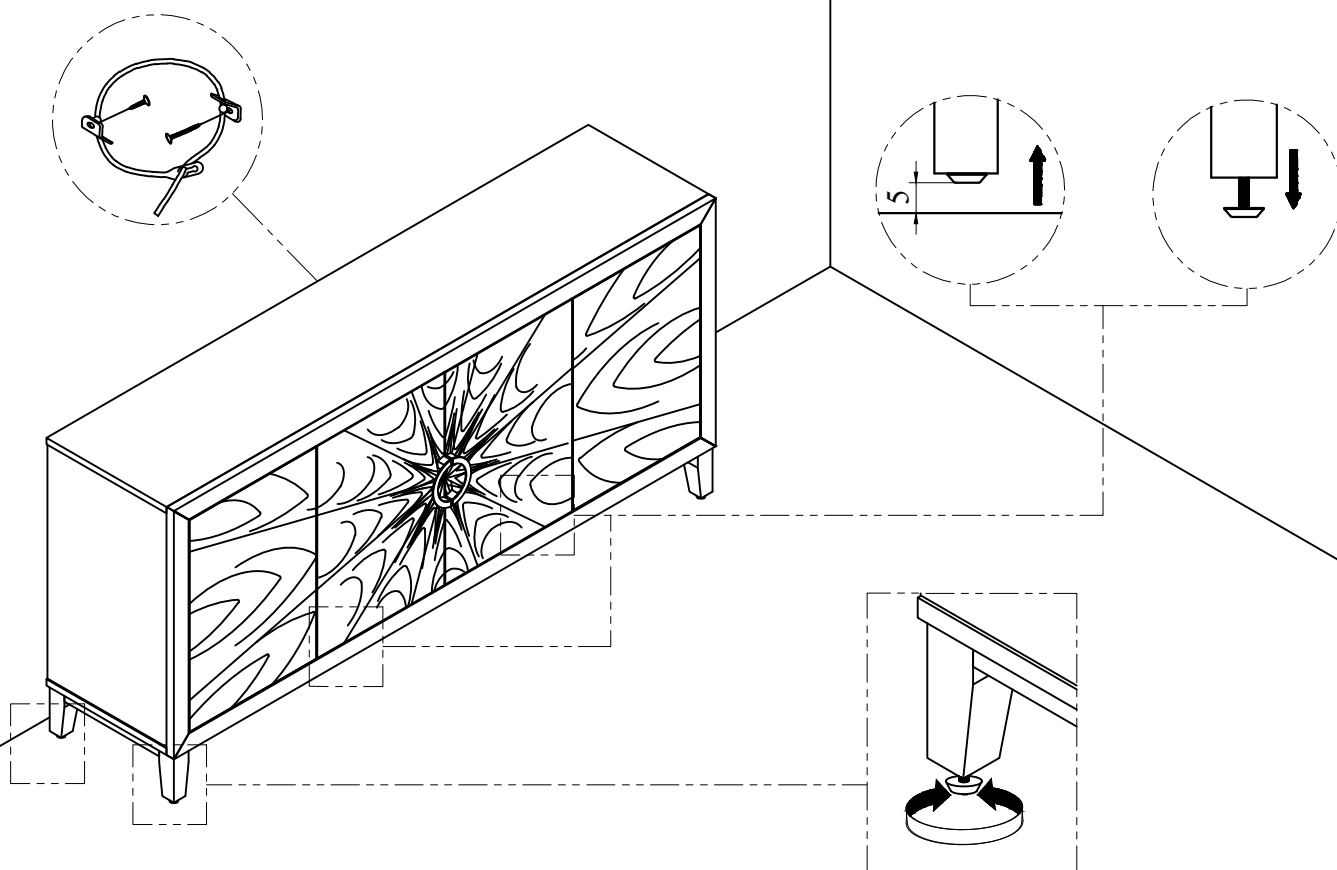 

Adjustable floor leveler