
ASSEMBLY INSTRUCTIONS


ITEM NO. FB3013CST-GY-SC-4PK FB3013CST-WA-SC-4PK

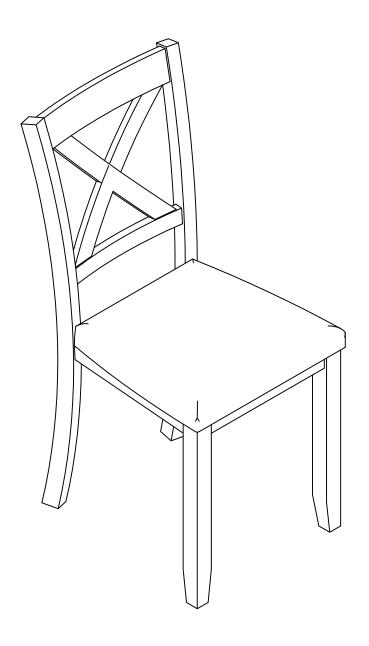

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Exploded View

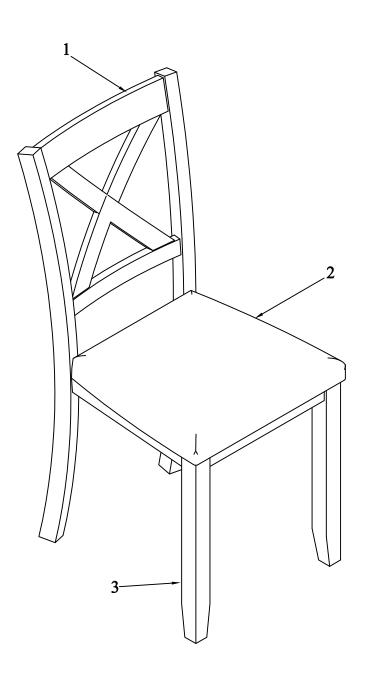

PARTS LIST				
NO.	DIAGRAM	PART NAME	Q'Ty	
1		CHAIR BACK	1PC	
2		SEAT FRAME WITH CUSHION	1PC	
3		LEG	2PCS	

	HARDWARE LIST				
NO.	DIAGRAM	PART NAME	Q'Ty		
Α		BOLT / BOULON Ø1/4" x 1-1/2"	2PCS		
В		BOLT / BOULON Ø1/4" x 2-3/8"	4PCS		
С		BOLT / BOULON Ø1/4" x 3"	4PCS		
D		LOCK WASHER Ø1/4"	10PCS		
E		FLAT WASHER Ø1/4"x 3/4"	10PCS		
F		ALLEN KEY 1/6" x 2-1/4"	1PC		

STEP 1: 1 Wood Tenon STEP 2:

1

