



ASSEMBLY INSTRUCTIONS

Need some help?

GIVE US A CALL: 1-888-980-5122
MON - FRI 8:30AM - 5:30PM (PT)



CARE INSTRUCTIONS

Outdoor furniture naturally weathers and shows color variation over time. We recommend the following care for the best results:

- Wipe with a soft cloth.
 - Wash with mild soap and water as needed; do not use abrasive cleaners.
 - Cover furniture with an outdoor cover (not included) when not in use.
 - Store in a dry, covered area during inclement weather or winter season.
-



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.

ASSEMBLING INSTRUCTIONS
For
10'x10' FOLDING GAZEBO

The gazebo to be erected with minimum 4 persons on the firm level ground

Step 1:

Open the gazebo in four directions until partially extended as in Fig 2, simultaneously.

Step 2:

Hold the movable parts and slide it to the position of the ball, then lock canopy of gazebo.

Step 3:

Pull the inner pole downward, adjusting the height of the legs and lock into place.

Step 4:

Hook the 4 long leg fabric covers to the bottom holes in each leg. Insert anchor pin through foot of leg and into ground.

Step 5:


Attach rope through plastic hoops on top corners of canopy. Then pull rope and tie to remaining anchor pins. Insert pins into ground.

Step 6:

Use the velcro to secure the mosquito netting on the tube.

Step 7:

For taking down the gazebo, just reverse the step 6 to 1.

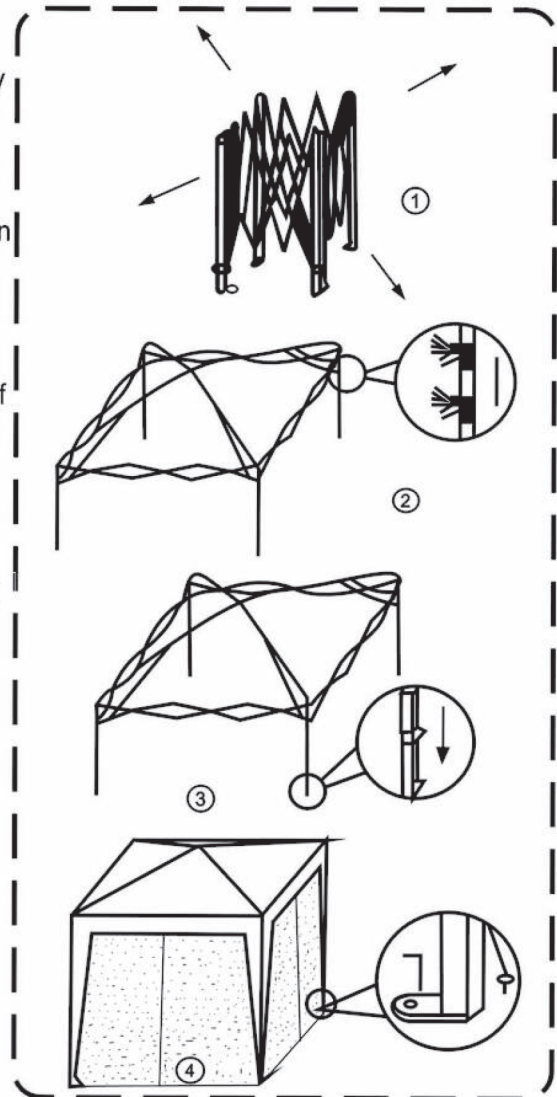

Warning :

- 1>Do not set up near flame.
- 2>Do not use when it is windy
- 3>Do not leave unattended, This product is designed for leisure use only and is not a shelter against adverse weather conditions.
- 4>Let frame and canopy top dry completely before closing or storing to avoid mildew.
- 5>Always tie down the gazebo with ties or use the ground anchor provided when use on dirt or grass.