 



## CR40R

### RECORD PLAYER STAND w/ALBUM STORAGE

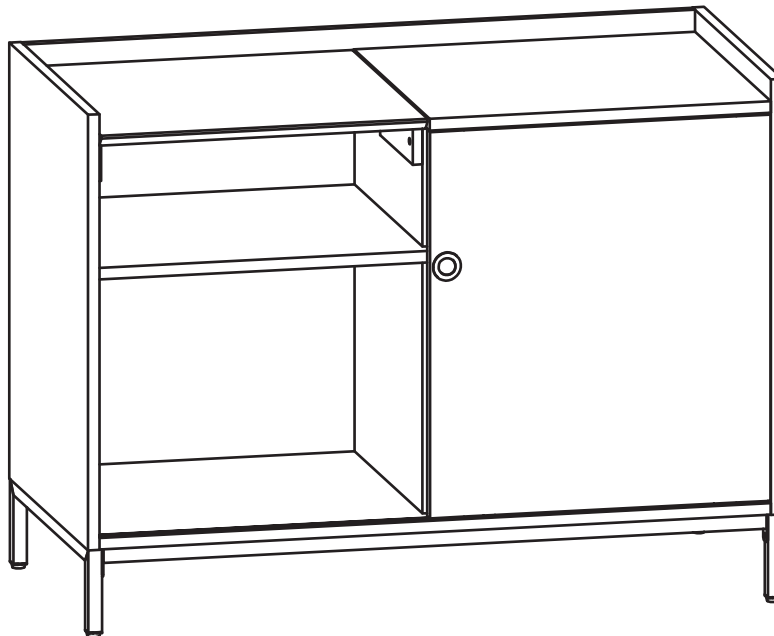

#### **Assembly Instructions - Important:**

 Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products, please visit our website: [www.officestar.net](http://www.officestar.net) or call or write us.

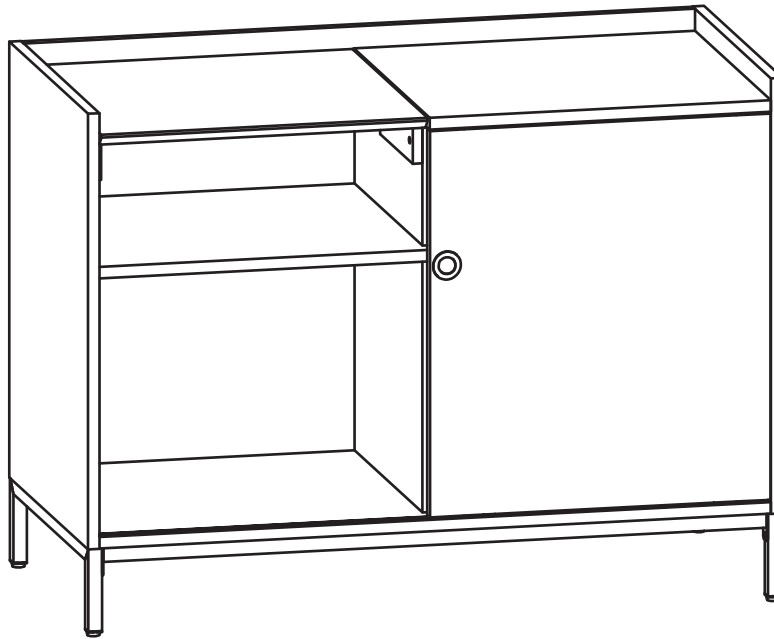


1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **FOR INDOOR RESIDENTIAL USE ONLY.**


#### **LIMITED WARRANTY**

 OSP Home Furnishings® warrants to the original purchaser that this product will be free from defects in material and workmanship as described below. Home Furnishings® will repair or replace, at its option, without charge to the original purchaser only, defective products or parts for one (1) year from the date of purchase. Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty shall be effective for the applicable time period beginning from the date of purchase as shown on your original sales receipt. This warranty is your sole remedy for product defects and excludes defects due to or arising in connection with product abuse or misuse, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the company's installation, maintenance and/or applicable guidelines. There are no other warranties, express or implied, other than those specifically described, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. OSP Home Furnishings® will not be responsible for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail [parts.department@officestar.net](mailto:parts.department@officestar.net) by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 3:30 p.m. Pacific Time. To make a warranty claim, contact Parts Department. Provide model number, proof of purchase, description of the problem and obtain return authorization. At its option OSP Home Furnishings® will: (a) Supply compatible components of current manufacture. (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid by OSP Home Furnishings®.


# PARTS

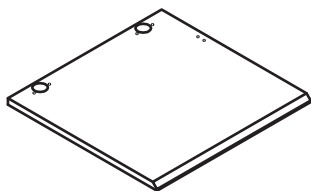

 
(A) Left Top Panel (1 Pc)

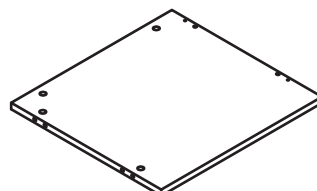

 
(B) Right Top Panel (1 Pc)

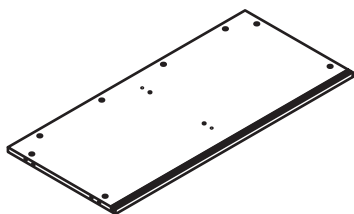

 
(C) Upper Shelf (1 Pc)

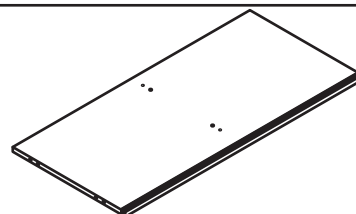

 
(D) Bottom Panel (1 Pc)

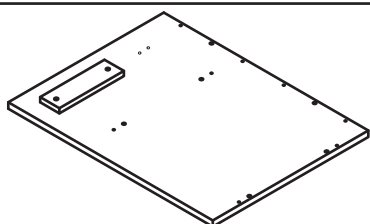

 
(E) Left Panel (1 Pc)

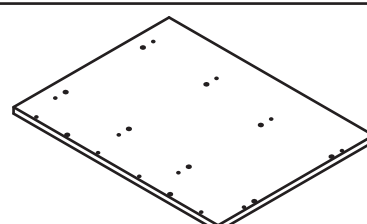

 
(F) Right Panel (1 Pc)

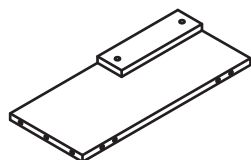

 
(G) Upper Middle Panel (1 Pc)

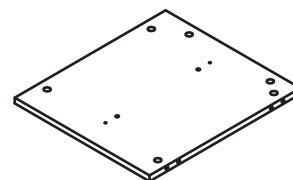

 
(H) Middle Panel (1 Pc)

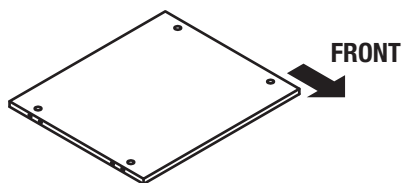

 
(I) Right Shelf (1 Pc)

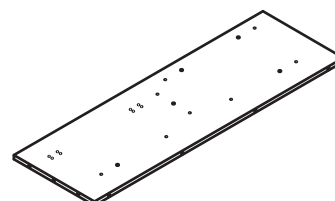

 
(J) Upper Back Panel (1 Pc)

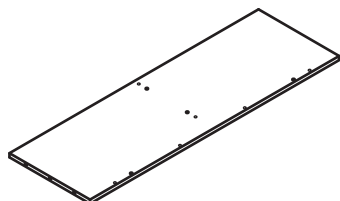

 
(K) Lower Back Panel (1 Pc)

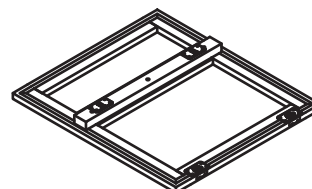

  (L) Door (1 Pc)

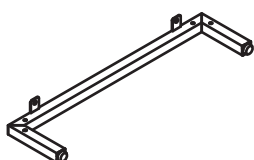




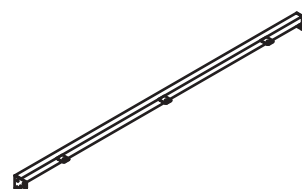







(M) Metal Frame (2 Pcs)



  (N) Metal Bar (2 Pcs)

## HARDWARE

  
NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
1		Glue	N/A	1 Pc
2		Wood Dowel	8 x 30mm	31 Pcs + 2 extra
3		Cam Lock	15 x 11mm	44 Pcs + 2 extra
4		Cam Bolt	N/A	44 Pcs + 2 extra
5		Allen Bolt	1/4" x 15mm	18 Pcs + 1 extra
6		Round Head Phillips Screw	3.5 x 15 x 7mm	4 Pcs
7		Flat Head Phillips Screw	3.5 x 15 x 7mm	12 Pcs + 1 extra
8		Hinge	N/A	2 Pcs
9		Hinge	N/A	1 Pc
10		Allen Key	4mm	1 Pc
11		Sticker	20mm	3 Pcs

*Phillips screwdriver also needed for assembly (not provided)*


## WALL MOUNTING HARWARE

 		Long Screw	N/A	1 Pc
		Short Screw	N/A	1 Pc
		Bracket	N/A	2 Pcs
		Wall Anchor	N/A	1 Pc
		Safety Strap	N/A	1 Pc


## CAM LOCK INSTALLATION

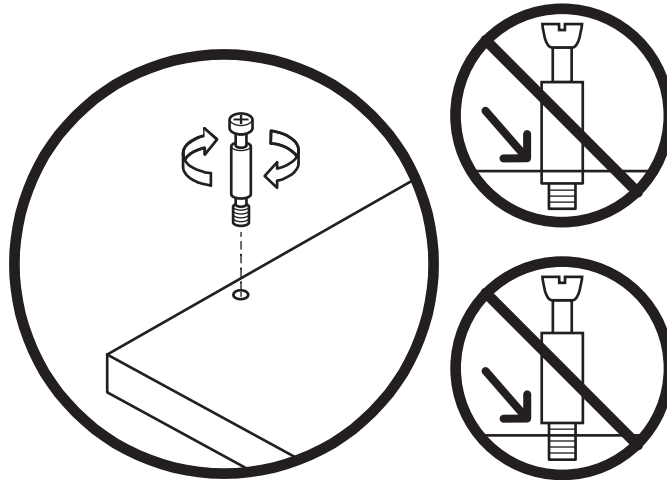

 Screw in Cam Bolt so it's flush with panel.  
Do not overtighten, and do not leave a gap.

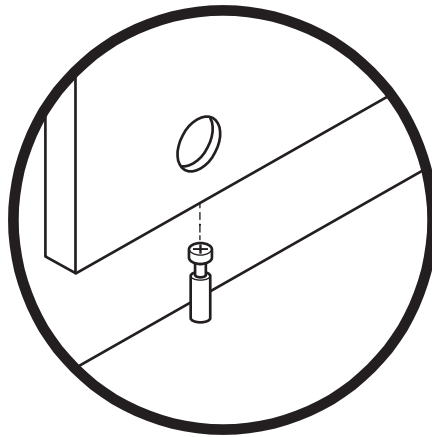


 Align hole in panel with Cam Bolt and attach.

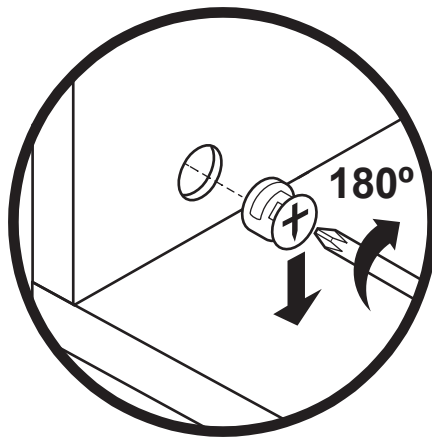


Insert Cam Lock into hole (arrow faces Bolt). Turn clockwise until you  
feel Cam Lock securely fasten to Cam Bolt. Fully tighten Cam Lock.

 STEP 1

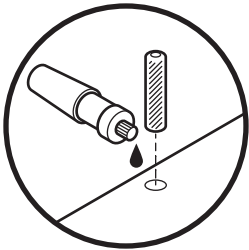


1		
2		x2
4		x2

 APPLY ONE DROP OF GLUE  
IN ALL DOWEL HOLES.


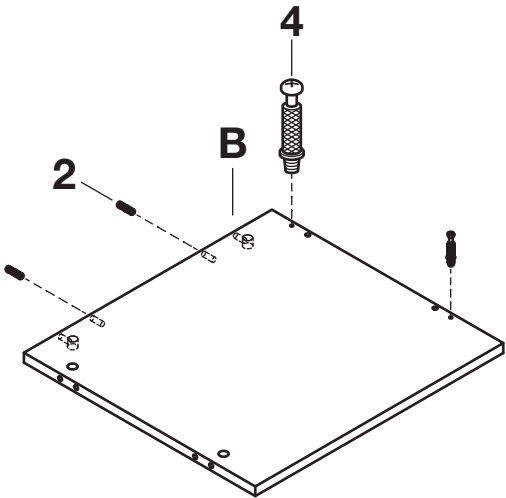


 STEP 2

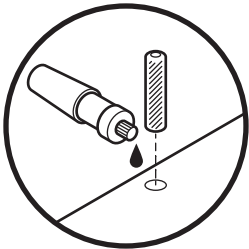


1		
2		x6
4		x22

  APPLY ONE DROP OF GLUE  
IN ALL DOWEL HOLES.

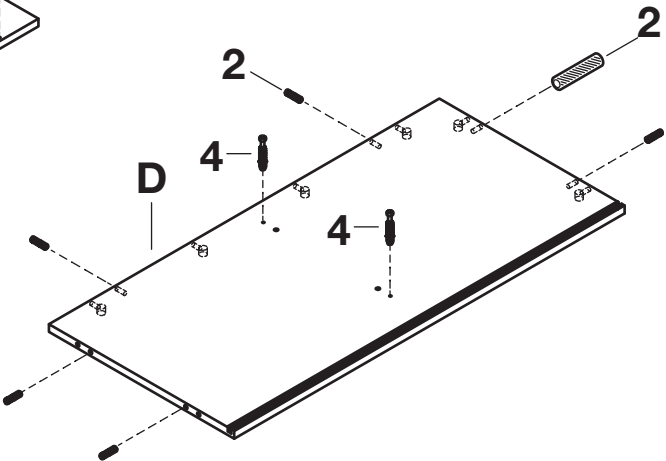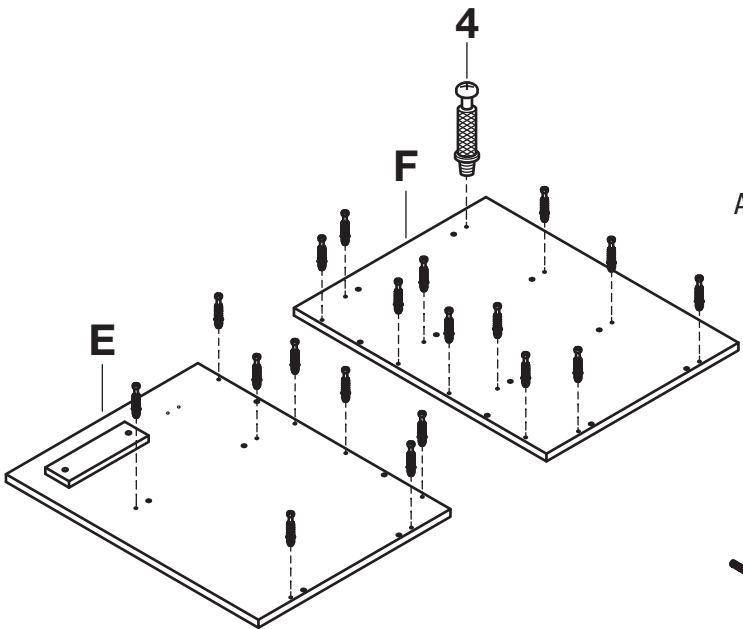


 STEP 3

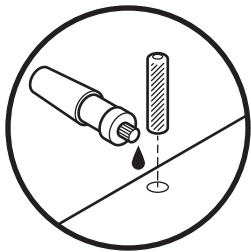


1		
2		x6
4		x4

 APPLY ONE DROP OF GLUE  
IN ALL DOWEL HOLES.

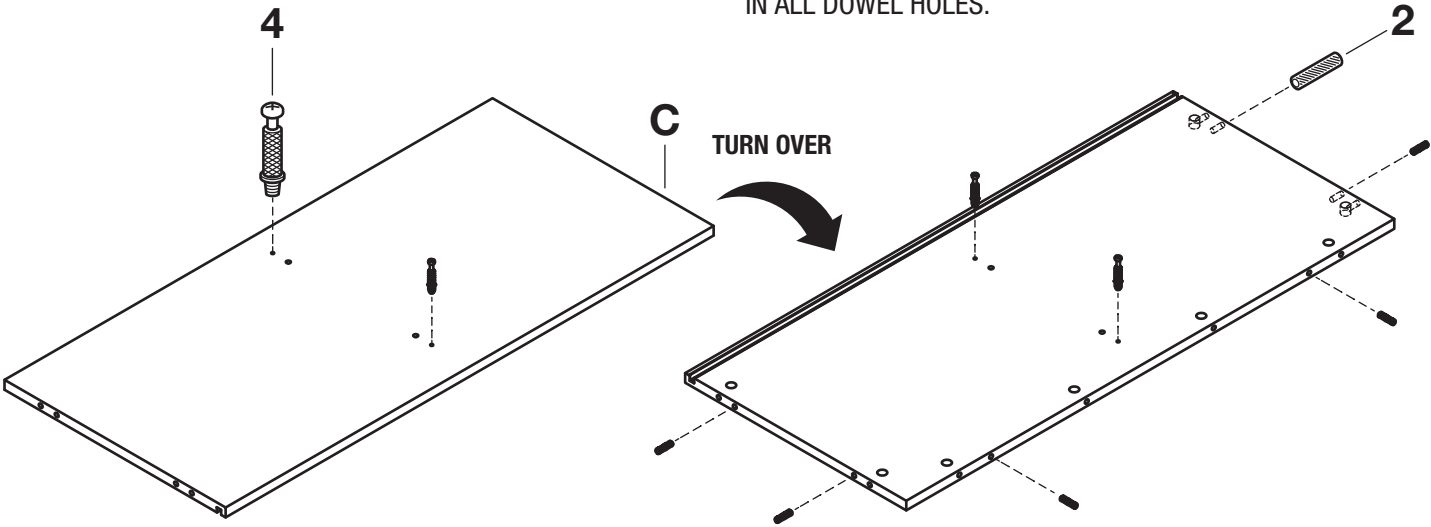


 STEP 4

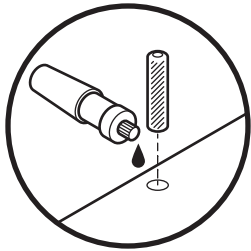


1		
2		x9
4		x2

 APPLY ONE DROP OF GLUE  
IN ALL DOWEL HOLES.

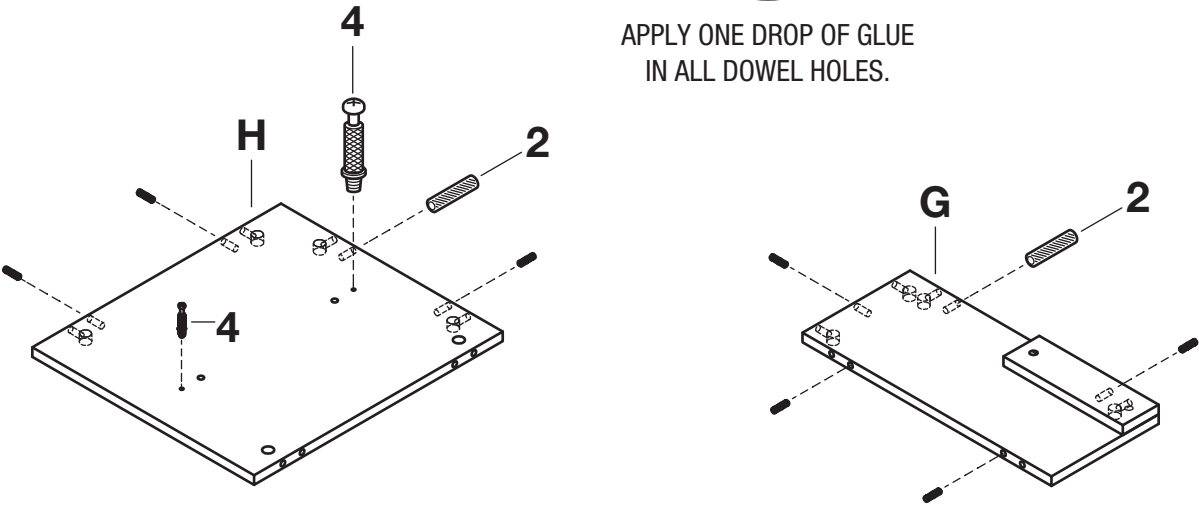


 STEP 5

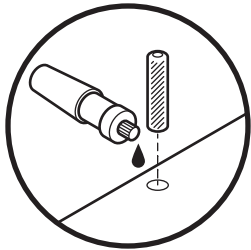


1		
2		x8
4		x14

 APPLY ONE DROP OF GLUE  
IN ALL DOWEL HOLES.

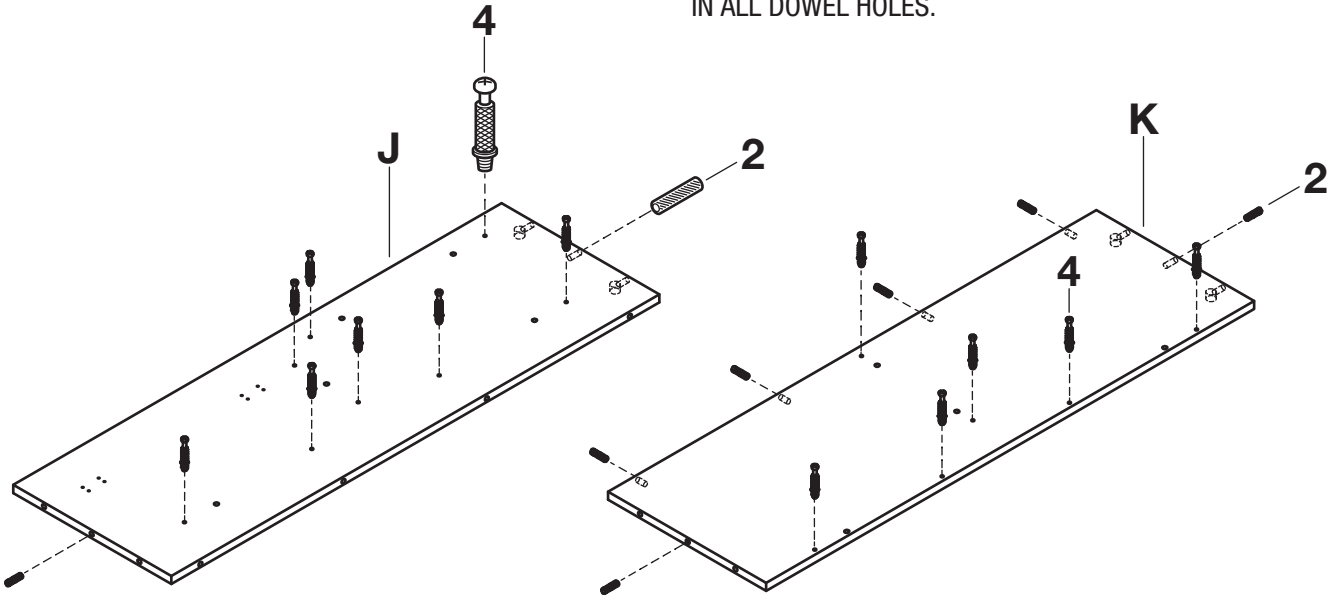

STEP 6


7		x4
8		x2

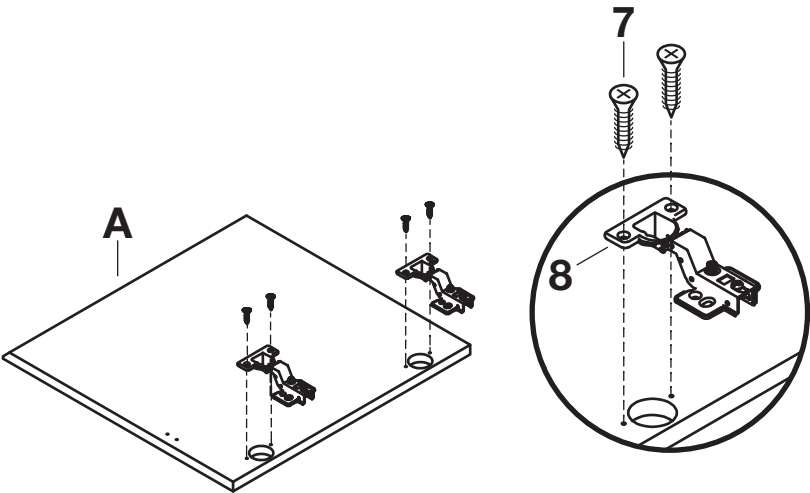 





STEP 7

3		x4
---	---	----

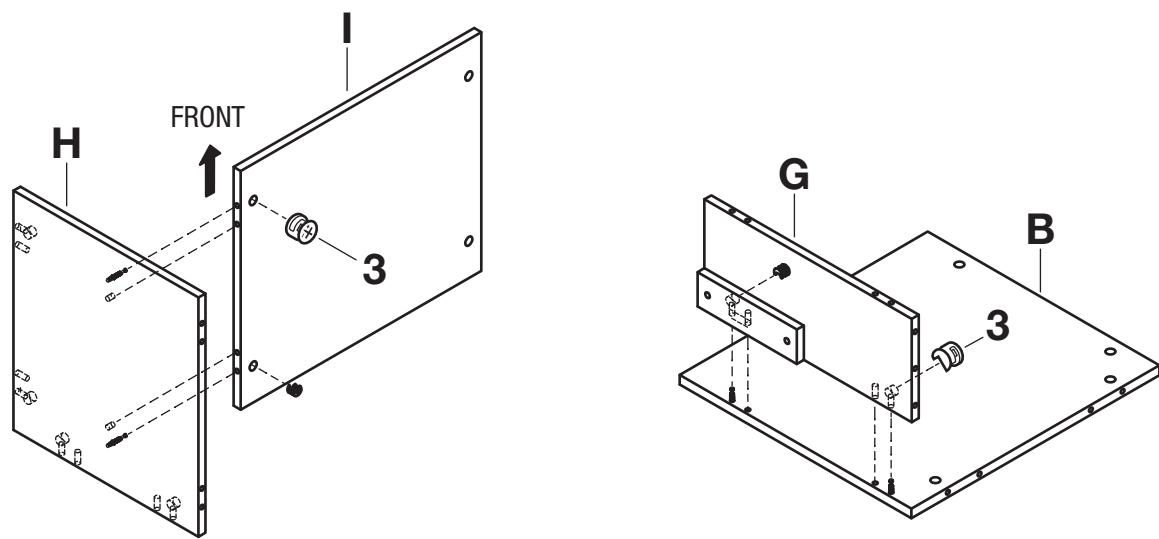 

 
STEP 8

5		x8
---	---	----

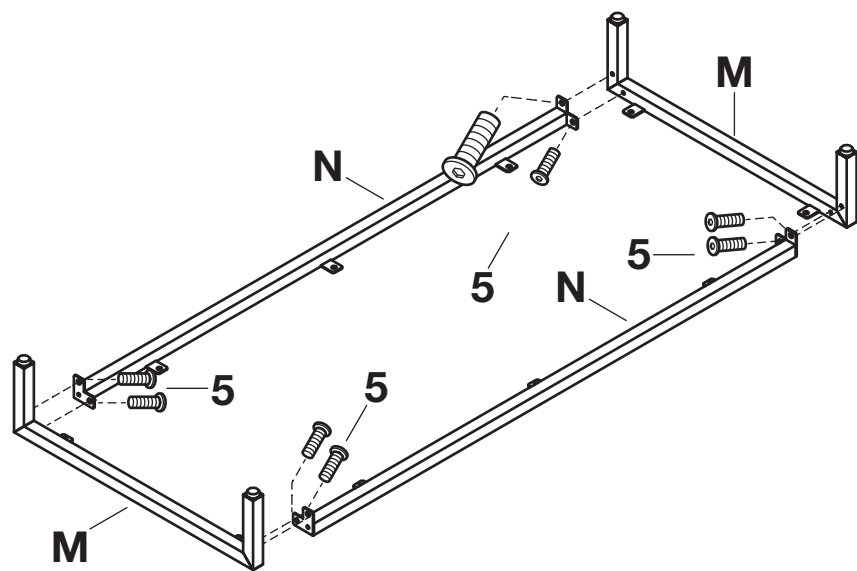 


FULLY TIGHTEN ALL BOLTS.

## STEP 9

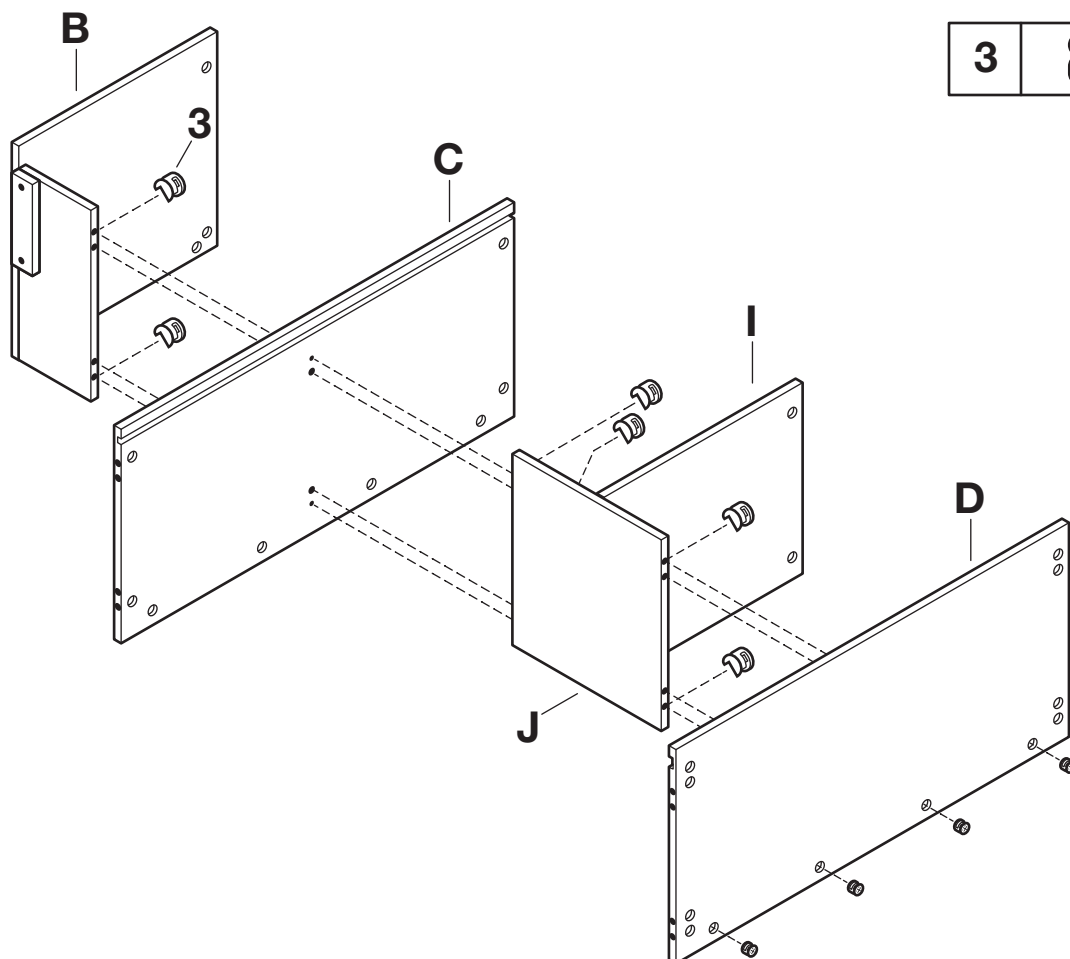 


## STEP 10

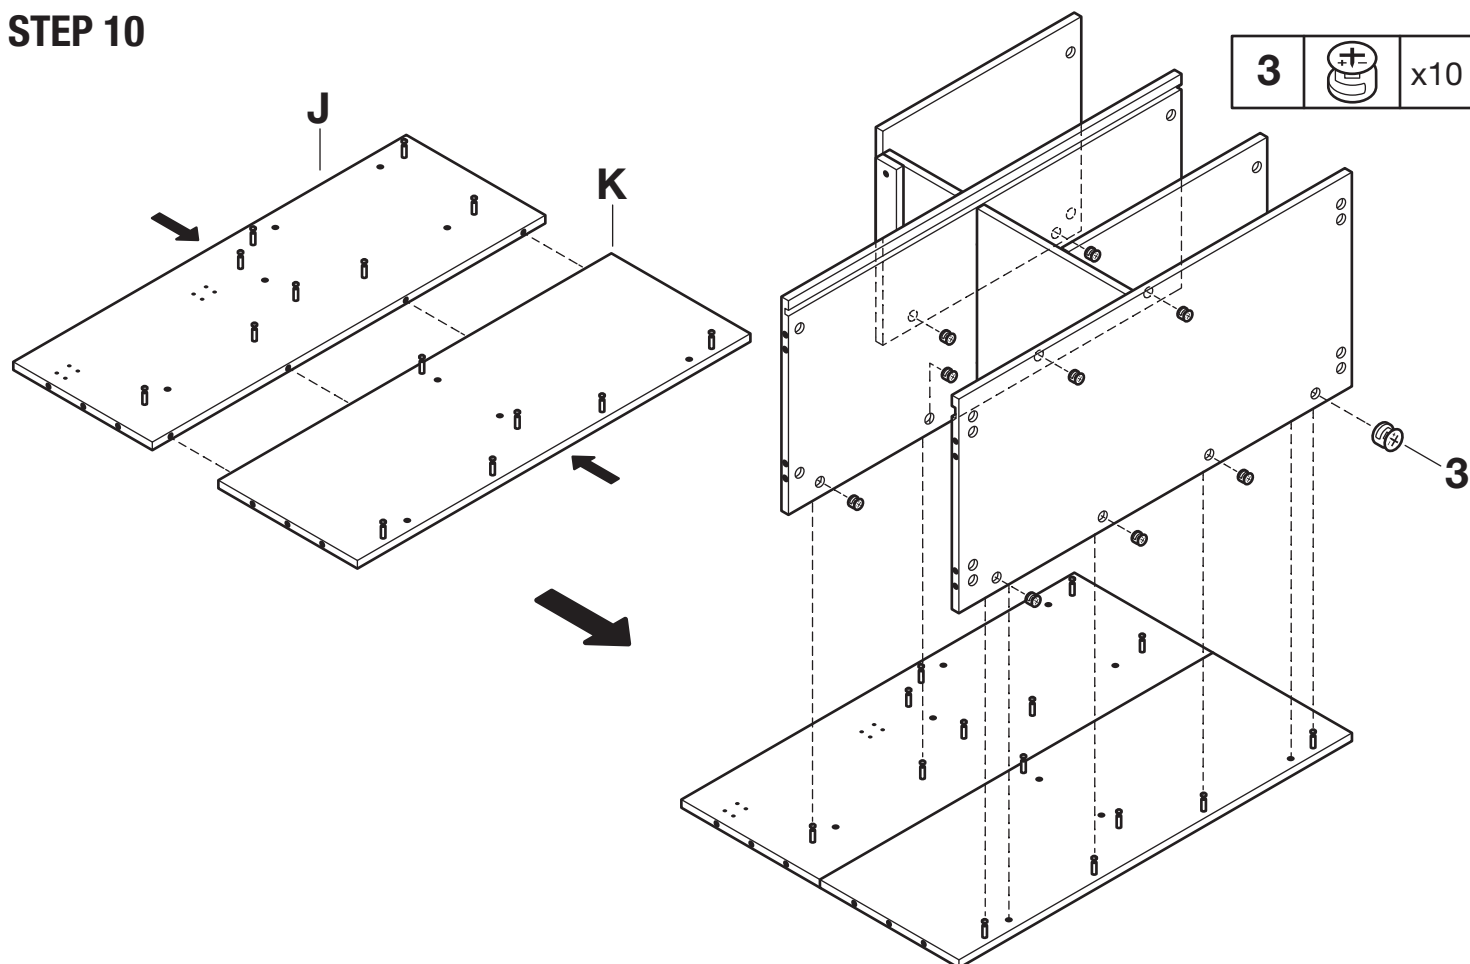 


STEP 11

3		x4
---	---	----

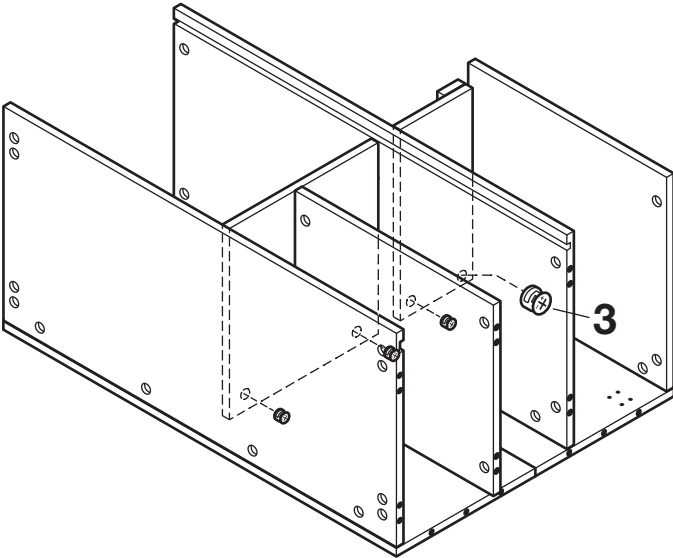 


STEP 12

3		x12
---	---	-----

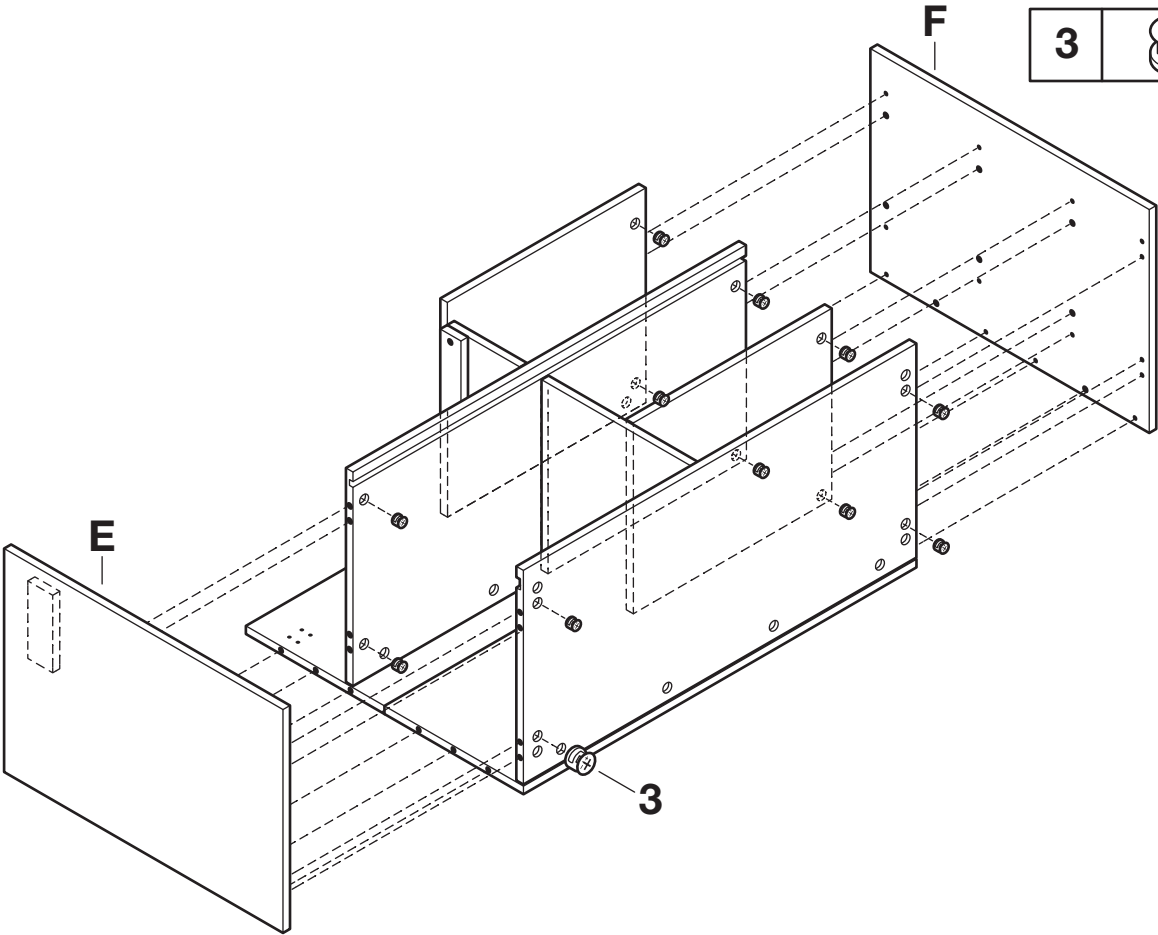 



STEP 13

3		x8
---	---	----

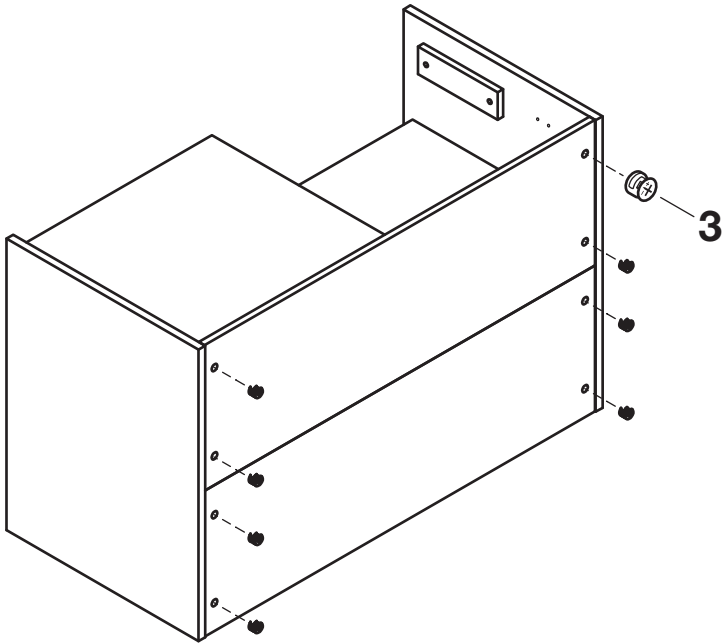 

 
STEP 14


5		x10
---	---	-----

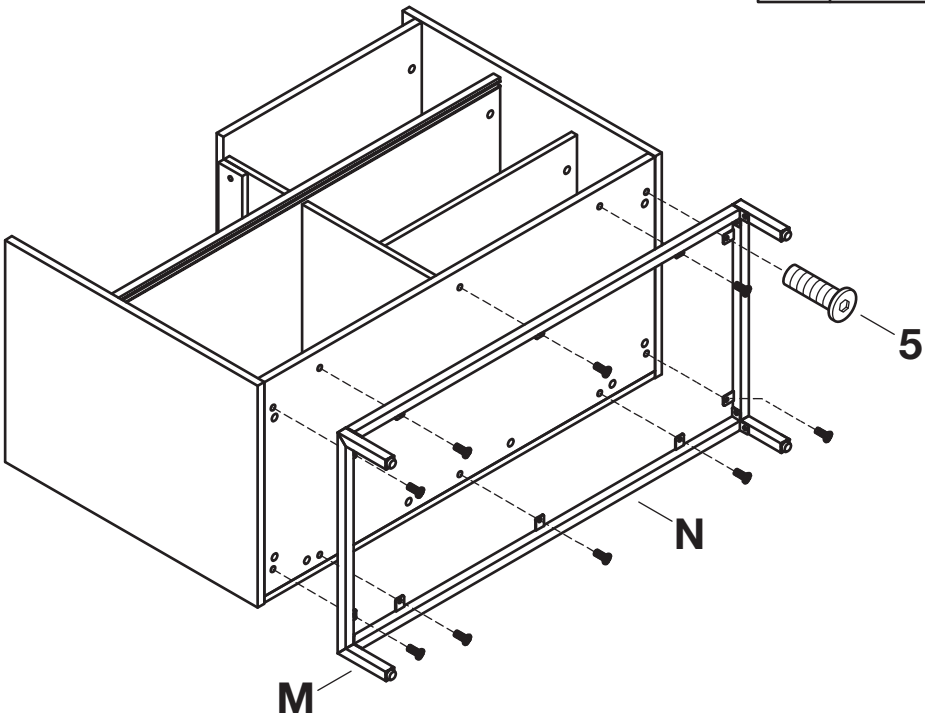 


FULLY TIGHTEN ALL BOLTS.

  
STEP 15



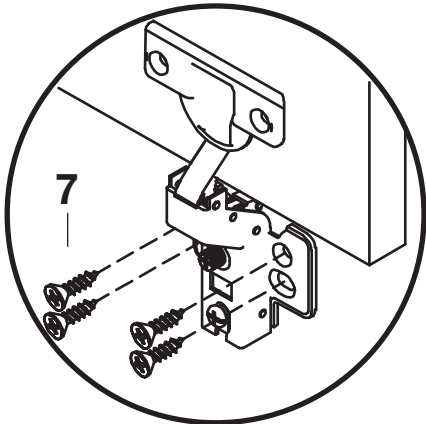




7		x8
---	---	----

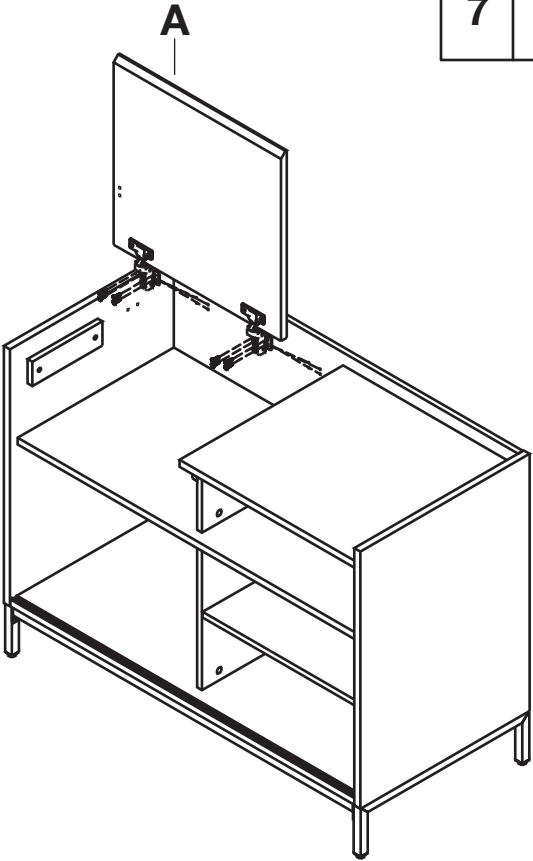 

    
STEP 16

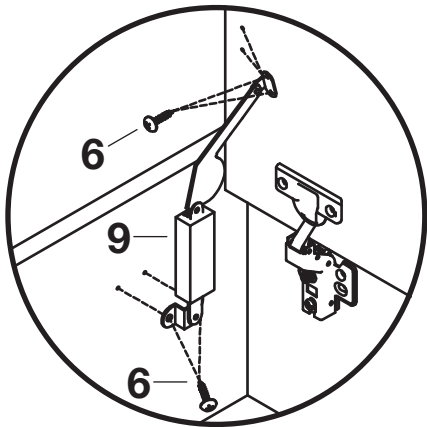

6		x4
9		x1
11		x3

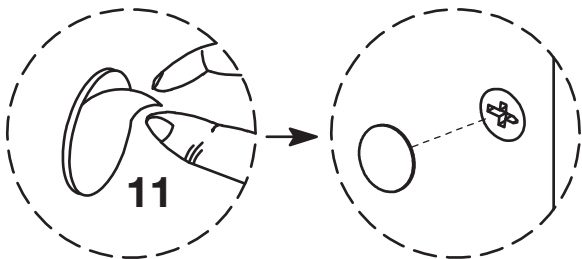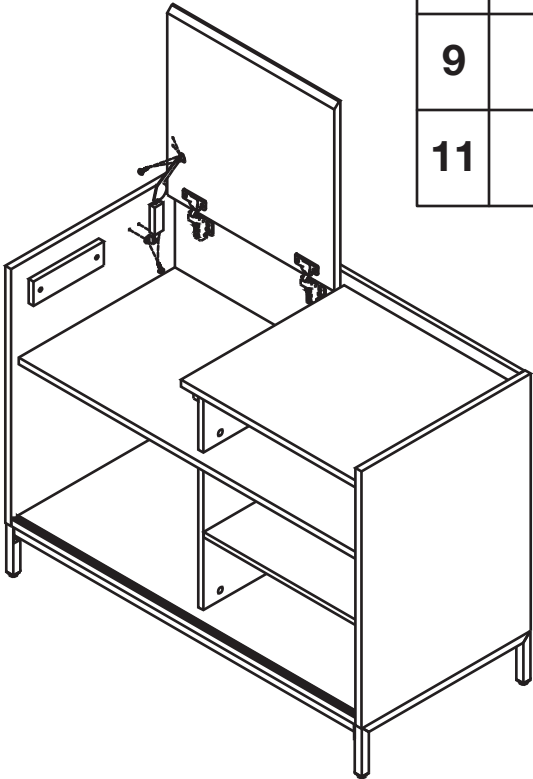  

## STEP 17

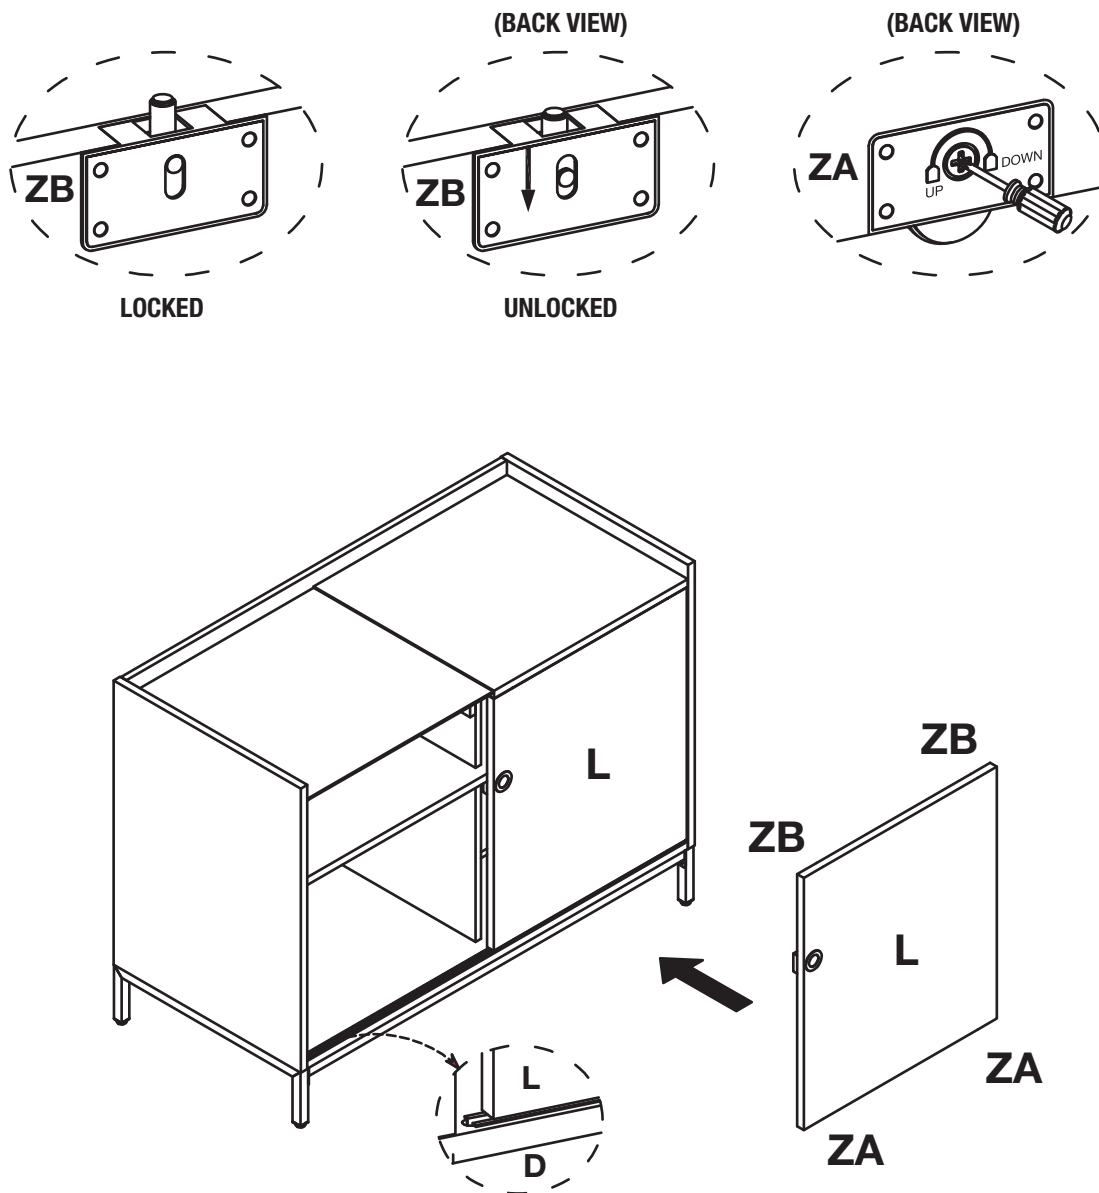 

1. Check to make sure that the latch slider switch on pre-assembled Latches (ZB) are located in the **DOWN** and **UNLOCKED** position.
2. Place the pre-assembled Rollers (ZA), which are attached to the **BOTTOM** of Door (L) assembly, down in the groove on Bottom Panel (D).
3. Align the Latches (ZB), which are attached to the **TOP** of Door (L) assembly, and then push the latch slider switch up until it reaches the upmost **LOCKED** position.
4. Check the travel of Door (L) assembly, making sure it slides freely.
5. If the Door (L) assembly doesn't slide smoothly, please adjust the height of the Rollers (ZA) by loosening the screw in the center of Rollers (ZA) and turn Rollers (ZA) clockwise slightly and tighten screws again.

## STEP 18

### ANTI-TIP KIT INSTRUCTIONS

Place unit in desired location. Carefully drill a 1/4" pilot hole into wall, and gently tap Wall Anchor into pilot hole. Secure Bracket to wall using Long Screw. Fully tighten Long screw. Secure second Bracket to unit using Short Screw. Fully tighten Short Screw. Loop Safety Strap through both Brackets and fasten.

