## **Entertainment Center**

Assembly Instructions - N724P176487

Please keep for future reference



Important - Please read these instructions fully before starting assembly



#### Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
   Take to your local authority waste disposal centre.

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

# WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

### **Using Camlocks**


#### Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.



#### Step 2


Push the male camlock into the entry hole.

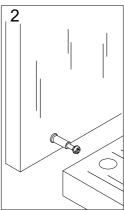

#### Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

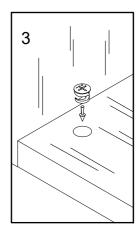


#### Step 4


Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.


The joint is now secure.

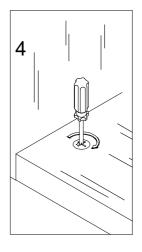

### **COMPONENTS - KEY DIAGRAM**

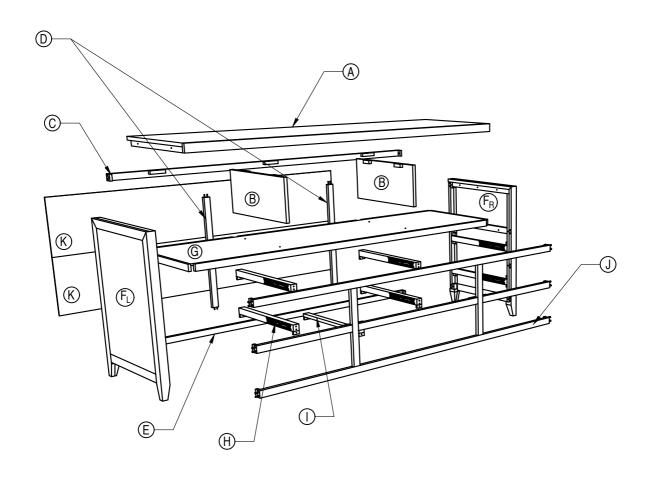

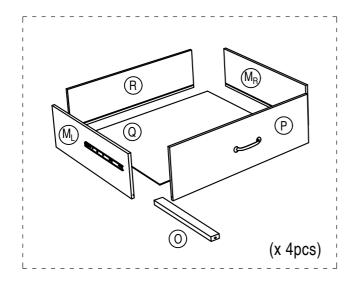


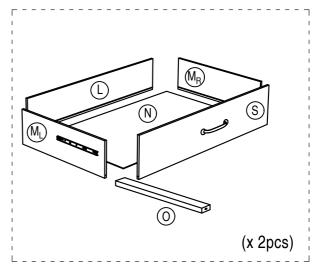



### Part List - N724P176487 (C) (D) (A) **B** Quantity: 1 pc Quantity: 2 pcs Quantity: 1 pc Quantity: 2 pcs $\overline{\mathbb{F}_{L}}$ $\overline{(F_R)}$ G E Quantity: 1 pc Quantity: 1 pc Quantity: Quantity: 1 pc 1 pc $\bigoplus$ J K Quantity: 4 pcs Quantity: 1 pc Quantity: 1 pc Quantity: 2 pcs


### Part List - N724P176487 $\overline{M_L}$ $(M_R)$ (N)Quantity: Quantity: 6 pcs Quantity: Quantity: 2 pcs 6 pcs 2 pcs 0 P 0 R Quantity: Quantity: Quantity: Quantity: 6 pcs 4 pcs 4 pcs 4 pcs (§) Quantity: 2 pcs 6


#### Hardware List - N724P176487 2 3 4 1 8x30mm Allen key 6x30mm 6x16mm Quantity: Quantity: Quantity: Quantity: 1 pc 35 pcs 35 pcs 24 pcs (5a) (5b) 6 7 Cam bolt 4x20mm 4x30mm Cam lock Quantity: Quantity: Quantity: Quantity: 36 pcs 36 pcs 12 pcs 38 pcs 9 10 8 Screwdrivers 3x15mm Handle Quantity: Quantity: Quantity: 6 pcs 1 pc 36 pcs

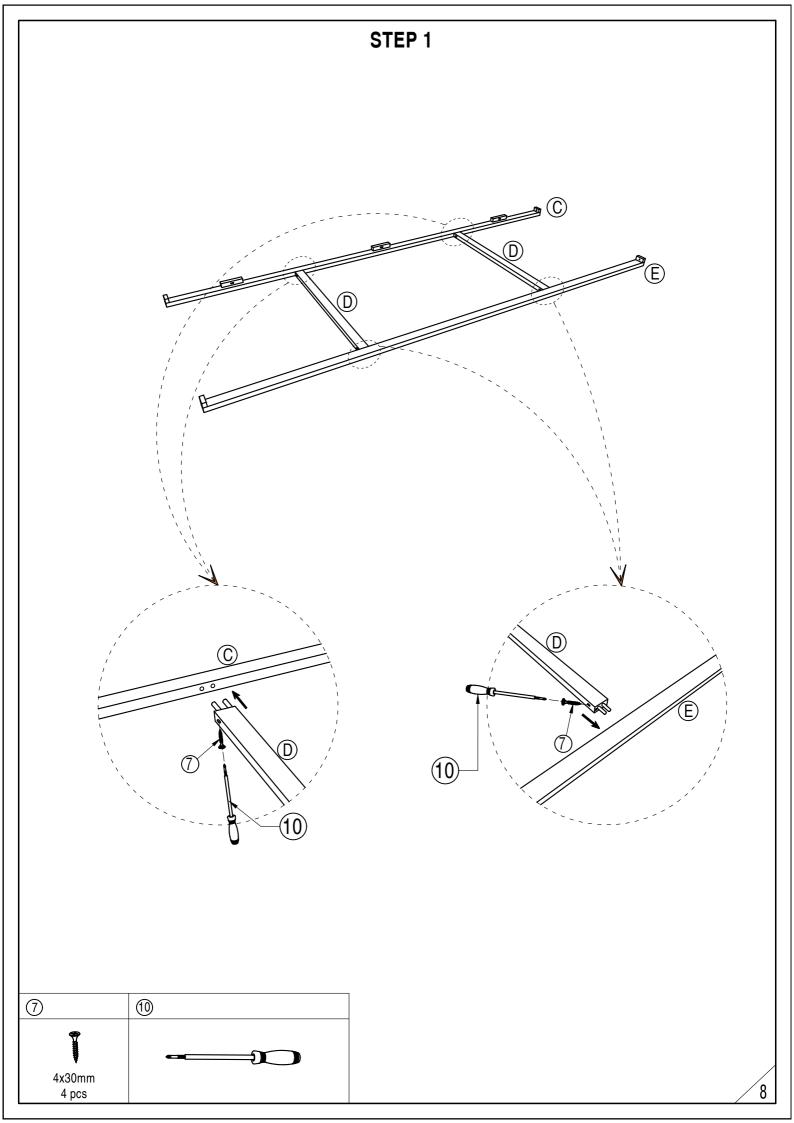


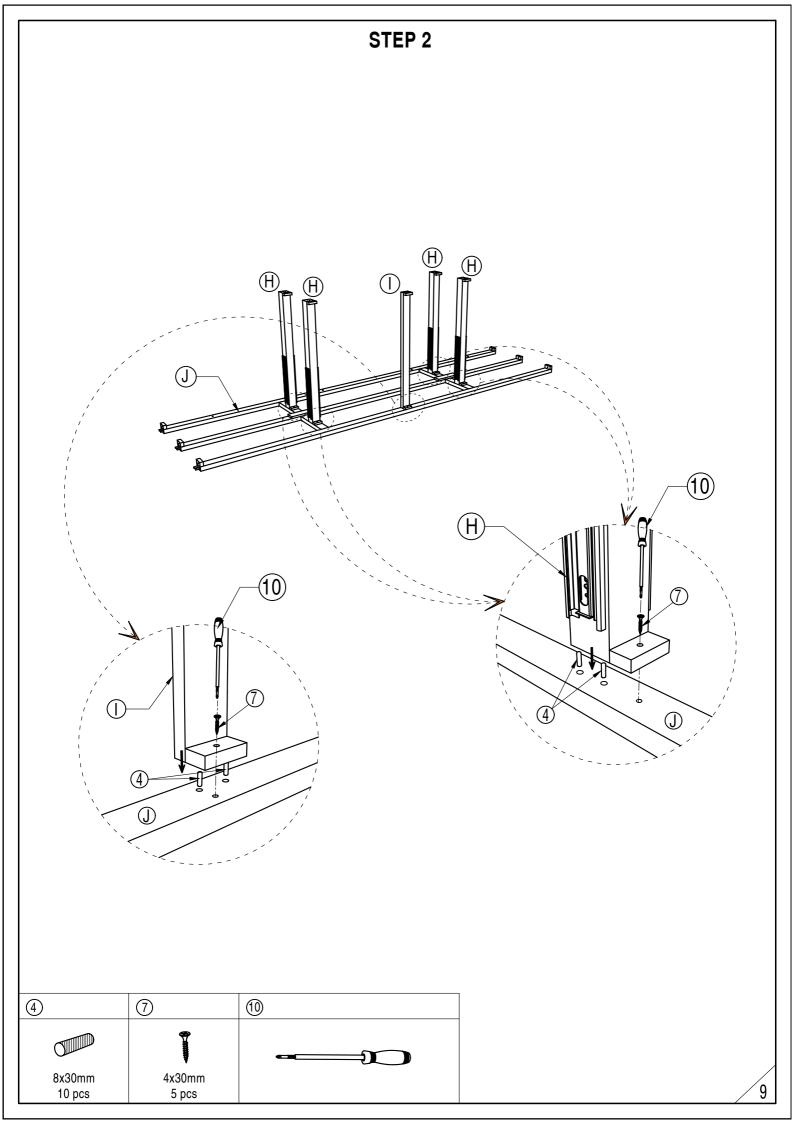


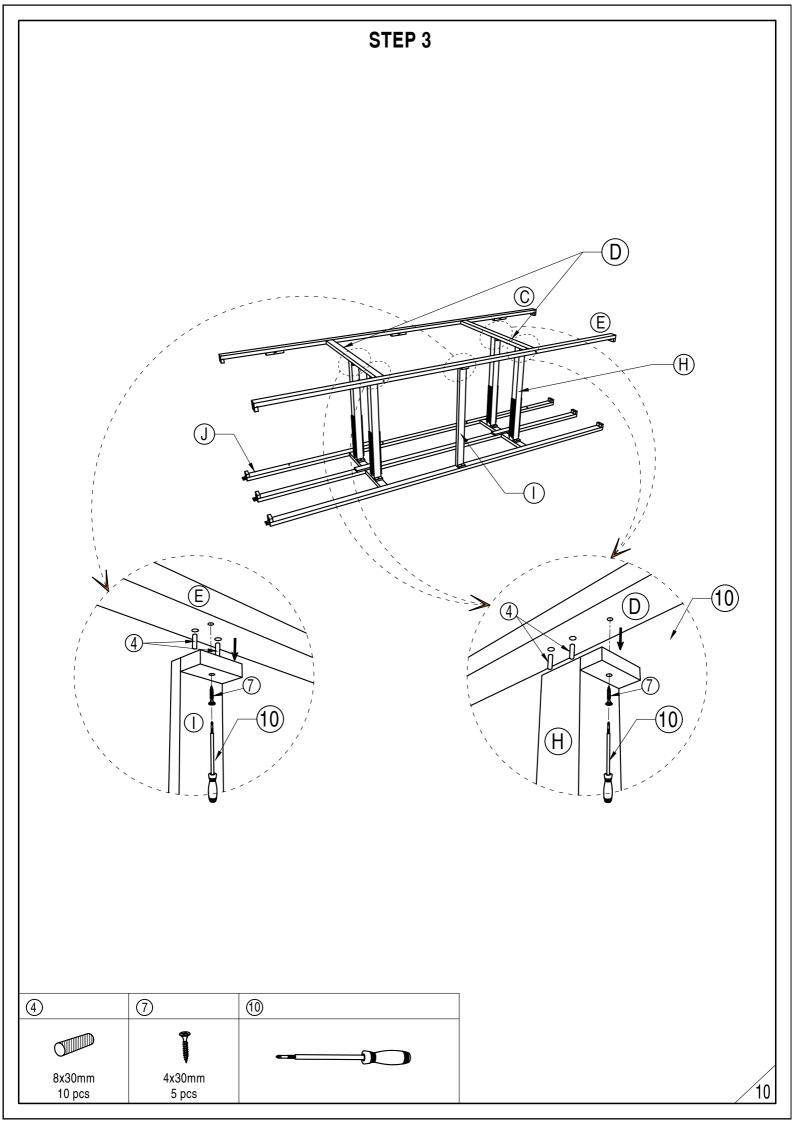


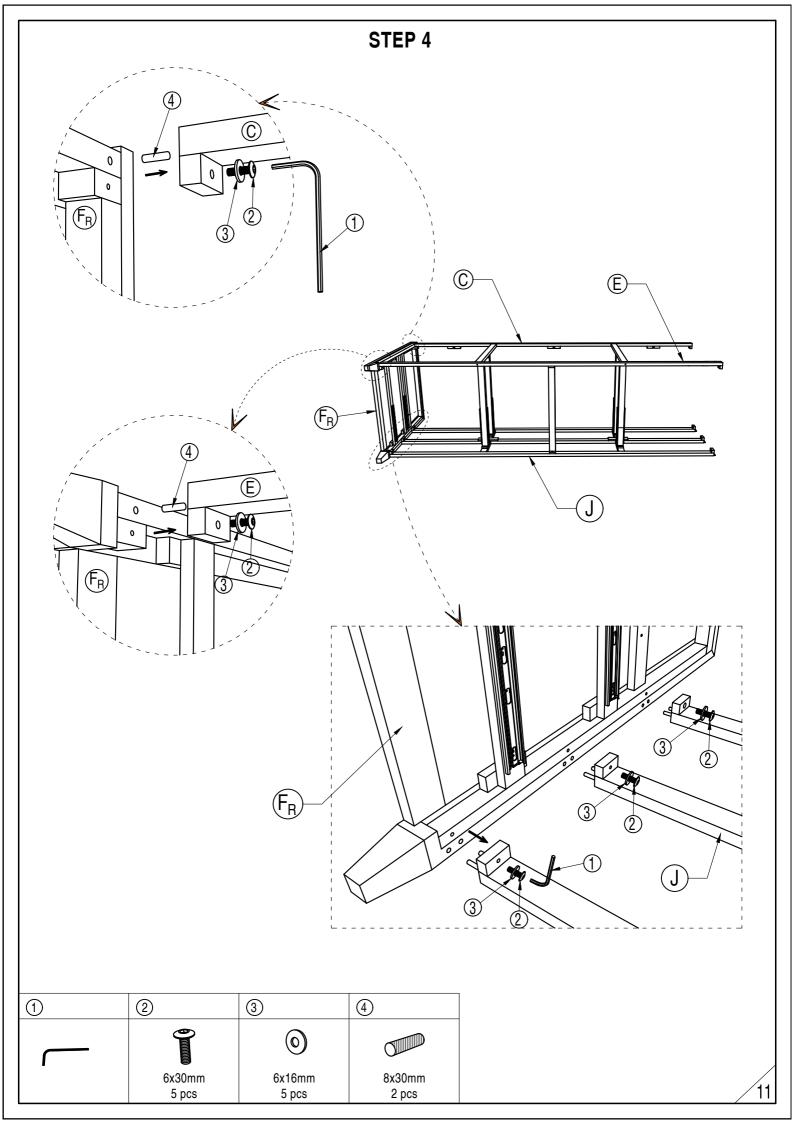

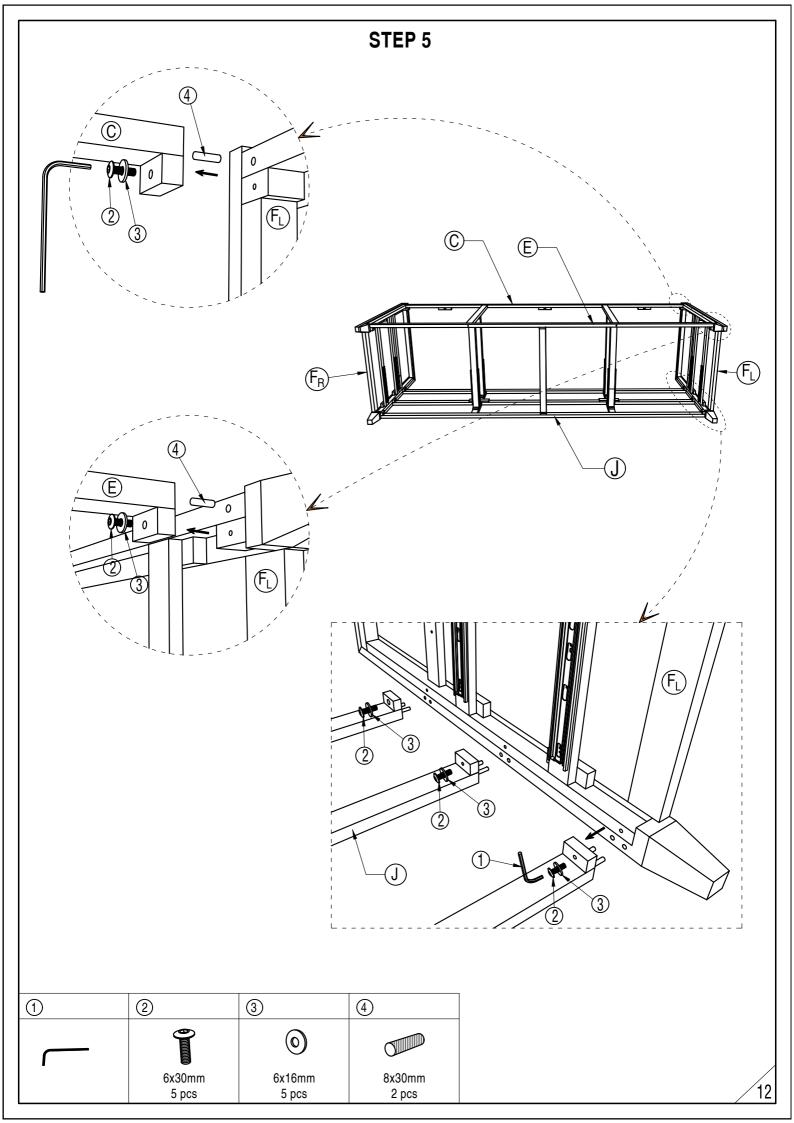


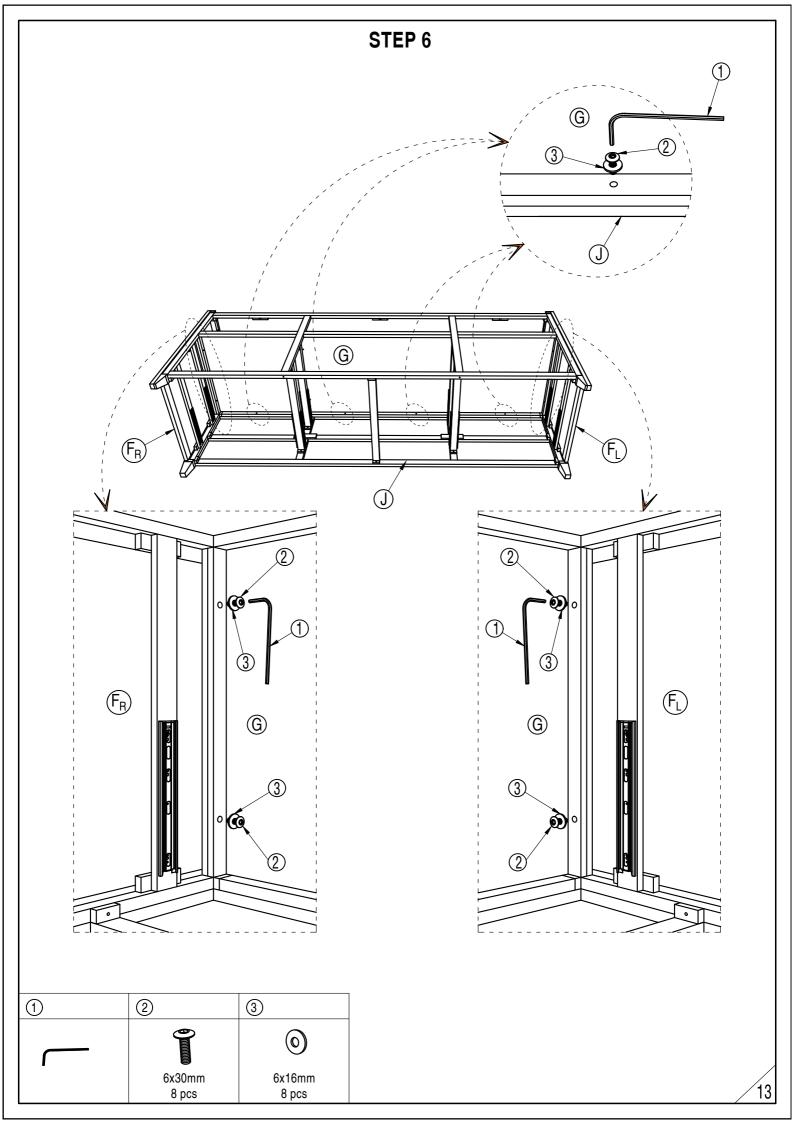

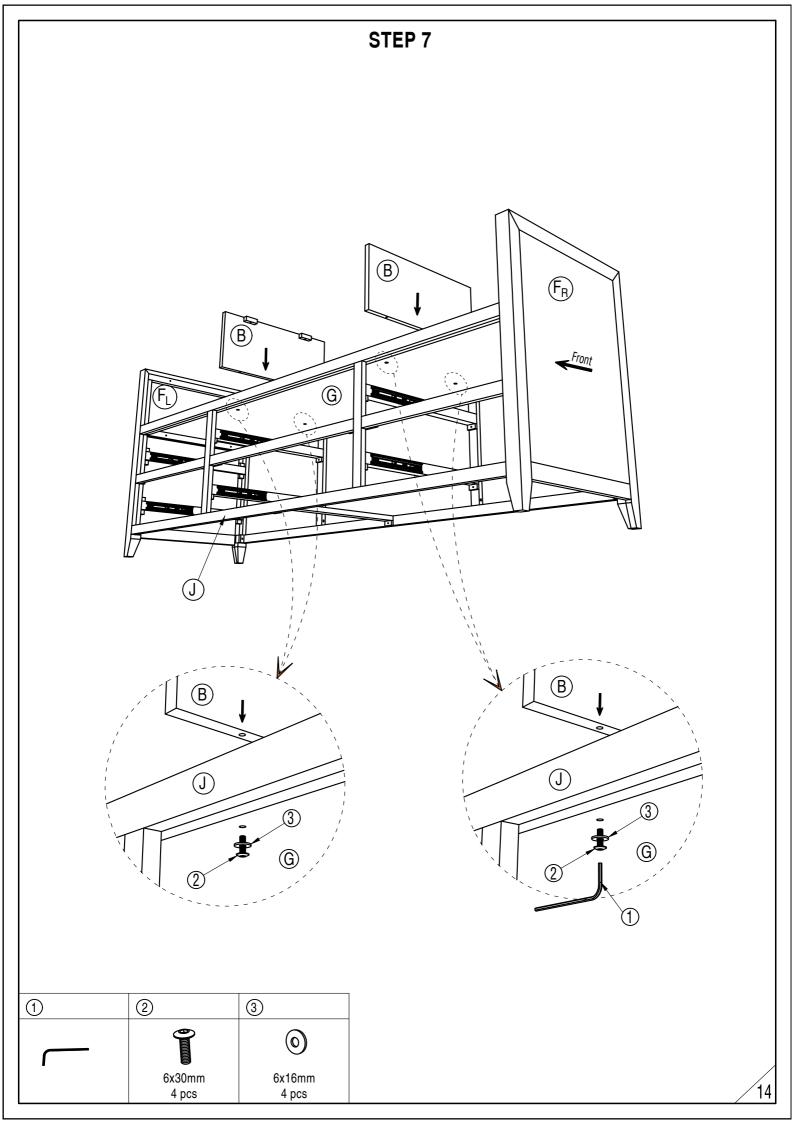

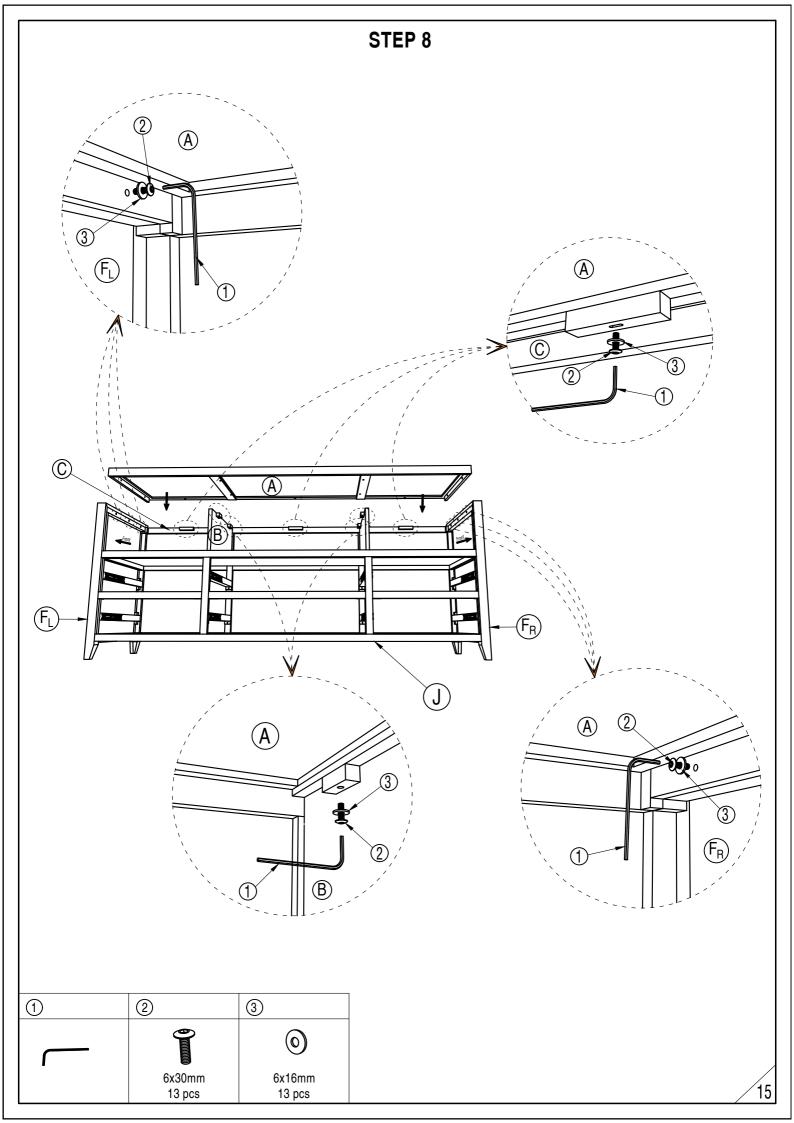


# STEP 9 STEP 11 5b (x4 pcs) **Q** (x4 pcs) (x4 pcs) **STEP 10 STEP 12 Q** $(M_R)$ P $\widehat{M_L}$ 5b 5b (x4 pcs) (x4 pcs)

 








 

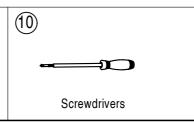

## STEP 13 **STEP 15** 5b (x2 pcs) $\bigcirc$ $M_{l}$ (x2 pcs) (x2 pcs) **STEP 14 STEP 16** $\bigcirc$ $(M_R)$ S $\widehat{\mathsf{M}_\mathsf{L}}$ 5b $(M_R)$ 0 (x2 pcs) (x2 pcs)

