

Product Name:	3-Piece Snow-Flocked Sweeping Branches Artificial Tree Set with Battery Operated Lights
Item#	WHAP2046

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Before You Start


- Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.
 Note: This tree may utilize light sets that are marked for indoor and outdoor use, but the artificial tree is for indoor display only.
- Retain the instructions for future use and save the carton for storing your tree.

Assembly and Instruction Procedure (no tools required for assembly):

Remove all packaging (i.e., cardboard or plastic) before beginning. If your artificial tree has snow-flocking, we suggest unpacking the tree on a large cloth. Some of the flocking may come off during unpacking and fluffing of branches.

Make sure to place the flat metal bases on a level, hard, flat surface against the wall before assembling the tree. This item comes with one 3ft tree, one 4ft tree and one 5ft tree.

- 3ft tree and 4ft tree are the same structure with one tree section, one pole and one metal base. Insert the longer separate tree pole into the bigger metal flat; insert the larger tree body into the tree pole. And insert the shorter separate tree pole into the smaller metal flat; insert the smaller tree body into the tree pole.
- 5ft tree has two tree sections, one pole and a metal base. Insert the separate tree pole into the metal flat, insert the bottom tree section into the tree pole, and insert the tree top section into the bottom tree section.

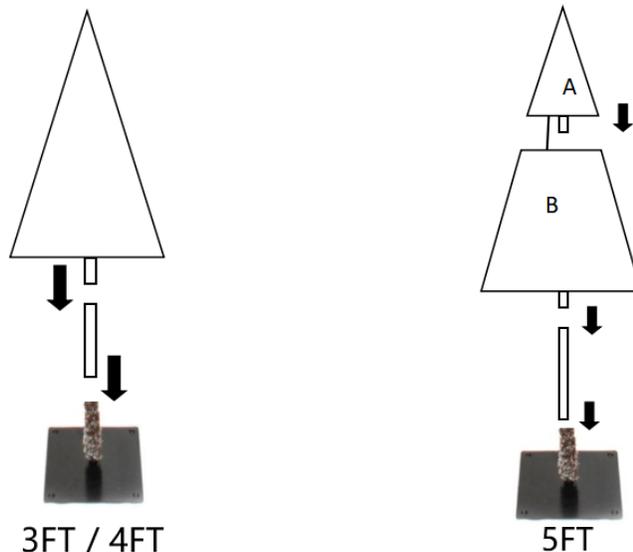

Product Name:	3-Piece Snow-Flocked Sweeping Branches Artificial Tree Set with Battery Operated Lights
Item#	WHAP2046

3. Shape the Tree: Begin to shape the branches from the bottom of the tree to the top. Start with the tree tips farthest away from the center pole. After shaping the tree, step back to look for any gaps. Reshape branches as needed. You can upswep the branch tips for a uniform look. Once you have the tree the way you want it, you can start decorating!



Fig.1

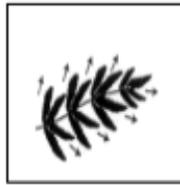


Fig.2



Fig.3

4. Open the lid of the battery box by releasing the locks. Insert 4 x AA batteries into the compartment for both 3ft and 4ft trees, and insert 3 x C battery for the 5ft tree, making sure that the batteries are in the correct orientation. Close the lid by the locks.

Note: Batteries are not included.


5. Press the button on the battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer.

The built-in timer mode causes the lights to turn off and on in a cycle: on for 6 hours then off for 18hours.

Tip: initially turn on the lights at a specific time of your choice, and then the lights will turn on every day at approximately the same time.

6. Replace batteries when the lights become dim. Remove batteries from unit when it is not in use.

* Use 1.5V AA or C batteries or equivalent.

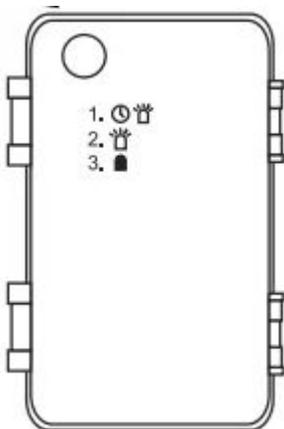

Product Name:	3-Piece Snow-Flocked Sweeping Branches Artificial Tree Set with Battery Operated Lights
Item#	WHAP2046



Warnings:

1. Risk of Fire and Electric Shock – please follow instructions and warnings on string lights if adding lights to trees.
2. Do not place near fireplaces, candles, outdoor heaters, or other similar sources of heat. This item is not flame retardant.
3. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the tree may fall or blow into.
4. Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.
5. Make sure final assembly stable enough to hold the tree upright.
6. Do not use candles on tree. Use only with the pre-installed string lights included.
7. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

Troubleshooting:

1. Some bulbs are not lighting, or lights do not come on at all: Search for any loose plug connections between the tree sections. Search for loose or missing bulbs.
2. Tree is not straight: Try adjusting the screws in the tree stand to adjust the tree. It is better if the tree is in the vertical position when adjusting.
3. In cold temperatures, lithium AA batteries must be used. Otherwise, the life-span of the batteries will be greatly reduced, or the lights will not turn on at all.
4. Ensure the batteries are new and are inserted correctly into the battery box.

Note: If these actions do not resolve the issue with the tree, please do not disassemble the tree yet. Please contact customer service for assistance.

Storage:

1. Remove all decorations (this does NOT include the pre-installed string lights).
2. Press the switch on the battery box to the "OFF" position. Remove the batteries from the battery box.
3. Starting from the top, carefully unassemble the tree sections. Press the tree tips back up against the pole.
4. Place the branch sections back into the carton, putting the longest one on the bottom.
5. Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35°C (95°F).