

Product Name:	Holiday 29.5" Animated Snowing Christmas Trees and Santa Decor with LED Lights
SKU#:	WHHD2092

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

CARTON CONTENTS:

No.	Description	Quantity
A	Adaptor	1 pc
B	Umbrella-shaped base	1 set
C	Support	1 set (2 pcs)
D	Decorative gift box	1 pc
E	Christmas tree	2 pcs
F	Y-shaped light string	1 string
G	Christmas doll	1 pc
H	Snowflakes	1 bag
I	Doll top (bounce top)	1 pc
J	Silver Screws	8 pcs + 1 pc extra
k	Black Screws	1 pc+ 1 pc extra


Before You Start

1. Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.
2. Retain the instructions for future use and save the carton for storing your decoration.
3. This is NOT a toy.


<p>Special Caution</p> <ul style="list-style-type: none"> • The product is for indoor use only and is not suitable for outdoor or any location with drafts. • Keep children under age of 6 away from the product to avoid being choked by snowflake.

Product Name:	Holiday 29.5" Animated Snowing Christmas Trees and Santa Decor with LED Lights
SKU#:	WHHD2092

Assembly and Instruction Procedure (no tools required for assembly):

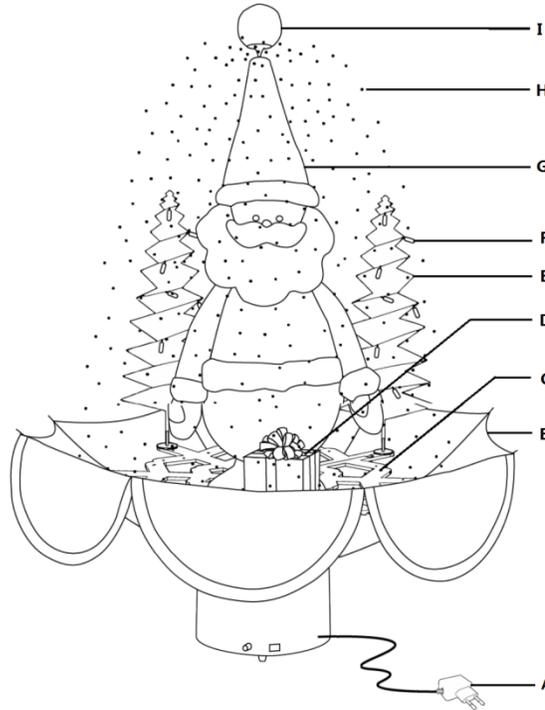


1. Install the base:

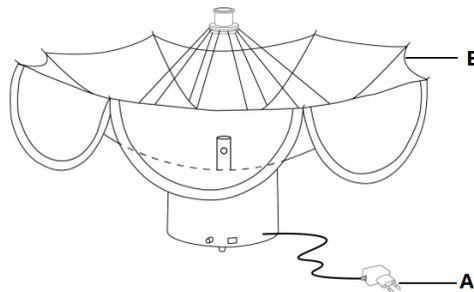

- Take out the base + umbrella-shaped snow container (B) and adaptor (A). Connect the adaptor plug with the base socket. Unfold the umbrella-shaped snow container.

Product Name:	Holiday 29.5" Animated Snowing Christmas Trees and Santa Decor with LED Lights
SKU#:	WHHD2092

2. Assemble the support:

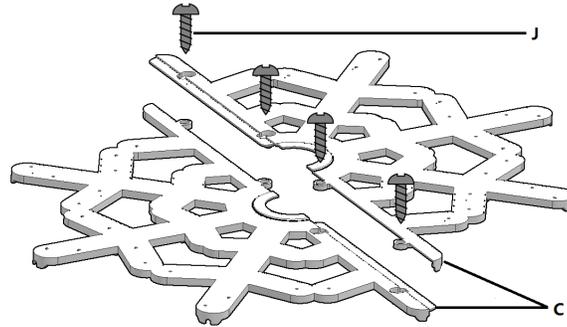


- Assemble the snowflake support using four small silver screws (J).

Product Name:	Holiday 29.5" Animated Snowing Christmas Trees and Santa Decor with LED Lights
SKU#:	WHHD2092

4. Attach the snowflake support to the umbrella base:

- Connect the plug to the jack inside the base ensuring the connection is secure.

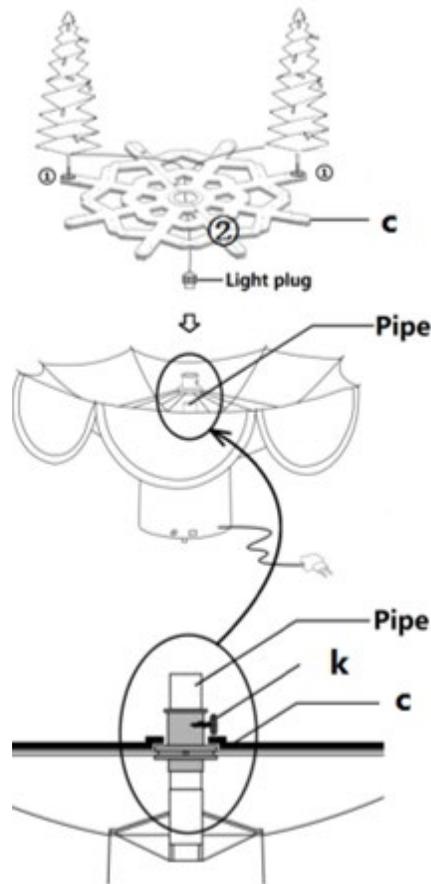

- Fix the support (C) and its accessories to the base using a black screw (K) in the order shown in the wireframe (see image above).

Note:

- Be sure to pay attention to the upper and lower order of the pipe, screw, and support.
- Pay attention to the orientation of the base and the support.
- The switch position should be at the front of the base.
- The two Christmas trees on the support should be aligned with the frame of the umbrella to prevent the support from sliding.
- The frame of the umbrella should be in a horizontal position and then secured with screws.
- The screws must be rotated tightly so as not to affect the assembly.

Product Name:	Holiday 29.5" Animated Snowing Christmas Trees and Santa Decor with LED Lights
SKU#:	WHHD2092

5. Time to check, clean, and test!


- Confirm again that all the steps above have been completed.
- Clean off all foreign matter in the snow container to avoid them blocking the flow of snowflakes.
- Set the switch to OFF and connect the adapter with the power source.
- FUNCTIONAL TEST: Put a small amount of snowflakes at the bottom of the snow container. Turn the switch to ON and observe if snowflakes spout out from the top. Check normal functioning of music and lights. For any problems, turn the switch to OFF. Carefully check that there is proper contact of wiring, and test again until all functions are working as desired.
- Before proceeding to the next step, switch it to OFF and unplug the decoration.

6. Install the Christmas Doll (G):

- Assemble the top (I) to the top of the Santa head with Hat (G). Align the hole at the bottom of the doll with the tube on the base. Insert it downward, place it firmly and adjust the direction.
- Place the gift box (D) in the position marked ② on the support. Pour the snowflakes into the umbrella-shaped snow container and evenly distribute the snow.

TIP: Save some snowflakes for later just in case.


Note: Only add snowflakes when the decoration is OFF.

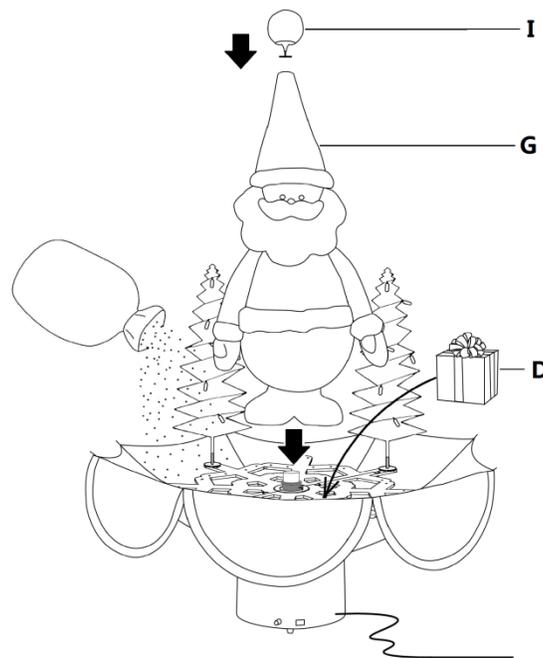

Product Name:	Holiday 29.5" Animated Snowing Christmas Trees and Santa Decor with LED Lights
SKU#:	WHHD2092

7. Assembly complete!

- Turn the switch to ON and snowflakes will start spouting from the top of the doll. The lights and music will also start.
- You can adjust the snowflake effect by turning the snowflake dial – this will help avoid snowflakes flying out of the container as well.

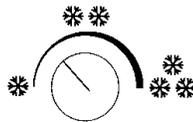

- You have the option of ON with music and ON without music.

on off on

