

Product Name:	Animated Singing 18.5" Tall Snowman Holiday Decoration, Battery Operated
SKU #:	WHHD2087

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.


PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Please make sure to unpack all the components from the packaging inside the carton to ensure that there are no missing or damaged parts. Do not attempt to assemble or use the product if any parts are missing or damaged.

Operate:

The holiday decoration requires three new AA batteries (not included).

When in the "on" position, the decoration is sound-activated.

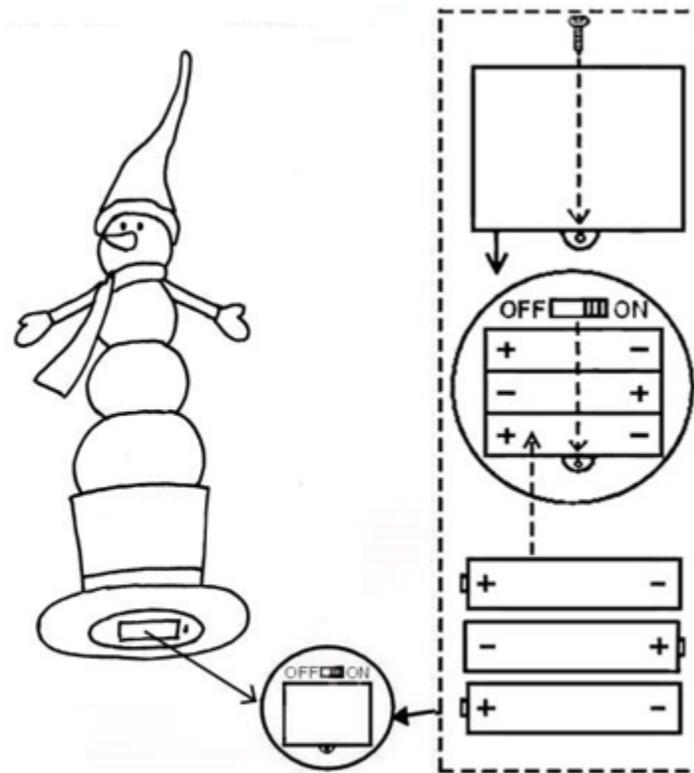

3X"AA"BATTERIES ARE REQUIRED

Note: To protect the decoration, store without batteries. Keep the box to store it in during the year, and store it in a cool and dry place.