


# DJYC2402 ASSEMBLY INTRODUCTION

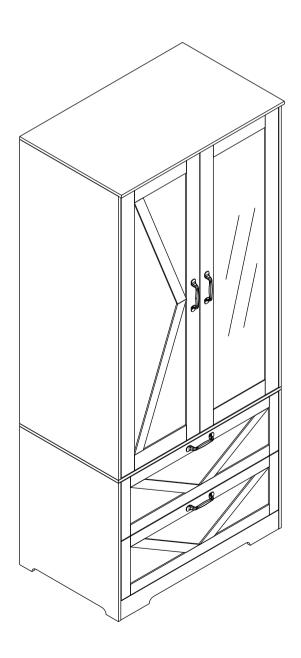

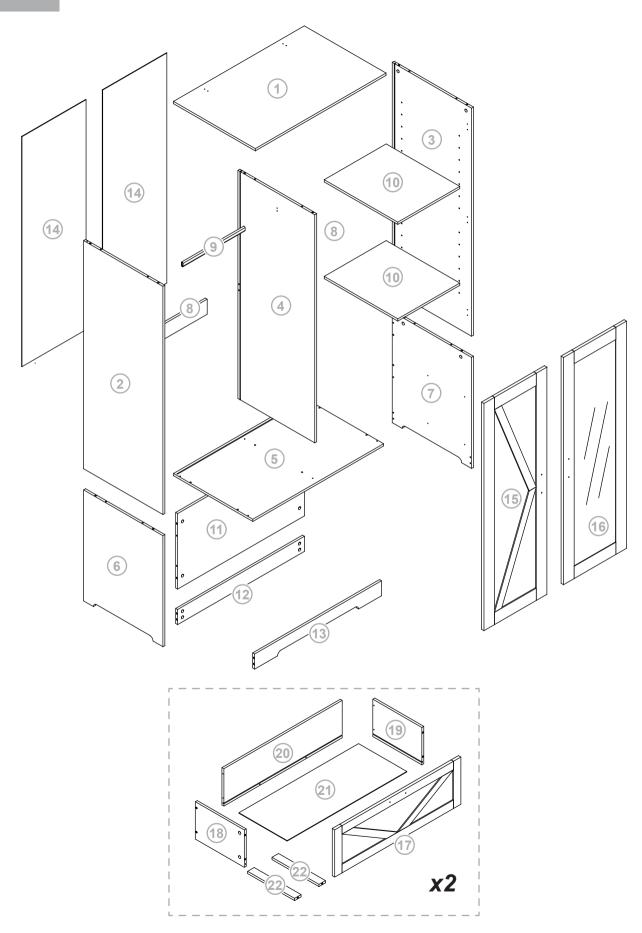

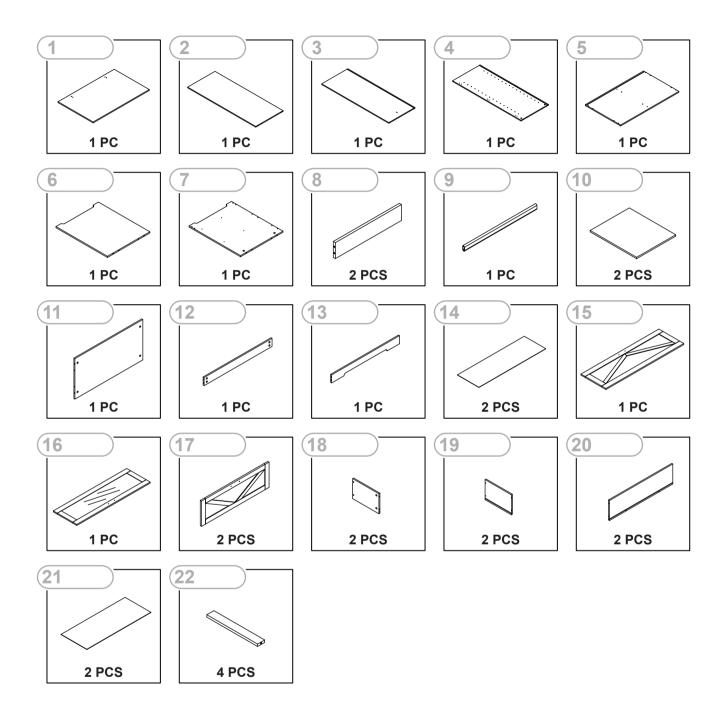


## **Fitting**




300 mm


300 mm

300 mm

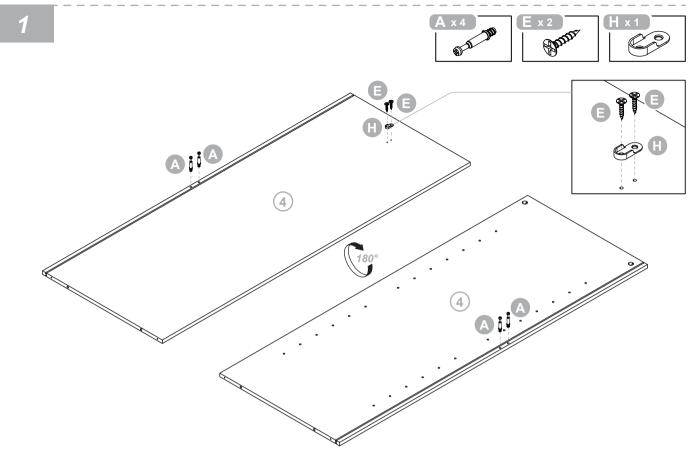


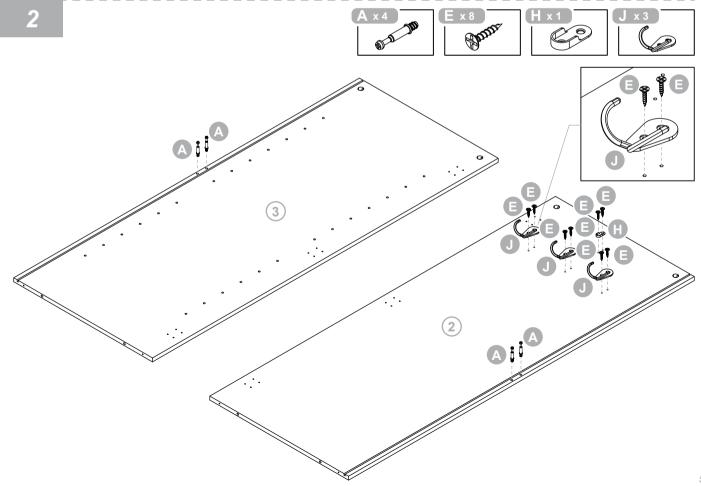




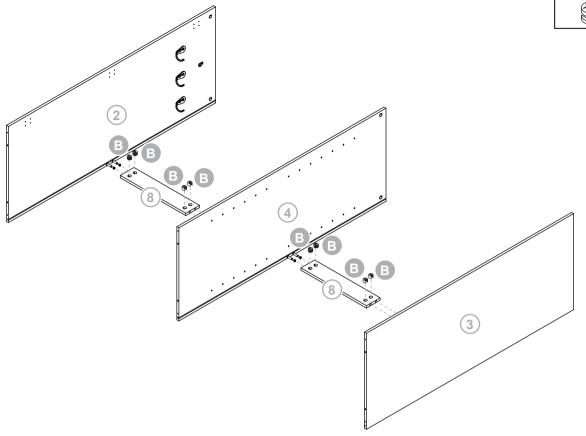




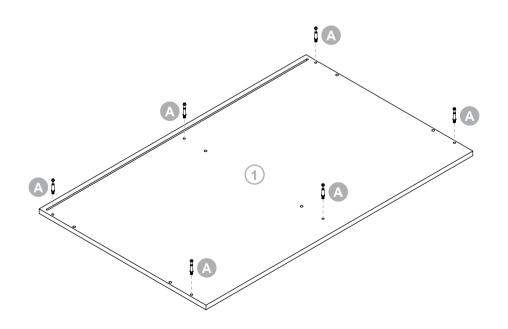





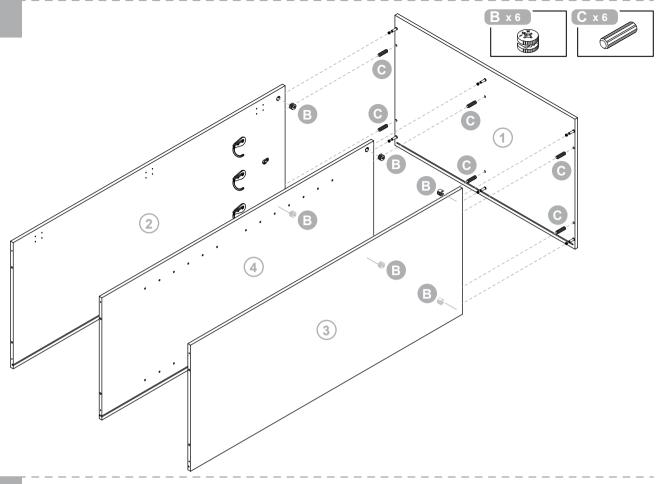


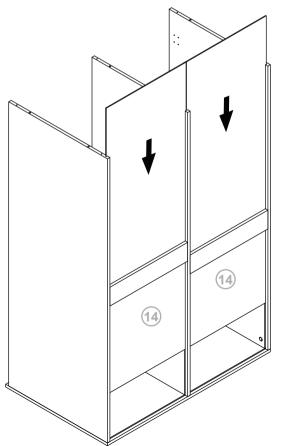




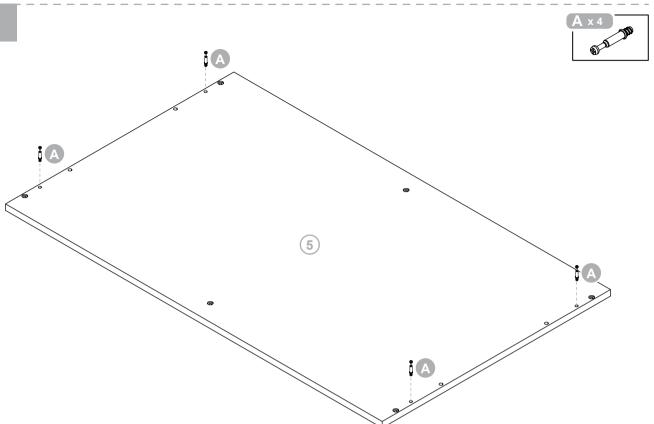


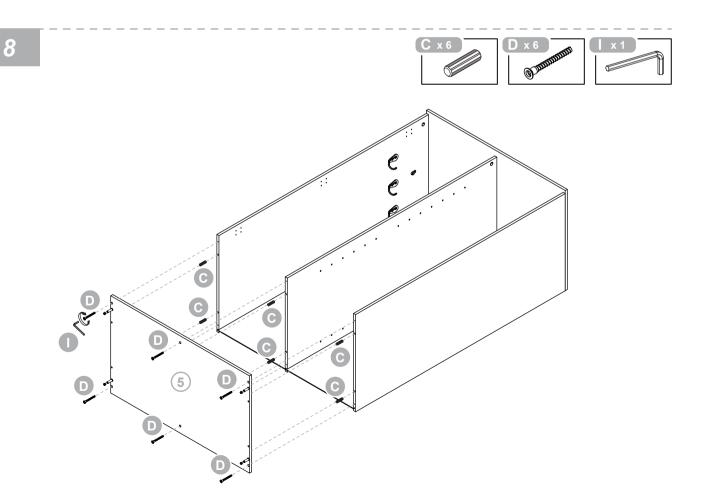

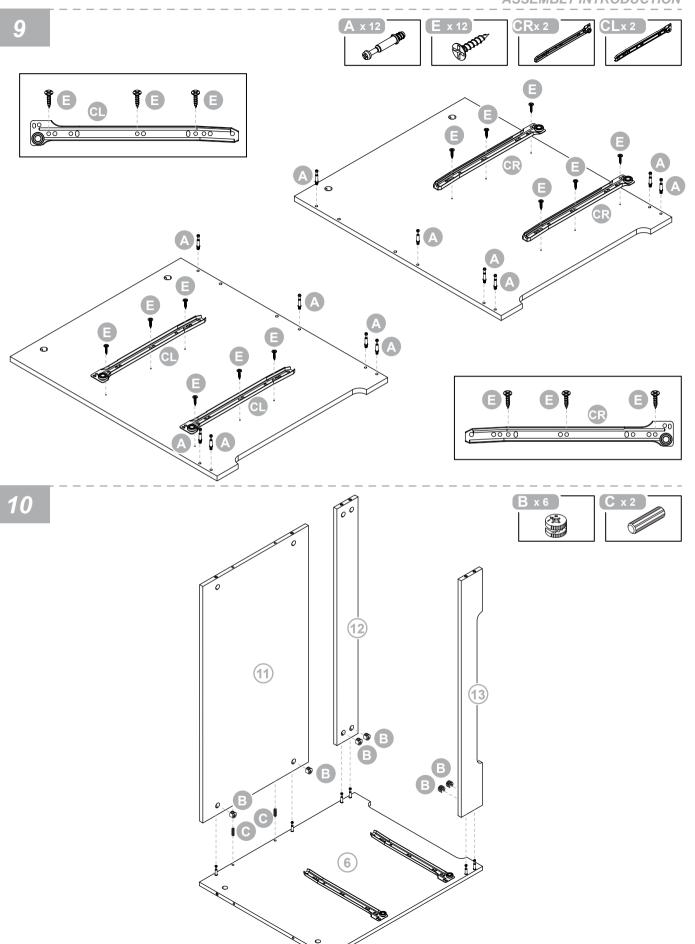





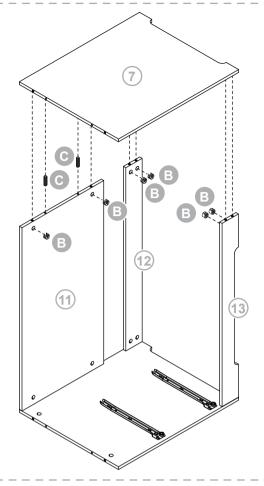

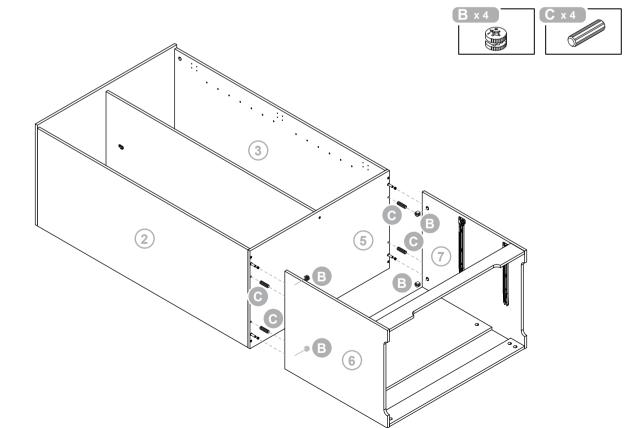





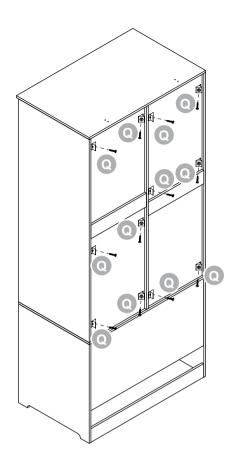


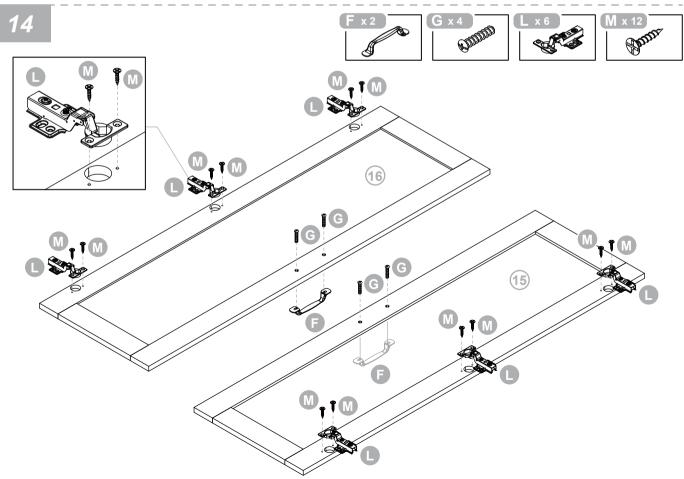




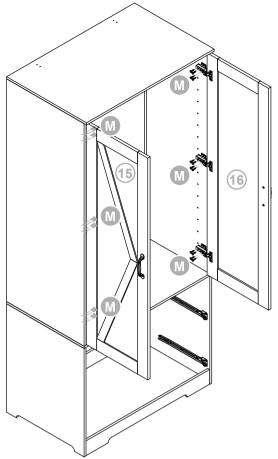


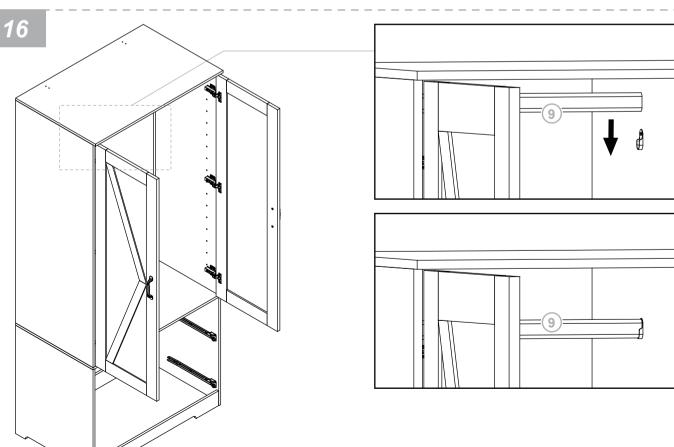


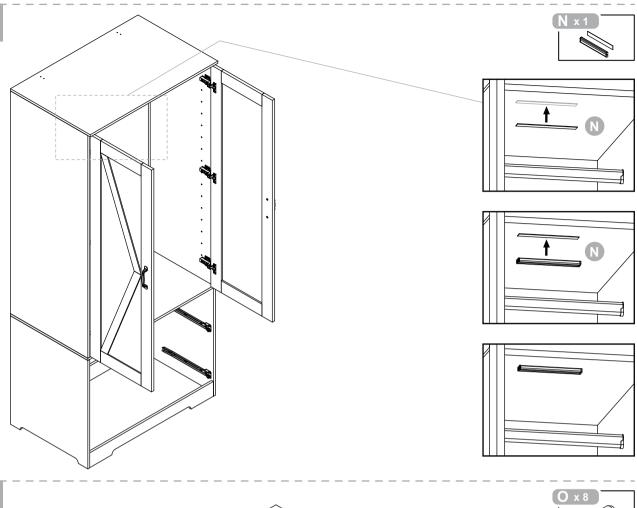





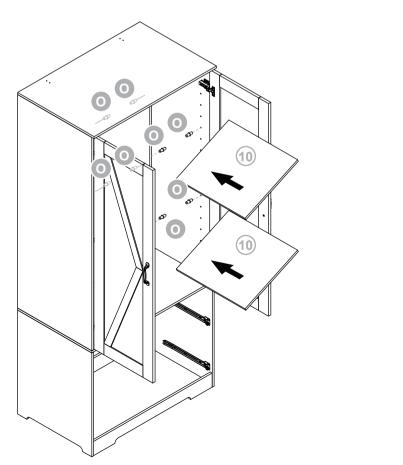


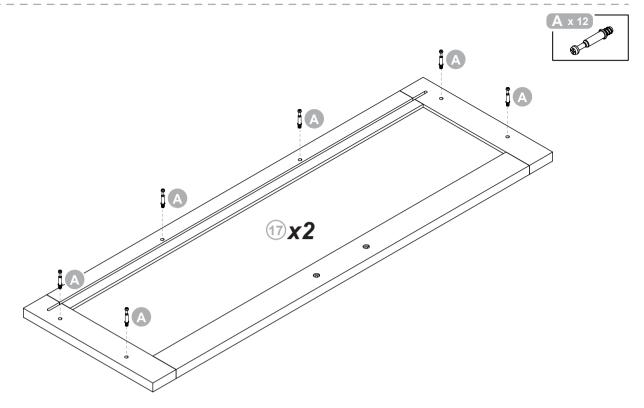


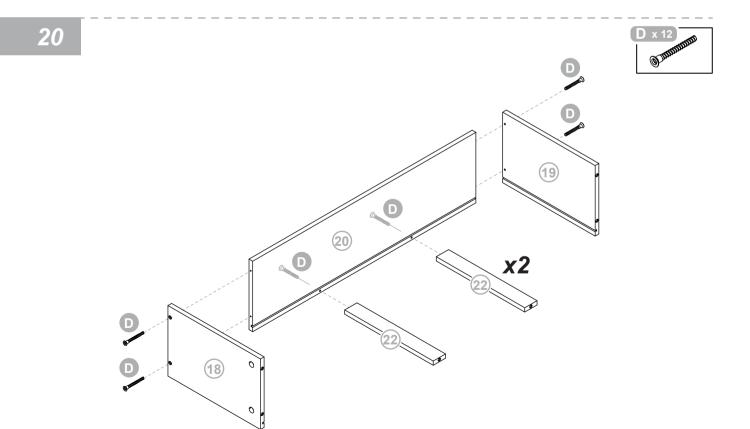


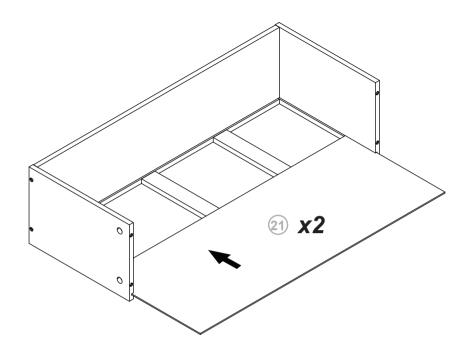

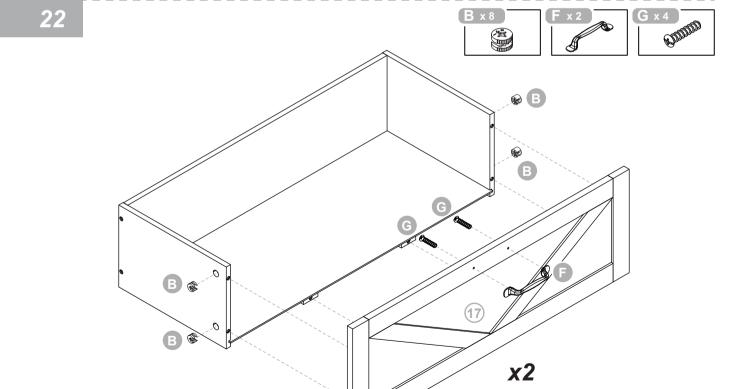

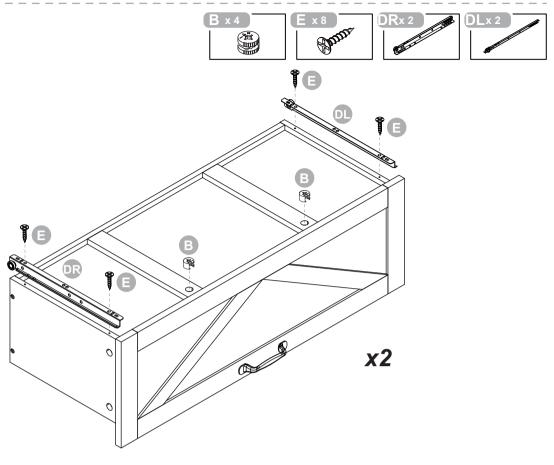


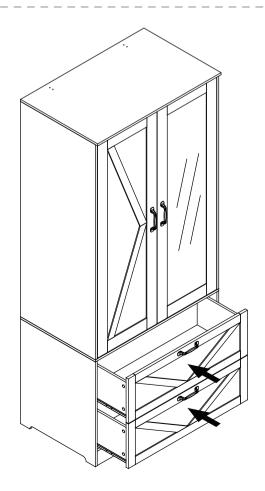

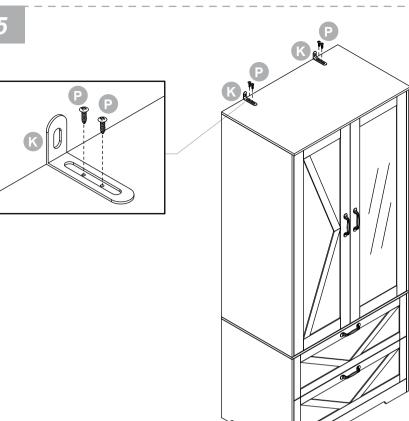





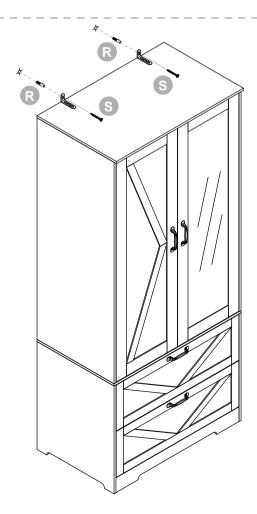









#### **Customer Attention:**

To align doors and control gap in between doors. Product doors may need adjusting during and after assembly.

This can be done by adjusting appropriate screws. See below illustration.

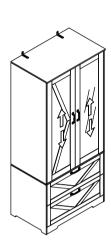


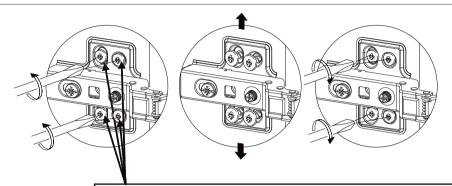


### **Vertical Door Adjustment:**

Loosen both screws on all hinges and lift the door to the desired height.


This allows an even space at the top and bottom between the door and frame.

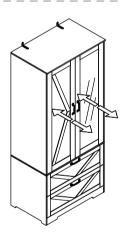


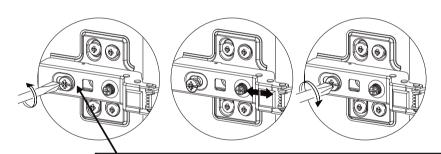

## **Lateral Door Adjustment:**

If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in approriate direction. (In or out)

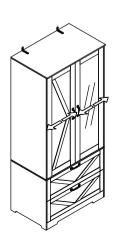

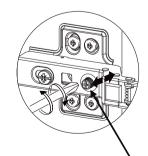

## **Horizontal Door Adjustment:**

Rotate Screw clockwise or anticlockwise. This will produce an even gap between doors and frame.