

# **Digital Display Balance Shower Faucet Installation Manual**

**U-11.1(ES)**

# Warranty Duration

All parts of this faucet system are warranted to the original purchaser to be free from defects in material and workmanship for a lifetime.

## Repair and Replacement

If the product has defects in material and workmanship within the warranty period, we will repair or replace the product free of charge. However, you may be required to provide the invoice when requesting repairs or replacement from us.

## Exclusions

We shall not be responsible for the following cases:

- Damage to the product caused by improper installation, misuse, unauthorized repair or replacement, or abuse(including damage during shipment).
- Damage to the product caused by improper dismantlement after installation.
- Damage resulting from abnormal water pressure and impurities in water pipes is not covered under this warranty.
- Rust on the product due to insufficient care and maintenance is not covered under this warranty.
- Damage caused by natural disasters such as fire, flood, earthquake, electric storms, etc.,is not covered under this warranty.

I hope this helps! If you have any further questions or concerns,please let me know.

## Having Trouble?Contact us.

✉ Email: [info@faucetsupport.com](mailto:info@faucetsupport.com)

📞 Toll Free: 1-888-969-6880



CEC FCC CE RoHS



SFS-1014B



SFS-1015B

## CONTENT



1.LED Constant Temperature Shower Installation Manual----- (1-10)

## CONTENIDO

1.Manual de Instalación de Ducha con Temperatura Constante LED-- (11-20)

## ◆ Installation and maintenance matters

- 1.Check the accessories list to verify that all parts are complete in this package.
- 2.Do not disassemble the main body by yourself.
- 3.Connect inlet pipes to supply valves.
- 4.Make sure inlet pipes and supply valves have no impurities and are cleaned, with no impurities in the pipeline.
- 5.After installation, check all joints for leakages.
- 6.Do not leave the rain shower system exposed to a severely corrosive environment.

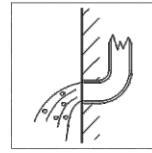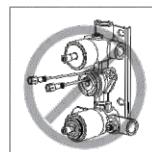

### Do's

 
- 1.In order to keep the mixer surface bright, please clean the mixer regularly.
- 2.Rinse the faucet with clean water and wipe it with a soft cotton cloth.
- 3.Use one of the following cleaners to remove dirt from the surface:
  - a.Mild liquid cleaner.
  - b.Colorless glass cleaner and powder cleaner that do not cause abrasion and can be dissolved completely.
  - c.Polish liquid that does not cause abrasion.



### Don'ts

- a.Avoid using cleaning powder, harsh cleaning chemicals, brushes and coarse cloth to prevent scratching and friction.
- b.Do not use acid cleaners to clean the faucet as they may cause surface corrosion of the faucet. If the faucet is exposed to harmful acid substances, please rinse it immediately with water.


## TOOLS NEEDED:



◆ 3-Function LuxuryT hermostatic Shower Faucet

Model:SFS-1014B


Accessories List

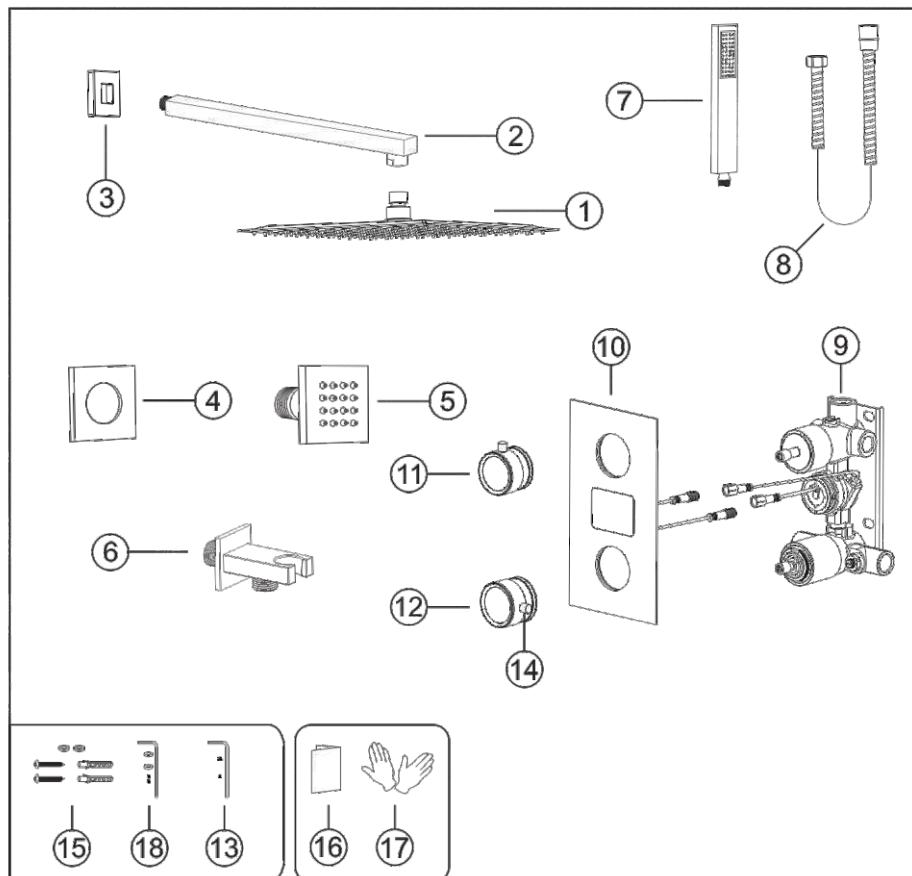


No.	Part name	Qty	No.	Part name	Qty
1	Shower head	1	10	Deck plate	1
2	Shower arm	1	11	Water diverter	1
3	Shower arm cup	1	12	Handle	1
4	Body jet cover	3	13	Handle parts	1set
5	Body jet	3	14	Handle cap	1
6	Hand shower holder	1	15	Main body spare parts	4
7	Hand shower	1	16	Instruction manual	1
8	Shower hose	1	17	Gloves	2
9	Main body	1	18	Hand shower holder parts	1set

## ◆ Essential dimensions & water pipe line

Unit: mm/inch

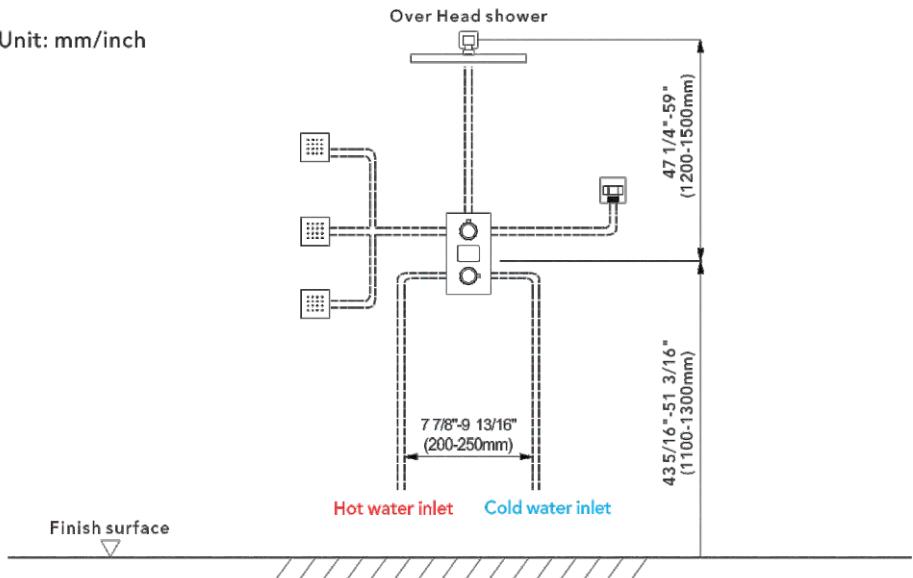

## ◆ The installation depth of shower holder and body jet

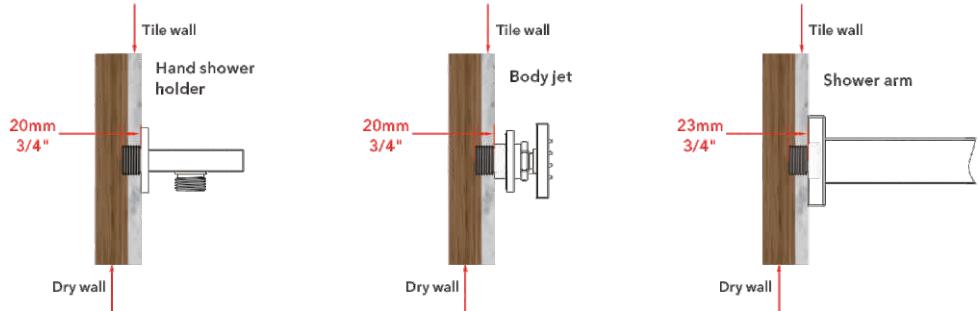


The thickness of the tile must be calculated for installation.

Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".

## ◆ 3-Function Luxury Thermostatic Shower Faucet

Model:SFS-1015B


### Accessories List

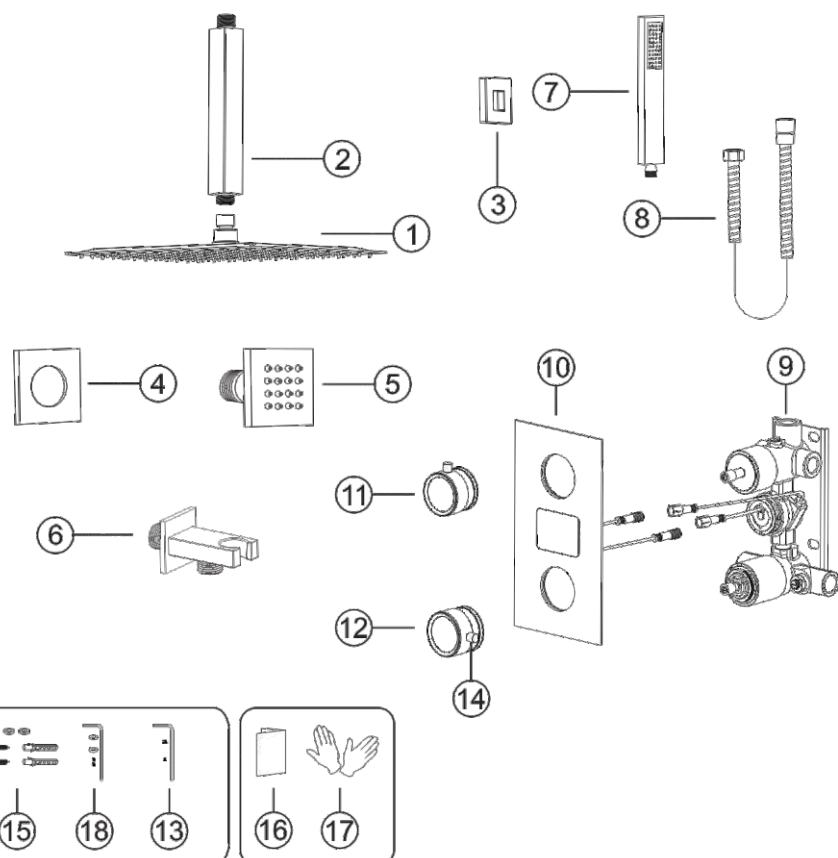


No.	Part name	Qty	No.	Part name	Qty
1	Shower head	1	10	Deck plate	1
2	Shower arm	1	11	Water diverter	1
3	Shower arm cup	1	12	Handle	1
4	Body jet cover	3	13	Handle parts	1set
5	Body jet	3	14	Handle cap	1
6	Hand shower holder	1	15	Main body spare parts	4
7	Hand shower	1	16	Instruction manual	1
8	Shower hose	1	17	Gloves	2
9	Main body	1	18	Hand shower holder parts	1set

## ◆ Essential dimensions & water pipe line

Unit: mm/inch

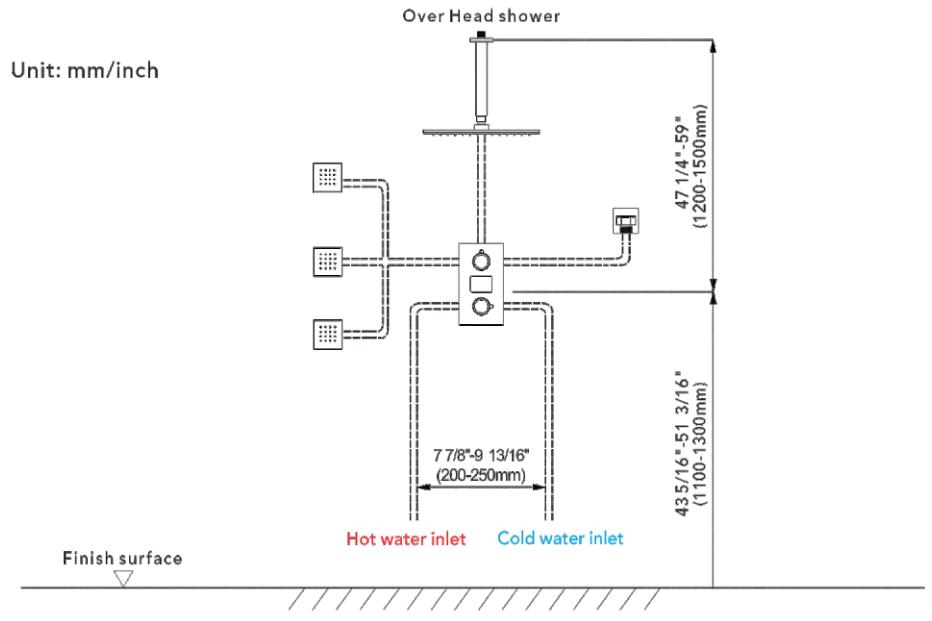


## ◆ The installation depth of shower holder and body jet

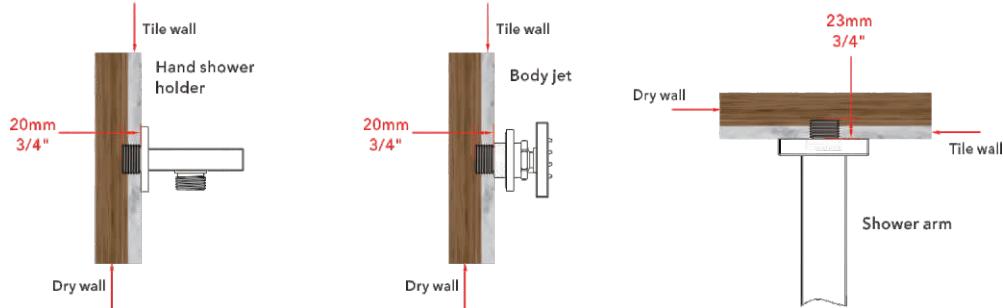

The thickness of the tile must be calculated for installation.

Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".

## ◆ Body Jets Installation(SFS-1014B&SFS-1015B)

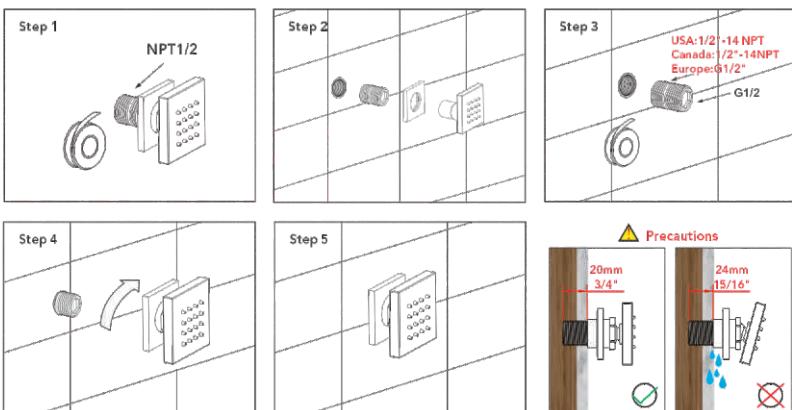

Step 1: Ensure that the threaded pipe and the raw material tape are of matching sizes to avoid misalignment when screwing into the wall.


Step 2: When disassembling the product's threaded pipe, handle with care to avoid damaging the threads or other components.

Step 3: Wrap the NPT1/2 threaded pipe with an appropriate amount of raw material tape to ensure a good seal at the threaded connection, but avoid excessive force.

Step 4: When screwing in the massage nozzle, ensure a secure connection, but avoid using excessive force to prevent affecting the nozzle or the wall.

Step 5: After confirming completion of all installation steps, check for any water leakage or looseness to ensure a complete and securely stable installation.

## ◆ Installation of the Hand Shower Holder(SFS-1014B&SFS-1015B)

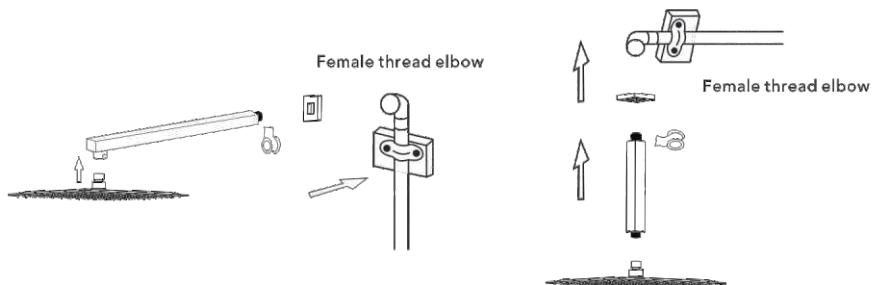

1. Connect the shower arm with the cover before screwing the arm into the riser connection to prevent damage.

2. Fix the shower head onto the shower arm and apply tape to the pipe threads on both ends.

3. Do not over tighten the shower head; it has a 360° swivel connection.


## ◆ Installation The Hand Show Holder(SFS-1014B&SFS-1015B)

Step3

Step1

Step2

Step5

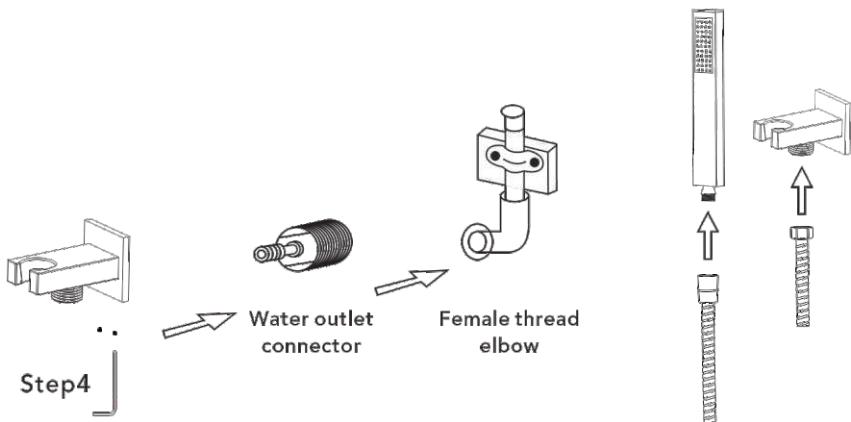

Step1. Remove the male connector from the top of the shower holder

(do not damage the gasket, otherwise it will leak).


Step2. Screw the thread into the water pipe inside the wall

Step3. Screw the main body into the thread.

Step4. Rotate and fix the body with the special-shaped wrench

Step5. Connect hand shower and the hose.


## ◆ Installation Depth Of Main Body(SFS-1014B&SFS-1015B)

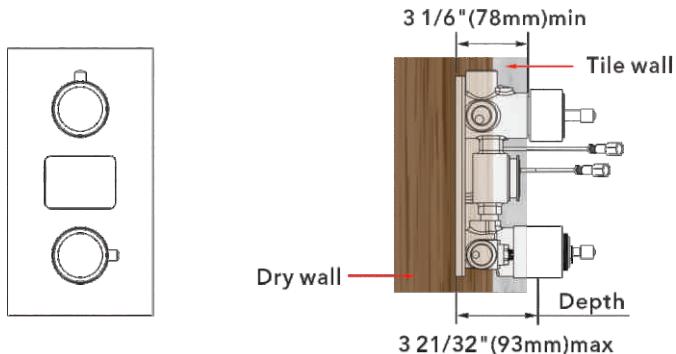

Notice: 1. The installation depth of the main body should be no less than 3 1/6" (78mm) and no more than 3 21/32" (93mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.

2. The opening size of ceramic tile shall be smaller than the deck plate size.



## ◆ Piping Instructions Before Tiling(SFS-1014B&SFS-1015B)

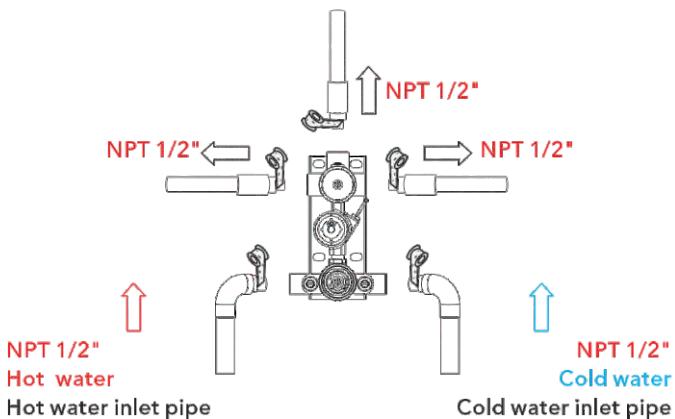


1. As shown in the figure, the inlet and outlet pipes are pre-buried. Please pay attention to the correct direction when installing the pre-buried main body.
2. Before tiling, turn on the water to test whether the left and right inlet pipes are tightly connected without leakage. Then, adjust the flow switch to the "on" position to check for leaks in the mixed outlet pipes.

◆ **Main Body Valve Installation(SFS-1014B&SFS-1015B)**

**Step1**

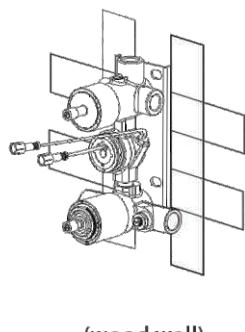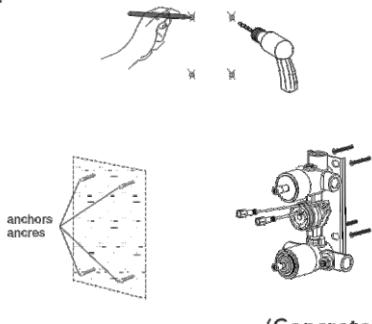



1. Make marks according to the size of the main body valve, and then drill anchors into the wall (concrete wall).
  2. Lock the main body to wood directly with screws (wood wall).
  3. When installing the main body, please mark the UP side up and do not install it upside down.
- ▲ Please note that the level meter should be parallel to the wall; otherwise, the deck plate cannot be installed.

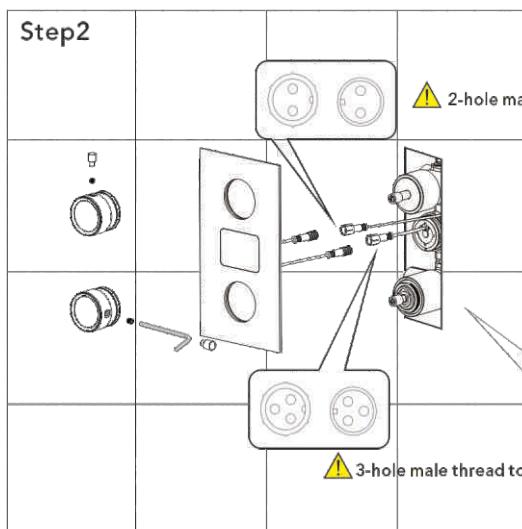

Use valve gasket spare parts to fix the main body on the wall, and then install the panel. Install the water diverter, screws, water diverter cover, handle screw, and handle cover in order.

## ◆ Main Body Water Outlet Switch Control

Model:SFS-1014B&SFS-1015B

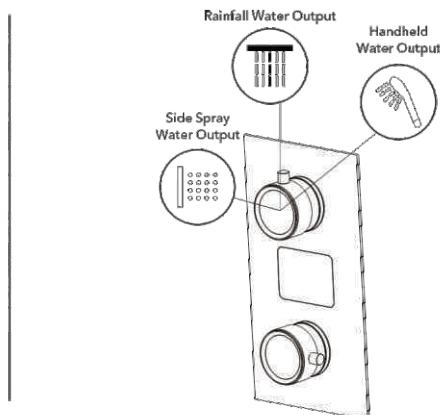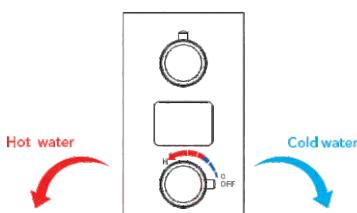

### 1. Temperature Control

**Increase Temperature:** Turning the switch to the left (or sliding up according to device instructions) can increase the water temperature. This operation increases the proportion of hot water, thereby raising the output water temperature.

**Decrease Temperature:** Turning the switch to the right (or sliding down according to device instructions) can decrease the water temperature. Doing so increases the proportion of cold water, thereby lowering the output water temperature.

### 2. Function Switching

For devices with multiple water output modes (such as rain shower, handheld showerhead, columnar flow, etc.), the direction of the function switch usually determines the selected output mode:

## ◆ Instalación y cuestiones de mantenimiento



- 1.Verifique la lista de accesorios para comprobar que todas las partes están completas en este paquete.
- 2.No desmonte el cuerpo principal por sí mismo.
- 3.Conecte las tuberías de entrada a las válvulas de suministro.
- 4.Asegúrese de que las tuberías de entrada y las válvulas de suministro no tengan impurezas y estén limpias, sin impurezas en la tubería.
- 5.Después de la instalación, verifique todas las uniones para detectar fugas.
- 6.No deje el sistema de ducha tipo lluvia expuesto a un ambiente severamente corrosivo.

### Hacer


- 1.En para mantener la superficie de la batidora brillante, limpie el mezclador regularmente.
- 2.inse el grifo con agua limpia y límpielo con un suave ropa de algodón.
- 3.Utilice uno de los siguientes limpiadores para eliminar la suciedad de la superficie: a. Limpiador líquido suave. b. Limpiador de vidrio incoloro y limpiador en polvo que no causen abrasión y que se puedan disolver completamente. c. Líquido pulidor que no cause abrasión.

### No es decir

- A.Valte con polvo de limpieza, productos químicos de limpieza duros, cepillos y tela gruesa para evitar rascar y fricción.
- B. No use limpiadores de ácidos para limpiar el grifo, ya que pueden causar corrosión superficial del grifo. Si el grifo está expuesto a sustancias ácidas dañinas, enjuague inmediatamente con agua.

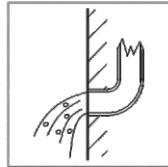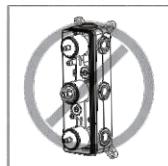



## HERRAMIENTAS NECESARIAS:

 

# Grifo Termostático de Lujo para Ducha de 3 Funciones


Modelo: SFS-1014B

## Lista de Accesorios

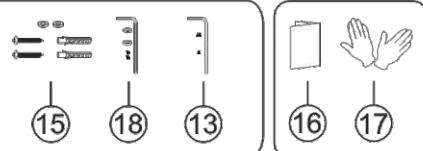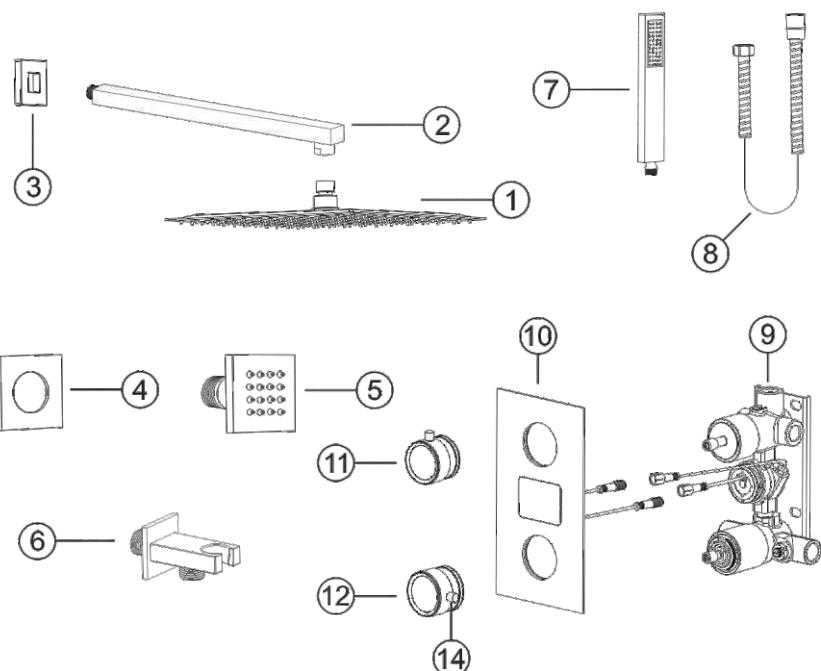


N.º	Nombre de la pieza	Cantidad	N.º	Nombre de la pieza	Cantidad
1	Cabezal de ducha	1	10	Placa de montaje	1
2	Brazo de la ducha	1	11	Desviador de agua	1
3	Copa del brazo de la ducha	1	12	Mango	1
4	Cubierta del chorro corporal	3	13	Partes del mango	1set
5	Chorro corporal	3	14	Tapa del mango	1
6	Soporte para la ducha manual	1	15	Partes de repuesto del cuerpo principal	4
7	Ducha manual	1	16	Manual de instrucciones	1
8	Manguera de la ducha	1	17	Guantes	2
9	Cuerpo principal	1	18	Partes del soporte para la ducha manual	1set

## ◆ Dimensiones esenciales & línea de tubería de agua

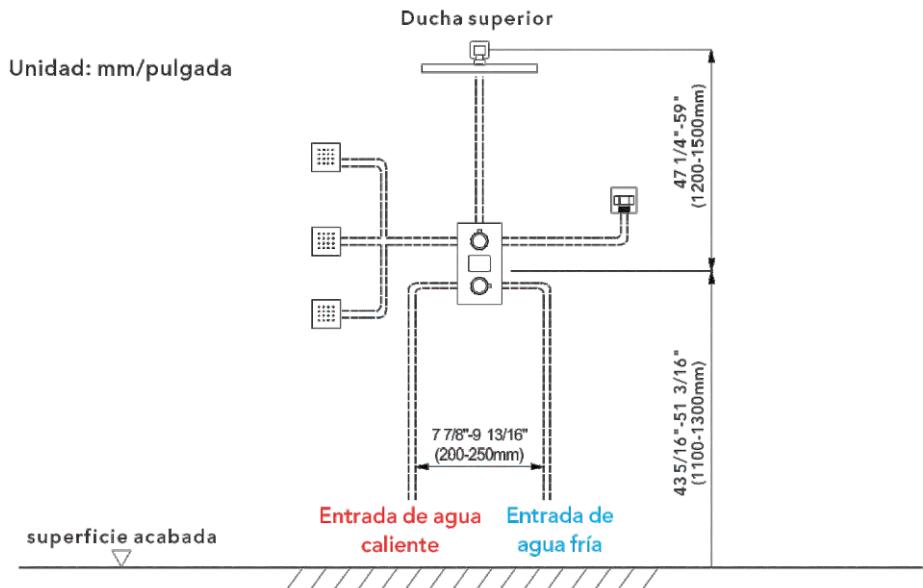

## ◆ La profundidad de instalación del soporte de ducha y del chorro para el cuerpo

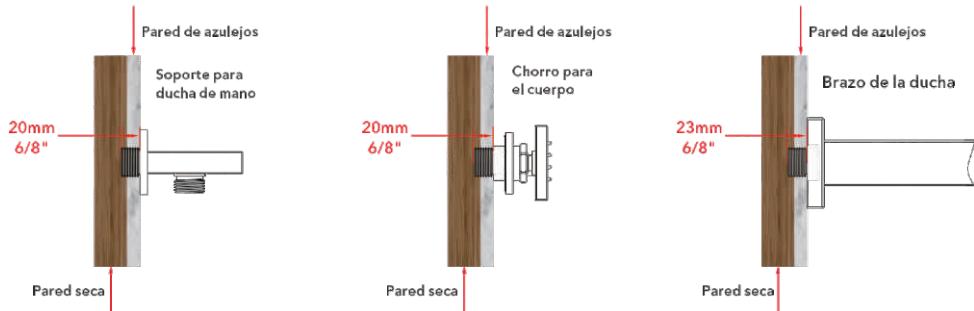


El grosor del azulejo debe ser calculado para la instalación.

Tamaño del conector de rosca macho: EE. UU.: 1/2"-14NPT, Canadá: 1/2"-14NPT, Europa: G1/2".

# Grifo Termostático de Lujo para Ducha de 3 Funciones

Modelo: SFS-1015B


## Lista de Accesorios

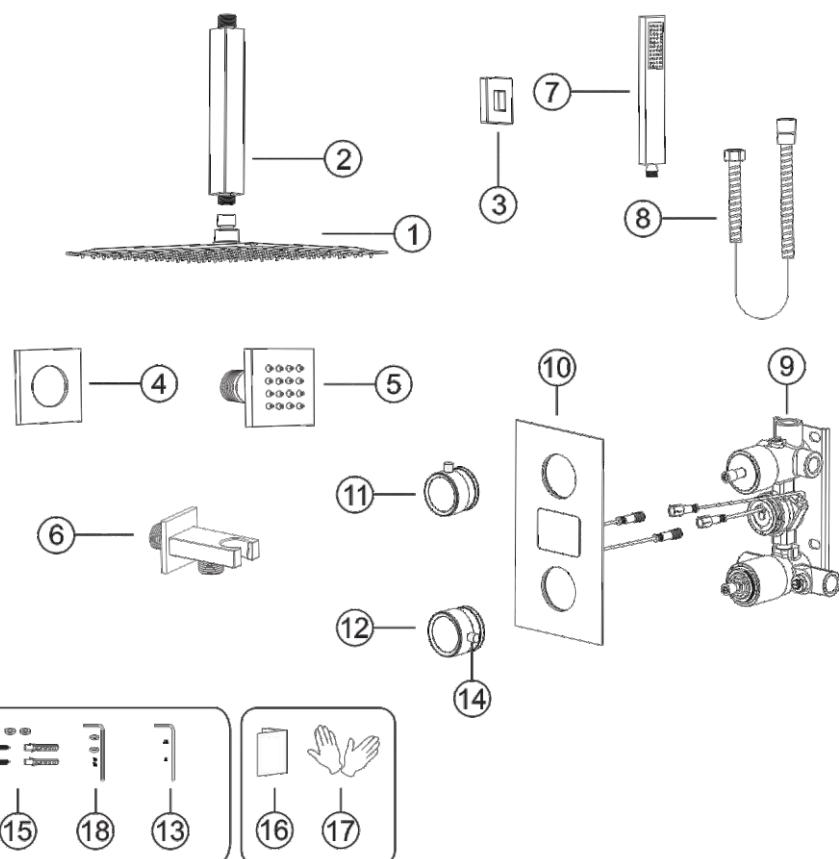


N.º	Nombre de la pieza	Cantidad	N.º	Nombre de la pieza	Cantidad
1	Cabezal de ducha	1	10	Placa de montaje	1
2	Brazo de la ducha	1	11	Desviador de agua	1
3	Copa del brazo de la ducha	1	12	Mango	1
4	Cubierta del chorro corporal	3	13	Partes del mango	1set
5	Chorro corporal	3	14	Tapa del mango	1
6	Soporte para la ducha manual	1	15	Partes de repuesto del cuerpo principal	4
7	Ducha manual	1	16	Manual de instrucciones	1
8	Manguera de la ducha	1	17	Guantes	2
9	Cuerpo principal	1	18	Partes del soporte para la ducha manual	1set

## ◆ Dimensiones esenciales & línea de tubería de agua

Unidad: mm/pulgada

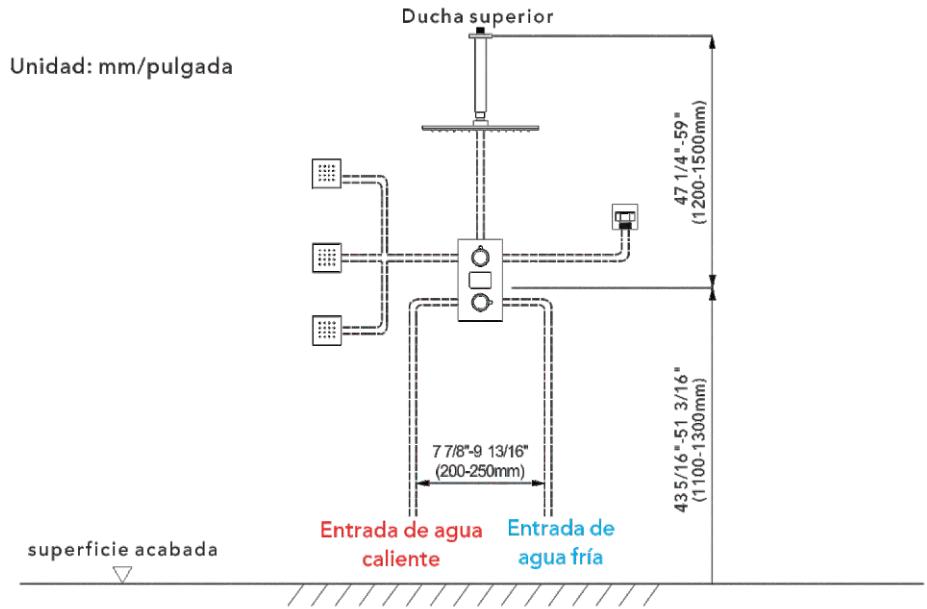


## ◆ La profundidad de instalación del soporte de ducha y del chorro para el cuerpo

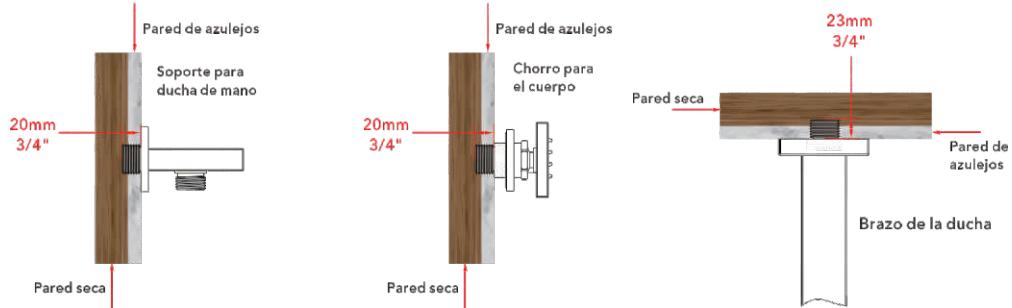

El grosor del azulejo debe ser calculado para la instalación.

Tamaño del conector de rosca macho: EE. UU.: 1/2"-14NPT, Canadá: 1/2"-14NPT, Europa: G1/2".

## ◆ Instalación de Chorros para el Cuerpo(SFS-1014B&SFS-1015B)

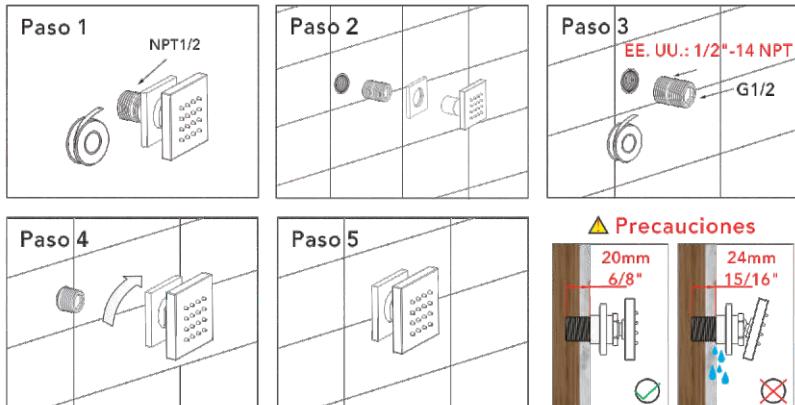

Paso 1: Asegúrese de que el tubo roscado y la cinta de material bruto sean del tamaño adecuado para evitar desalineaciones al atornillar en la pared.


Paso 2: Al desmontar el tubo roscado del producto, maneje con cuidado para evitar dañar las roscas u otros componentes.

Paso 3: Envuelva el tubo roscado NPT1/2 con una cantidad adecuada de cinta de material bruto para asegurar un buen sellado en la conexión roscada, pero evite usar fuerza excesiva.

Paso 4: Al atornillar la boquilla de masaje, asegúrese de que la conexión esté segura, pero evite usar fuerza excesiva para no afectar la boquilla o la pared.

Paso 5: Después de confirmar la finalización de todos los pasos de instalación, verifique si hay alguna fuga de agua o flojedad para asegurar una instalación completa y estable.


## ◆ Instalación del Soporte para la Ducha de Mano(SFS-1014B&SFS-1015B)

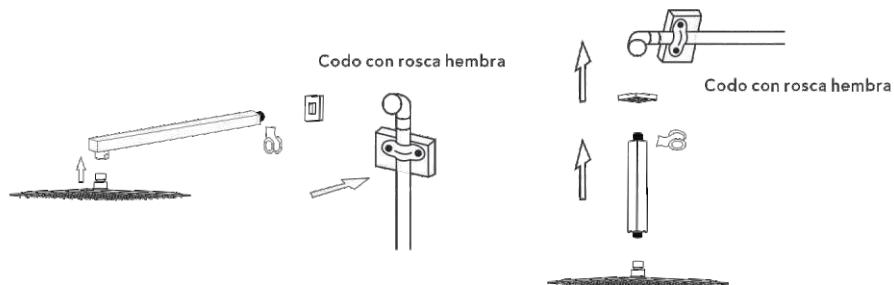

1. Conecte el brazo de la ducha con la cubierta antes de atornillar el brazo en la conexión del elevador para prevenir daños.
2. Fije el cabezal de ducha al brazo de la ducha y aplique cinta a las roscas del tubo en ambos extremos.
3. No apriete demasiado el cabezal de ducha; tiene una conexión giratoria de 360°.

◆ Instalación del Soporte para la Ducha de Mano(SFS-1014B&SFS-1015B)

 
Paso 3




Paso 1



 Paso 2



Paso 5

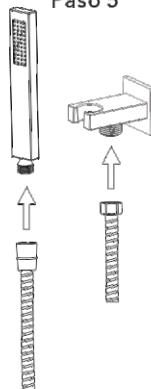

Conector de salida de agua

Codo de rosca hembra

Paso 4

Paso 1. Retire el conector macho de la parte superior del soporte de la ducha (no dañe la junta, de lo contrario, habrá fugas).


Paso 2. Enrosque la rosca en la tubería de agua dentro de la pared

Paso 3. Enrosque el cuerpo principal en la rosca.

Paso 4. Rote y fije el cuerpo con la llave especial.

Paso 5. Conecte la ducha manual y la manguera.


#### ◆ Profundidad de Instalación del Cuerpo Principal(SFS-1014B&SFS-1015B)

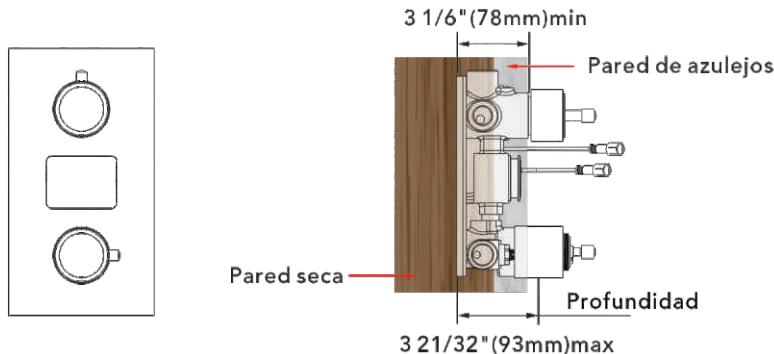

**Aviso:** 1. La profundidad de instalación del cuerpo principal no debe ser inferior a 2 9/16" (65 mm) y no más de 3 17/32" (90 mm), incluyendo el grosor del azulejo. De lo contrario, la placa de cubierta no podrá ser instalada.

2. El tamaño de apertura del azulejo cerámico debe ser menor que el tamaño de la placa de cubierta.


#### ◆ **Instrucciones de Tubería Antes de Colocar Azulejos (SFS-1014B&SFS-1015B)**

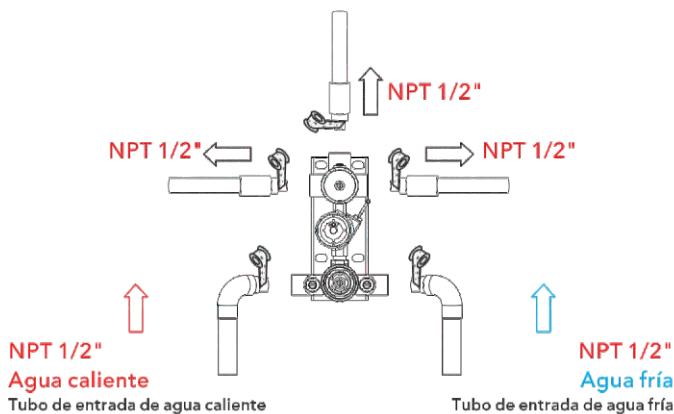


1. Como se muestra en la figura, las tuberías de entrada y salida están pre-enterradas. Por favor, preste atención a la dirección correcta al instalar el cuerpo principal pre-enterrado.
2. Antes de colocar los azulejos, abra el agua para probar si las tuberías de entrada izquierda y derecha están conectadas herméticamente sin fugas. Luego, ajuste el interruptor de flujo a la posición "on" para comprobar si hay fugas en las tuberías de salida mezcladas.

◆ **Instalación de la Válvula del Cuerpo Principal(SFS-1014B&SFS-1015B)**

**Paso1**

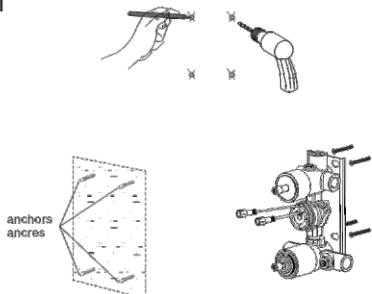


(Pared de concreto)

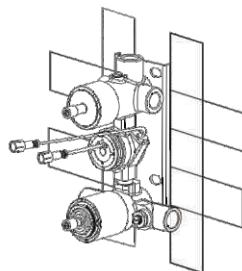

(pared de madera)

1. Marque según el tamaño de la válvula del cuerpo principal y luego perfore para colocar los anclajes en la pared (pared de concreto).
  2. Fije directamente el cuerpo principal a la madera con tornillos (pared de madera).
  3. Al instalar el cuerpo principal, por favor marque el lado UP hacia arriba y no lo instale al revés.
- ▲ Tenga en cuenta que el nivel debe estar paralelo a la pared; de lo contrario, la placa de cubierta no podrá ser instalada.


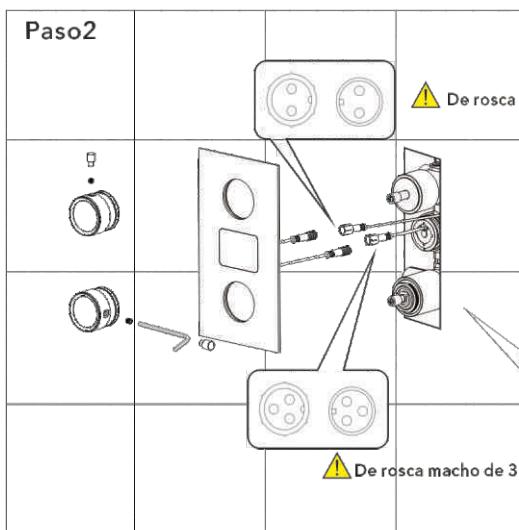


Utilice las partes de repuesto de la junta de la válvula para fijar el cuerpo principal en la pared, y luego instale el panel.

Instale el desviador de agua, los tornillos, la cubierta del desviador de agua, el tornillo del mango y la cubierta del mango en orden.

## ◆ Control del Interruptor de Salida de Agua del Cuerpo Principa

Model:SFS-1014B&SFS-1015B

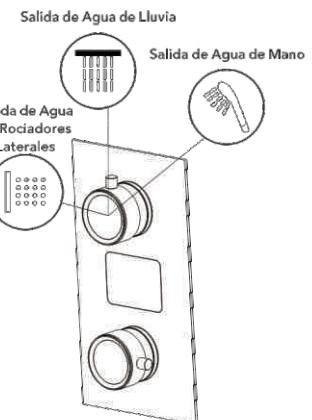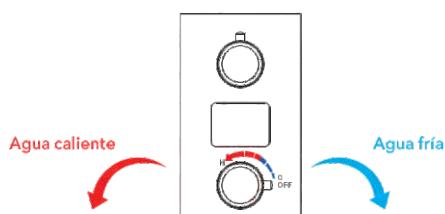

### 1. Control de Temperatura

**Aumentar la temperatura:** Girar el interruptor hacia la izquierda (o deslizar hacia arriba según las instrucciones del dispositivo) puede aumentar la temperatura del agua. Esta operación aumenta la proporción de agua caliente, elevando así la temperatura del agua de salida. **Disminuir la temperatura:** Girar el interruptor hacia la derecha (o deslizar hacia abajo según las instrucciones del dispositivo) puede disminuir la temperatura del agua. Hacerlo aumenta la proporción de agua fría, reduciendo así la temperatura del agua de salida.

### 2. Cambio de Función

Para dispositivos con múltiples modos de salida de agua (como ducha de lluvia, ducha manual, flujo columnar, etc.), la dirección del interruptor de función generalmente determina el modo de salida seleccionado: