 


TOOLS REQUIRED





Phillips Screwdriver

(Not Included)




2 - People Recommended

ASSEMBLY RATING



EASY → DIFFICULT


The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

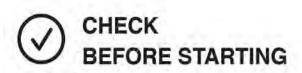

=	Are you missing anything?	Check out our Quick Tips!
	Double-check all parts, hardware and accessories listed are all accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
	Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time!
		Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

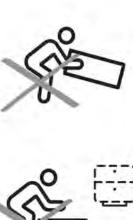



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CHEST

 


- Please keep instructions for future reference.
- · Check the quantity and irregularity of parts and hardware before you start.




PARTS





CHEST 1 pc.



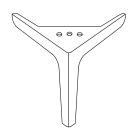

METAL LEGS

4pcs











ALLEN WRENCH

1pc



F LAT WASHER Ø 5/16" x 19MM 8pcs



BOLT Ø 5/16"x 1"


8pcs



8pcs




ANTITIP KIT 1pc

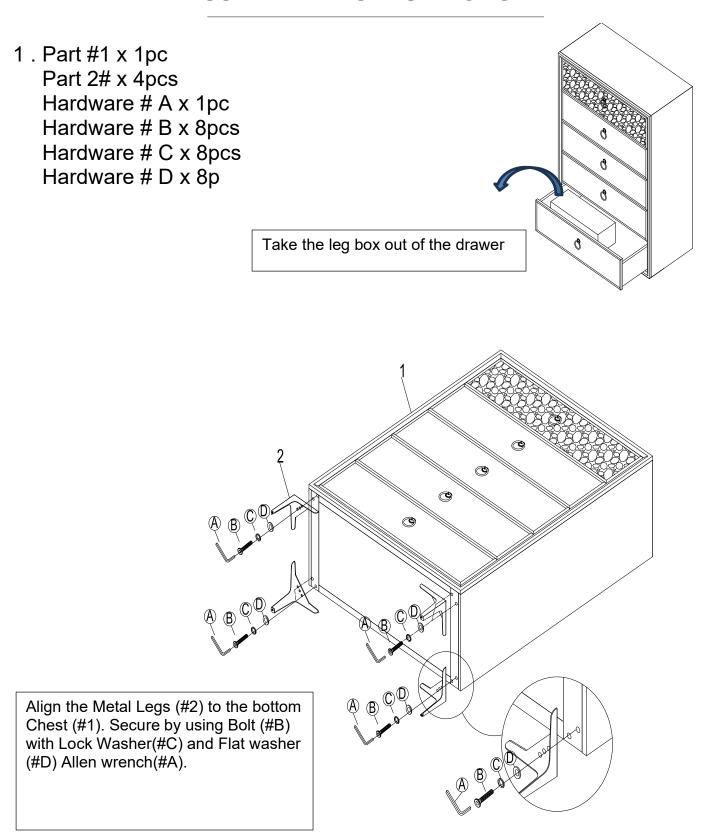

Use anti-tip kit to secure Chest to the wall.

2. Hardware #E x 1set

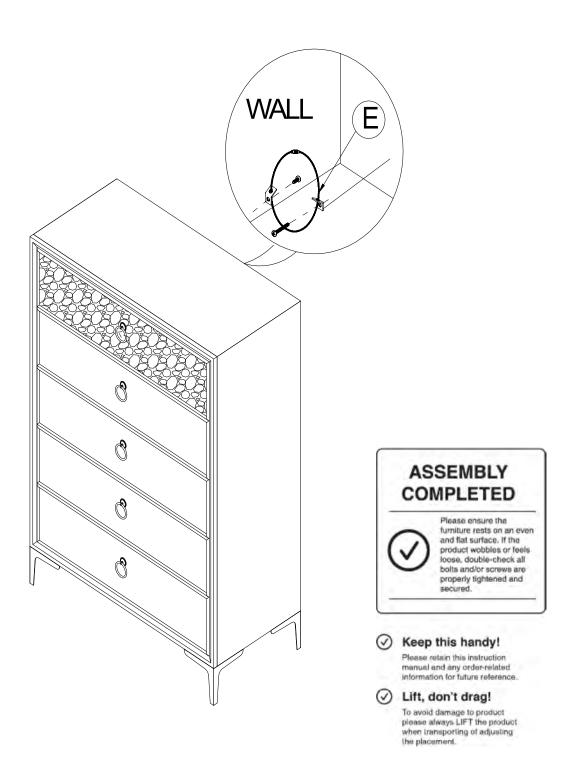

Wall Mounting and Fixing



EXPANSION WALL ANCHOR

Our provided expansion wall anchors are only suitable for masonry walls, such as drywall, plaster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance. liability for product damage or failure due to using the incorrect anchors will fall on the installer.




CHECK BEFORE PROCEEDING

Prior to drilling or hammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more appropriate resistance and hold more weight.

QUICK TIPS


 If unsure of the proper size, always choose a larger screw and wall anchor.




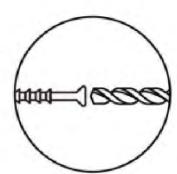

Match the drill bit to the wall anchor and hole size.

Only drill horizontally.Do not force the drill or enlarge the hole for the wall anchor.

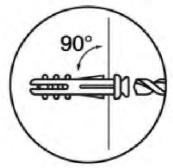

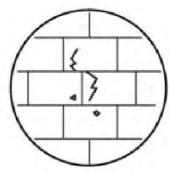

 Take extra care when drilling into high walls or ceramic tiles. Wall anchors should be a tight fit for the hole. Never use wall anchors in ceilings.





We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.