 
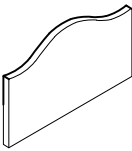 
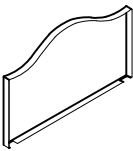 
 



 

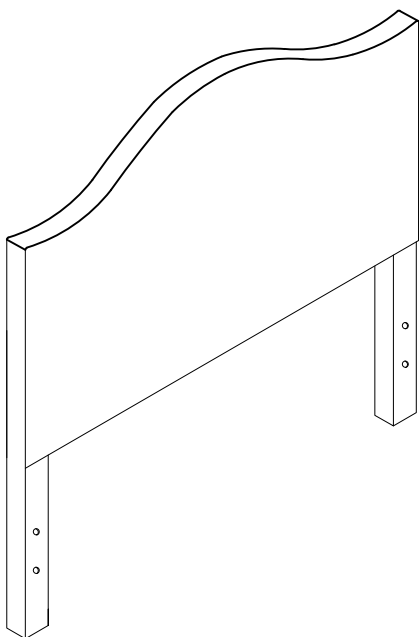 


# ASSEMBLY INSTRUCTIONS

## 5874BQ-1 QUEEN HEADBOARD

<b>A</b> Headboard	<b>B</b> Headboard Cover	<b>C</b> Left Leg	<b>D</b> Right Leg
			
1 pc	1 pc	1 pc	1 pc
<b>E</b> Allen Bolt Ø5/16" x 2-3/4"	<b>F</b> Allen Bolt Ø5/16" x 2-3/16"	<b>G</b> Spring Washer Ø5/16" x 1/2"	<b>H</b> Flat Washer Ø5/16" x 3/4"
			
3 pcs	8 pcs	11 pcs	11 pcs
<b>I</b> Allen Key 2-3/8 x 3/16"			
			
1 pc			



 
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**IMPORTANT NOTE:**


1. Do not tighten all screws / bolts until all completely assembled.
2. Keep all hardware parts out of reach of children.

**\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.**

- 1 Take out the Headboard Cover (B) and the Left & Right Leg (C & D) from the back of the Headboard (A).

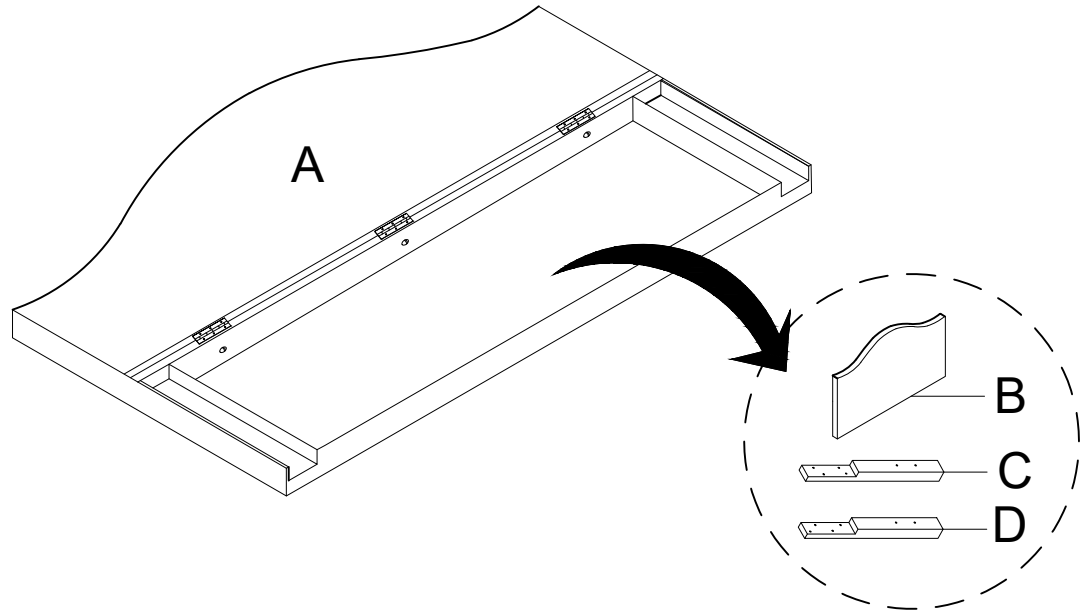


 - 2 Connect the Headboard (A) using Allen Bolt (E), Spring Washer (G) and Flat Washer (H) with the Allen Key (I).

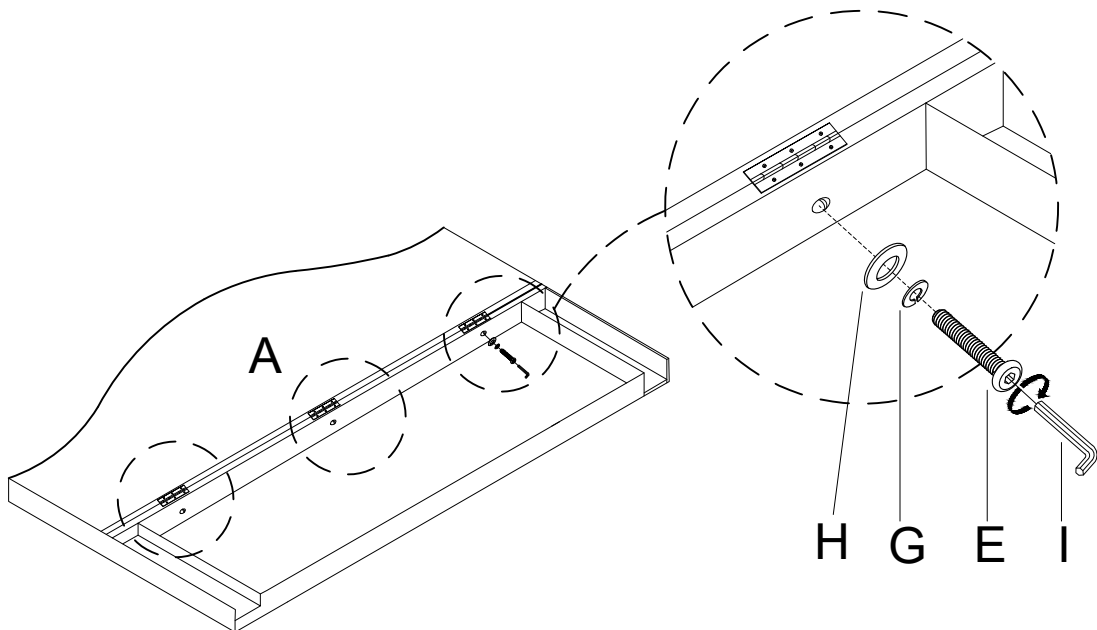


**\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.**

 - 3** Place the Headboard Cover (B) onto the Headboard (A).

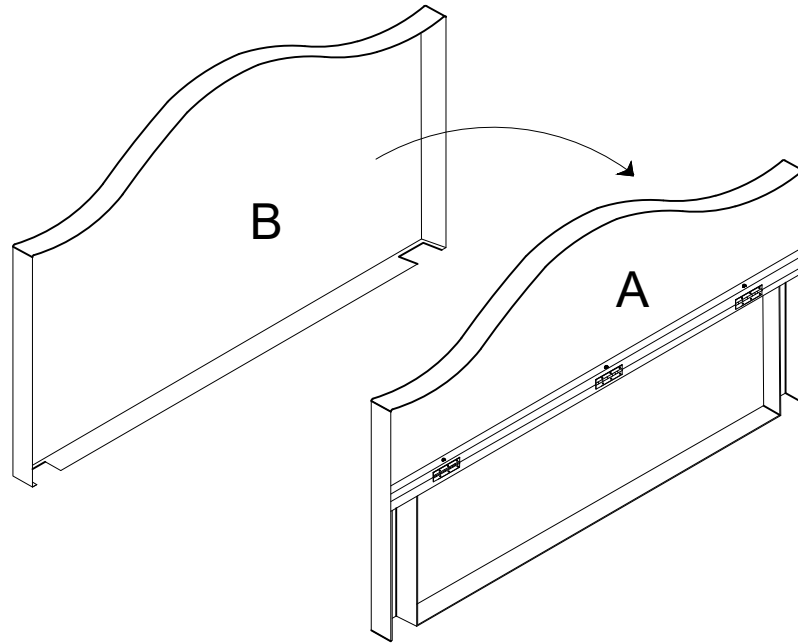

 - 4** Attach the Left & Right Leg (C & D) to the Headboard (A) using Allen Bolt (F), Spring Washer (G) and Flat Washer (H) with the Allen Key (I).

 
 
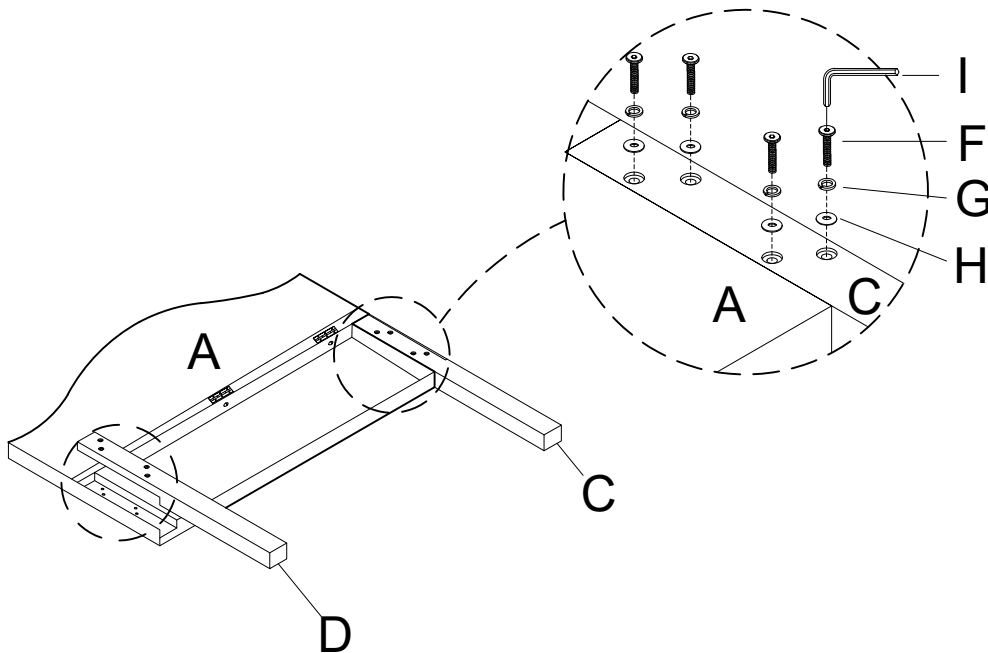 


 









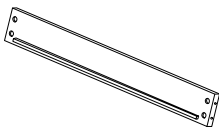


### Cleaning & Care

 Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# ASSEMBLY INSTRUCTIONS
 
## 5874BQ-3 QUEEN FOOTBOARD & SIDE RAIL & SLATS

<b>A</b> Headboard (in the other carton)  1 pc	<b>B</b> Footboard  1 pc	<b>C</b> Side Rail  2 pcs	<b>D</b> Slat  4 pcs
<b>E</b> Leg  2 pcs	<b>F</b> Support Leg  4 pcs	<b>G</b> Allen Bolt Ø5/16" x 2-31/32"  2 pcs	<b>H</b> Spring Washer Ø5/16" x 1/2"  2 pcs
<b>I</b> Flat Washer Ø5/16" x 3/4"  2 pcs	<b>J</b> Allen Key 3-15/16" x 3/16"  1 pc	<b>K</b> Thread Bolt Ø5/16" x 3-5/32"  8 pcs	<b>L</b> Curve Washer Ø5/16"  8 pcs
<b>M</b> Hex Nut Ø5/16"  8 pcs	<b>N</b> Open Wrench Ø5/16"  1 pc	<b>O</b> Screw Ø8 x 1-3/16"  8 pcs	

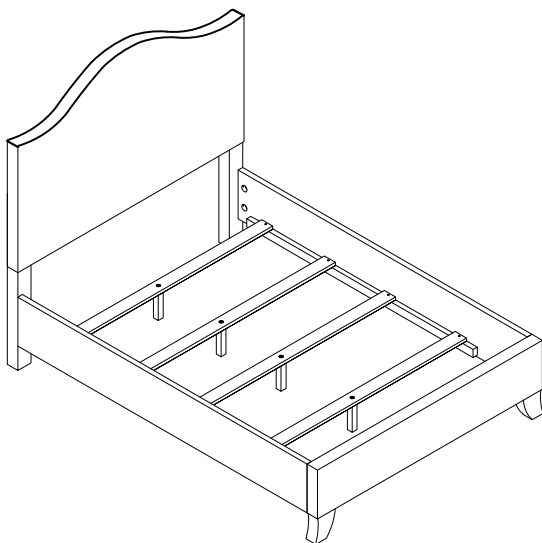


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

### IMPORTANT NOTE:

 
1. Do not tighten all screws / bolts until all completely assembled.
2. Keep all hardware parts out of reach of children.

**\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.**

- 1** Attach the Leg (E) to the Footboard (B) using Allen Bolt (G), Spring Washer (H) and Flat Washer (I) with the Allen Key (J).

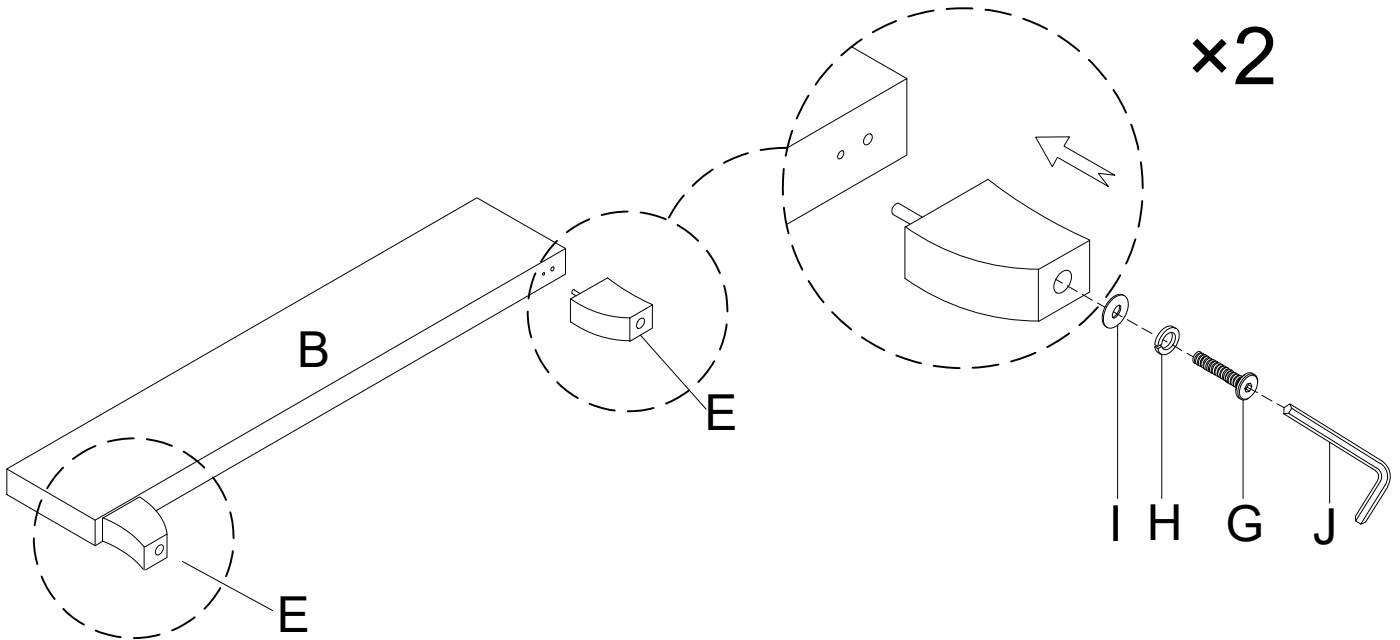


 - 2** Attach the Side Rail (C) to the Headboard (A) and the Footboard (B) using Thread Bolt (K), Curve Washer (L) and Hex Nut (M) with the Open Wrench (N).

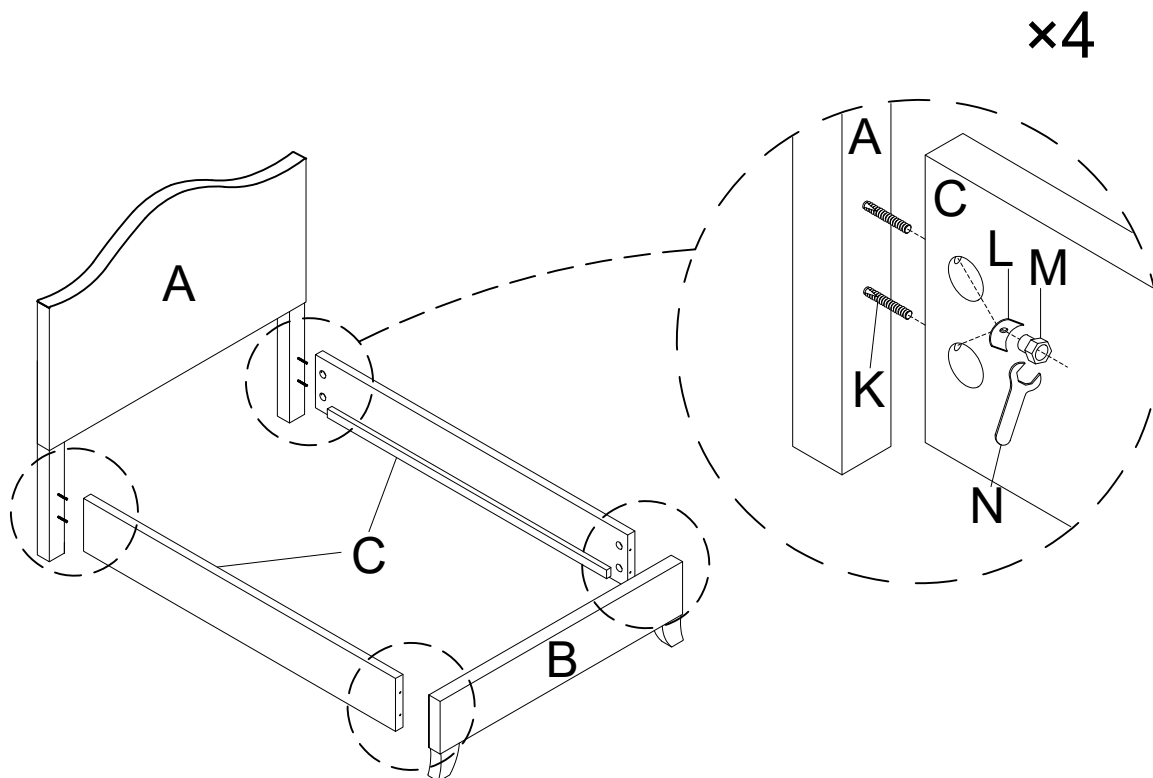


**\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.**

 - 3** Attach the Support Leg (F) to the Slat (D).

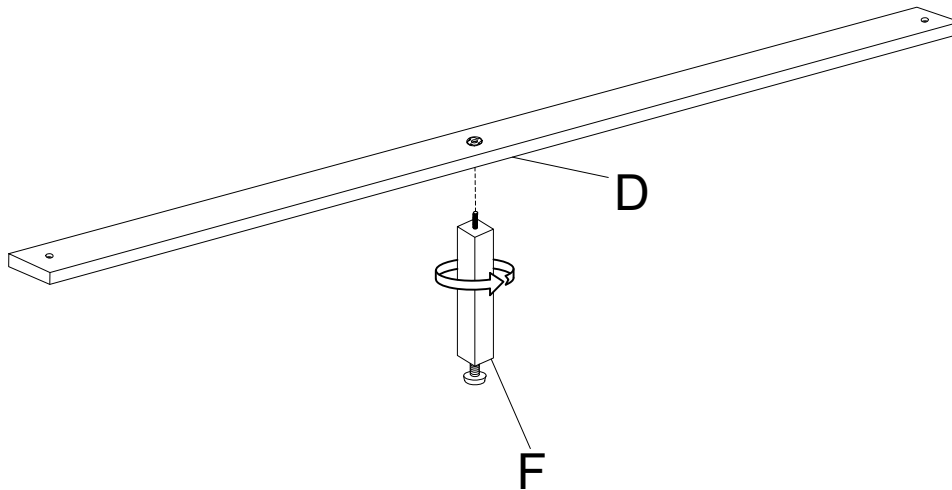

 - 4** Attach the Slat (D) to the Side Rail (C) using Screw (O) with a Screwdriver (not provided).

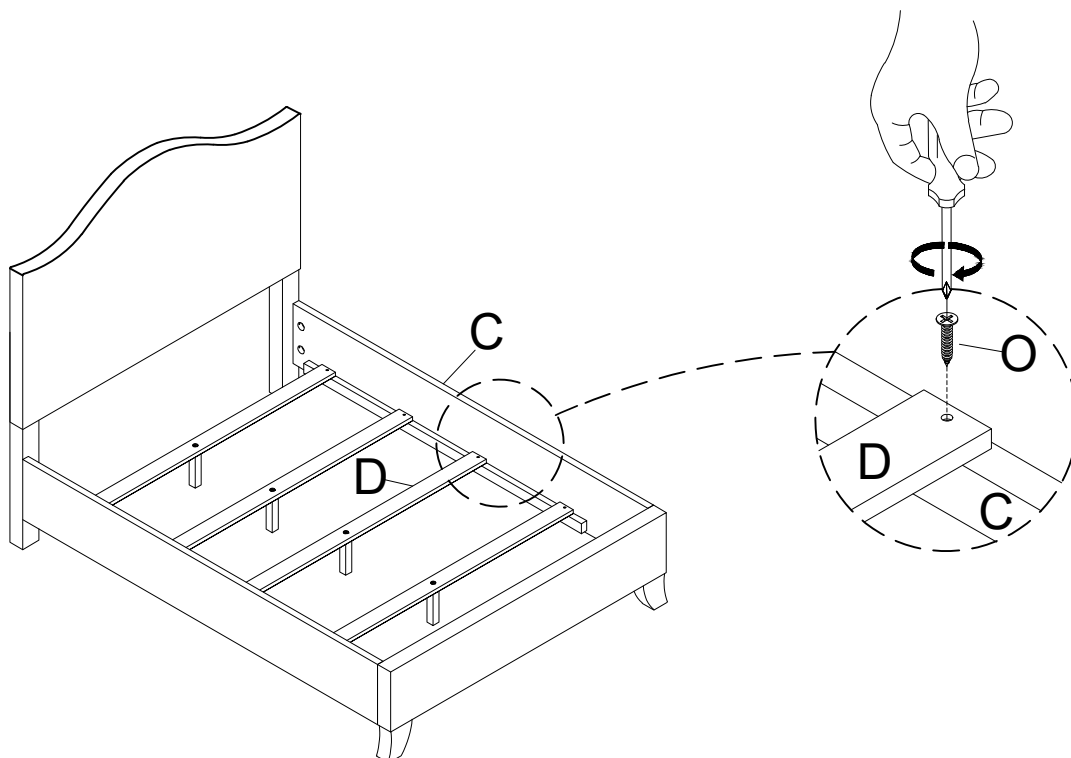

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.