


Assembly Instructions

209710 Accent Chest - Natural & White

Product Issues? Please Call Us Before Contacting Your Retailer At 1-800-549-3300


Email customerservice@mshome.co, or visit www.mshome.co

We can help with Assembly Issues, Part Requests, Damages, & All Other Product Related Questions

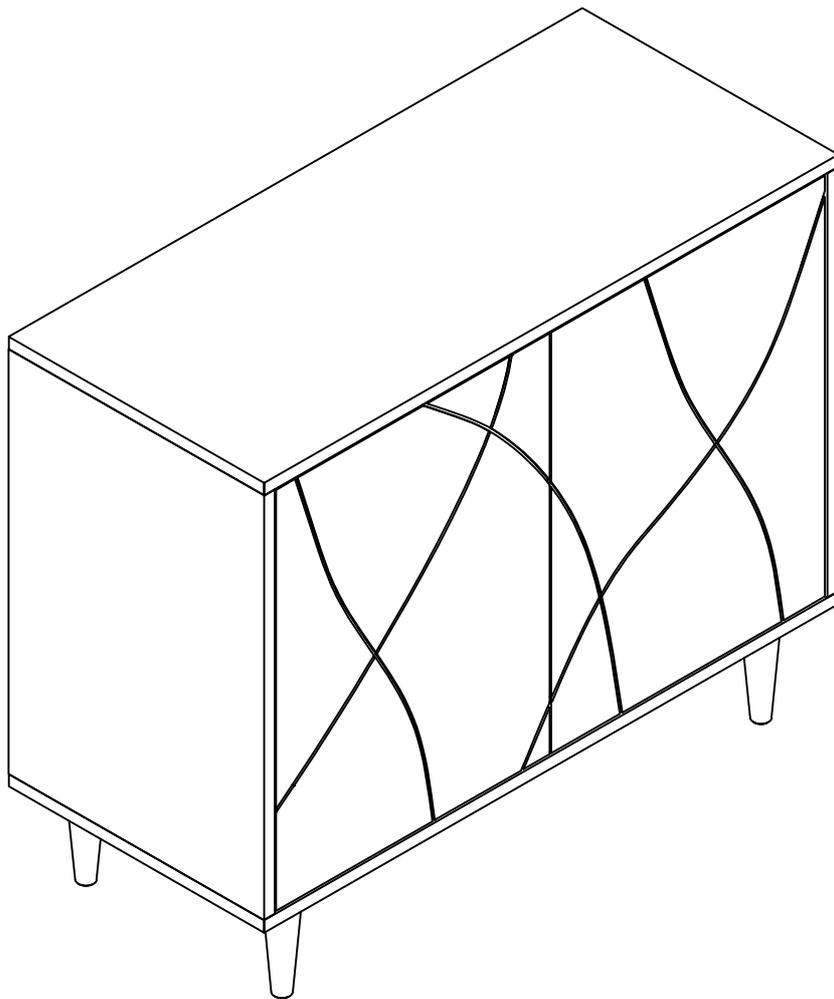


MSH - USA


1-8

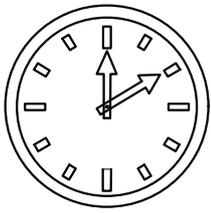


15 min

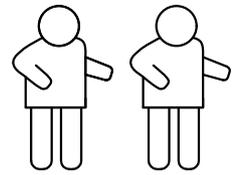

Two People Required
for Assembly

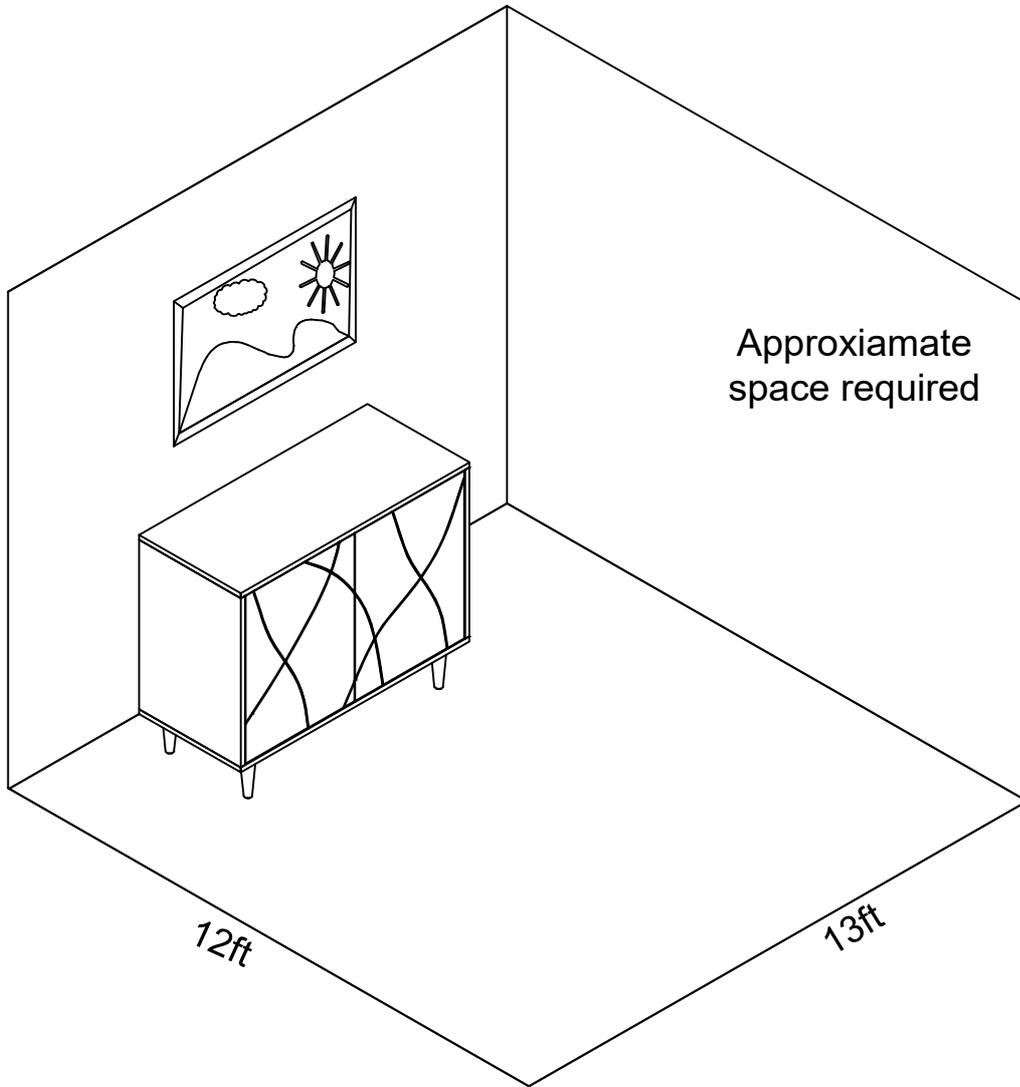


Do Not Use Power Tools

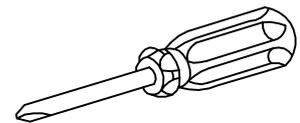

Phillips Head
Not Provided

Parts Included:

- C1 Top Panel x1
- C2 Right Side Panel x1
- C3 Left Side Panel x1
- C4 Right Door x1
- C5 Left Door x1
- C6 Bottom Panel x1
- C7 Shelf Panel x1
- C8 Back Panel x1
- C9 Leg x4

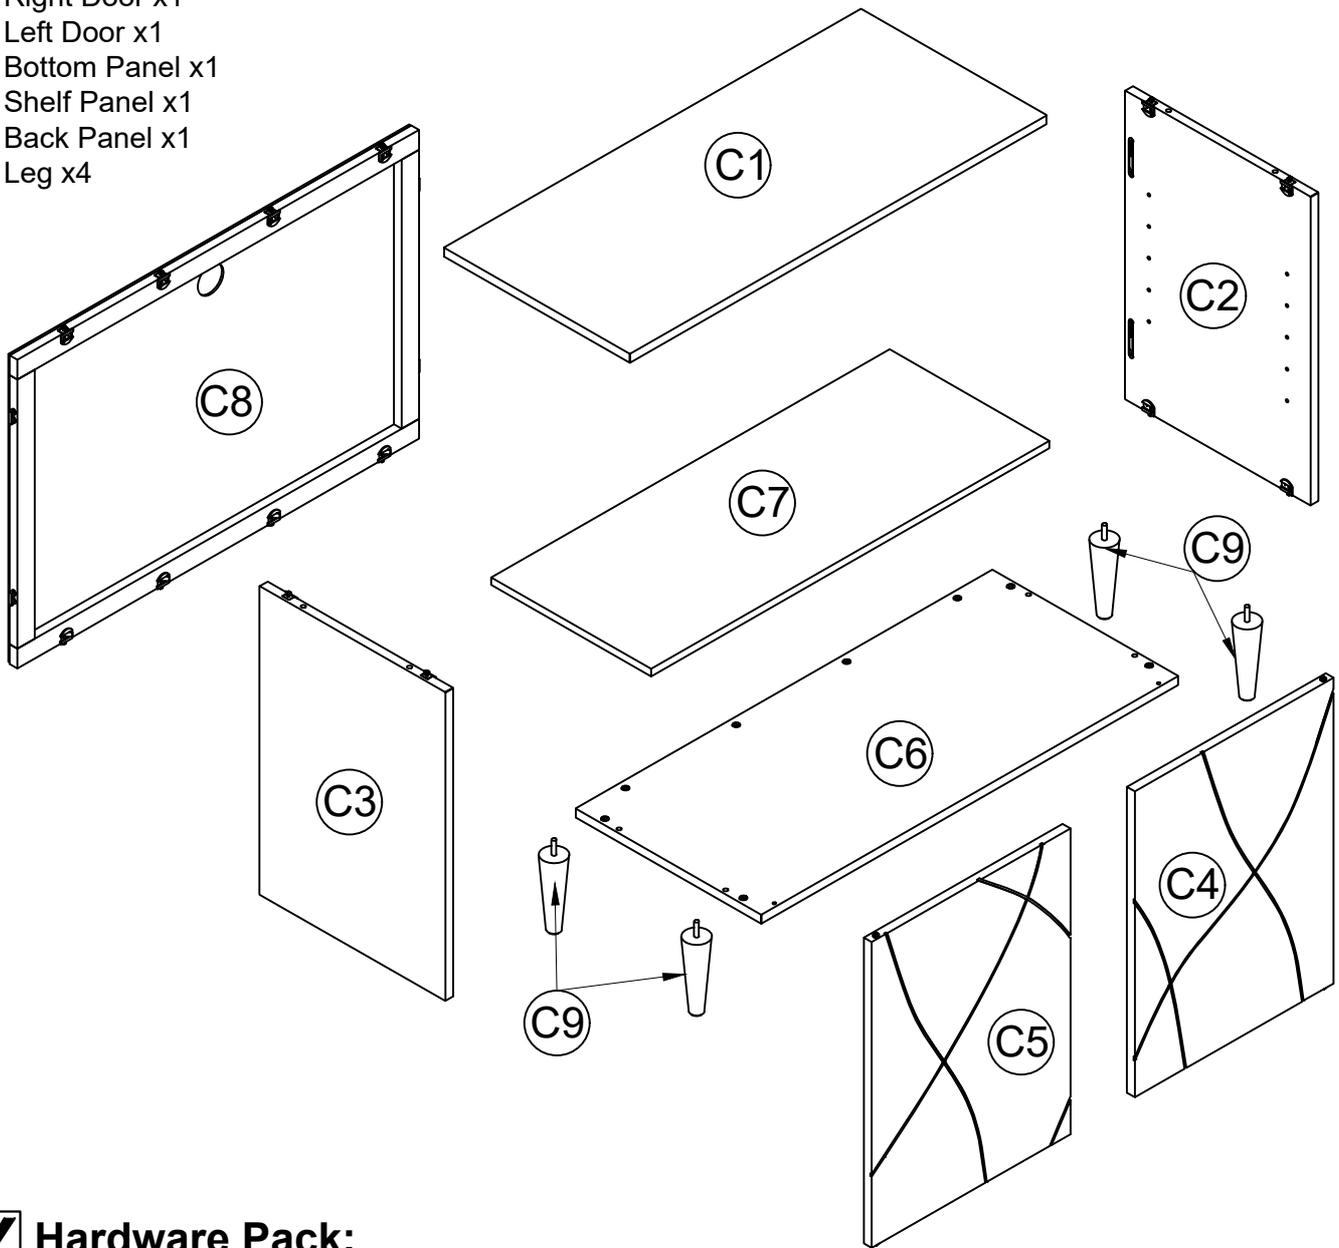


✓ Hardware Pack:


<p>A</p>  <p>Ø8x20 (mm) 8pcs</p>	<p>B</p>  <p>4pcs</p>	<p>C</p>  <p>Ø3.5x15 (mm) 4pcs</p>	<p>D</p>  <p>Ø4 : 1pc</p>
 <p>ANTI-TIP SET</p>			

1



- Please lay all components on smooth flat surface to prevent scratches.
- Use the EPE foam from the packaging to protect the furniture from possible scratches during the assembly process.

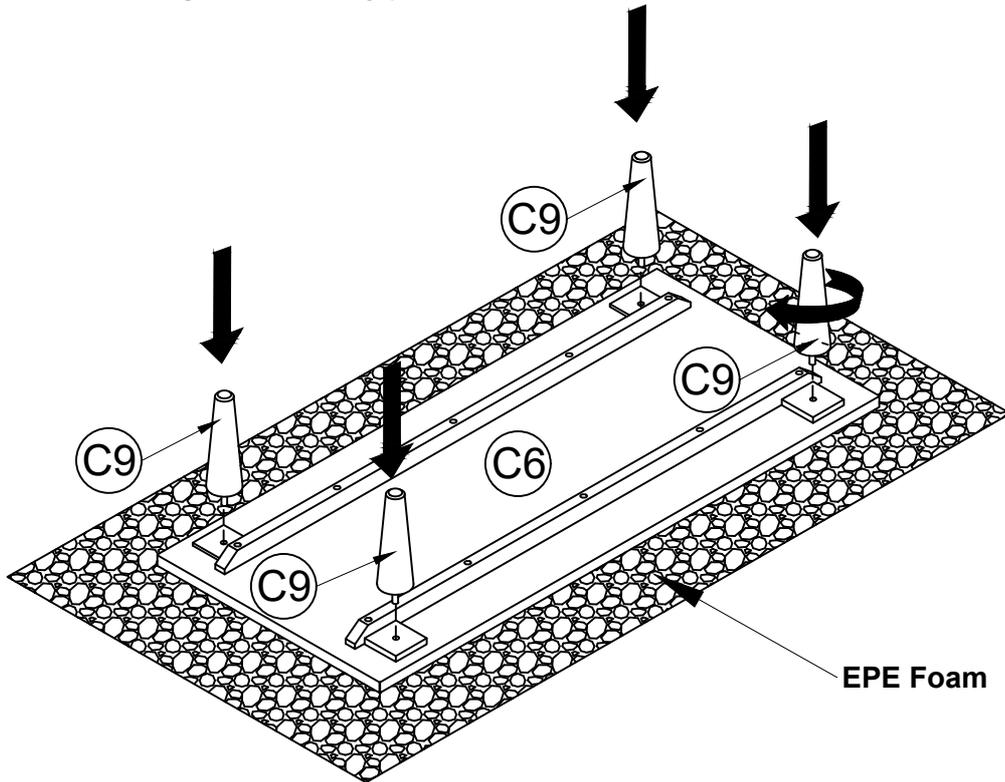

2

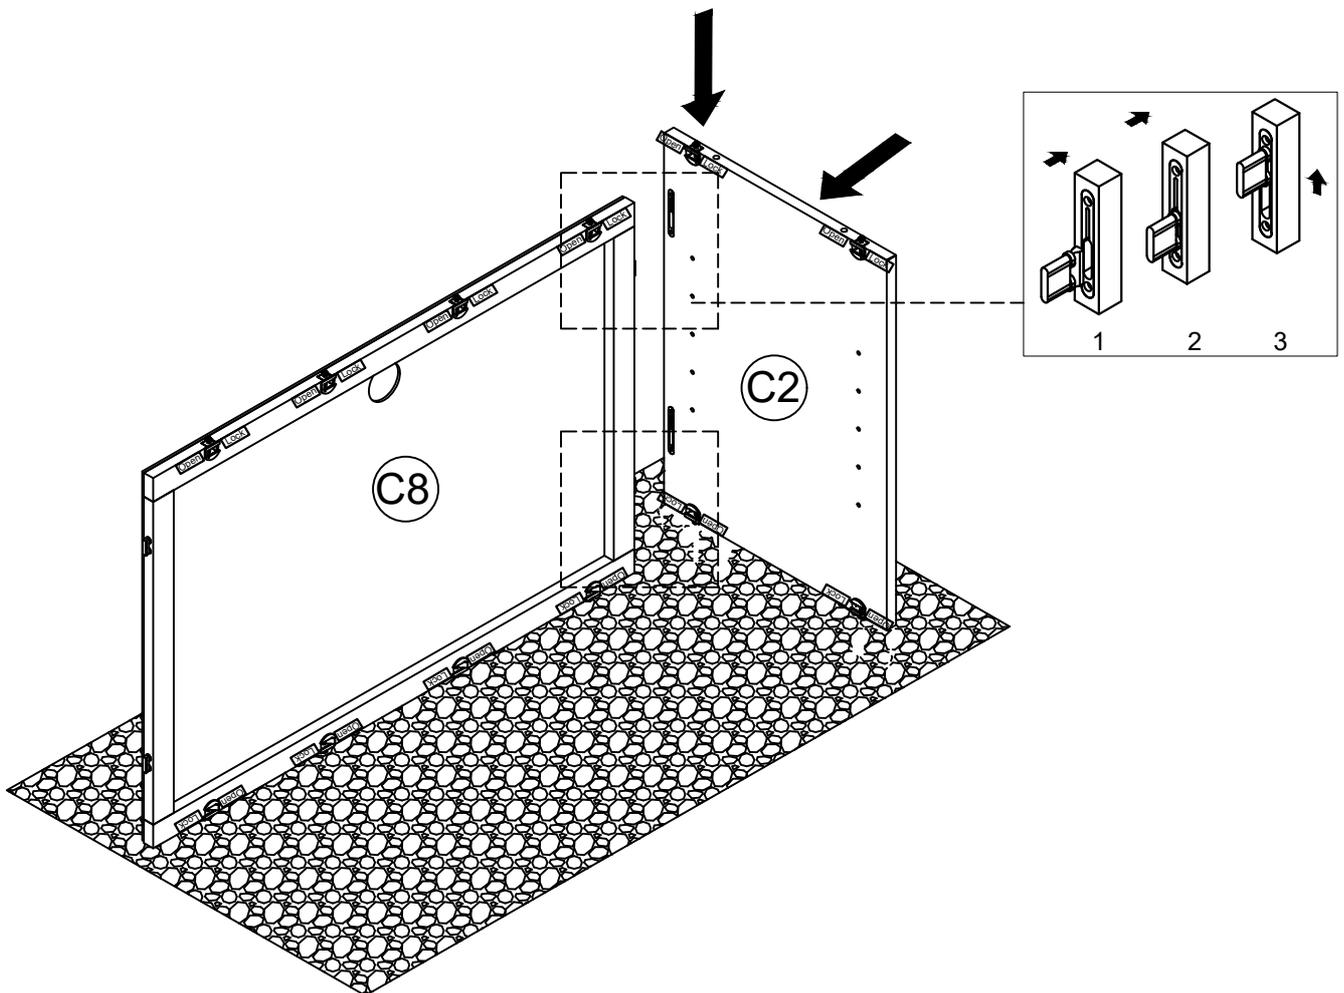

3

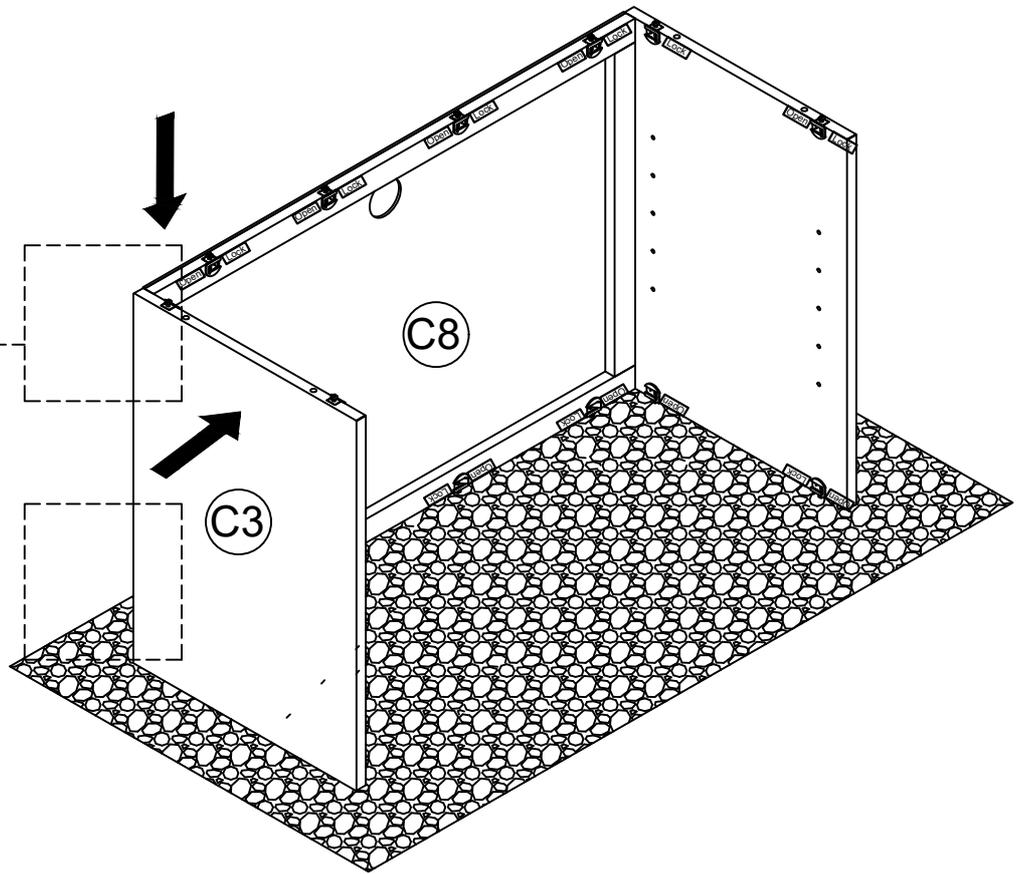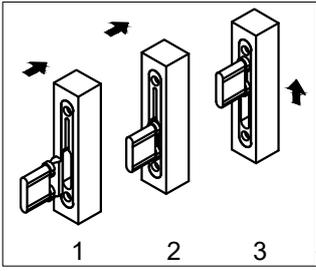





4

A



Ø8x20 (mm) 4pcs



Make sure all latches are in the open position before installing Bottom Panel (C6)

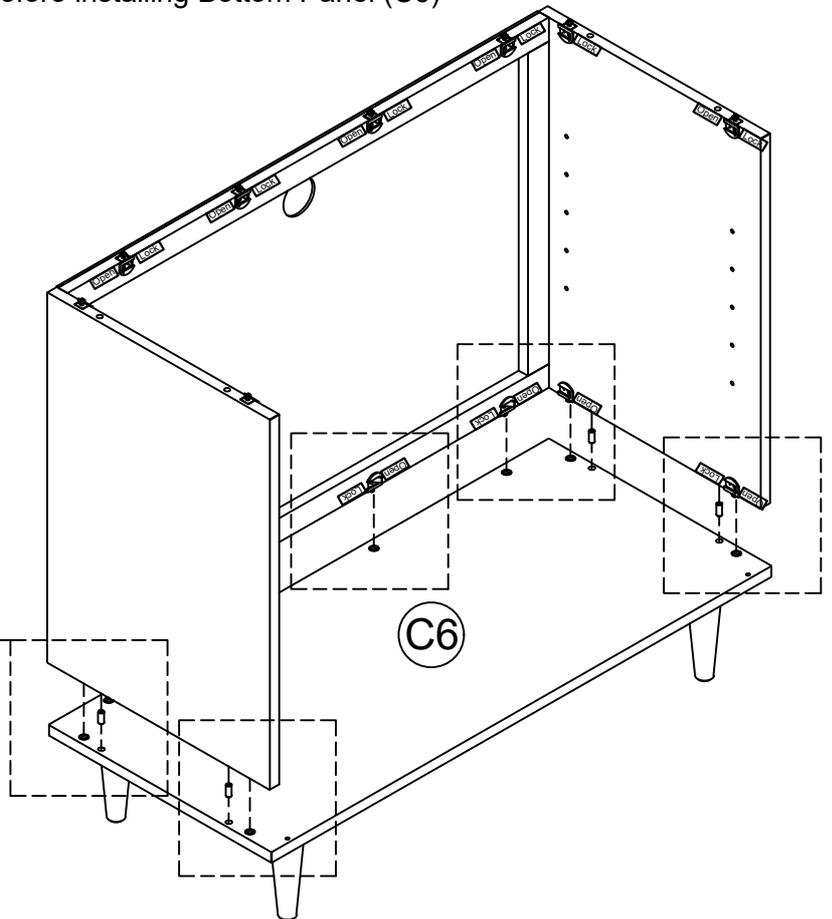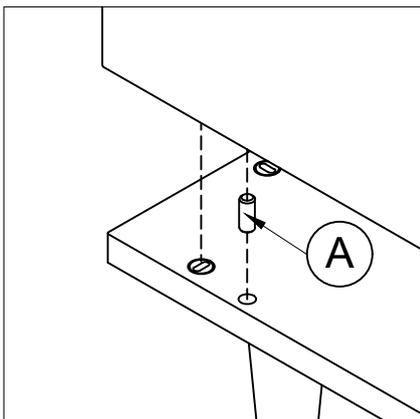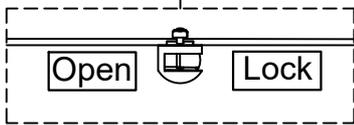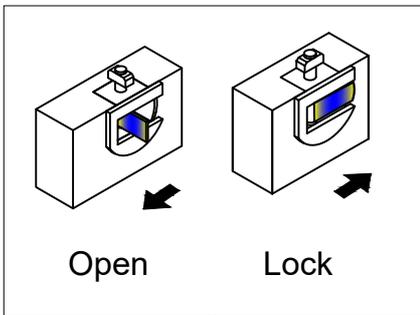


5-8

5





<p>B  4pcs</p>	<p>C  Ø3.5x15 (mm) 4pcs</p>	
---	--	--

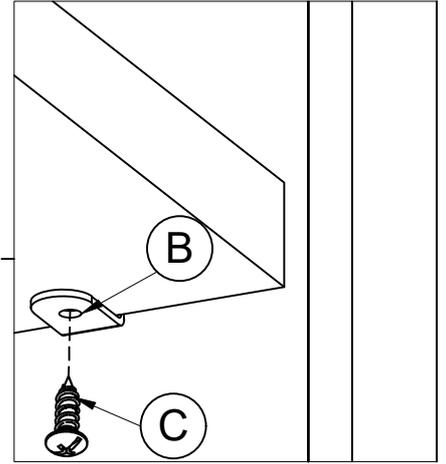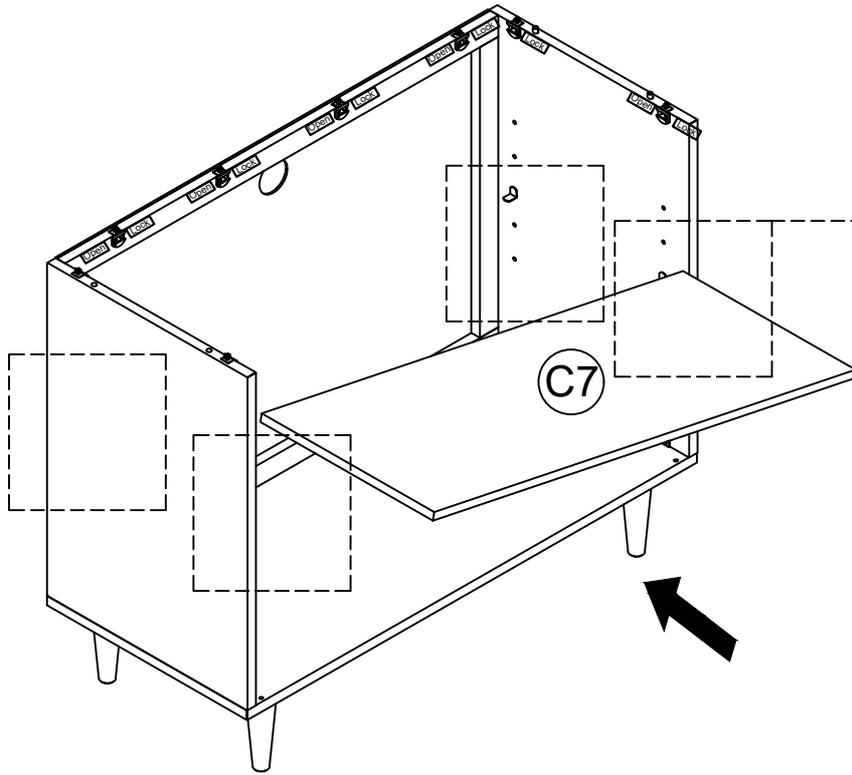

6
 
<p>A  Ø8x20 (mm) 4pcs</p>	
---	--

Make sure all latches are in the open position before installing Top Panel (C1)


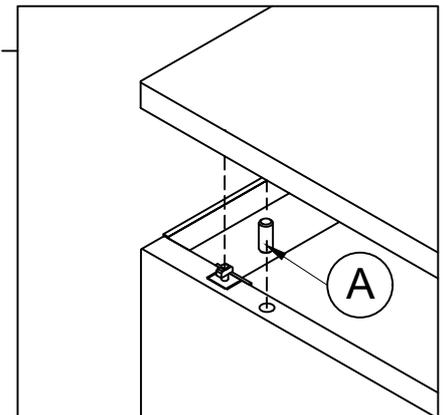
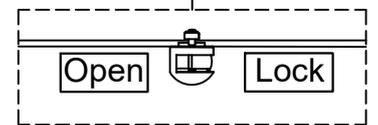
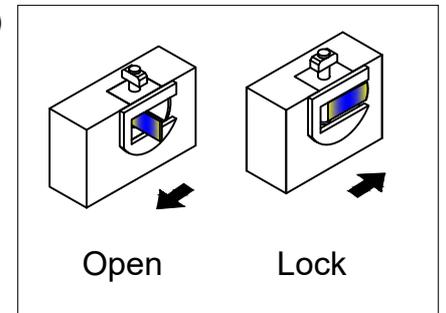
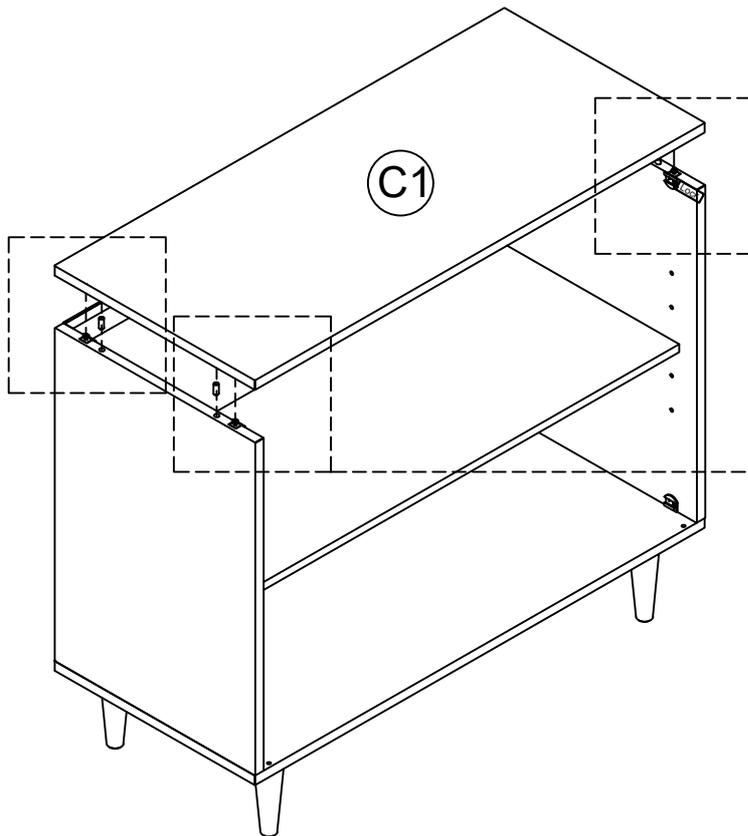



7

D




Ø4 : 1pc

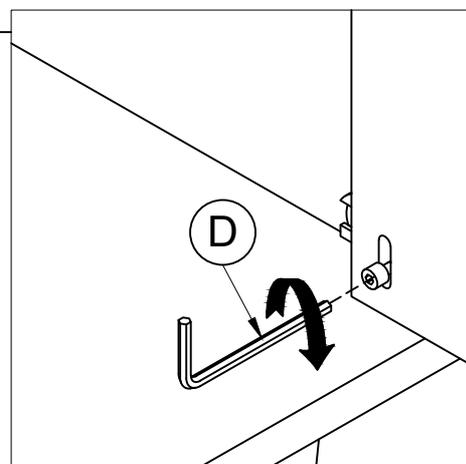
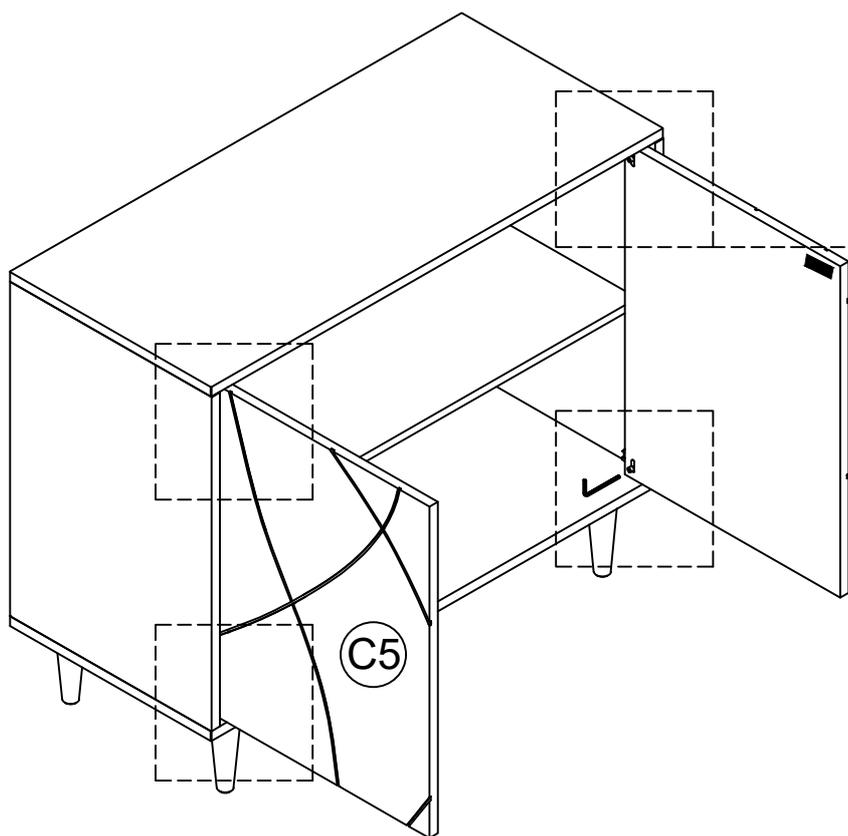
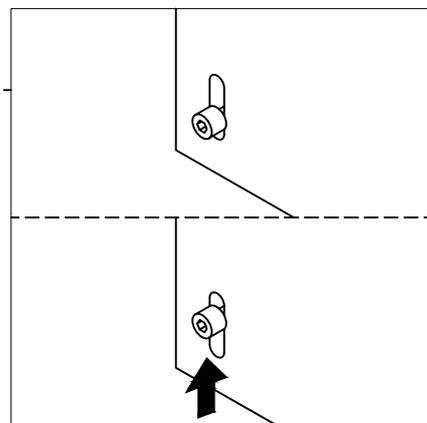
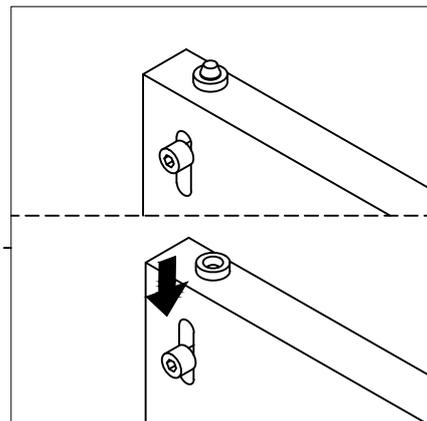
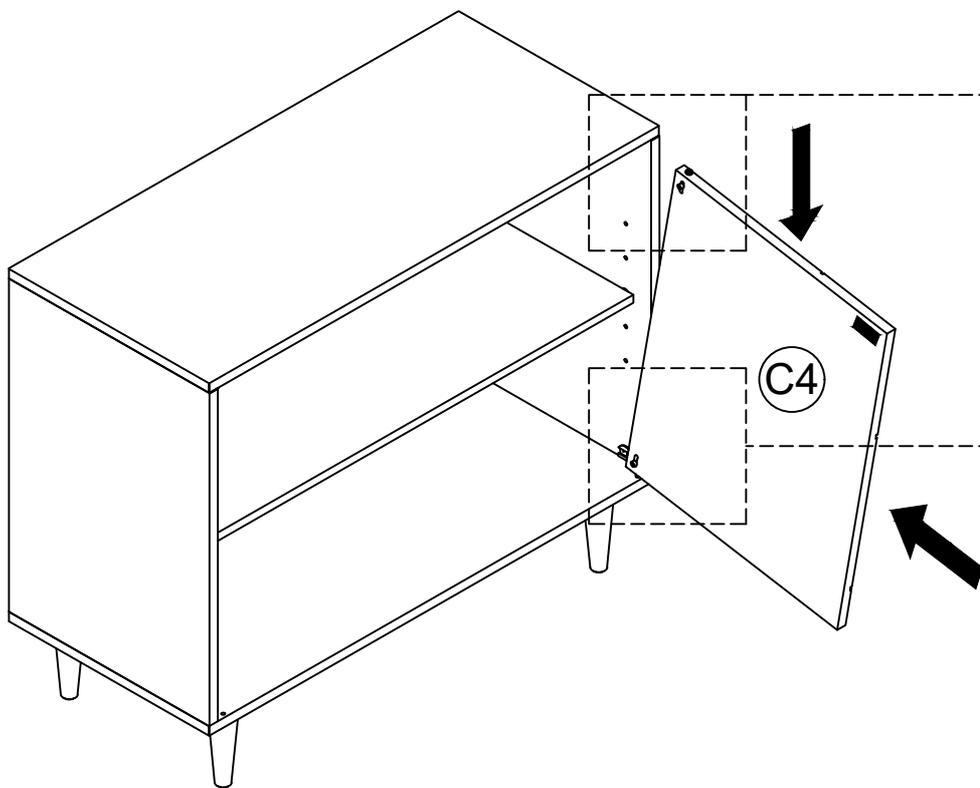


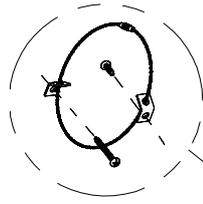


ANTI-TIP SET

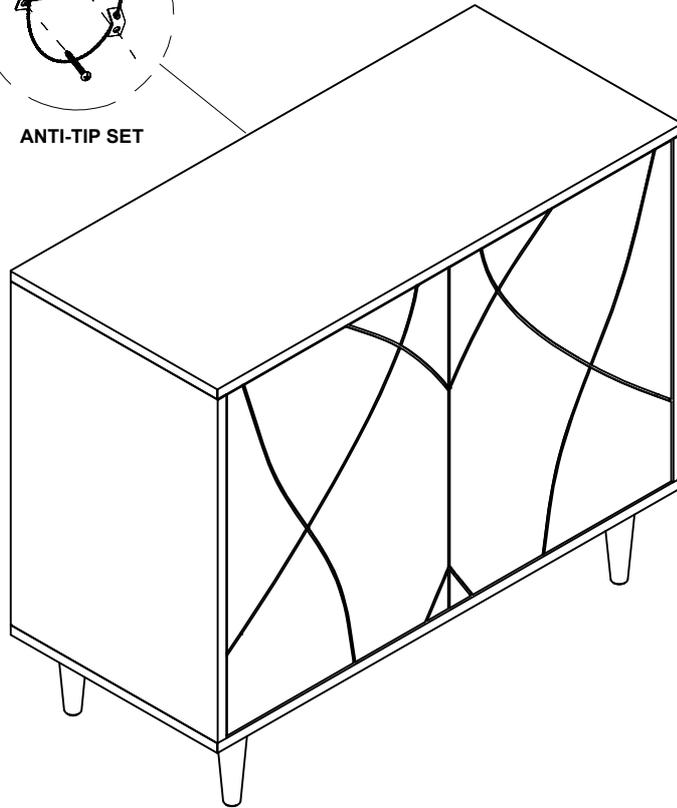

 9 The imbalance of the floor surface may causes different gaps between the front doors. Using provided levelers underneath each leg to balance out this gap. If uneven adjust the leveler on one side when the door on the other side is higher.

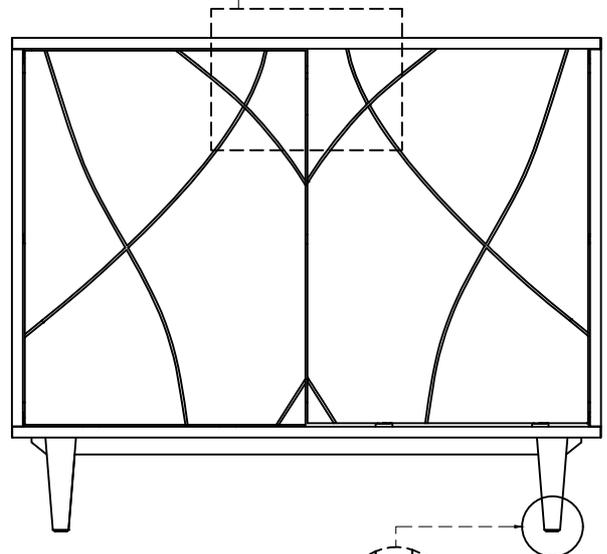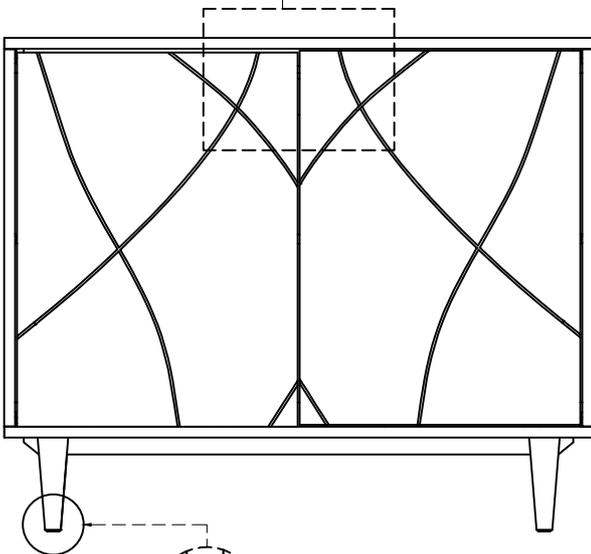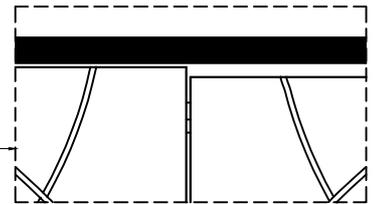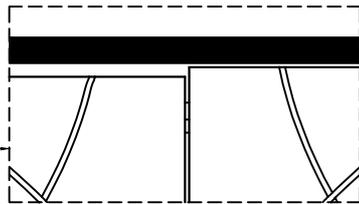

Adjustable Leveler Instructions

 

Adjustable Leveler Instructions



Replacement Part Form

Have an issue? Need a replacement part?

Please E-mail us before contacting your retailer, we will be happy to fix your issue.

This process will be hassle free! We will replace your part for free!

Please follow these easy steps below.

You will need to E-mail *Martin Svensson Home* Customer Service: Customerservice@mshome.co
(Please note it is .CO not .com)

Please scan or take a picture of this form filled out.

1. **Customer Name:** _____

2. **SKU# with issue:** _____

3. **Replacement Part # needed** _____

*Please reference the Assembly Instructions to identify needed part #'s

4. **Photos of the Damaged Part** (please include in the e-mail)

5. **Brief description of the part issue:** _____

6. **Proof of Purchase** (please provide a copy of your purchase receipt)

7. **Ship to Address:** _____

8. **Other contact information:**

Email Address _____

Phone # _____

*If possible, could you please provide the UPS or FedEx tracking from original shipment _____

*If possible, could you please provide the P.O. # - information found on back/underneath product _____

*If you have any other question, we are happy to assist with assembly questions or all other parts related questions. Thank you for your purchase!