

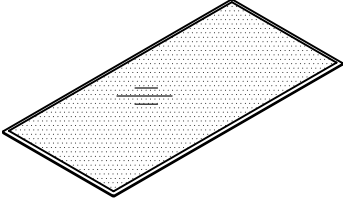
 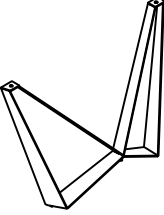




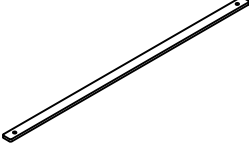


# ASSEMBLY INSTRUCTIONS

## TEMPERED GLASS 69" RECTANGULAR DINING TABLE
  
<b>A</b> Glass Top	<b>B</b> Base	<b>C</b> Cross Bar	<b>D</b> Base Connector
			
1pc	2pcs	2pcs	1pc
<b>E</b> Bolt ϕ5/16" x 5/8"	<b>F</b> Flat Washer ϕ18mm	<b>G</b> Glass Pad ϕ1-1/4"	<b>H</b> Allen Key 5 x 22 x 60mm
			
4pcs	4pcs	4pcs	1pc



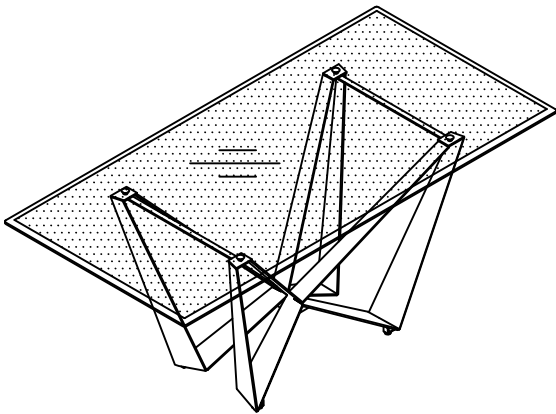
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

### **Note:**


Do not fully tighten all bolts until the assembly is completed. This will help all parts to be assembled properly.

**Two people are needed for assembly.**

- 1 Remove the rubber strips from the Base (B) before the assembly.

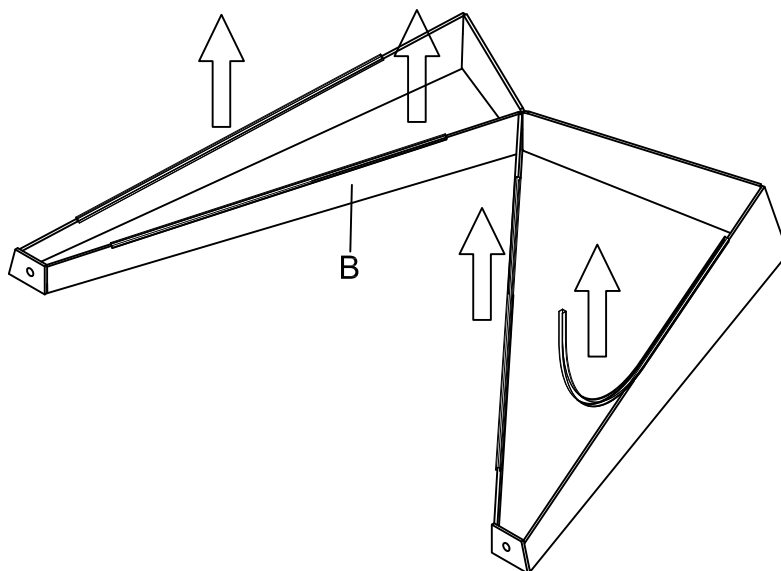


- 2 Attach the Base Connector (D) to the Base (B) using Bolt (E) and Flat Washer (F) with the Allen Key (H).

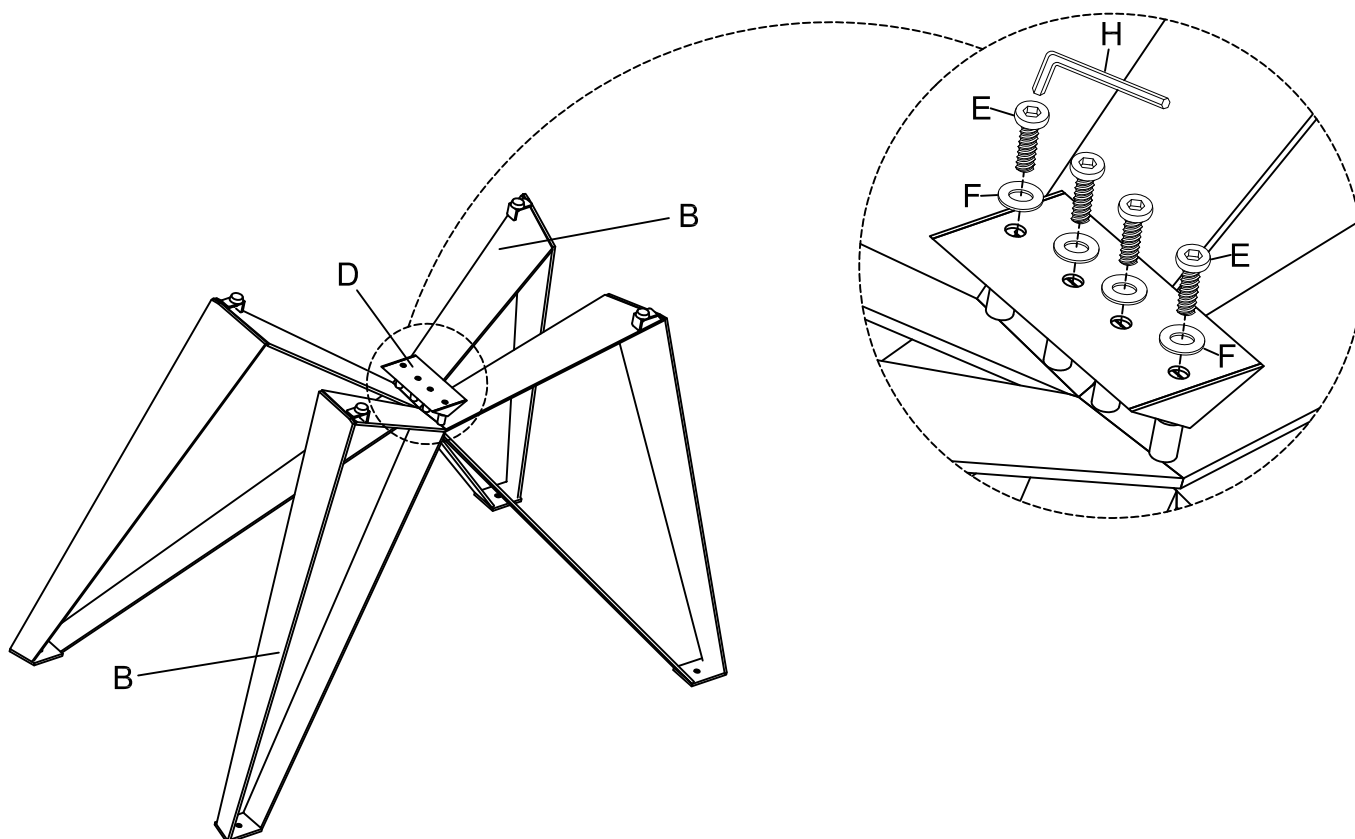


---

**3** Attach the Cross Bar (C) to the Base (B) using Glass Pad (G).

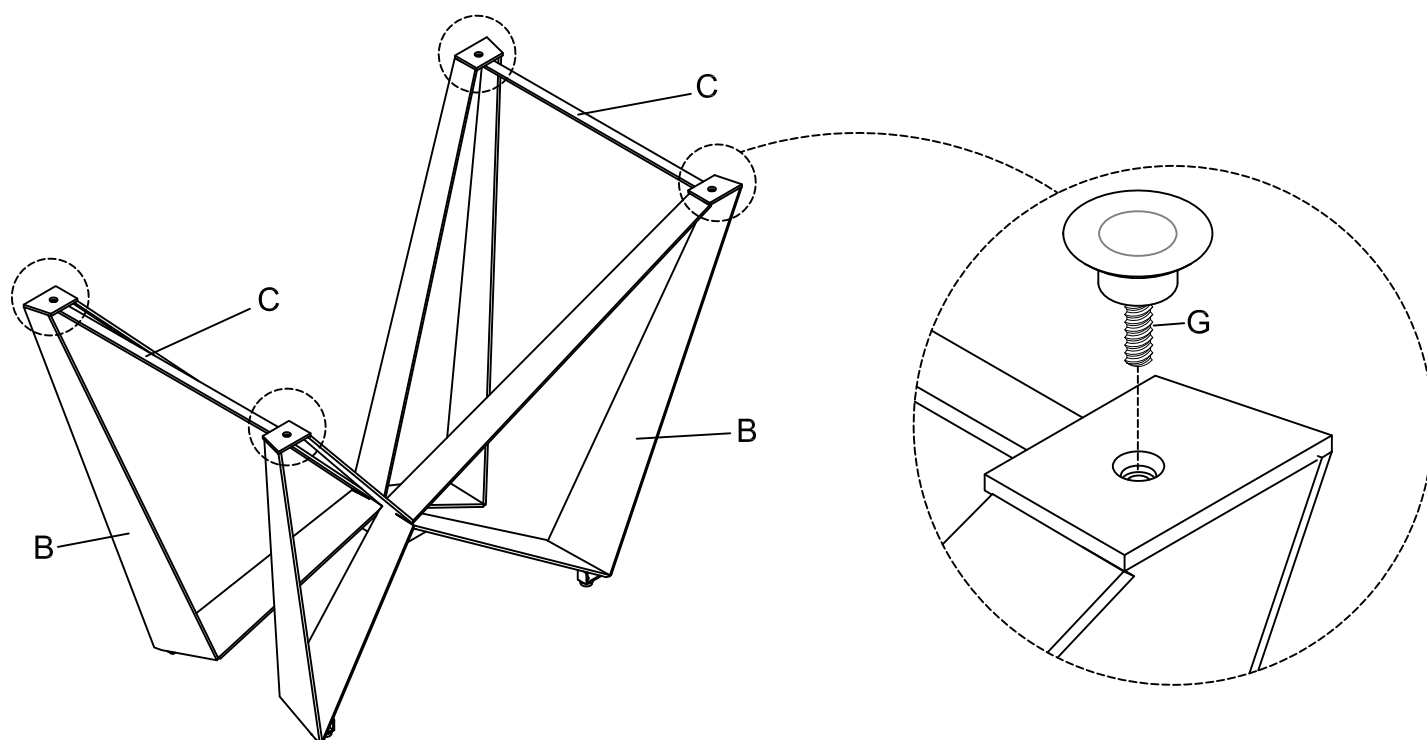

---

**4** Place the Glass Top (A) on the Base (B).

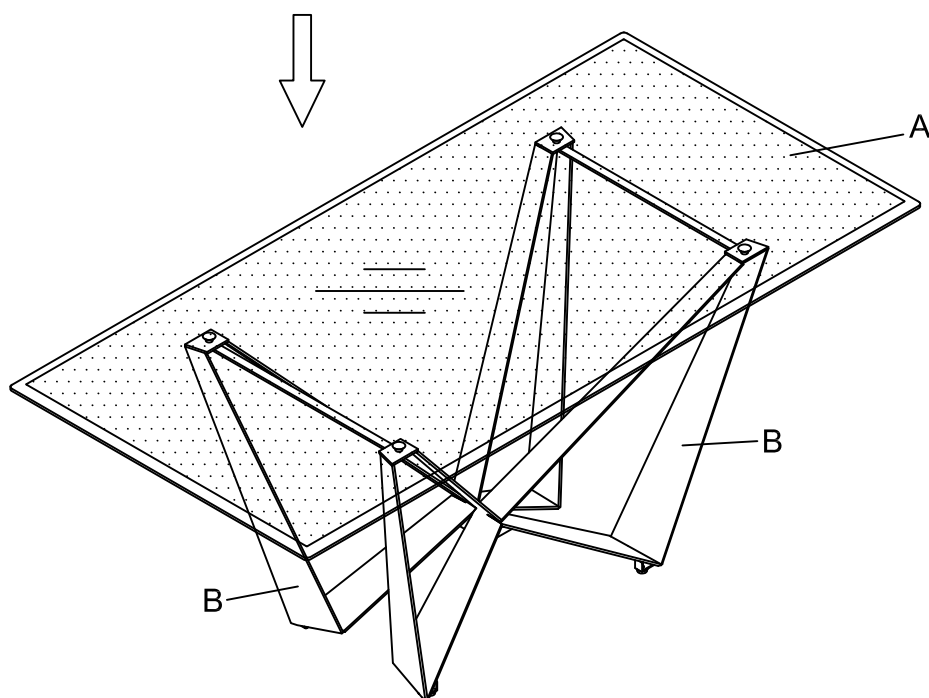

---

**Cleaning & Care**

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.