 


IMPORTANT INSTRUCTIONS DO NOT DESTROY

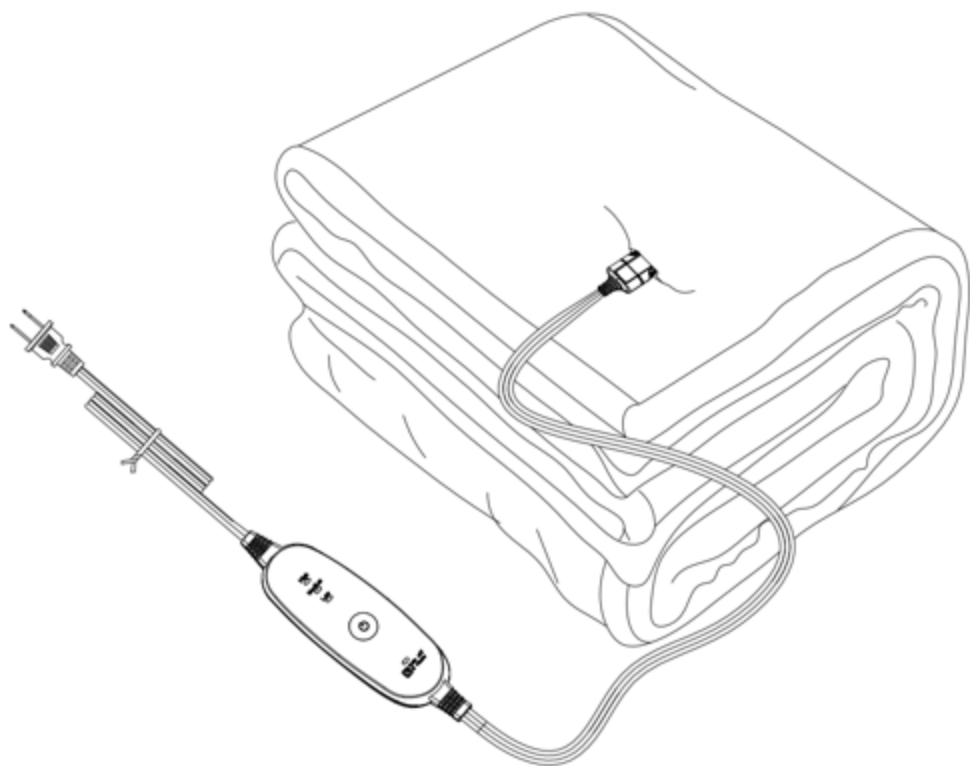

HEATED THROW BLANKET INSTRUCTIONS

IMPORTANT INSTRUCTIONS

INCLUDED

Size	Blanket Body	Controller	User Manual
50"x60"	x1	x1	x1
62"x84"	x1	x1	x1
72"x84"	x1	x1	x1
84"x90"	x1	x2	x1

[Note: Pls check first to make sure the product is complete without any damage. If you have any doubt, pls feel free to contact us.]

PRODUCT SPECIFICATIONS

Name	Heated Throw	Heated Blanket	Heated Blanket	Heated Blanket
Product size:	50"x60"	62"x84"	72"x84"	84"x90"
Input Voltage	AC120V/60Hz	AC120V/60Hz	AC120V/60Hz	AC120V/60Hz
Rated Power	110W	110W	110W	110W
Time Setting	4 hours	9 hours	9 hours	9 hours
Controller No.	LM0641	LM0642	LM0642	LM0643

WARNINGS AND SAFEGUARDS

To operate this warming product properly and safely, there are some critical safety precautions you need to follow. As with all electrical appliances, there is an inherent danger of overheating, fire or personal injury with the product if not used correctly. Please carefully read the following before using the warming product.

1. Do not use with generators, power converters, or inverters.
2. Do not tuck the product or supply cord in a sofa or other furniture. All portions of the blanket or controller should be visible at all times.
3. Do not use with rocking chairs, recliners, chair with casters or wheels or other furniture subject to movement.
4. Never trap or pinch any of the electrical cords in any mattress way. Make sure the cords are never rested between the box springs.
5. If the plug does not fit into your outlet, contact a qualified electrician.
6. Be sure that the power supply is used only on 120V, 60HZ Current Supply.

IMPORTANT

INCLUDED

7. Make sure the cord from the controller to your heated product is connected and locked tightly.
8. The warming products should never be folded, balled up or bunched in any way when in use. May result in overheating and/or permanent wrinkling of the fabric.
9. Never use pins in and around the warming product. They may damage the electric wiring.
10. Cats, dogs and other pets should always be kept away from the product, as a sharp claw may result in damage to the heating element.
11. Keep the controls always from drafty areas that may become damp or wet, such as an open window.
12. Always turn off the electric current when the warming product is not in use, either by turn off the controller or unplugging from the wall outlet.
13. Wrapping of the cord around the controls may damage the cord. Loop loosely when storing.
14. NEVER use dry cleaning fluid on this product, Cleaning solvents may have a deteriorating effect on the insulation of the heating element.
15. Controller is not waterproof. Do not immerse in water.
16. Check with your healthcare provider before using with a pacemaker or any medical devices.
17. The controllers must not be wrapped, covered or tucked when operating.
18. Do not use this bedding with an infant, a helpless person, or anyone insensitive to heat, such as a person with poor blood circulation.
19. Do not tuck in the wired area of this bedding.
20. If improper operation of this bedding is observed, discontinue its use immediately and consult the manufacturer or the dealer regarding its repair.

 
 
NOTE OF PLUG

This appliance has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SET UP PROCEDURES

When setting up your heated product, be sure to follow these steps in order:

1. Locate cord connector on the product near the card instructions label.
2. Do not plug into the wall outlet until you have connected the controller cord to the product.
3. To plug controller cord into the connector, align arrows on the connector and cord and push until they lock.

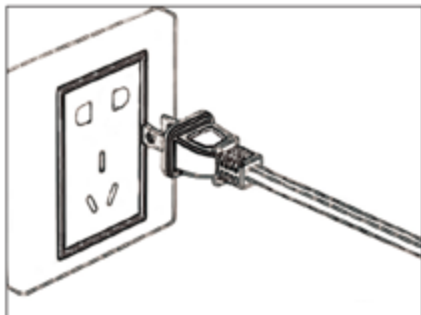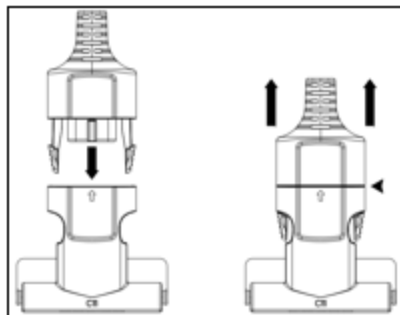


**CAUTION: THE CORD MUST BE COMPLETELY CONNECTED.
A RISK OF FIRE COULD OCCUR WITH A LOOSE CONNECTION.**

4. Plug the power cord into a 110~120V wall outlet.
5. Make sure all cords are tangle free and not trapped or pinched in any way, including but not limited to between mattress and box spring, sofa cushions, against wall, chairs, or other furniture.
6. Do not wrap the controller in the blanket while in use.
7. Do not use with generator power.
8. To disconnected the controller, first unplug the cord from the outlet, then pinch sides of the connector and pull apart.

SET UP PROCEDURES

TO USE

 1. Press the ON/OFF button to switch among Low (1st) →Medium (2nd) →High (3rd).
2. The timing indicator lights up after starting up, and all the indicators are off after the timing off for 9 hours, and the heating is stopped.
3. Display mode of settings indicator: 1 light on Low, 2 lights on Medium, 3 lights on High.

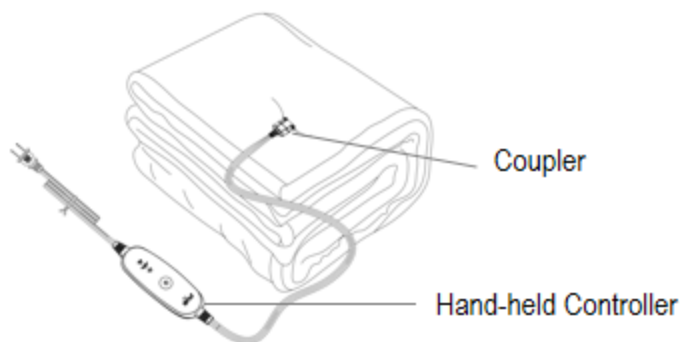

Controller function operation

1. Standby: Connect the corresponding type of blanket body and plug in 120V 60Hz power, all indicators are off, and the main body is not heated;
2. Continuous single-press "⏻" button 3s to turn on, settings from low to high switch working state. Low → Medium → High → OFF → Low ...
3. After 9 hours (50"x60" Throw only 4 hours) of heating, the timing indicator and heating setting indicator of the controller will be OFF, and the heating will stop and enter the standby state. If you press "⏻" button 3s again, the working state will enter the Low setting as well.
4. In the state of setting heating, when pressing the setting is switched OFF under constant power, the timing will return to zero, and the heating timing will start again for 9 hours (50"x60" Throw only 4 hours).

CARE INSTRUCTIONS

CARE AND CLEANING OF YOUR HEATED BEDDING PRODUCT

We recommend washing before initial use.

Washing or Storing Your Heated Bedding Product:

1. Disconnect power cord from wall BEFORE detaching control cord from the heated product.

2. Ensure that no cords are still connected and none of the wires have worn through the fabric.

3. Carefully follow all washing instructions or your heated product may shrink and possibly cause a fire hazard.

- DO NOT submerge control in water
 - DO NOT dry clean your heated product, Dry cleaning solvents may damage the wires.
 - DO NOT use bleach or cleaning fluids.
 - DO NOT use a wringer.
 - DO NOT iron your heated product.
 - DO NOT use mothballs or sprays of any kind.
 - DO NOT reconnect the heated product or use it until it is COMPLETELY dry.
 - DO NOT wash or put into water the power cord or any of the product's cords.
 - DO NOT use analgesic cream in combination with your heated product.
- Taking care of your heated product is easy and safe as long as you follow a few simple steps.

Machine Washing

1. The blanket/ mattress pad/throw for 15 minutes in mild soap and cold water.

2. Wash in mild soap and cold water on the "delicate" or "gentle" cycle in the washer for two minutes Remember, do not use bleach.

3. Rinse in fresh, cold water.

4. Spin dry in the washing machine Then gently stretch to its original size.

Machine Drying

Caution: Do not use commercial dryers or the dryers at your local Laundromat. They get too hot and would damage the wiring of the heated product.

1. Preheat the dryer on the "low" temperature setting for 2 minutes.
2. Place blanket/mattress pad/throw into the dryer and tumble dry for 10 minutes at a low temperature.
3. Remove the blanket/mattress pad/throw while it is still damp and gently stretch it to its original size.
4. Drape the heated product over a clothesline or a shower rod. DO NOT use clothespins.
5. Heated product must be COMPLETELY dry before reconnecting the power plug or control plug.

Hand Drying

1. Gently stretch the blanket/mattress pad/ throw back to its original size.
2. Drape the heated product over a clothesline or hang over a shower rod.DO NOT use clothespins.
3. Heated product must be COMPLETELY dry before reconnecting the power plug or control plug.

TROUBLE SHOOTING

DRYING INSTRUCTIONS

NEVER USE COMMERCIAL DRYERS AT THE LAUNDROMAT-THEY MAY BE EXTRA HOT AND COULD DAMAGE THE WIRING.
DO NOT IRON. DO NOT PLUG IN UNTIL COMPLETELY DRY.

MACHINE DRY

To machine dry, put your product into a family washing machine and dryer on low heat below 40°C. Ensure that the textile has enough room to tumble freely. if blanket draws in during washing, while still damp gently stretch until it returns to its original size.

LINE DRY

You can line dry simply by draping the warming product over two parallel clotheslines or a shower rod with the head and foot ends down.

Do not reconnect warming products until they are completely dry.

Do not use clothes pins that can pinch wires.

STORAGE

Store as you would any other bedding, folded in a dry place.

Q: The indicator light on my controller is flashing. What should I do?

A: Turn the controller off. Unplug the controller from the wall outlet. Unplug the controller cord from the product. Wait 30 seconds and reconnect making sure the arrows are properly aligned. Now plug into the 110-120 volts wall outlet.

Push control button until the temperature is on high. If you still have issues, contact the producer.

Q: I feel some warmth but not a lot. How warm

A: This product will provide enough warmth to keep you quite comfortable even in a very cold room. The product is not like a heating pad. In normal operation it does not feel hot to touch, however the warmth is evident when in use.

Q: The controller is lit but the product does not heat up.

A: Test the product by folding the textile over on itself and turning the setting to high. Ensure that the indicator light is on. After approximately five minutes, carefully feel between the layers. Caution: Never leave the product turned on and folded up for more than 5-7 minutes.

Q: Why is my controller warm?

A: A small amount of heat is produced when transferring power from the wall to the product. This warmth is completely normal and is nothing to be concerned about.