

TOOLS REQUIRED

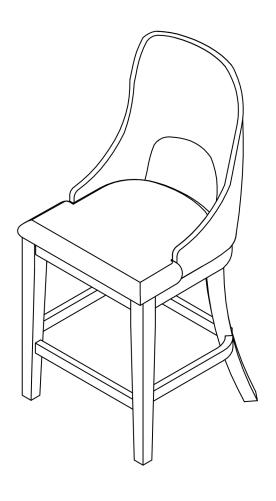

 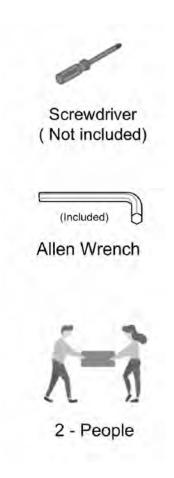


ASSEMBLY RATING



EASY — DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



10	Are you missing anything?	Check out our Quick Tips!
	Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
	Should we send any replacements?	Prep Time!
	Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.

 




Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

COUNTER HEIGHT CHAIR



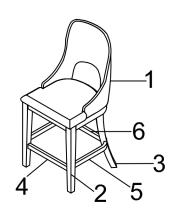


PARTS





 
SEAT AND BACK CHAIR 1pc






FRONT STRETCHER 1pc



 


FRONT LEGS L/R 2pcs



 


SIDE STRETCHER L/R 2pcs



 

BACK LEGS L/R 2pcs



 

BACK STRETCHER 1pc

HARDWARE





ALLEN WRENCH 1pc





LOCK WASHER Ø 1/4 x 19mm 8pcs





BOLT Ø1/4"x 2" 8pcs




()000000000>>

SCREWS Ø8"x 1 1/2" 8pcs







LOCK WASHER Ø 1/4 8pcs

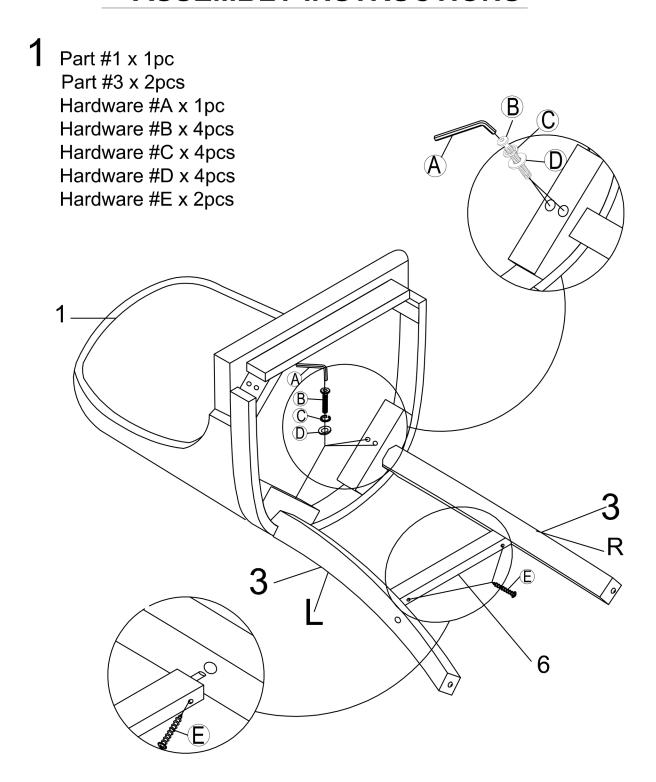

Attach the back legs R / L(#3)to seat frame $\,$ (#1) . Secure by using Bolt (#B) with Lock Washer (#C) and Flat washer (#D) using Allen wrench(#A). . Attach the back stretcher (#6) to the back legs L/R (#3) using screws (# E).

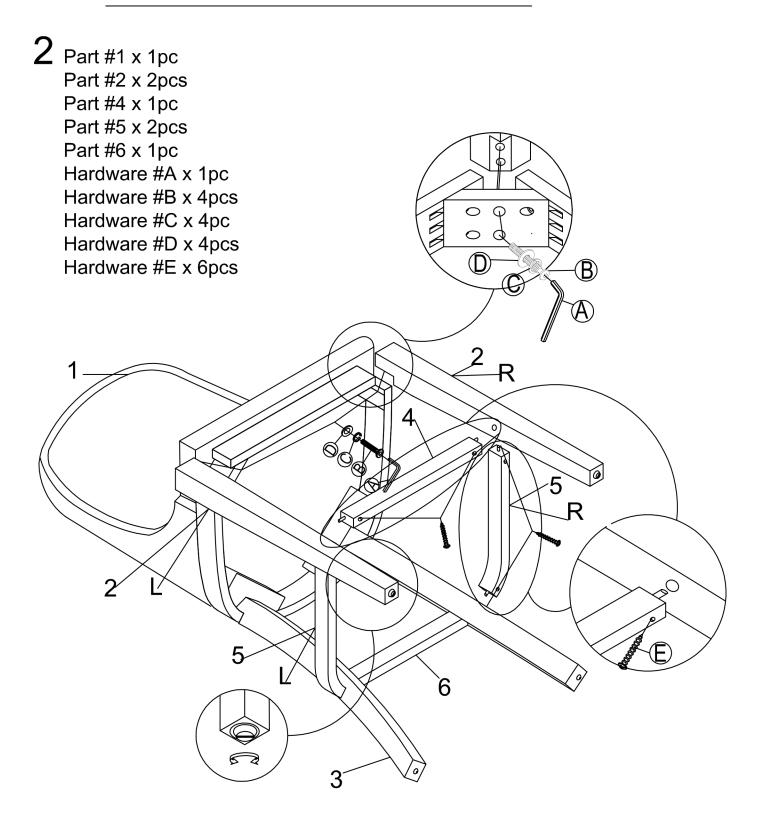

Attach the Front legs L / R (#2)to the seat frame(#1) . Secure by using Bolt (#B) with Lock Washer (#C) and Flat washer (#D), Allen wrench (#A). Attach the side stretcher L/ R (#5) , Front stretcher (#4) to the front leg L/R (#2) using screws (# E)

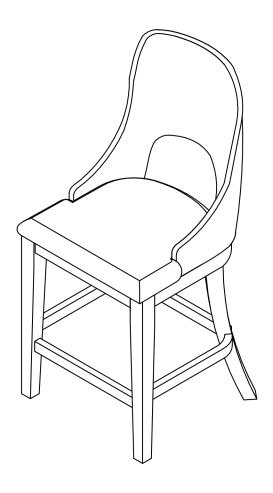

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.