Guide Book

- R/C controls forward/backward and left/right, remote control priority
- Music and horn
- Volume adjustment
- Power display
- Forward and backward
- High and low speed
- Wireless connection




If you have any question, please contact at L843485741@outlook.com directly.

WARNING: This toy must be assembled by an adult
In unassembled state contain potentially hazardous sharp points,
sharp edges and small part,so please keep out of baby's reach

Warning: Not to be used in traffic.

Parts List:(Name and Quantity)

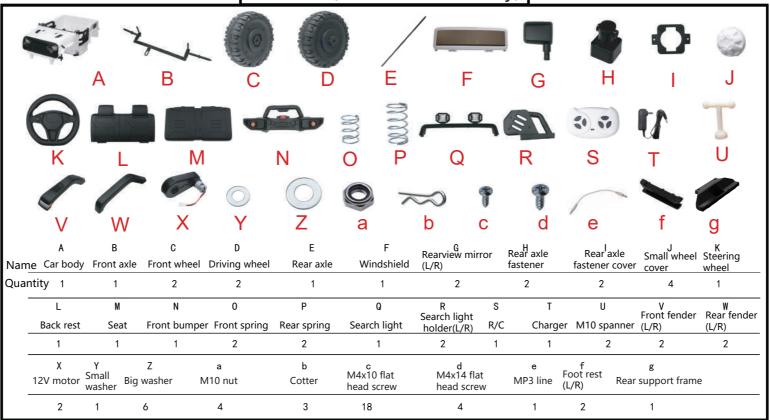




1:horn sound
2:switch music

24V motor:
2pcs(Optional)

Function

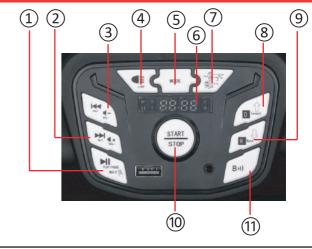

Button function

- ① Stop/play switch ⑦ High/low speed
- ② Short press to switch music/Long press volume+
- 3 Short press to switch music/Long press volume-
- (4) Light control switch (10) Power switch
- ⑤ Mode switch
- Wireless connection

Forward

Backward

1 ower display

Remote control function and explanation

Do not shift forward/backward button when car is driving, or will damage the motor.

Remote control can be used normally when battery is assembled. Remote control should be used under adults' supervision. Remote control is preferred to manual control.



How to adjust R/C frequency: Long press forward and backward button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright which means the connection is successful. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

a. First time use need to match code, this product has memory function Replace battery is unnecessary match code

b. Hold down "" keys for 3 seconds start match code, The first LED flicker c. Turn on the car body power now, The first LED light up, Match code succeed

Stop
Right
Left
Code

d.Remote will be standby if you don't operate it within 10 seconds, press any key to wake up.
e. Keys caption: "△" Forward, "▽" Back,
"○" Left, "○" Right, "S" Speed,
"P" Brake. Press "S" key set up speed

"P" Brake. Press "S" key set up speed 1 led light up is low speed, 2 leds light up is medium speed,

3 leds light up is high speed, Back a car is only low speed Press "P" key hold the brake,

All LED flicker

Remote control battery operation

Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity.

New and used batteries cannot be used together.

Do not insert batteries into wrong polarity, or will be short-circuited. Non-rechargeable batteries cannot be recharged. Exhausted batteries should be replaced by adults.

The exhausted battery must be handled and operated properly by adults only. Do not be played by children

Product Specifications:

Specification Name Specification Name Battery 12V or 24V Speed 3-7 km/h Charge/Use time charge 8-12h, use 40-50min 12V or 24V Motor Charger 12V or 24V Suitable age 3+ year Loading capacity 50kg Remote control battery AAA1.5V Steering wheel battery AA1.5V Product size 120×80x82cm

The above parameters are selected by the customer, and the specific parameters shall be subject to the actual sample.

Search light battery AA1.5V

Step-by-step Installation Diagram

1. Front bumper assembly

Insert the front bumper into the car, use M4x12 flat head screw to tighten.



2. Front fender, foot rest, rear fender, rear support frame assembly

Insert the front fender, rear fender into the car, then insert foot rest into the car, use M4x12 flat head screw to tighten. The same way for the other side. Open the hood, take out the rear support frame, use M4x12 flat head screw to tighten it on the reserved place of the car.



3. Rear spring, rear axle fastener, rear axle fastener cover, rear axle, motor, driving wheel assembly

First, put the rear spring into the rear axle fastener, then add rear axle fastener cover to the fastener, use M4x12 flat head screw to tighten. Second, pass rear axle through the fastener, then add motor, driving wheel, big washer one by one, use spanner to tighten the nut. At last, insert the small wheel cover into the wheel. The same way for the other side.





4. Front spring, front axle, front wheel assembly

Put the front spring on the round tube, pass the front axle through the tube, and press the axle hard while adding big washer to the axle, then use cotter to tighten. The same way for the other side. Pass the direction lever through the hole of front axle, then add small washer to the axle, then use cotter to tighten.

Add front wheel, big washer one by one, use spanner to tighten the nut. At last, insert the small wheel cover into the wheel.




5. Windshield, rearview mirror, steering wheel, battery assembly

Insert the windshield, rearview mirror into the reserved place of the car. Unscrew the battery cover, add 2pcs battery, use screw to tighten the cover. At last, connect the steering wheel to the car.



6. Motor line connection

Connect the motor line like picture.

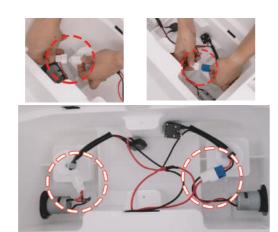

7. Seat and back rest assembly

Insert the seat into the reserved place on the car first, then insert the seat into the reserved place on the car. At last, use M4x14 to tighten






8. Search light, search light holder, battery assembly

Unscrew the battery cover, add 2pcs battery, use screw to tighten the cover. Take out the screw and nut from the search light holder, insert holder into the car, then insert search light into the holder. At last, use screw and nut to tighten.



9. Battery line connection

Open the hood, connect the battery line like picture.

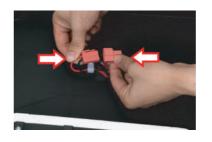



Safety use

Do not play in the street, road, slope or ditch. Do not change the line or add electric device to the car. Play the car in the dry area, not wet. Keep away from fire,

One or two riders one time only. Do not overload.

Maximum capacity is 50KG.

or may damage the line.

Turn power off if no use. If the product is not going to be used for an extended Check battery, charger and other spare parts regularly.

If any problem, please fix it before playing.

Charging notification

Please charge it for 8-12 hours before first time playing. If not, may damage the battery.

Plug charger DC line into charge hole first, then plug

charger into socket. Car can not be played when it charging.

Everytime it charged, do not charge more than 20 hours. It is normal that charger and battery warm (under 60°)

during charging.

Do not charge if plug is wet, or will occur short-circuited.

Only use charger provided by manufacturer, or will damage charger and battery or occur short-circuited.

If long time no use, please charge 1 time per month at least.

Charging steps are as follows:

Step 1: The charging hole is under the steering wheel.

Step 2: Put the charger plug into the plug hole.

Step 3: Connect the charger to the power socket.





Warning: Car must be charged by adults only. Car is useless during charging

Maintenance and Service

Check battery, charger and other spare parts regularly. If any problem, please fix it before playing.

- Use lubricating oil to care iron parts. Keep car away from fire and sunshine. Park it on the even place, not reversal or gradient.
- Park it indoor and cover it with waterproof cloth.
- Keep car away from fire, like stove or heater, or plastic may melt

Keep away from flammable things, or may occur fire accident.

- Charge it after use and must be done by adults only. If long time no use, please charge it 1 time per month, in order to maintain betten.
- Clean the vehicle with a dry cloth only. Do not use chemical solvent to wipe plastic parts. Do not wash it with water or play it when raining or snowing. Water will damage motor, electric system or battery.
- Please turn power off after each use.
- Only use charger provided by manufacturer.
- Do not change cars structure or electric line. Check job request some skills or under specialists guidance.



For children's safety, please read these carefully.

Assembly and adjustment must be done by adults, keep children away. Keep children under 36 months away from small parts.

Safe belt is a must when children playing. Do not be close to fire.

Adult must teach how to play it and never leave children alone while playing. Do not stand up or play when children are stepping on foot pedal.

Battery must be charged by adults only. Please charge it first before use.

Keep children away from plastic bag, or suffocation may occur. Only use spare parts which provided by manufacturer.

Charger is not a toy for playing.

Maximum loading capacity is 50KG. Do not overload. Suitable age: **3+ year**.