

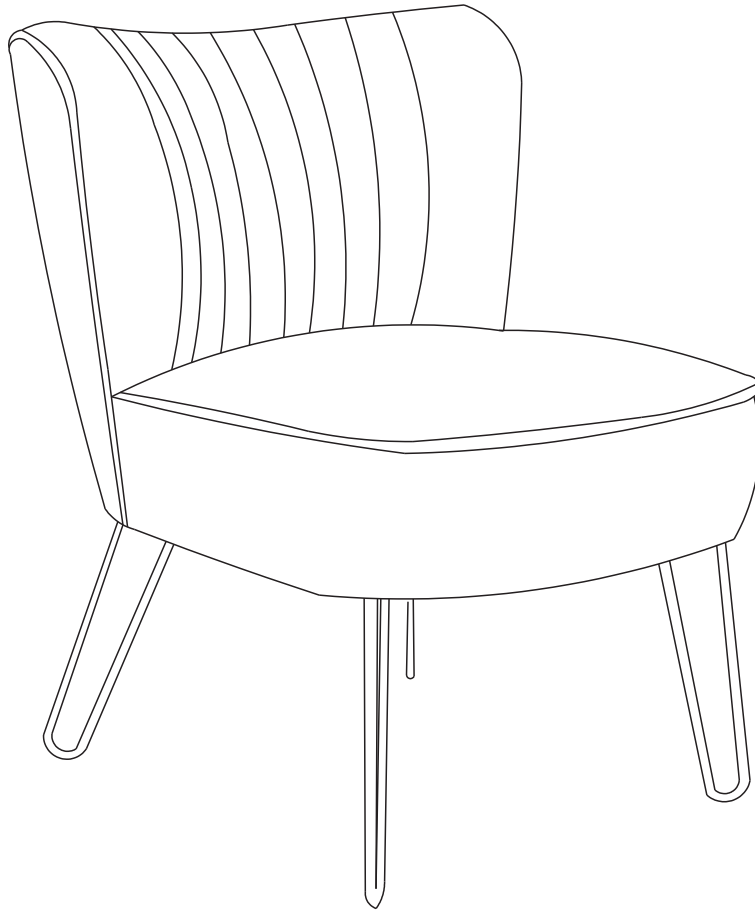
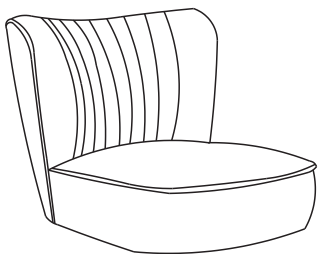
 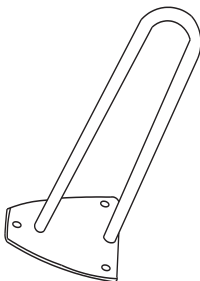


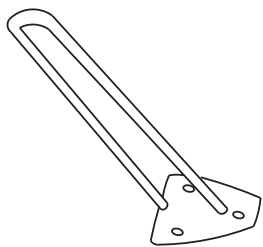

WH- 2326

ASSEMBLY INSTRUCTION




1 × 1 	2 × 2  Front Leg	3 × 2  Back Leg
A × 12  M6x20mm	B × 1  	C × 4  Foot Pad

Notice:


1. Please take out the legs and hardware from the seat bottom before assembly.
2. If any parts are missing or damaged, kindly inform us by specifying the letter of the required parts. Providing photos will greatly assist us in offering a prompt solution.

1

Take the legs out from the seat bottom.

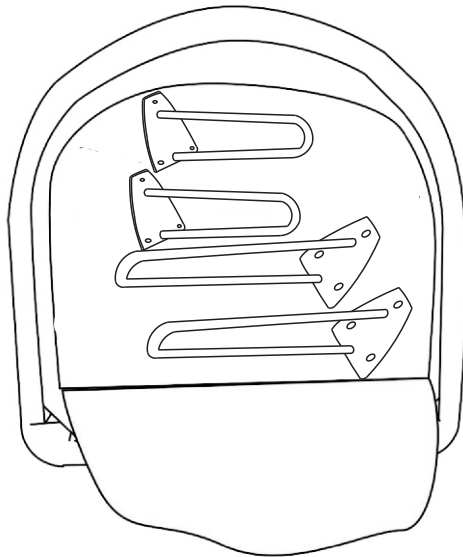
**2**

Connect the front legs(2) with the seat(1) by using screws(A) with allen key(B).

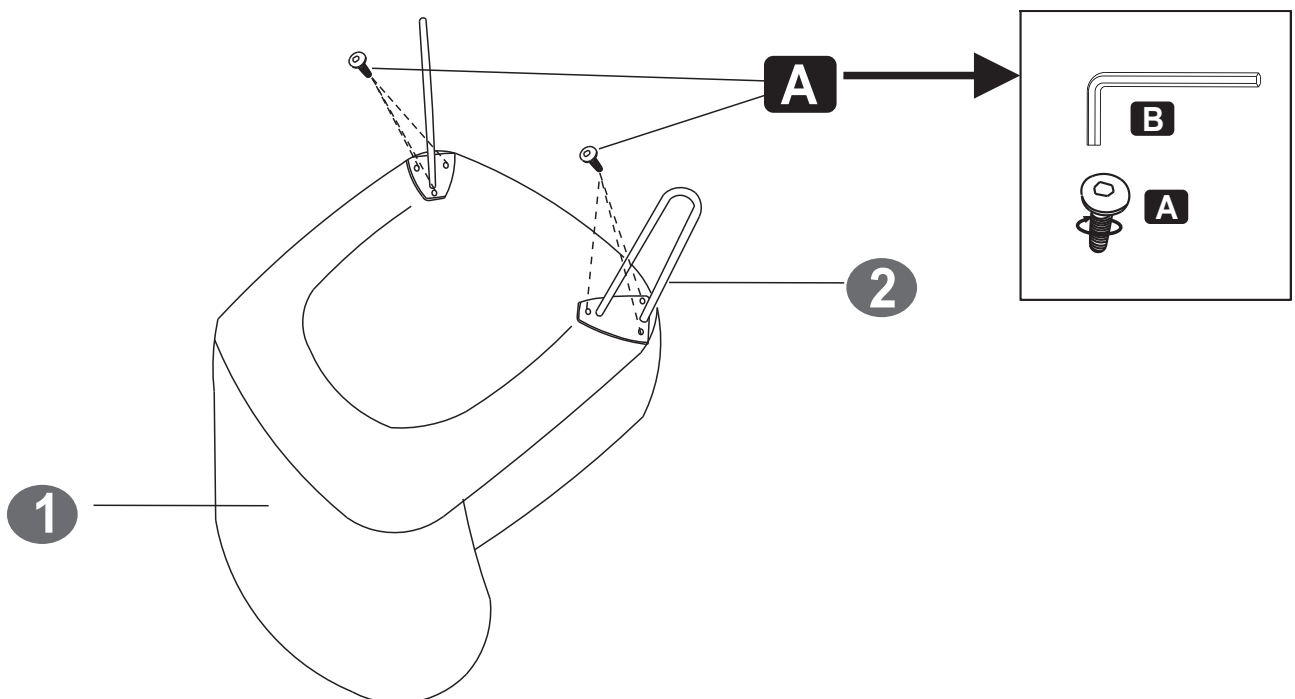

3

Connect the back legs(3) with the seat(1) by using screws(A) with allen key(B).
Attach the foot pads (C) to the leg bottom.

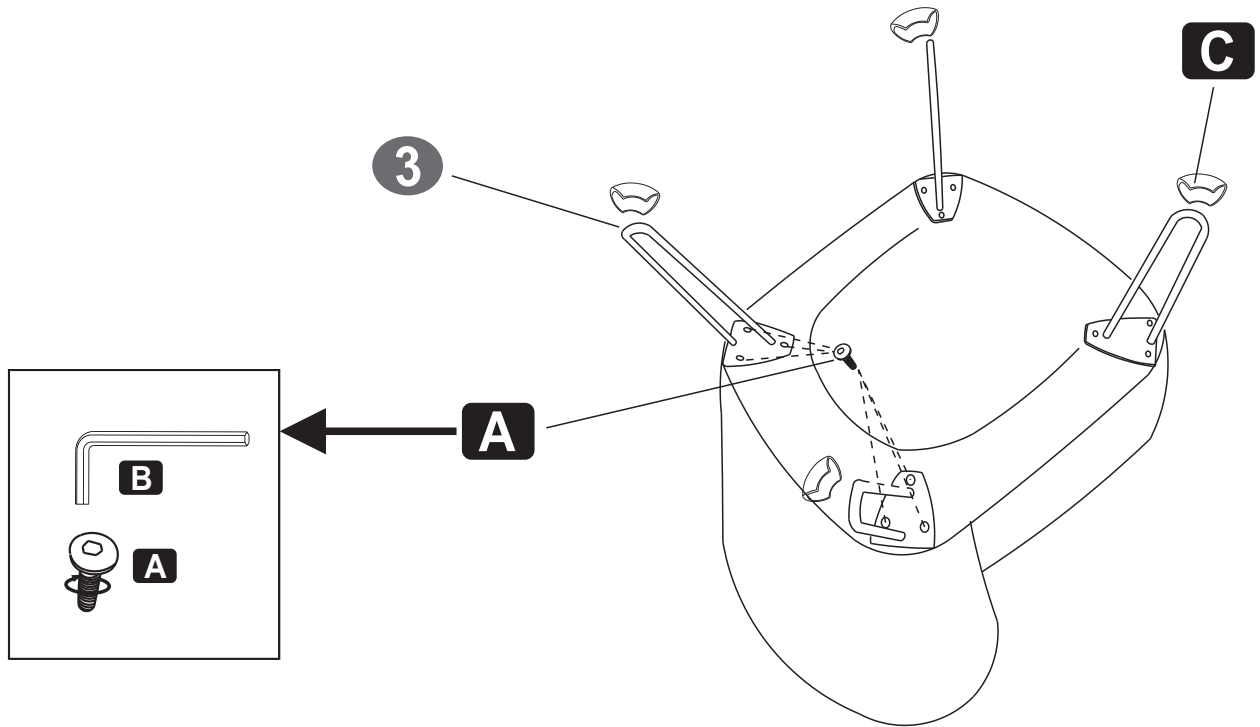**4**

Ready to enjoy your leisure time!

