
TOOLS REQUIRED

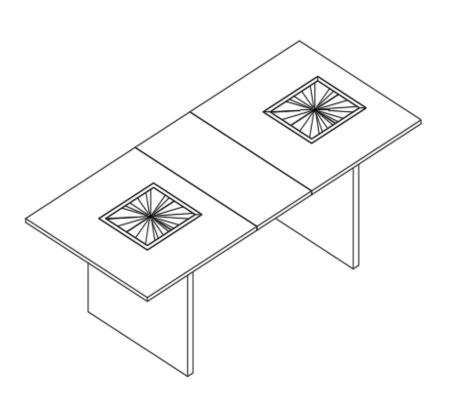



ALLEN KEY (Included)



2 - People

ASSEMBLY RATING



EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

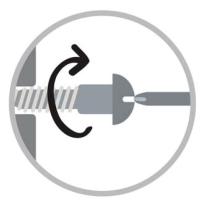

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DINING TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

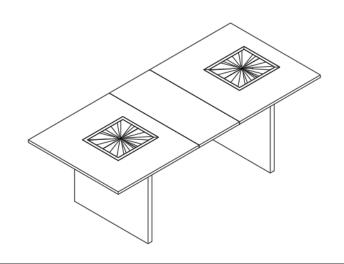

PARTS




 


TABLE TOP 1 pc.



LEFT TABLE LEGS 1 pc.



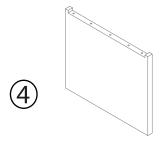

LEAF 1 pc.





RIGHT TABLE LEGS 1 pc.



TABLE STRETCHER 1 pc.





GLASSES 2pcs.





CONNECTING PLATE 2 pcs.

HARDWARE













FLAT HEAD BOLT Ø5/16"*1-1/2" 28 pcs. SPRING WASHER Ø5/16*12*2MM 28 pcs. FLAT WASHER Ø5/16"*19*2MM 28 pcs.





RUBBER INHALER FOR GLASSES Ø30MM 1pc.



ALLEN KEY M4 1 pc.


packed in 1 cases

carton	Disignation	part		Hardware	
	Table Top	1			4.00
	Leaves	2		1 0 0 0	A 28 pcs B 28 pcs C 28 pcs D 1 pc
	Right table legs	3			E 1 pc
	Left table legs	4			
	Table Stretcher	5			
	glasses	6			
	Connecting plate	7			

1

Part ③x 1pc
Part ④x 1pc
Part ⑤x 1pc
Hardware ⑥x 8pcs
Hardware ⑥x 8pcs
Hardware ⓒx 8pcs

Attach the Stretcher (#5) to the Table Legs (#3,#4) by using Bolt (#A) with Spring washer (#B) and Flat washer (#C).

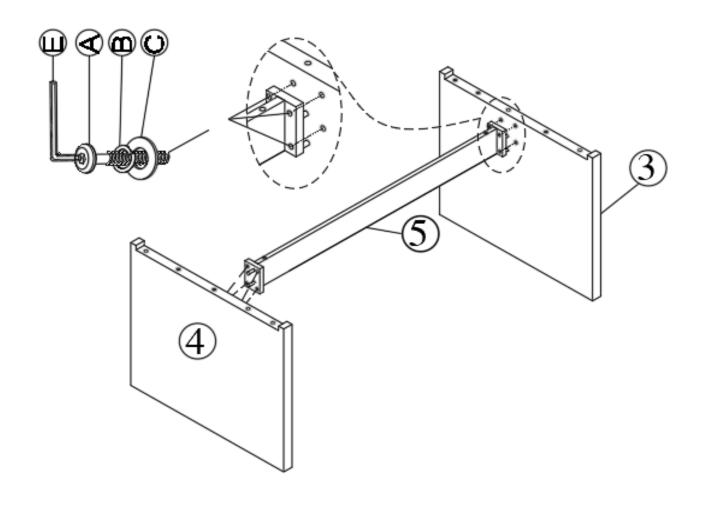





2

Attach the Connecting plate (#7) to the Table Legs (#3,#4) by using Bolt (#A) with Spring washer (#B) and Flat washer (#C).

Part 7 x 2pcs Hardware A x12pcs Hardware B x 12pcs Hardware (C) x 12pcs

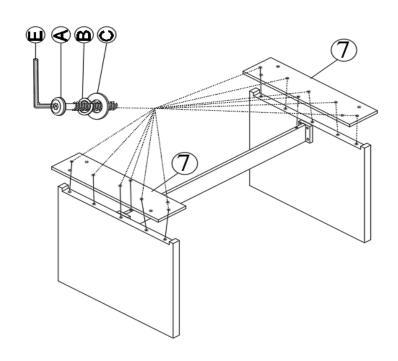

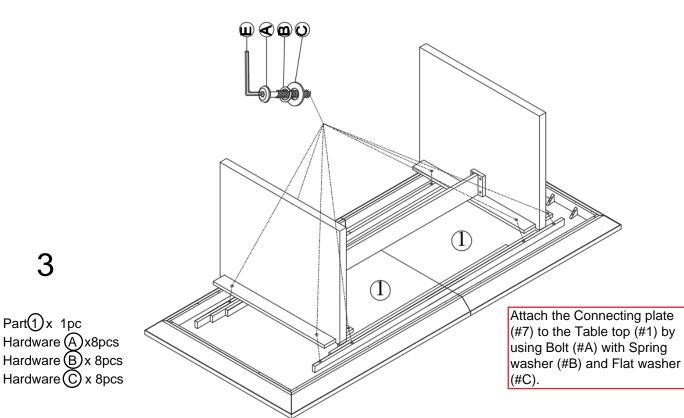


Part①x 1pc

Hardware © x 8pcs


4

Part②x 1pc

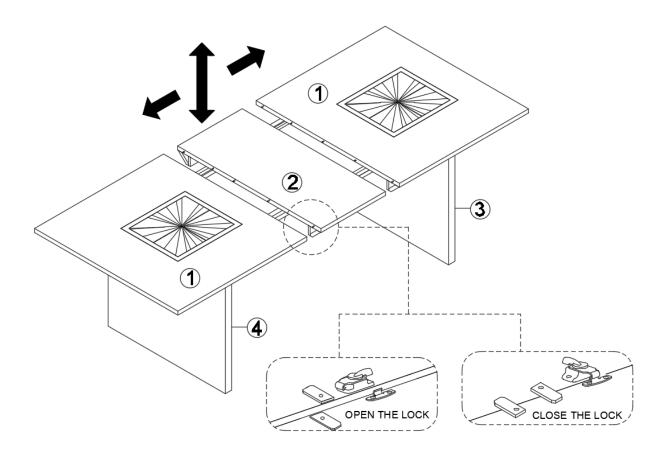


Part 6x 2pcs Hardware Dx1pc

Use Rubber inhaler (#D) to grab and place glass into designated slots.

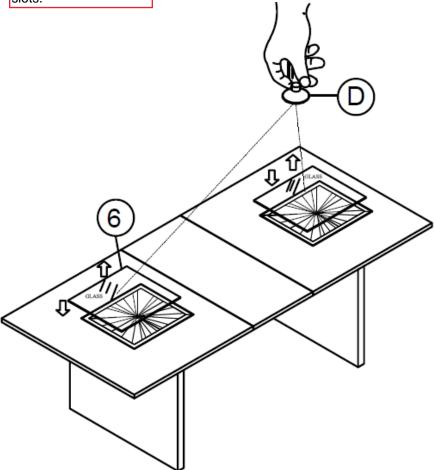

5

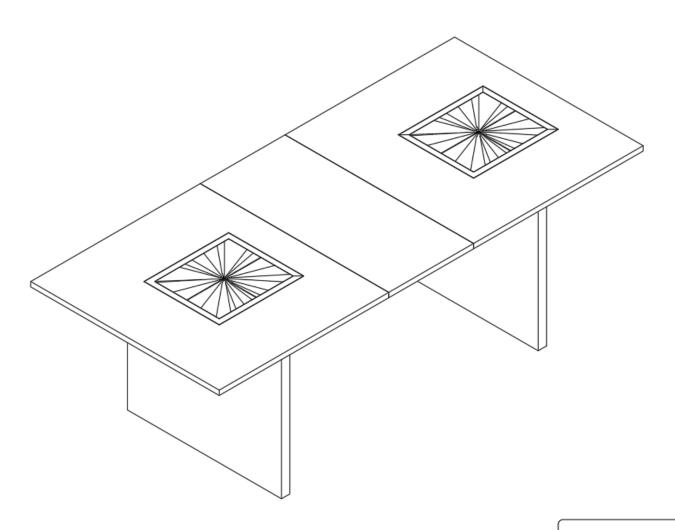

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly lightened and secured.

✓ Keep this handy!


Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not commercial use.

TOOLS REQUIRED

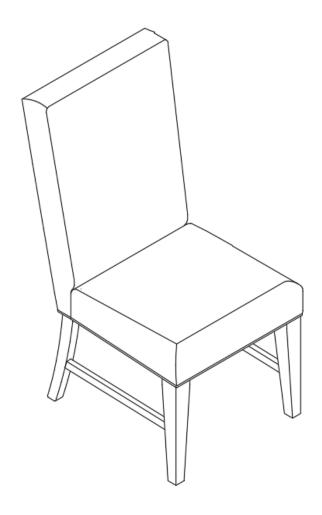



ALLEN KEY (Included)



2 PEOPLE

ASSEMBLY RATING



EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 24-07-11



Are you missing anything? Double-check all parts, hardware and accessories listed are all acccounted for.	Check out our Quick Tips! We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

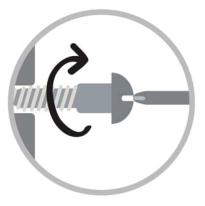

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DINING CHAIR



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

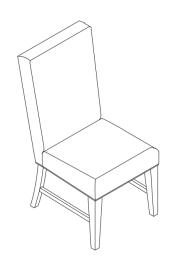

PARTS





BACK FRAME 1 pc X 2.

(2)



SEAT FRAME 1 pc X 2.

3



RIGHT FRONT LEG 1 pc X 2.

4



LEFT FRONT LEG 1 pc X 2.

(5)



RIGHT SIDE STRETCHER 1 pc X 2

6



LEFT SIDE STRETCHER 1 pc X 2

HARDWARE













BOLT (WITHOUT HEAD) (Ø1/4 *1-3/4") 2 pcs X 2.

SPRING WASHER Ø1/4 * 12MM 2 pcs X 2. FLAT WASHER Ø1/4-19MM*2MM 2 pcs X 2.













 
BOLT (WITHOUT HEAD) (Ø5/16 *2-1/2") 8 pcs X 2.

SPRING WASHER Ø5/16 * 12MM 8 pcs X 2. FLAT WASHER Ø5/16-19MM*2MM 8 pcs X 2.





(H)



ALLEN KEY (M4*59MM) 1 pc X 2. SCREW (Ø4*50MM) 4 pcs X 2.


packed in 1 cases

carton	Disignation		part	Hardware	
	Back Frame	1			A 2 pcsX 2
	Seat Frame	2		©	B 2 pcsX 2
	Right Front Leg	3			C 2 pcsX 2
	Left Front Leg	4		 ®	D 8 pcsX 2
	R Side Stretcher	5			E 8 pcsX 2
	L Side Stretcher	6		0	G 1 pcX 2 H 4 pcsX 2

1

Part 1 x 1pc
Part 2 x 1pc
Hardware A x 2pcs
Hardware B x 2pcs
Hardware C x 2pcs
Hardware D x 4pcs
Hardware E x 4 pcs
Hardware F x4pcs


Use the wooden dowels on the back frame to align the Seat frame (#2) to the Back frame (#1). Secure at the center by using Bolt (#A) with Spring washer (#B) and Flat washer (#C). Secure the back legs and the seat corner by using Bolt (#D) with Spring washer (#E) and Flat washer (#F).

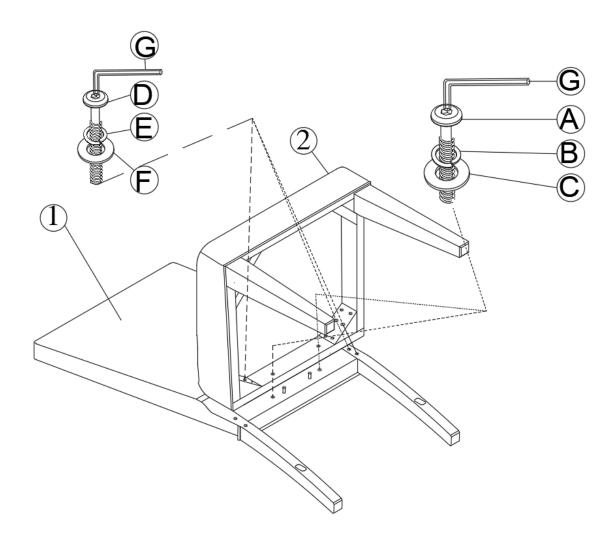

2


Part 3 x 1pc
Part 4 x 1pc
Part 5 x 1pc
Part 6 x 1pc
Hardware D x 4pcs
Hardware E x 4pcs
Hardware F x 4 pcs


Align the Right/Left front Leg (#3,#4) to the Seat frame (#2) and attach the Chair side rails (#5,#6) in between the front and back legs. Secure the front legs to the Seat by using Bolt (#D) with Spring washer (#E) and Flat washer (#F).

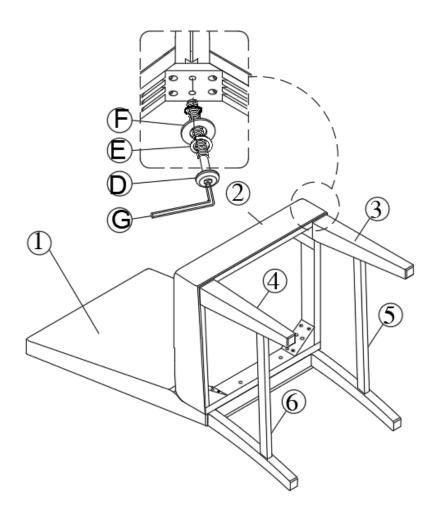

3 Hardware H x 4pcs

Secure the Chair side rail (#5,#6) by using Screw (#H).

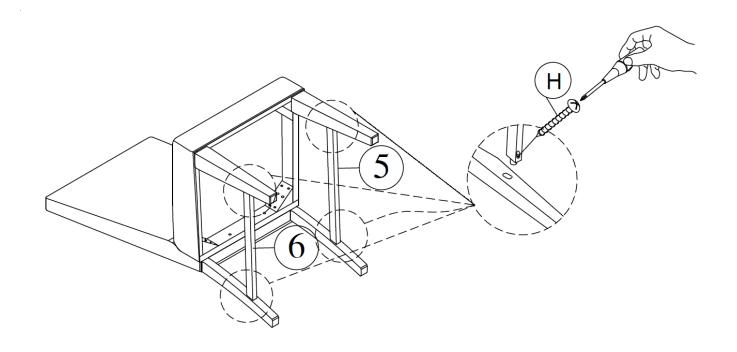

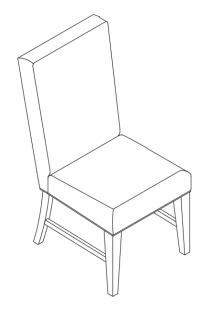

ASSEMBLY COMPLETED



rrieds ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not commercial use.