
N724P198517E N724P198518K

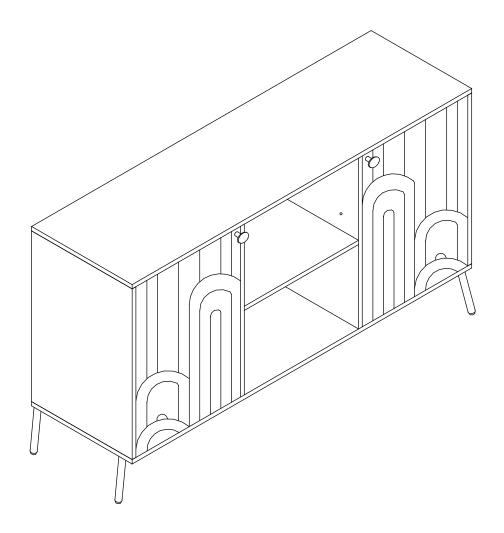

Gebrauchsanweisung
Manuel du produit
Manual del producto
Manuale del prodotto

Thank you for choosing our products.

1. Return Policy



DO NOT RETURN TO THE STORE! Skip the process of returning your product and contact us directly for a replacement

If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If you have found any sort of defect, please contact our customer service department and let us know the details of your order and any issues encountered, we will try our best to provide you with a solution.


Recommendations Before Beginning Assembly

- Read instructions, cover to cover
- ♠ Have 2-4 adults on hand for assembly depending on product size
- Do not assemble directly on flooring or carpet
- ← Assemble on a clean non-marring surface (example: packing foam)
- Save all packaging until finished

3. Assembly Notice:

- If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the parts of the product stored in a safe place and contact us immediately so we may assist you further.
- Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Place the parts out neatly in front of you, then refer to the instructions to ensure no parts are missing. If any pieces are found missing, please carefully look in the box first, as the hardware packaging might have torn making the hardware spill in the box.
- Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (example: cushions and legs being stored in the underside of a sofa)
- IMPORTANT: When setting up your product, DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING. Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
- When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

Care & Maintenance

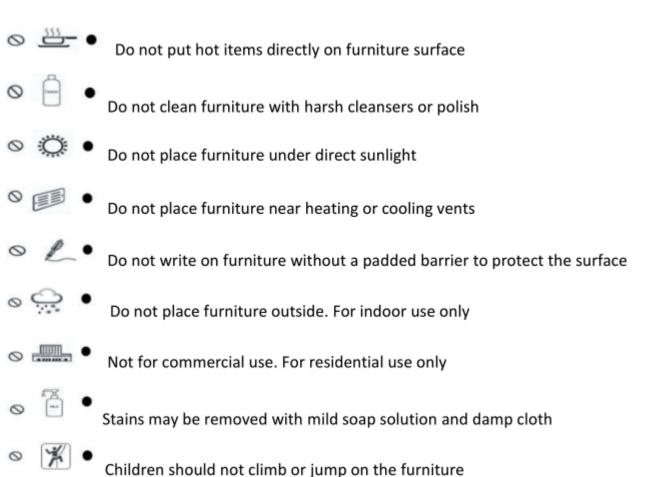



Children should not climb or jump on the furnit

Dust and pick-up spills using a clean, non-colored, lint-free cloth


Caution

 
- This product contains small components. Please ensure that they are kept away from small children.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.




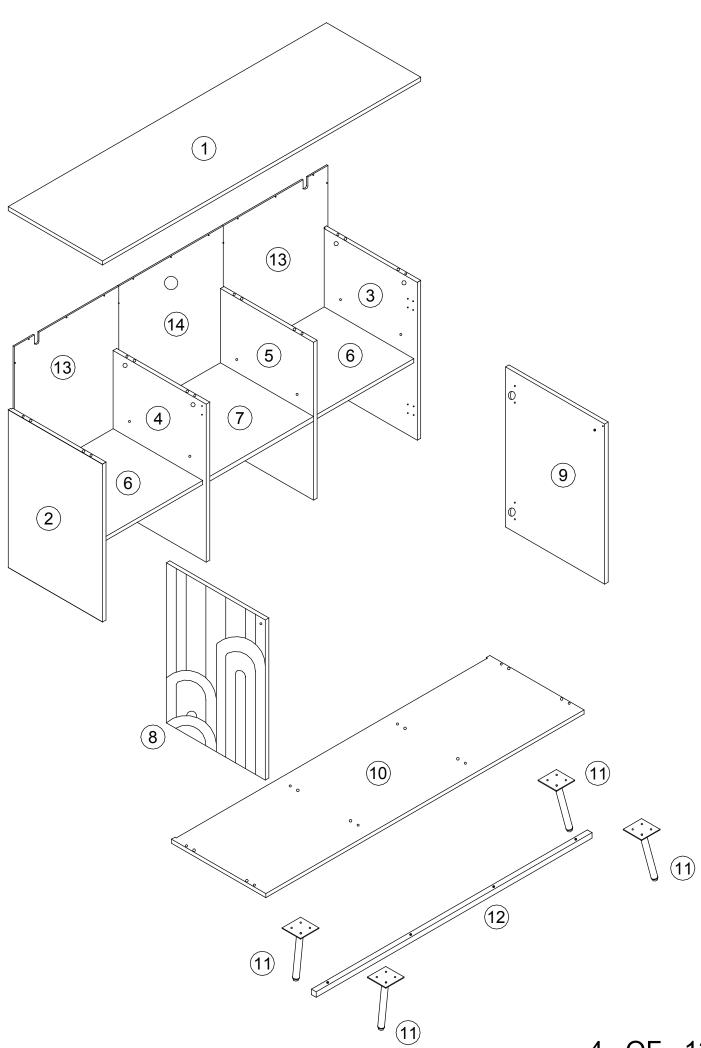



1)x1PC	②x1PC	③x1PC	4x1PC	⑤x1PC
6 x2PCS	7x1PC	8 x1PC	9 x1PC	10 x1PC
			<u></u>	
11)x4PCS	(12) x1PC	13)x2PCS	(14) x1PC	
6*35mm	15*10mm	8*30mm		7*40mm
Ax8PCS	Bx8PCS	Cx16PCS	Dx12PCS	Ex8PCS
3*14mm		3*12mm		4*12mm
Fx4PCS	Gx2PCS	Hx2PCS	lx2PCS	Jx26PCS
	4*16mm		6*30mm	6*14mm
Kx4PCS	Lx2PCS	Mx2PCS	Nx4PCS	Ox16PCS
2.5*10mm			3.5*40mm	
Px30PCS	Qx2PCS	Rx2PCS	Sx2PCS	Tx1PC

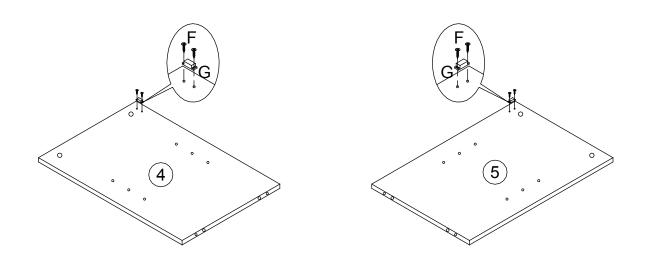

 


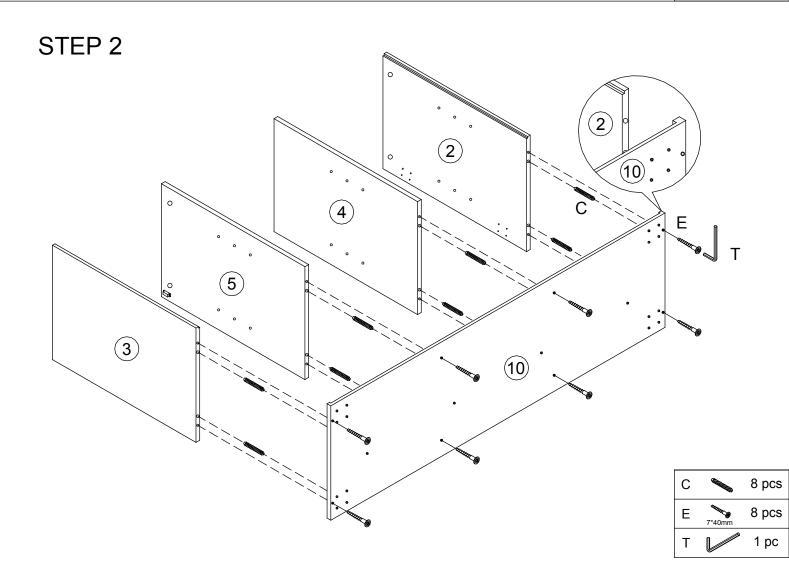

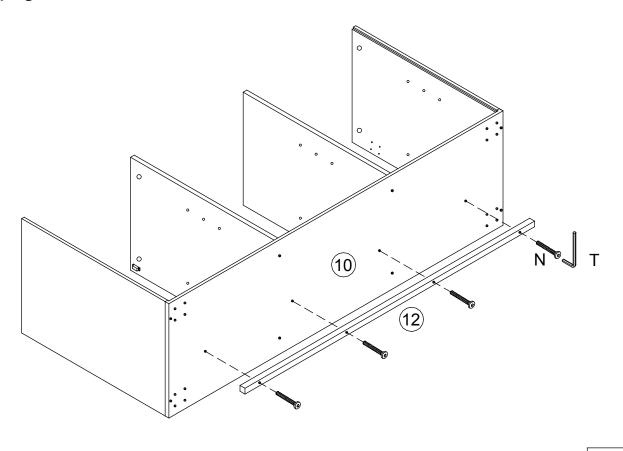


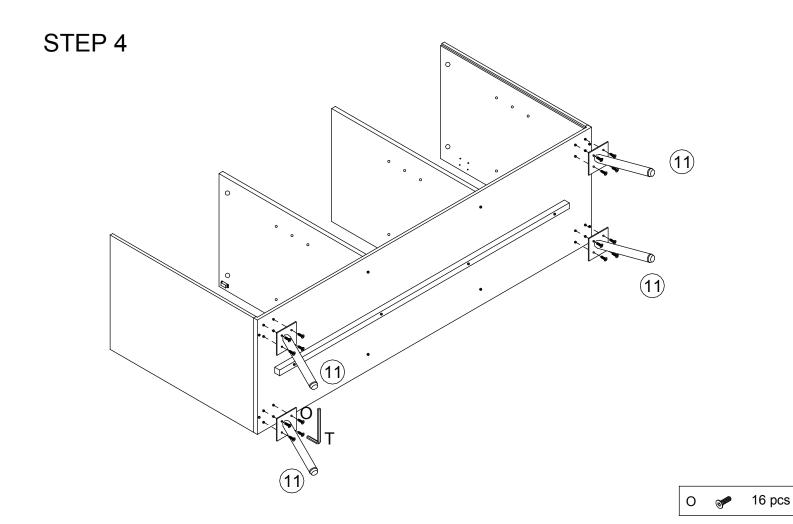



4 pcs

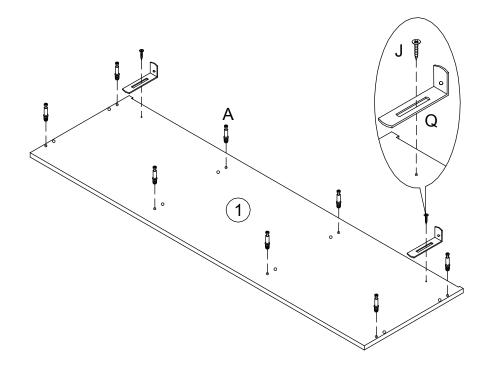



Α	972 M	8 pcs
J	British	2 pcs
Q		2 pcs

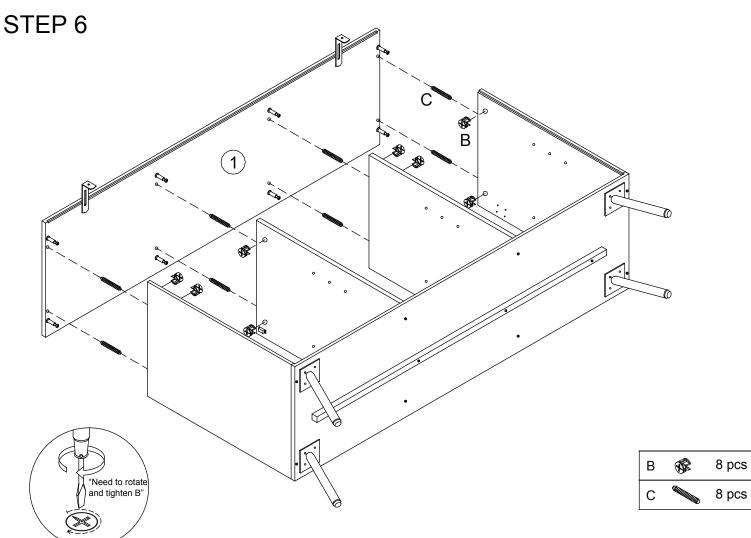


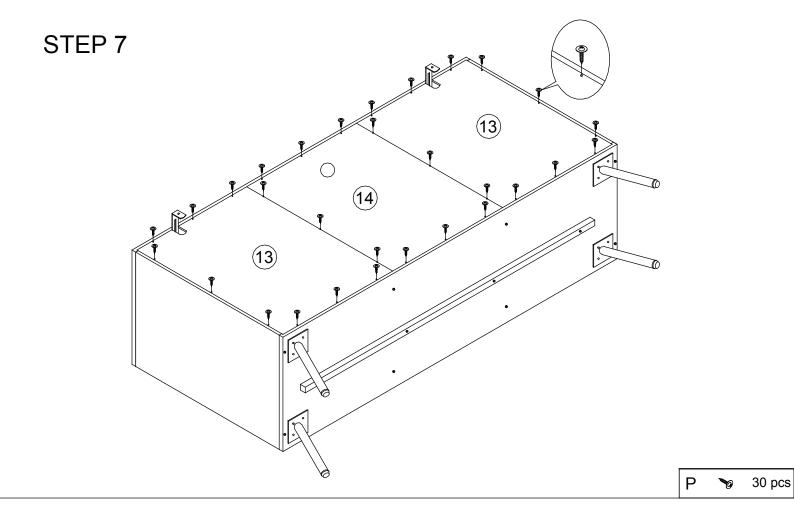


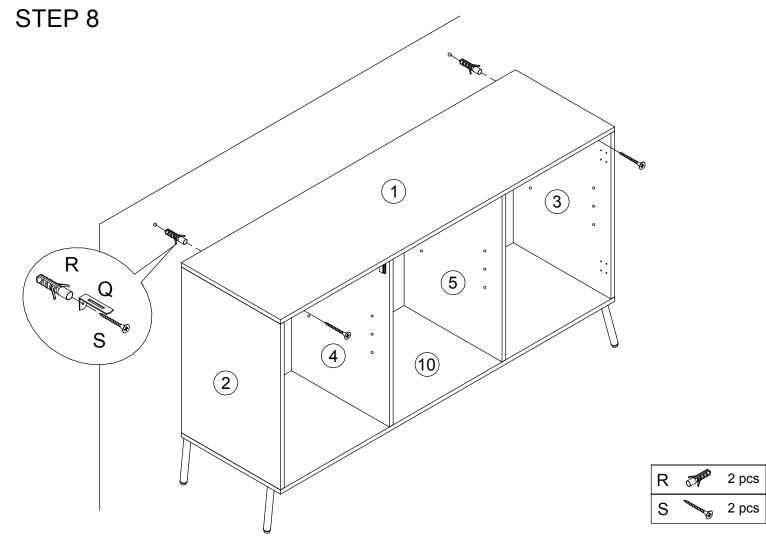


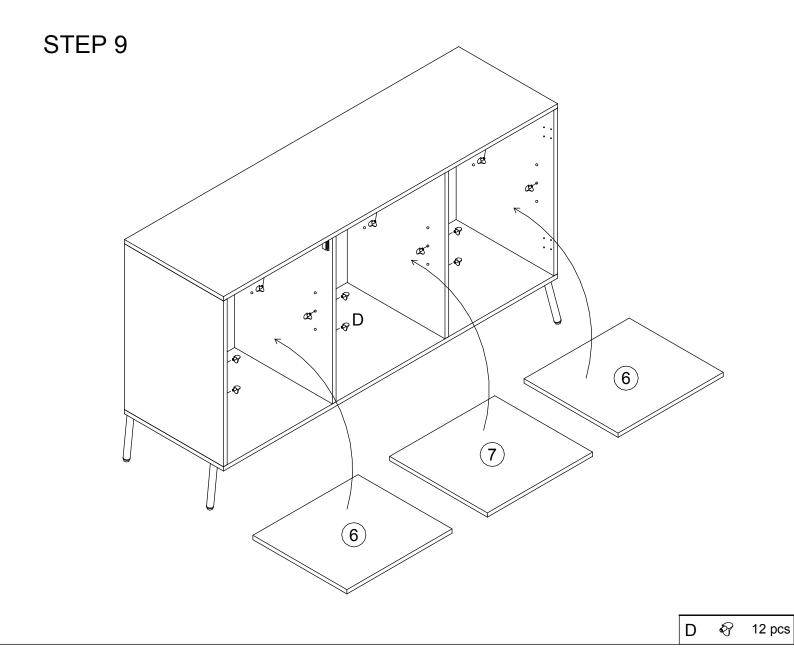

 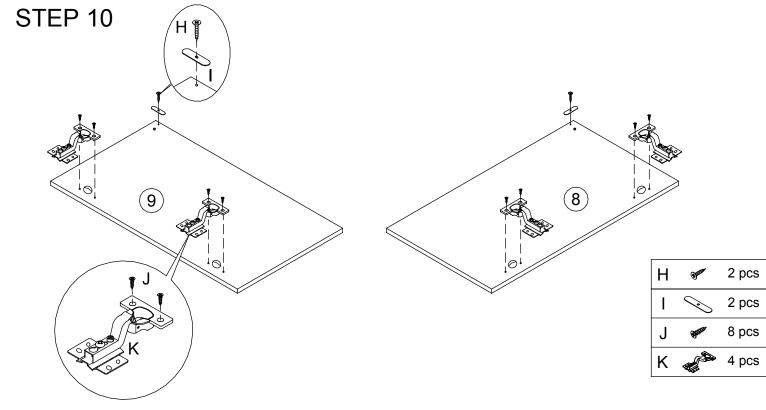


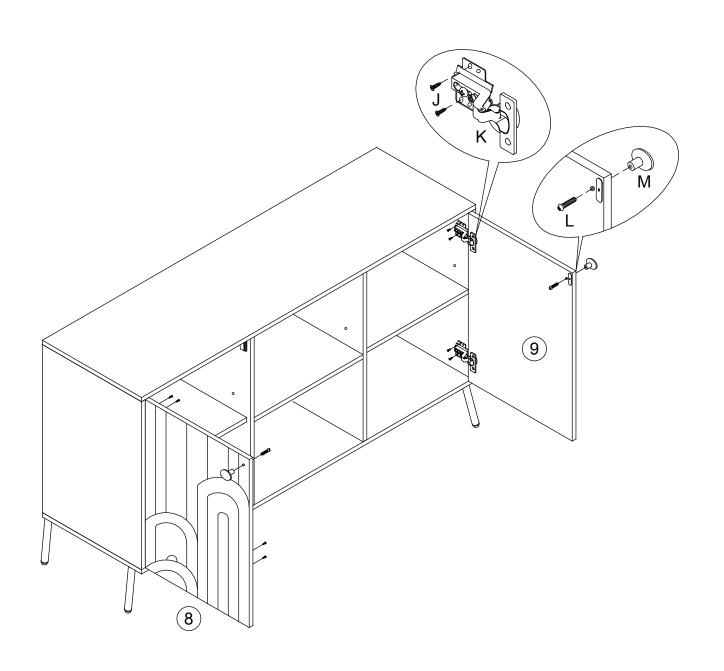




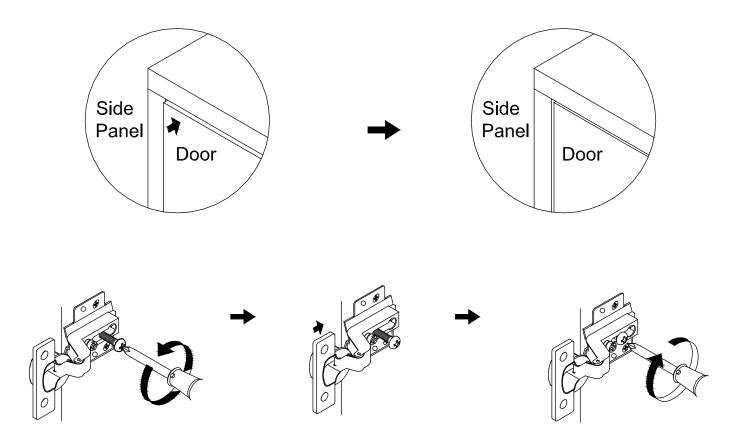


If the top of the door is not level with the side panel, loosen the screw at the back of the hinge as shown, then move the hinge in or out until the desired gap is achieved, and then re-tighten the back screw.

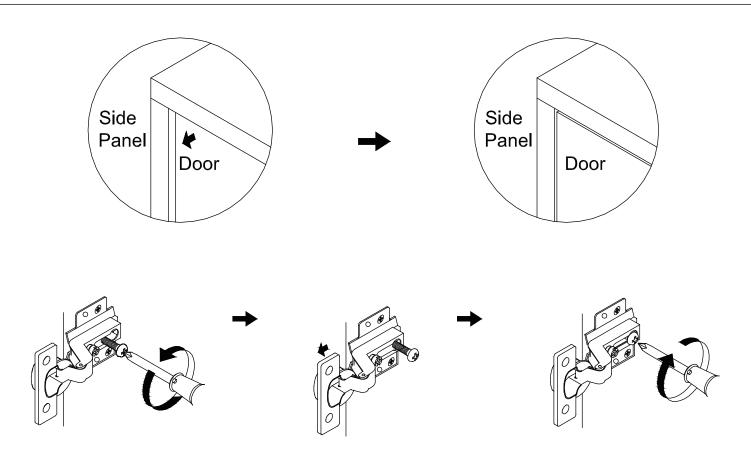


If the top of the door is not level with the side panel, loosen the screw at the back of the hinge as shown, then move the hinge in or out until the desired gap is achieved, and then re-tighten the back screw as shown.

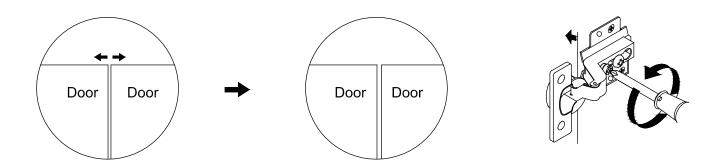

If the gap is too tight between the two doors, loosen the screw at the front of the hinge as shown to make the adjustment and then re-tighten the screw.

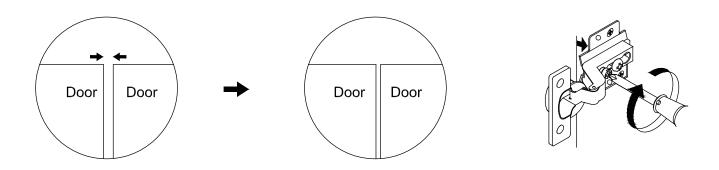

If the gap is too tight between the two doors, loosen the screw at the front of the hinge as shown to make the adjustment and then re-tighten the screw.

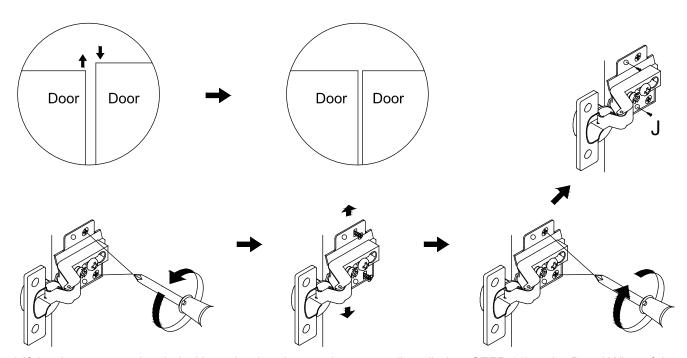

- a) If the doors are not leveled with each other, loosen the screws (installed on STEP 11) at the Panel Wing of the hinge, then adjust the hinge up or down until the desired level or when both doors are leveled, and then retighten the screws.
- b) When all the desired positions are in place, use the remaining eiaht Screw (J) to fasten the Wing Panel using the front two screw holes on Panel Wing.Please note the holes are not pre-drilled, please srew carefully and do not hurt the hand.

The assembly of the Cabinet is complete.

8 pcs