 


TV STAND

Assembly Instructions - Please keep for future reference

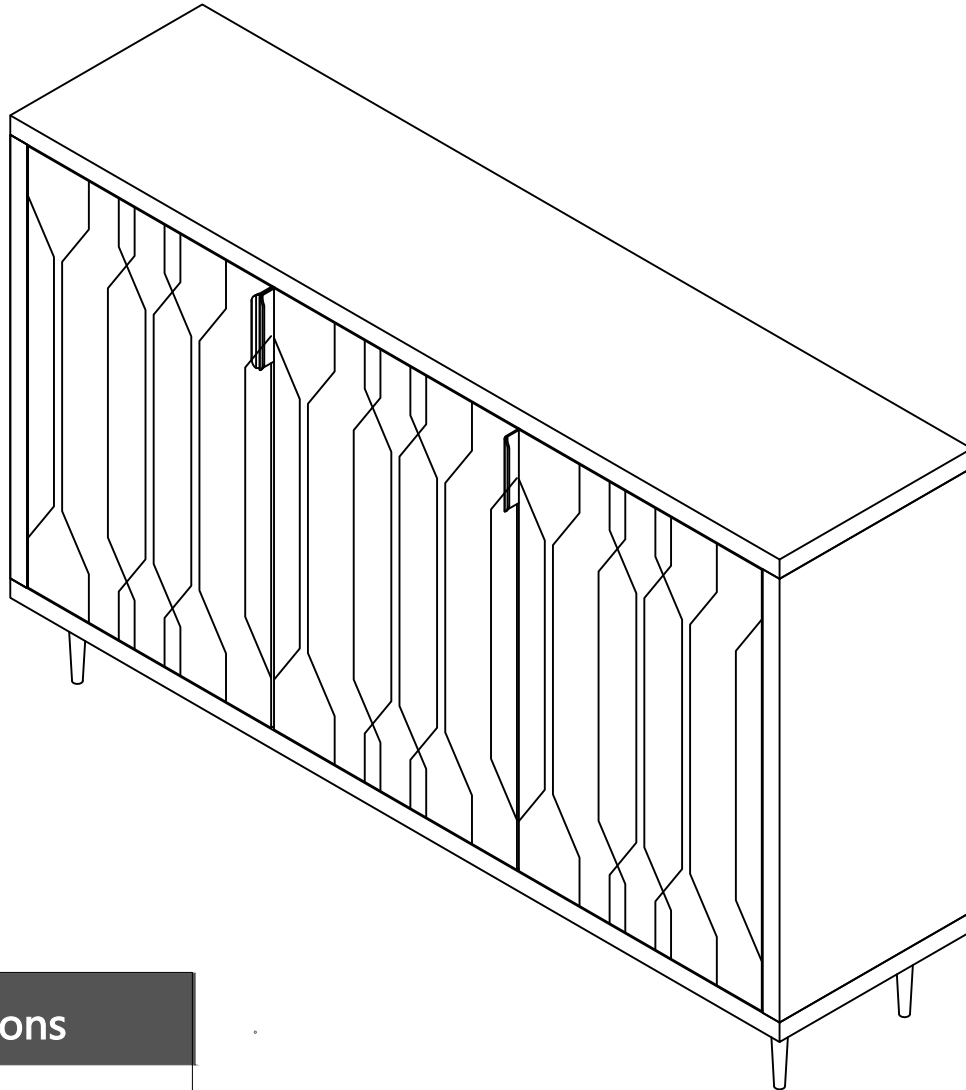

Dimensions

Width-64.9inch

Depth-15.7inch

Height-33.8inch

Important - Please read these instructions fully before starting assembly

 


Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.

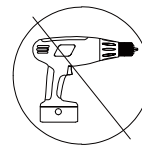

- . To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- . From time to time check that there are no loose screws on this unit.
- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- . Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning - please follow these instructions

 

 

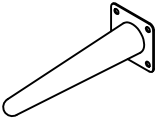 





 

 
 
 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)  Cam Bolt x 12	(B)  Cam lock x 12	(C)  8*30mm Dowel x 20	(D)  7*50mm Screw x 8
(E)  x 4	(F)  4*16mm Screw x 16	(J)  x 1	(K)  x 4
(L)  x 2	(M)  x 3	(N)  x 8	(O)  3.5*14mm Screw x 42
(P)  3*16mm Screw x 8	(Q)  x 8	(R)  x 1	(S)  4*12mm Screw x 2
(T)  x 2	(U)  x 2	(V)  4*35mm Screw x 2	

 Tools required

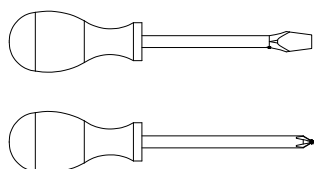

Phillips screwdriver
(medium & large)

 
Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

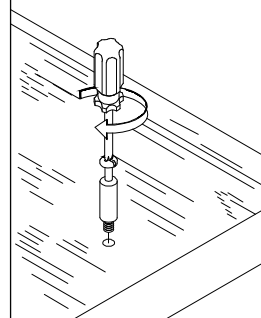

Step 2

Push the male camlock into the entry hole.

 2

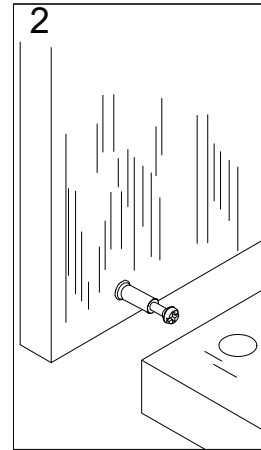


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

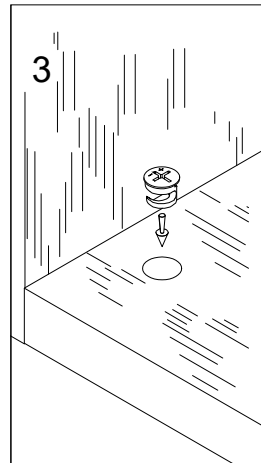


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

 4

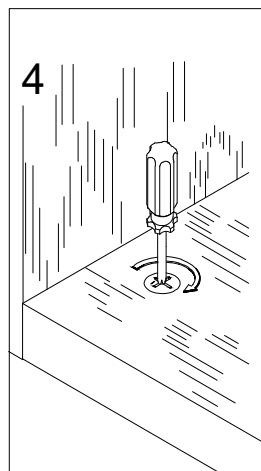





Assembly Instructions

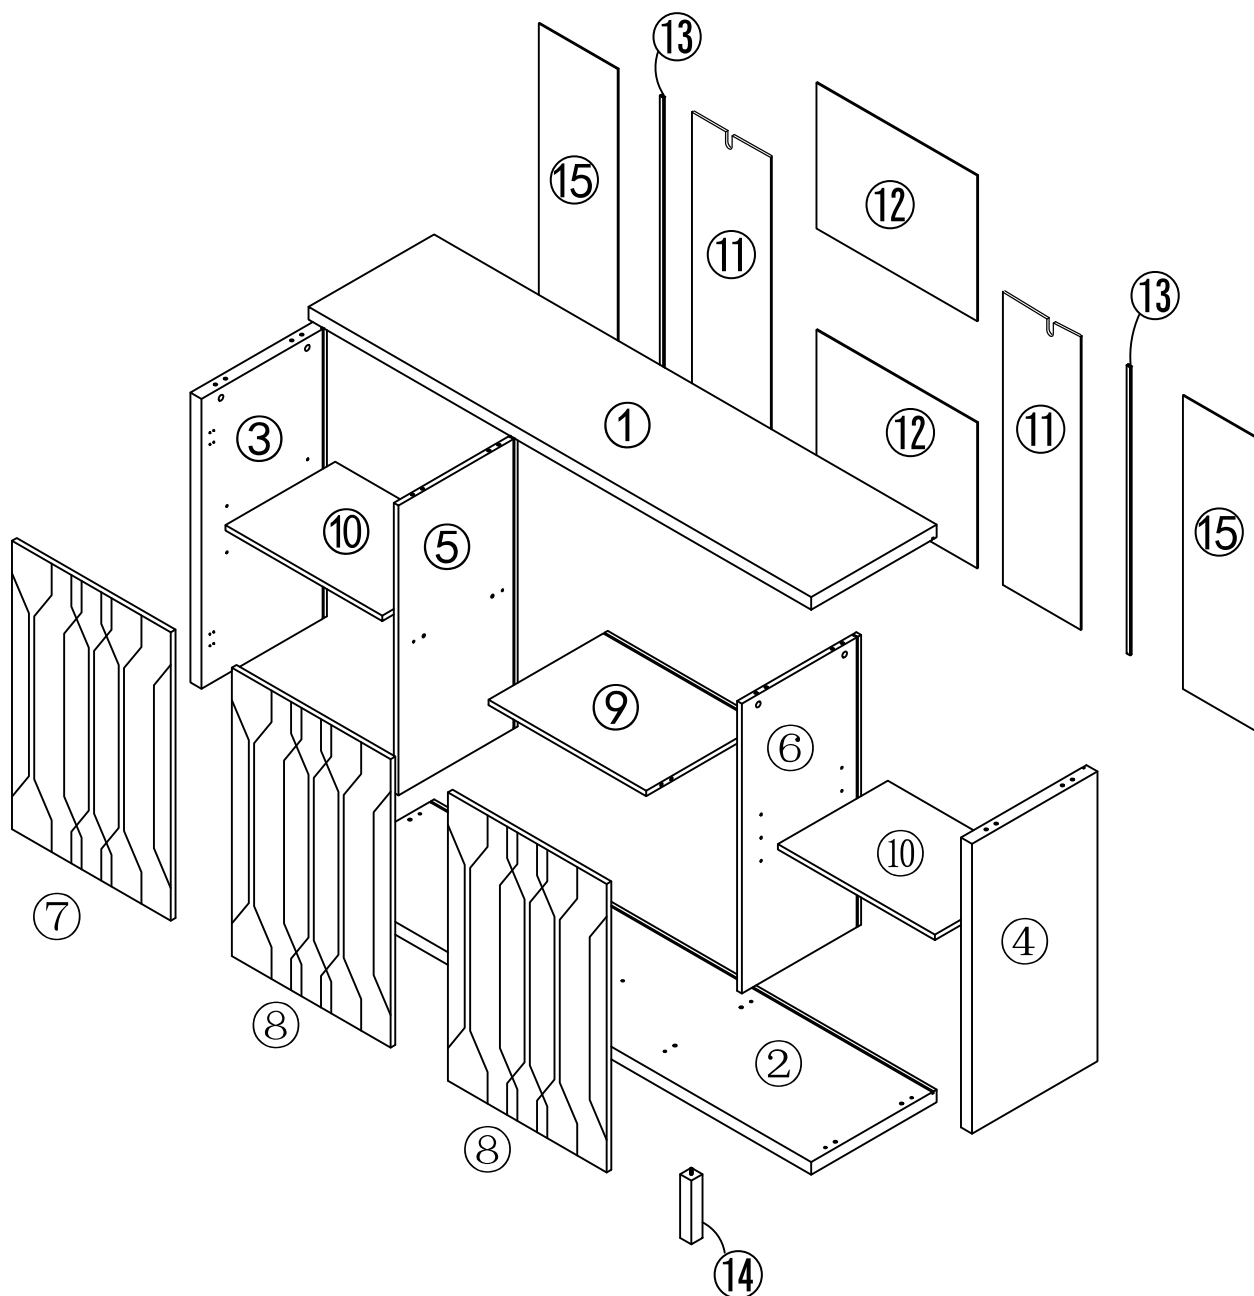 

   
 
 
 
 
 

 

 

PART LIST

There are 2 boxes of this product.

Box 1: WF306730

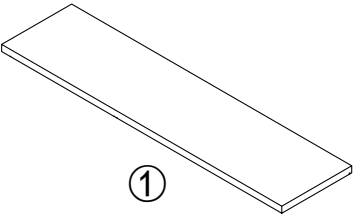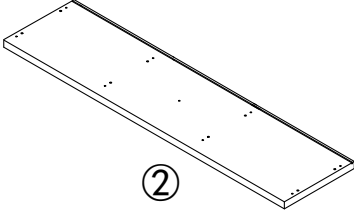
			
① x1	② x1	③ x1	④ x1
top panel 1650x395x30mm	bottom 1650x395x30mm	left side panel 650x394x30mm	right side panel 650x394x30mm







 Box 2: WF306729

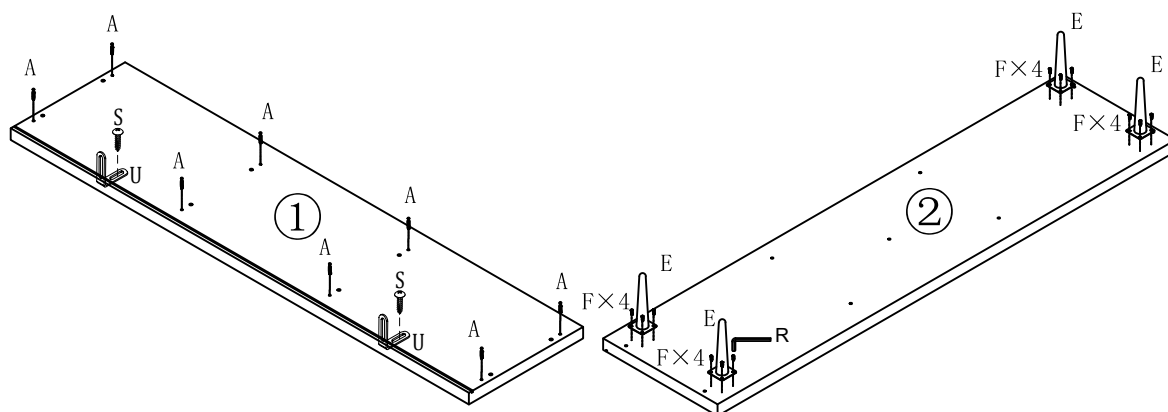				
⑤ x1	⑥ x1	⑦ x1	⑧ x2	⑨ x1
partition 650x377x15mm	partition 650x377x15mm	door panel 642x525x15mm	door panel 642x525x15mm	shelf 514x376x15mm
				
⑩ x2	⑪ x2	⑫ x2	⑬ x2	⑮ x2
shelf 520x349x15mm	back panel 658x264x3mm	back panel 522x326x3mm	back panel rail L650mm	back panel 658x264x3mm
Hardware kit(⑭ x1 				


Assembly Instructions

Step 1





					
Cam Bolt x 8	x 4	4*16mm Screw x16	x1	4*12mm Screw x2	x2

 Step 2


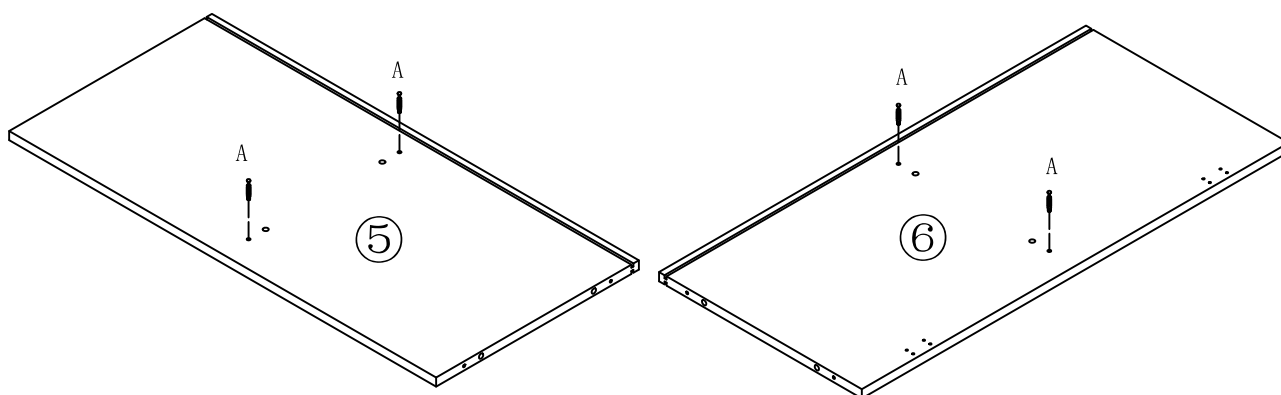


Assembly Instructions

  Step 3




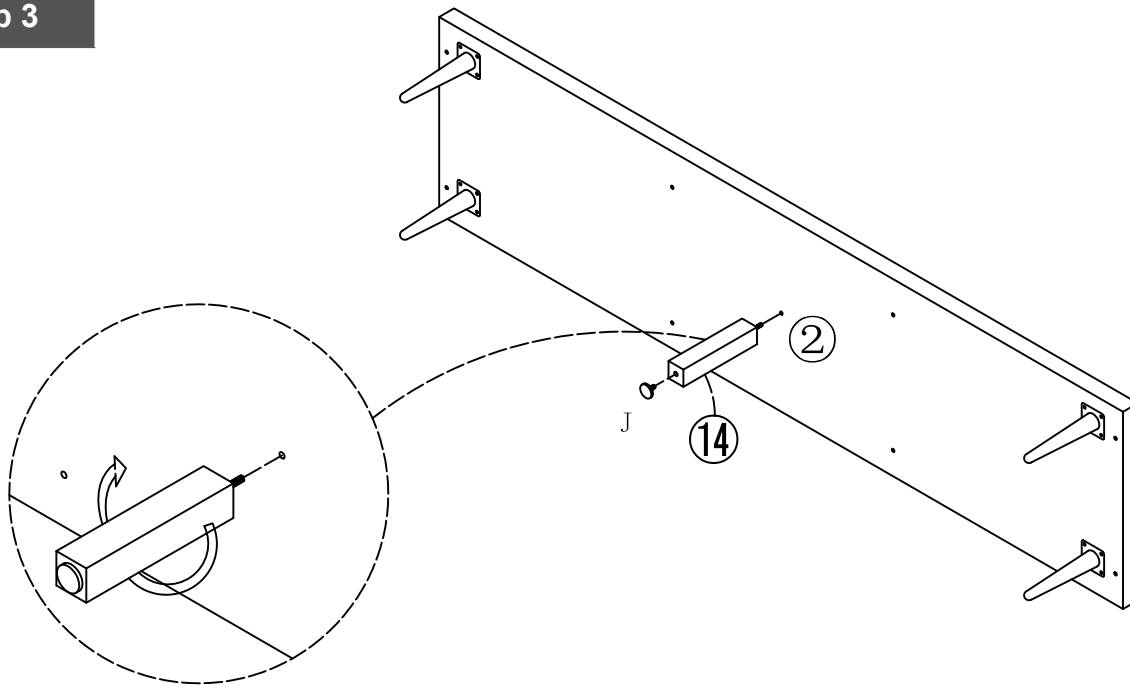


  Step 4


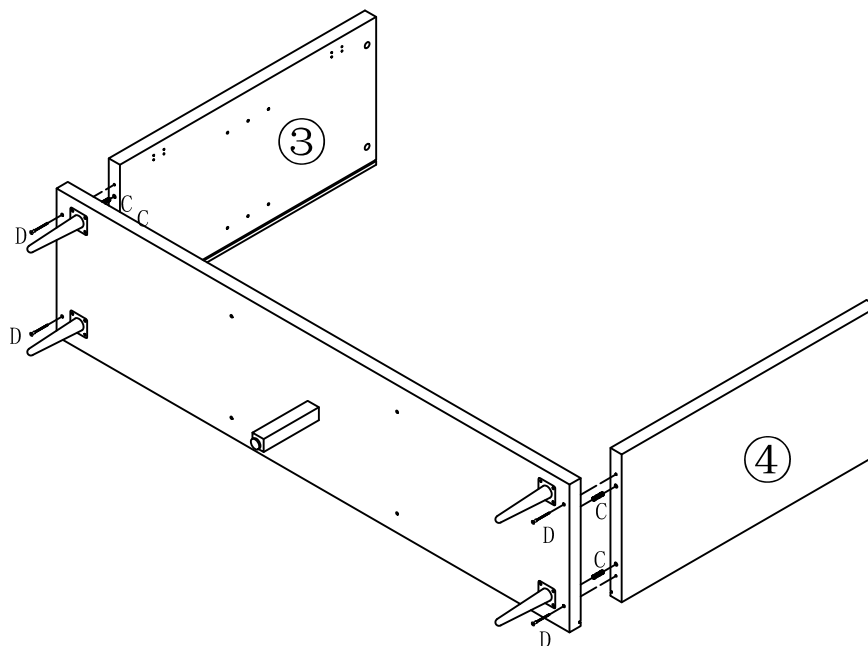


Assembly Instructions

    Step 5

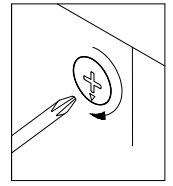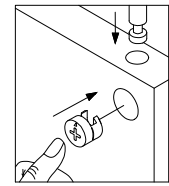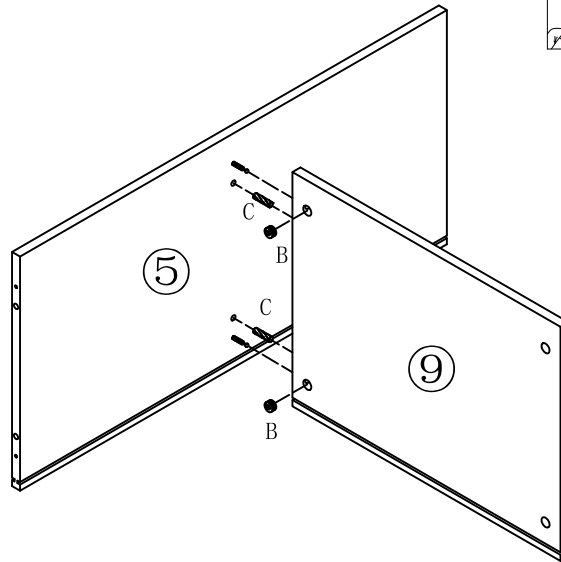


  Step 6

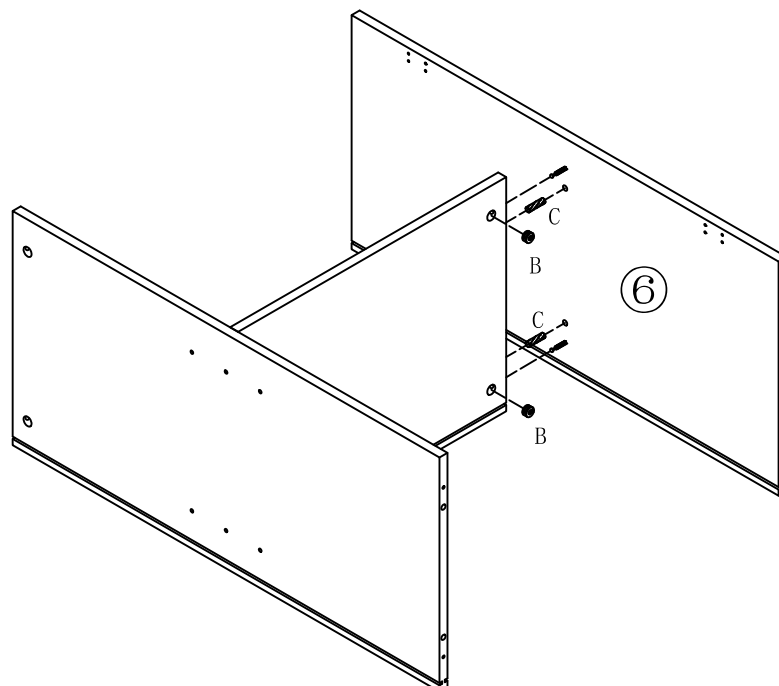




Assembly Instructions

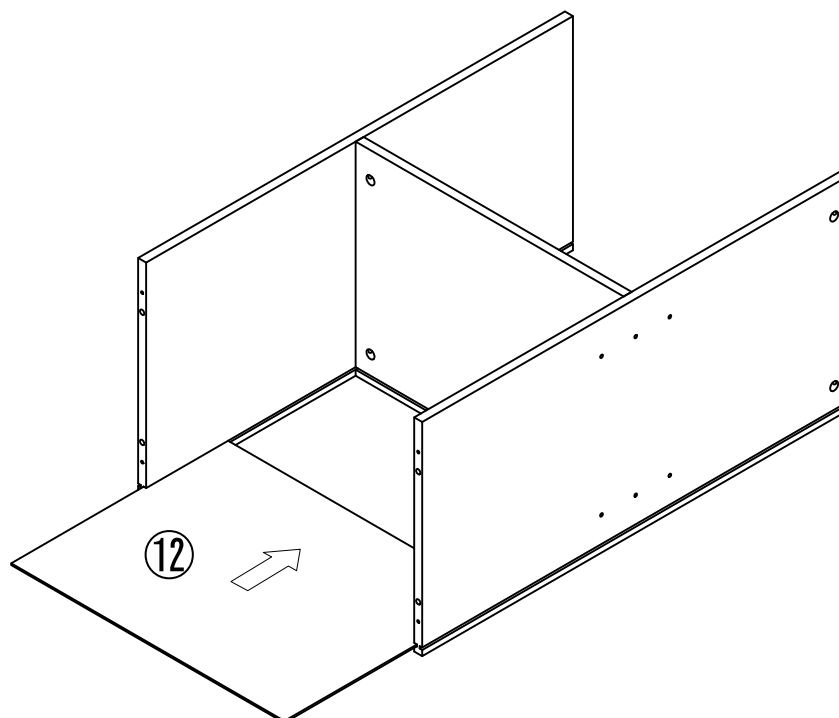  Step 7

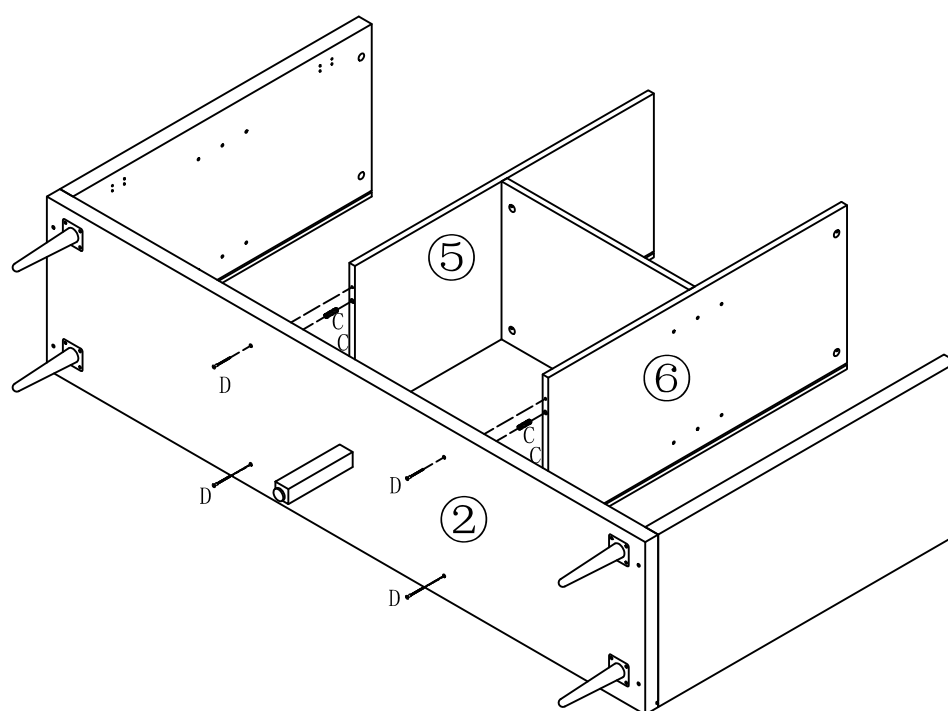


Step 8





<p>(C)</p>  <p>Dowel x 4</p>	<p>(D)</p>  <p>7*50mm Screw x4</p>
---	---

Assembly Instructions

 Step 9


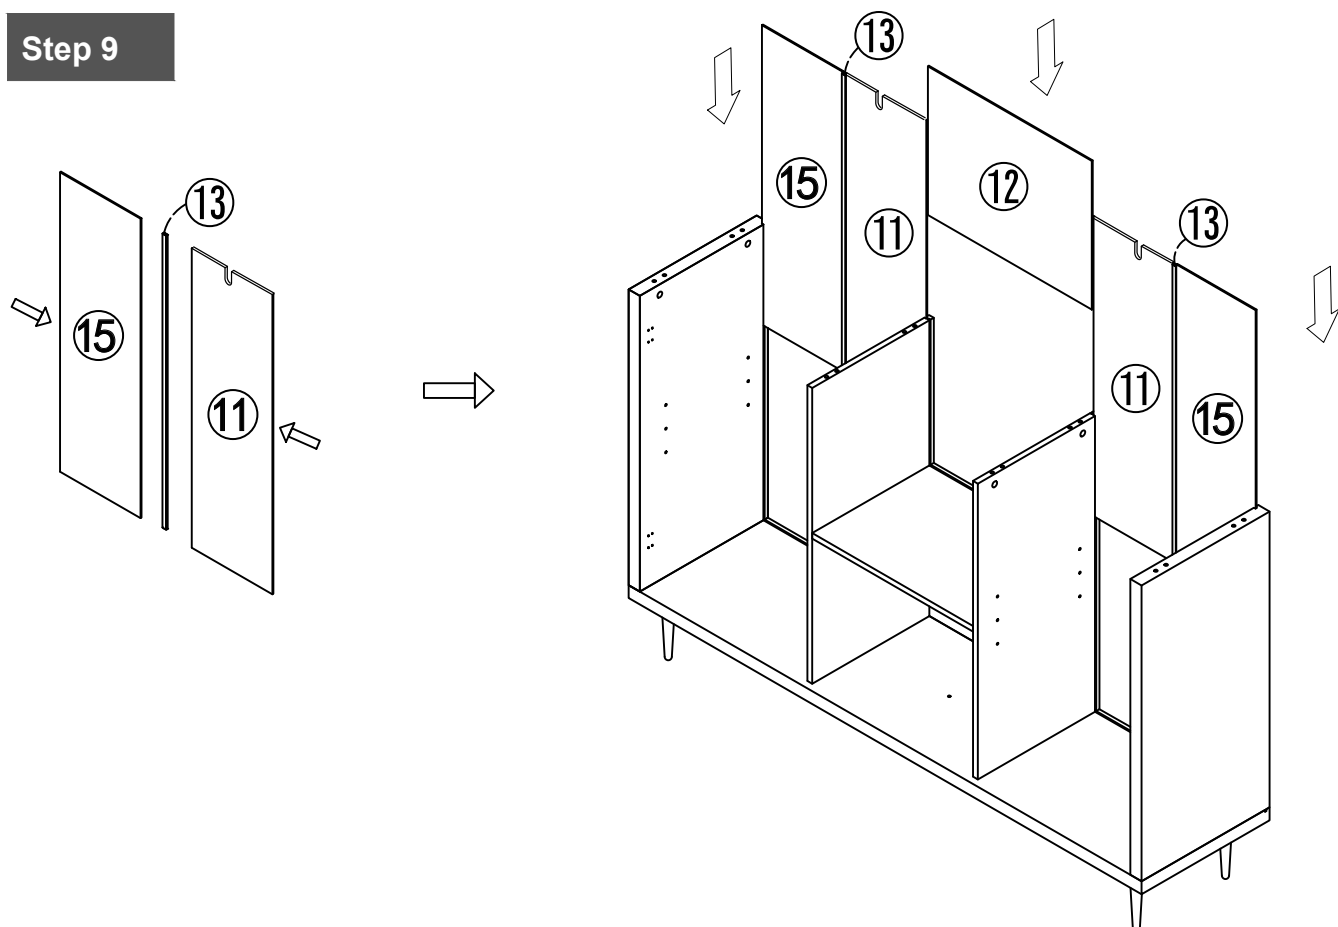


  Step 10


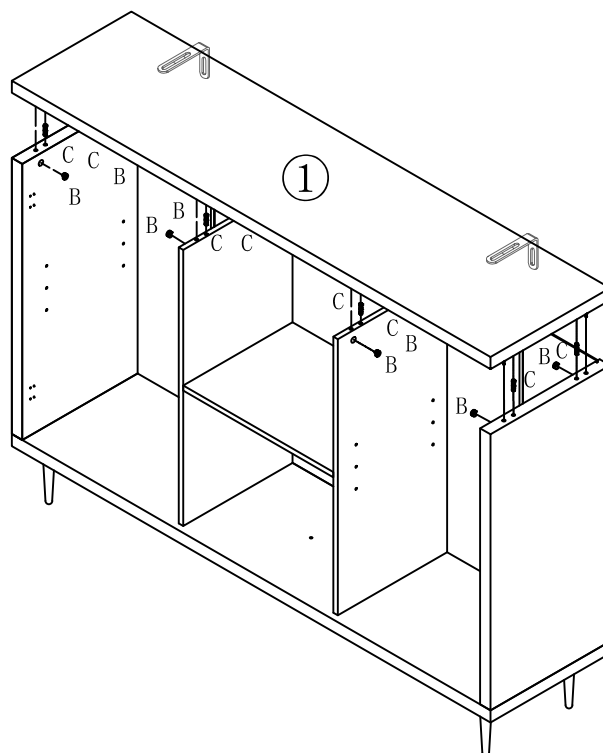


Assembly Instructions

  Step 11

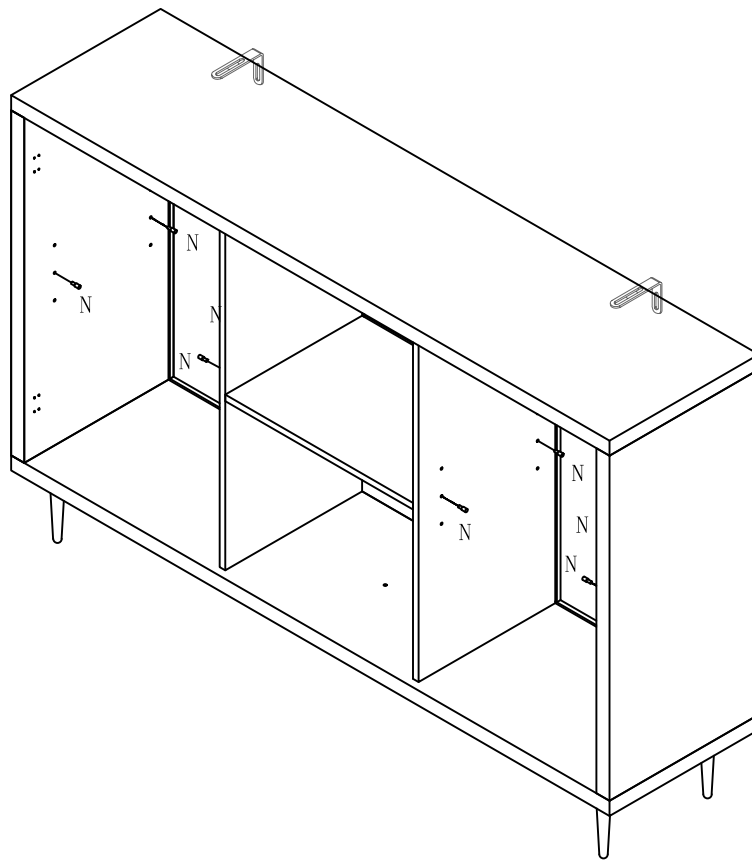


  Step 12

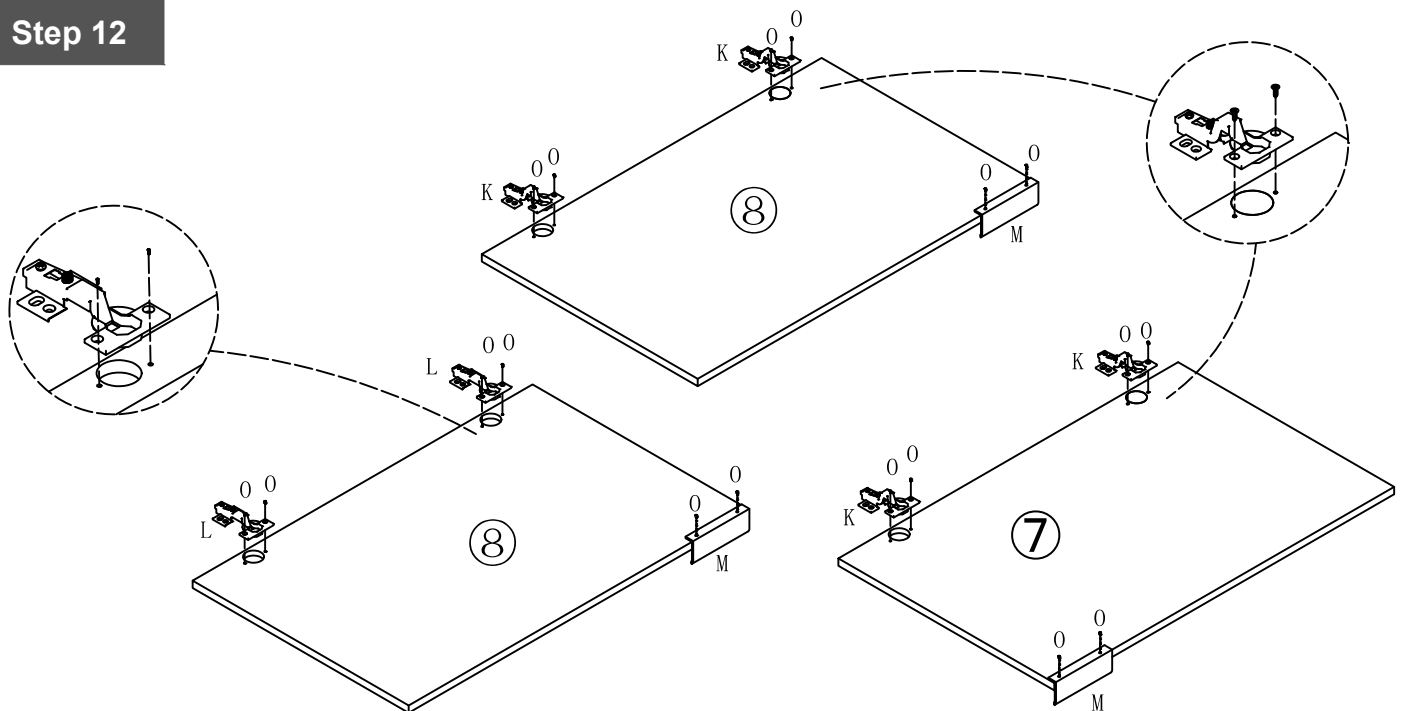


Assembly Instructions



 
Step 13

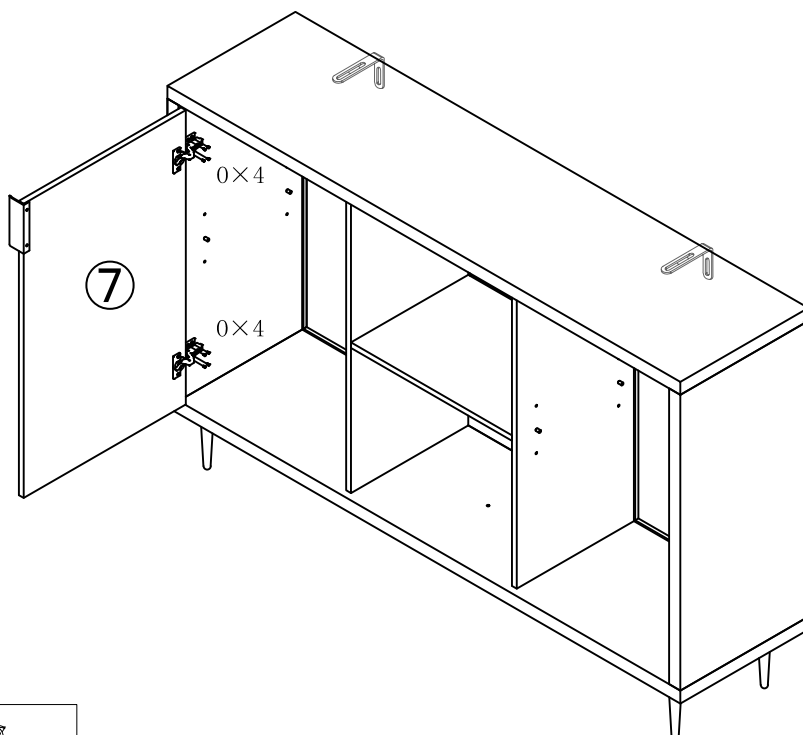

 If the door can't close, please adjust the hinges.

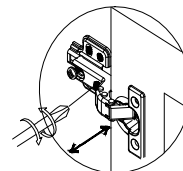

  
 
This is used to adjust the door panel in the up and down direction.

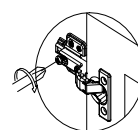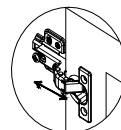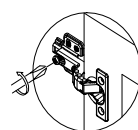

This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.




  Step 14

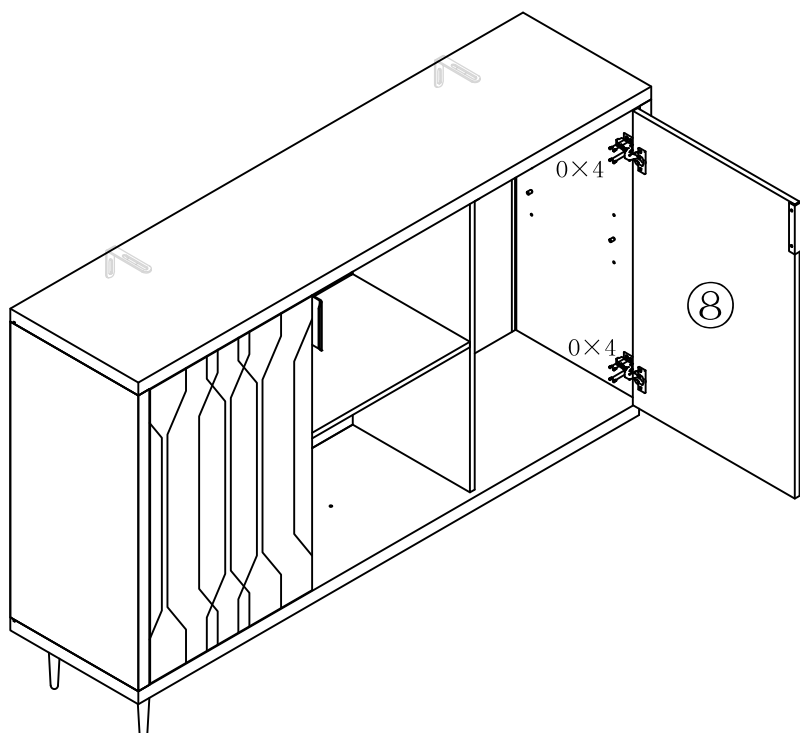


Assembly Instructions



 
Step 15

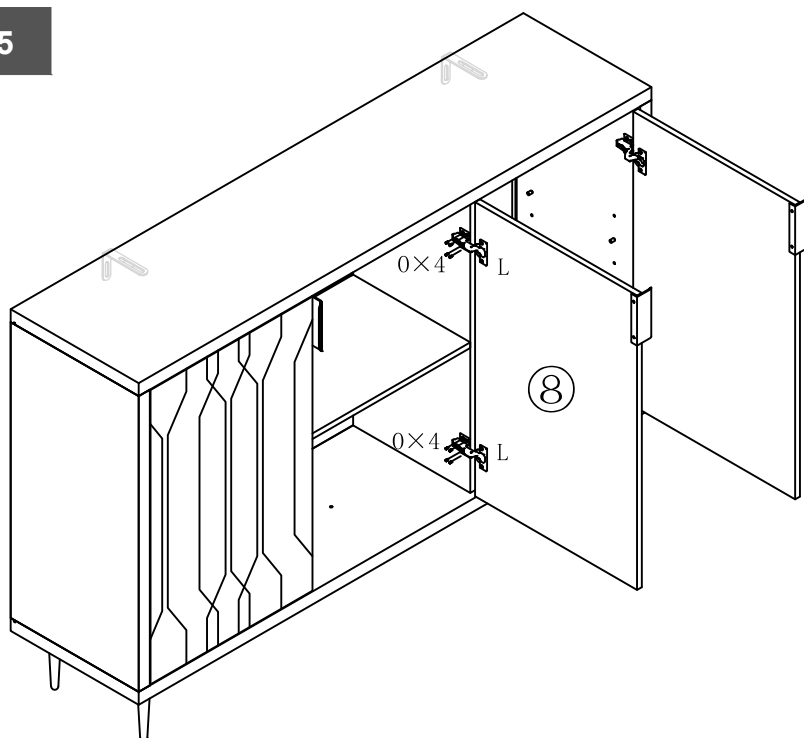

 
If the door can't close, please adjust the hinges.

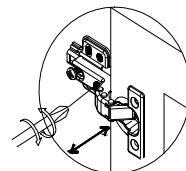

   This is used to adjust the door panel in the up and down direction.

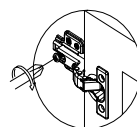
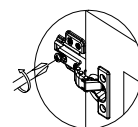


 This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.



3.5*14mm Screw x 8

  Step 16


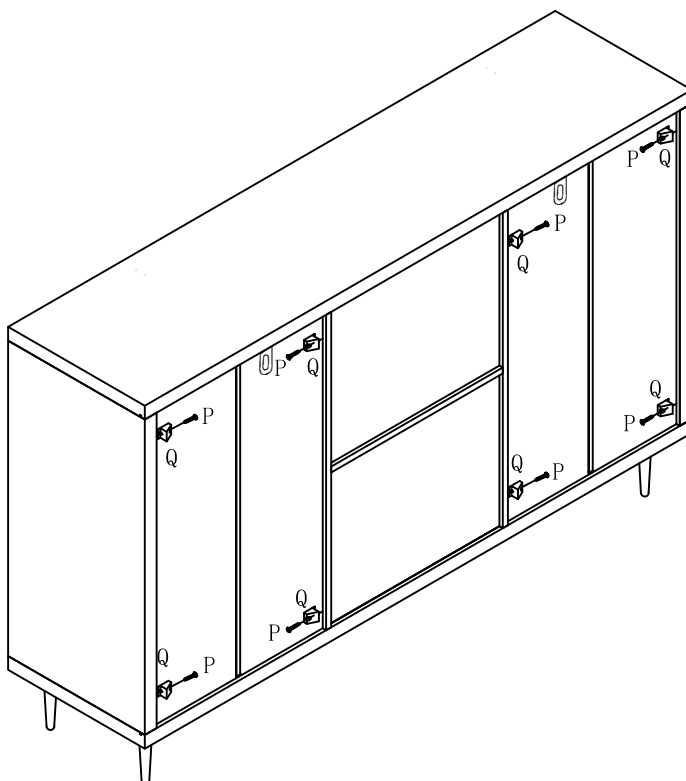


x 8

x 8

Assembly Instructions

  Step 17

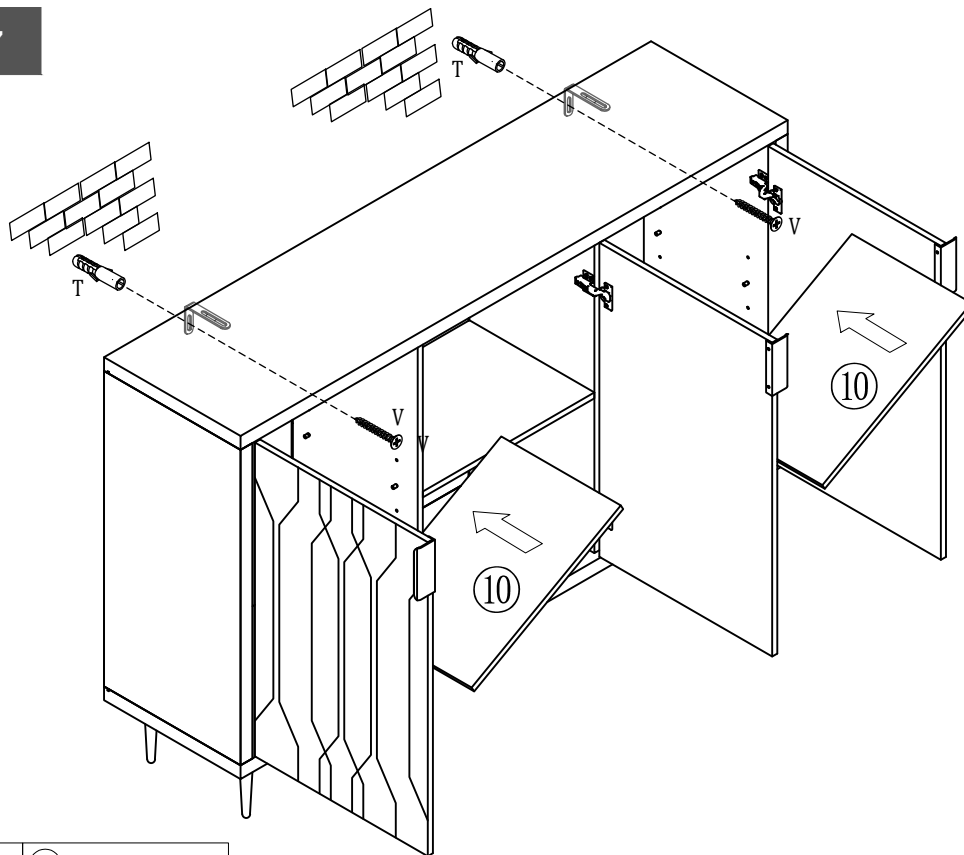

Step 18

