 



NBDC18ST

Assembly Instructions

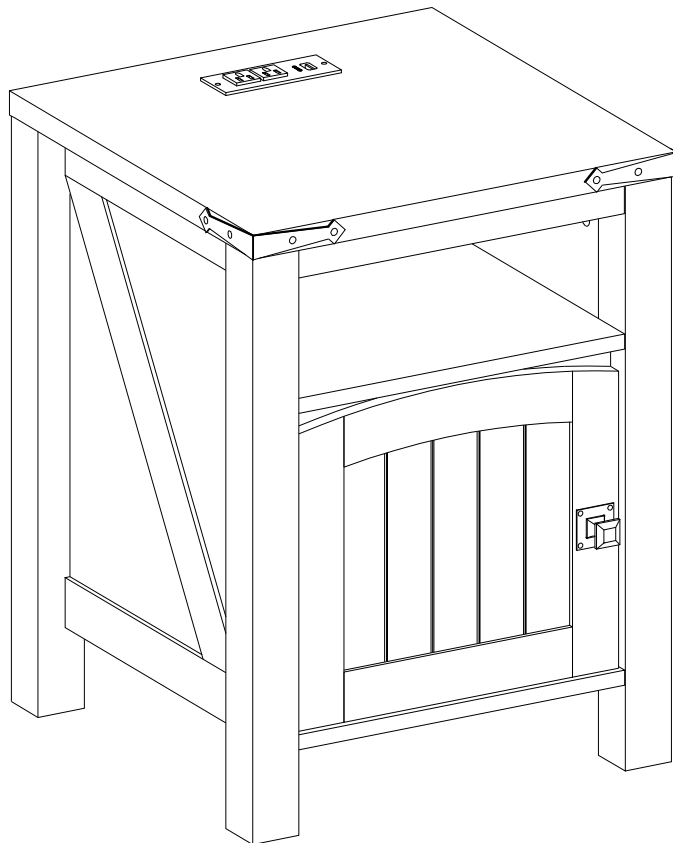


General Assembly Guidelines

 
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

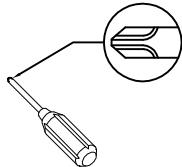

 - V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

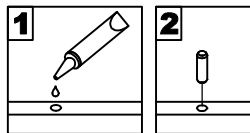


 In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

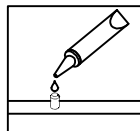


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

   
- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

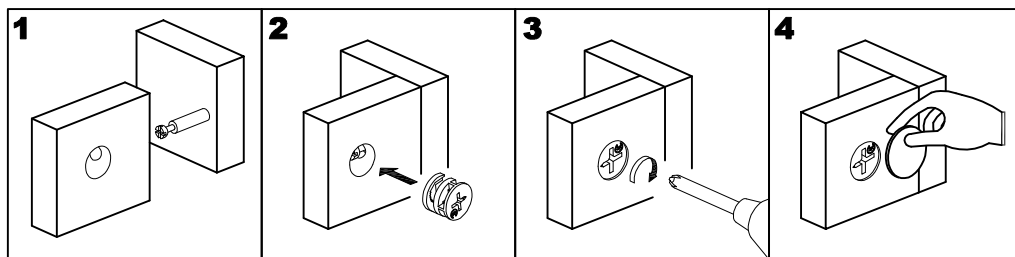


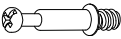


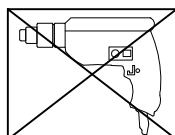


 

 

 

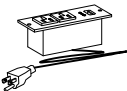

- VII. Power tools should not be used to assemble this product .

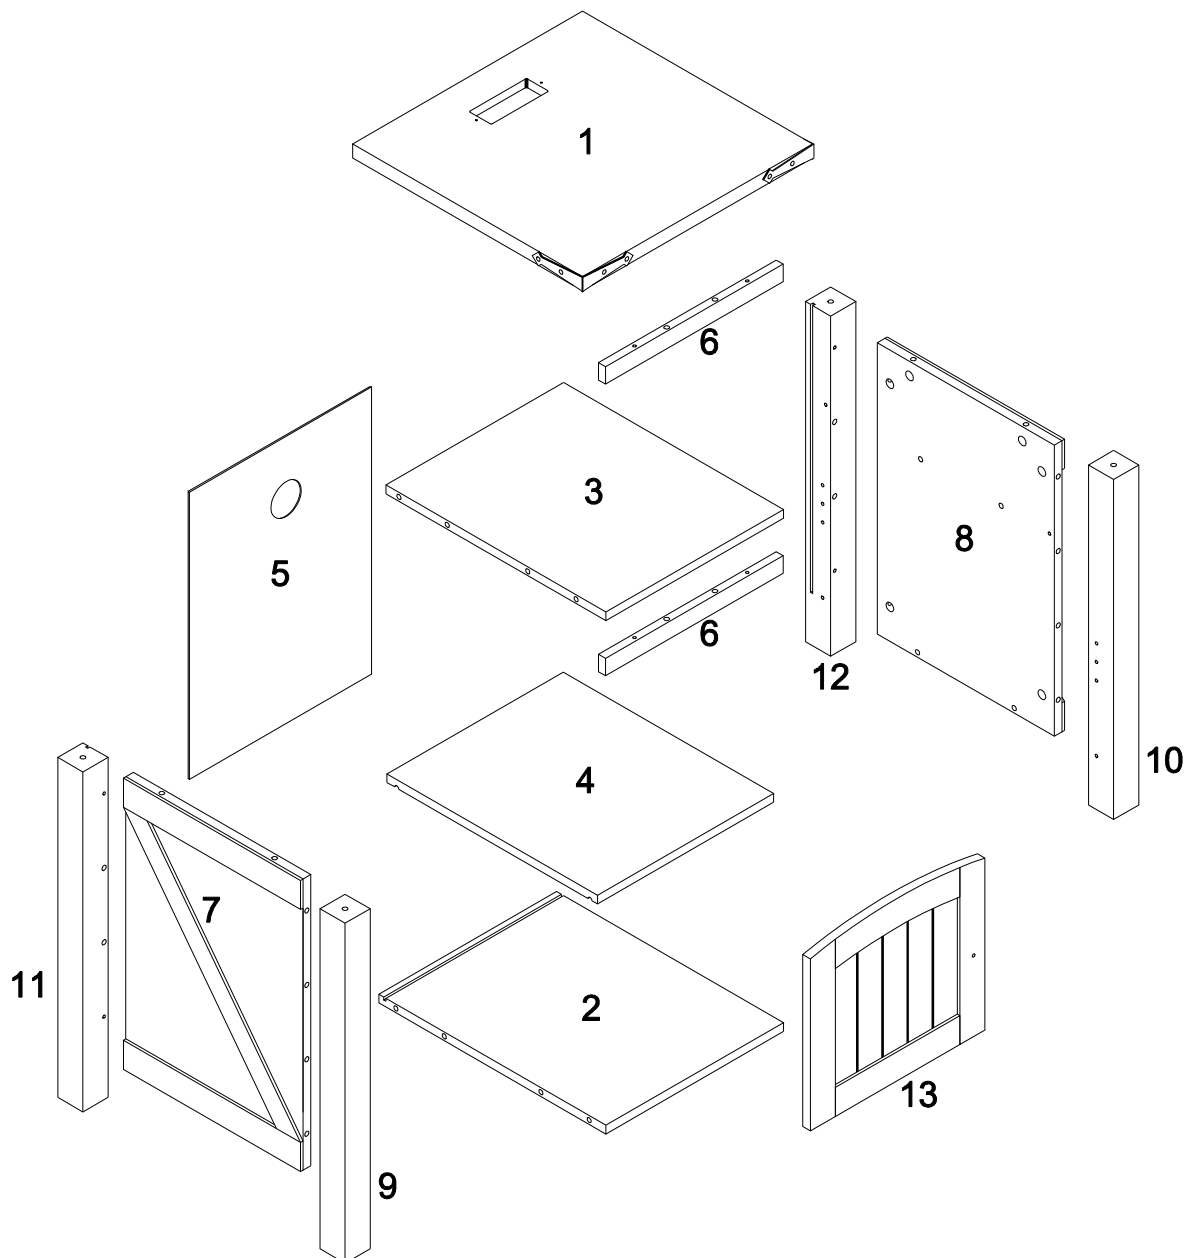


Parts List

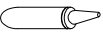


Hardware List

A		Ø8x30mm	Dowel	24 pcs
B		Ø6x35mm	Cam bolt	20 pcs
C		Ø15x11mm	Cam lock	20 pcs
D		Ø30mm	Cam cover	20 pcs
E			Glue tube	1 pc
F		Ø5x16mm	Shelf Pin	4 pcs
G		5/32"*22mm	Bolt	1 pc
H			Handle	1 set
J		Ø4x32mm	Screw	4 pcs
K			Hinge	2 pcs
L		Ø3.5*14mm	Screw	12 pcs
M			Plastic wedge	6 pcs
N		Ø3x17mm	Screw	6 pcs
O			Power Cord W/USB	1 pc
P		Ø3.5x12mm	Screw	2 pcs

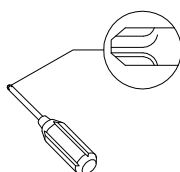 


Philips head screwdriver required for assembly
(not included)

 
Step 1

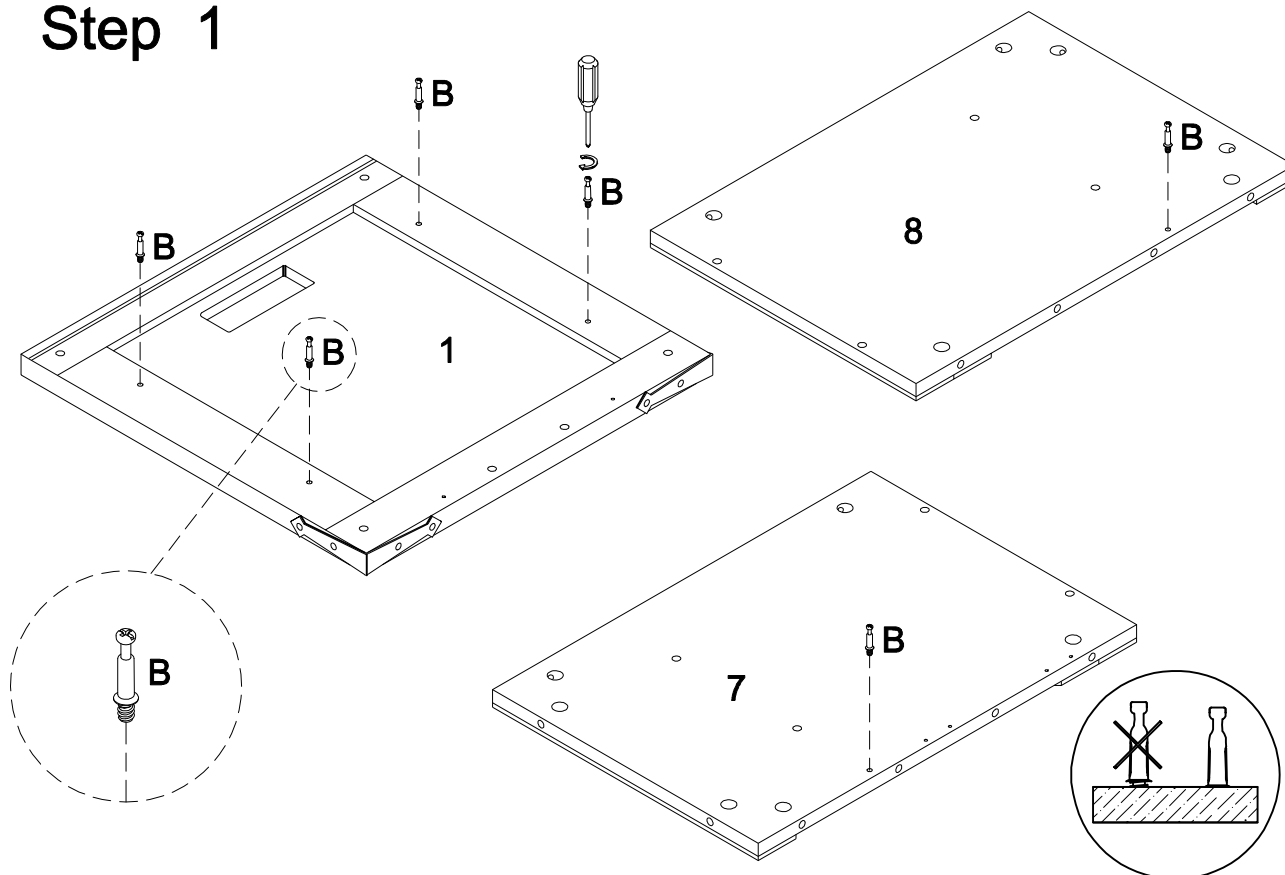

 
Step 2

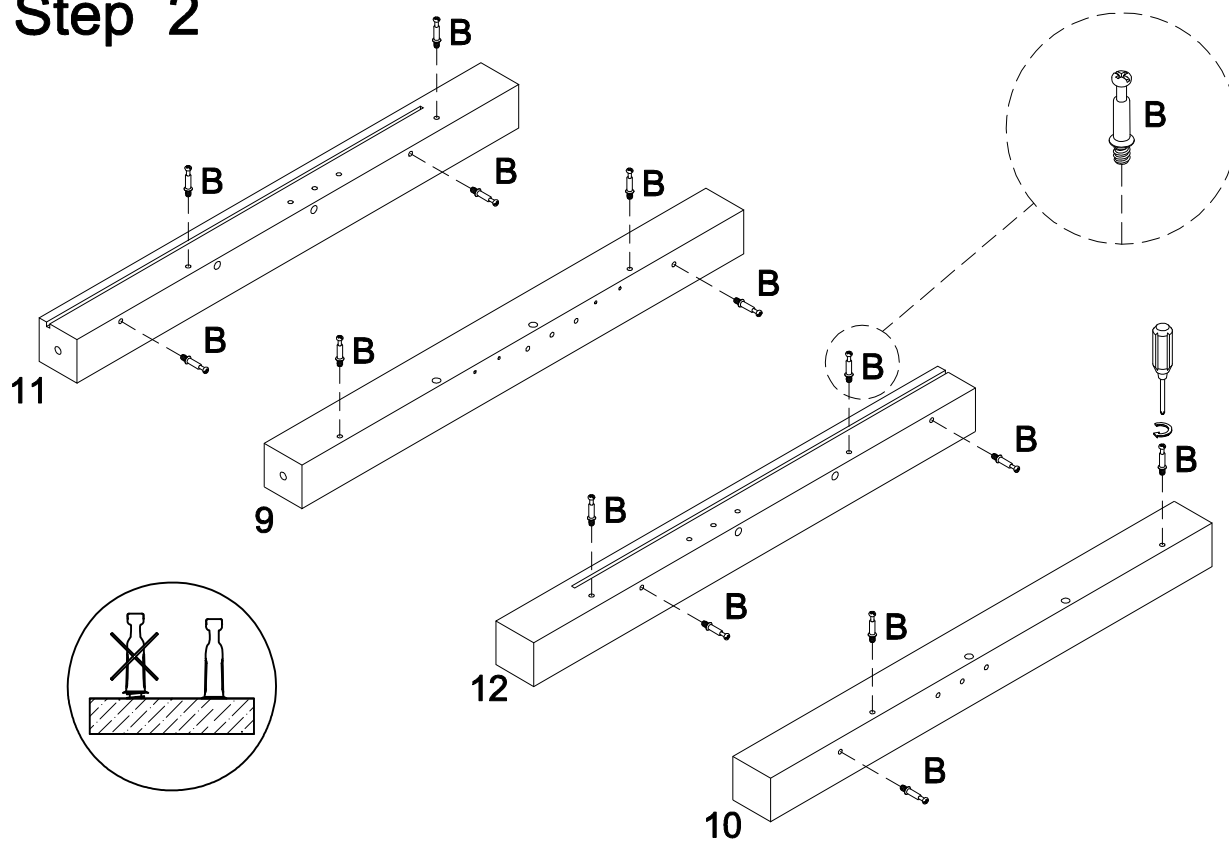

 
Step 3

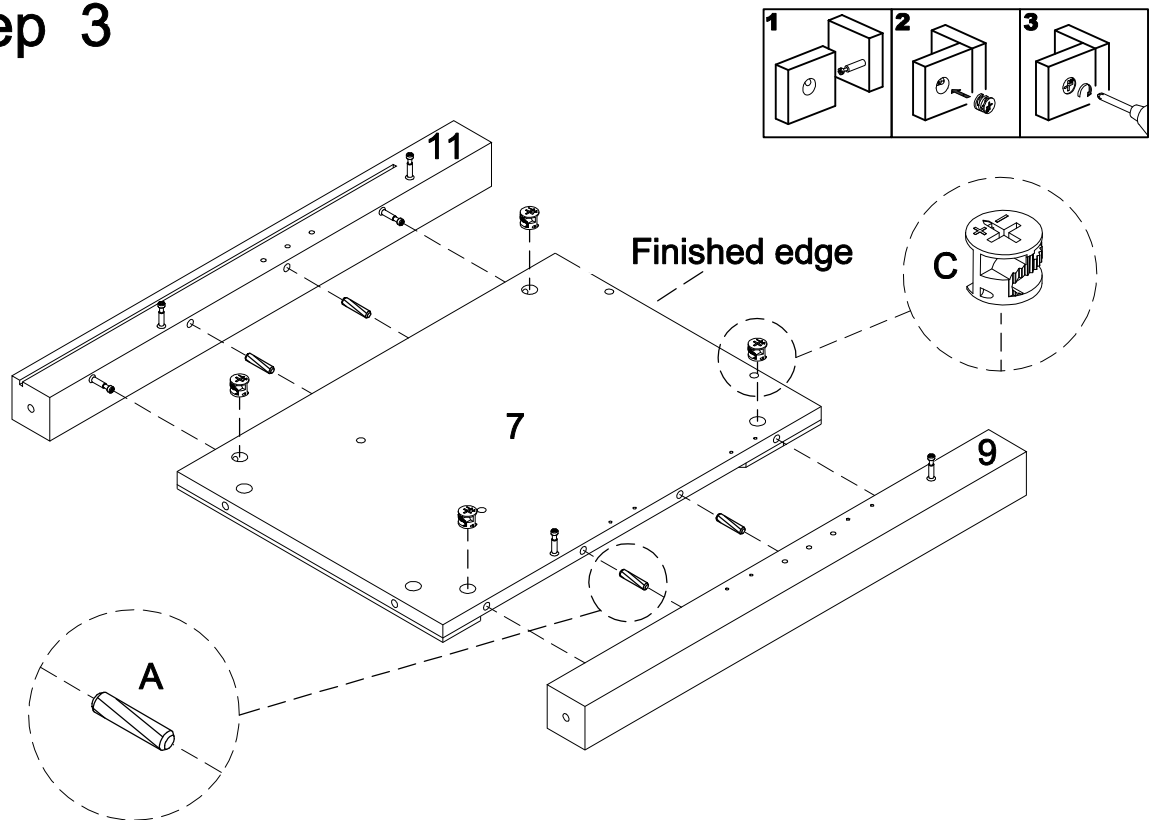

 
Step 4

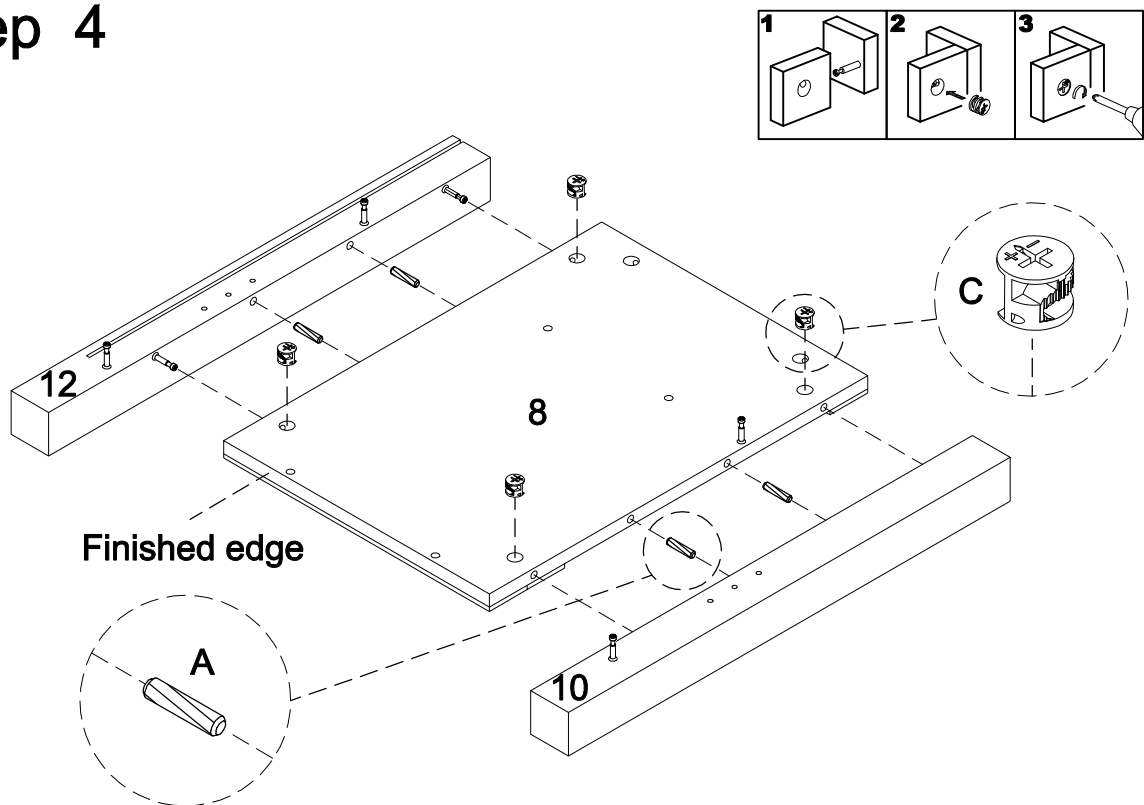

 
Step 5

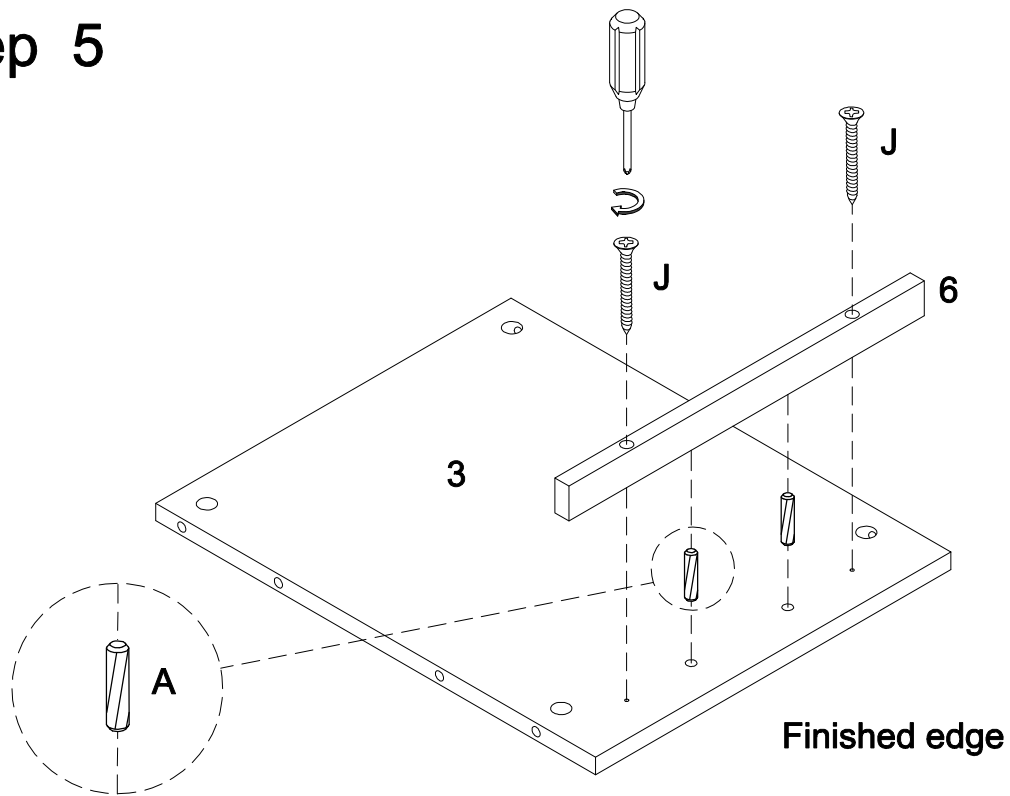

 
Step 6

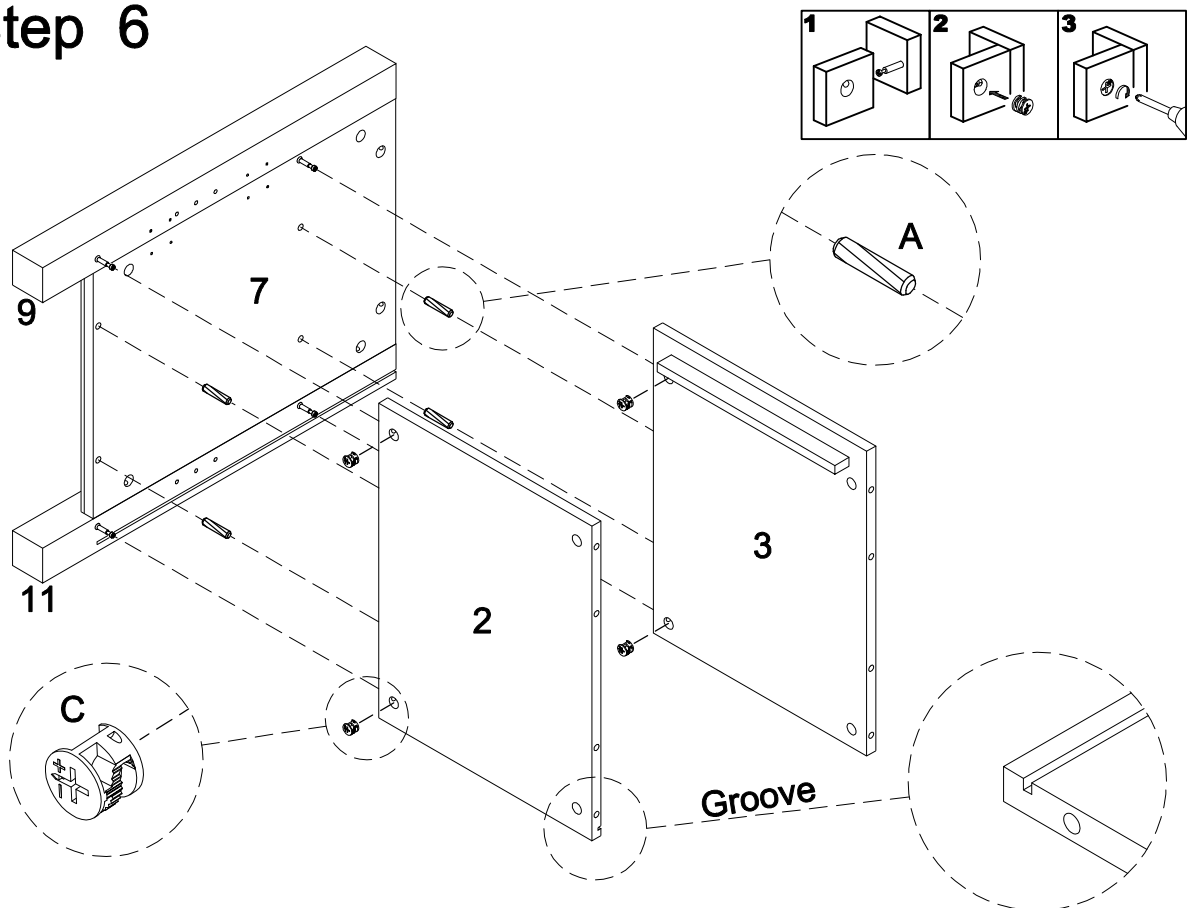

 
Step 7

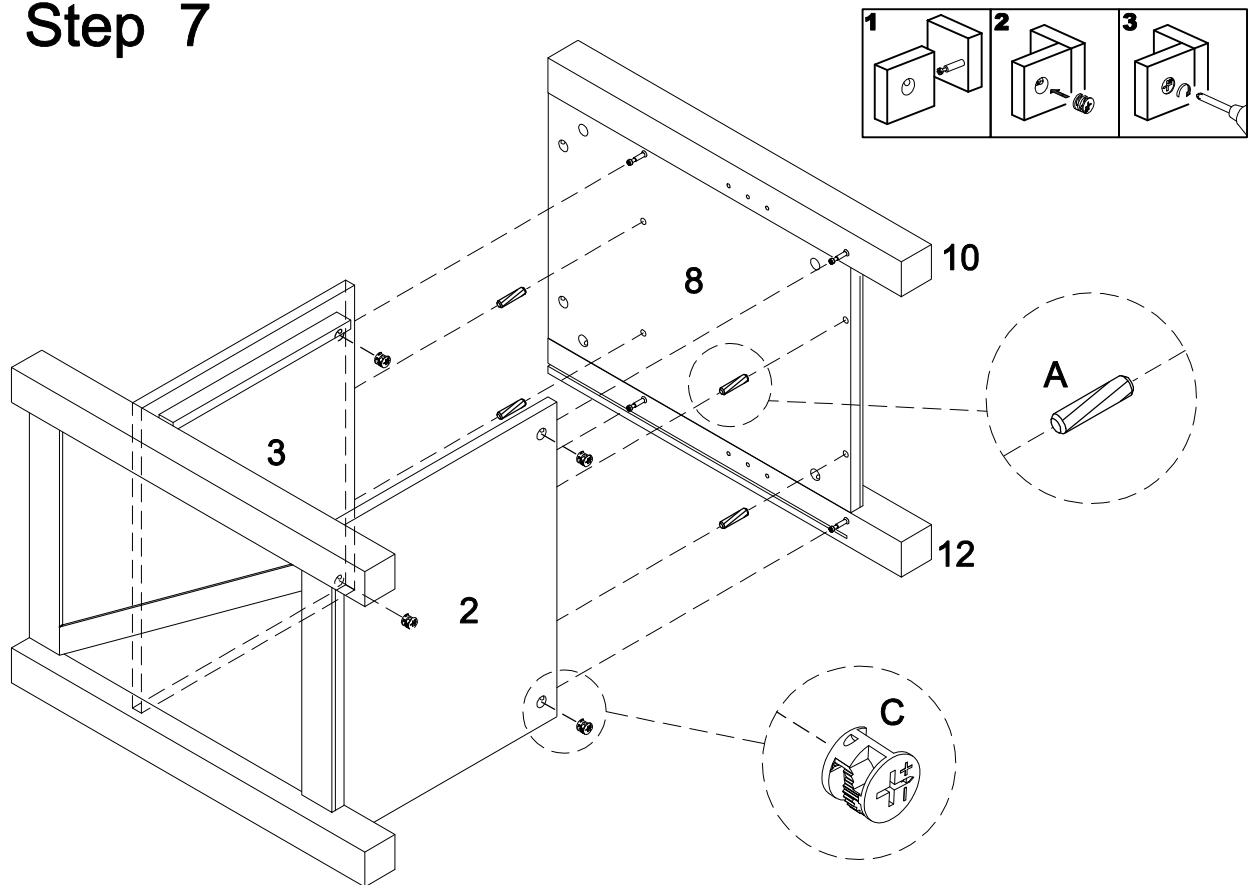

 
Step 8

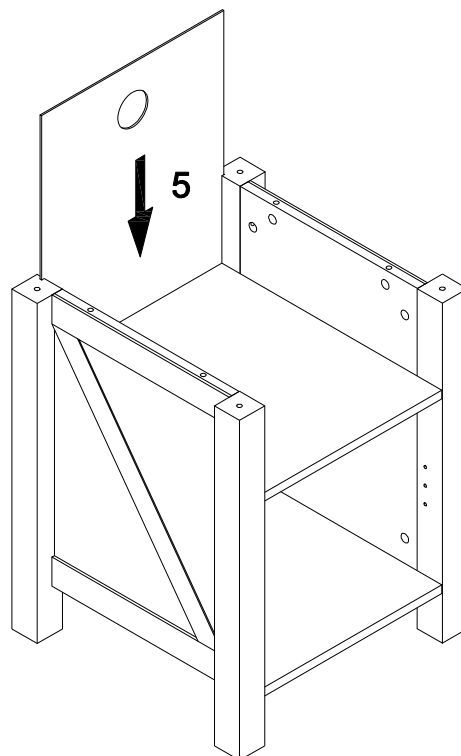

 
Step 9

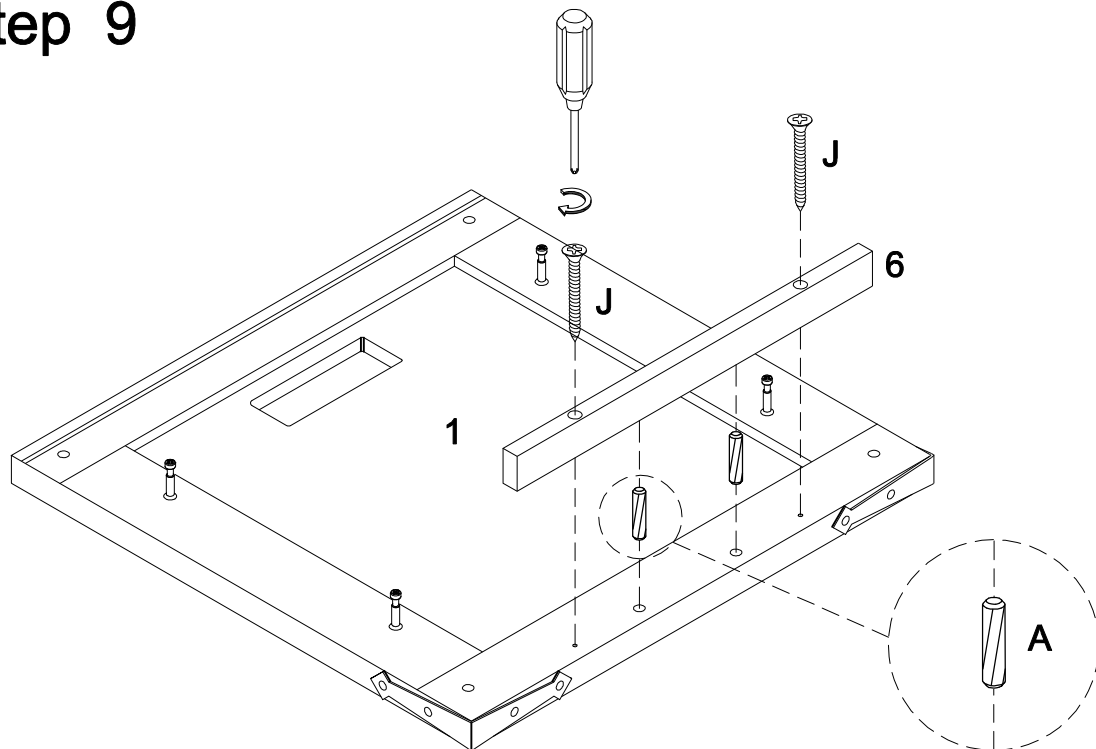

 
Step 10

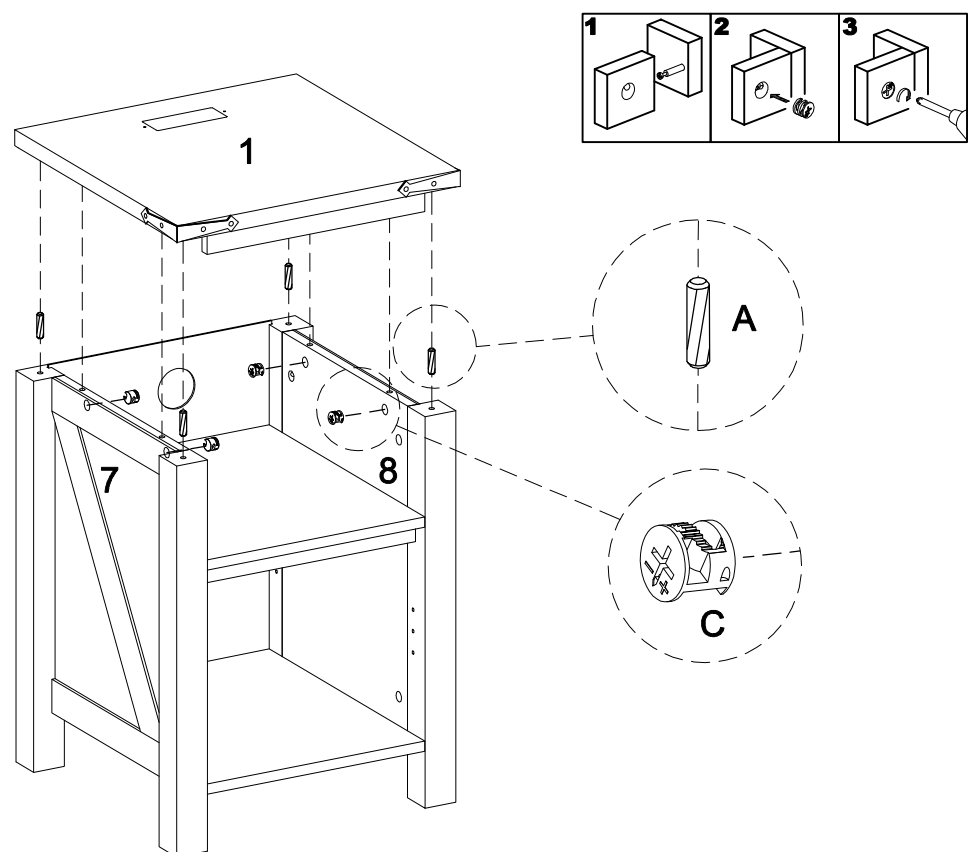

 
Step 11

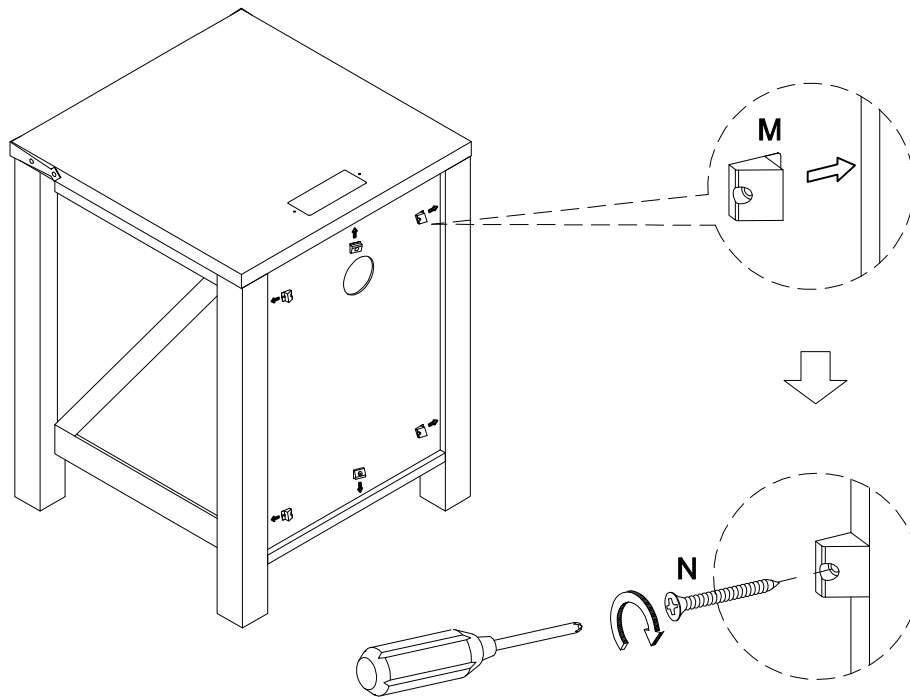

 
Step 12

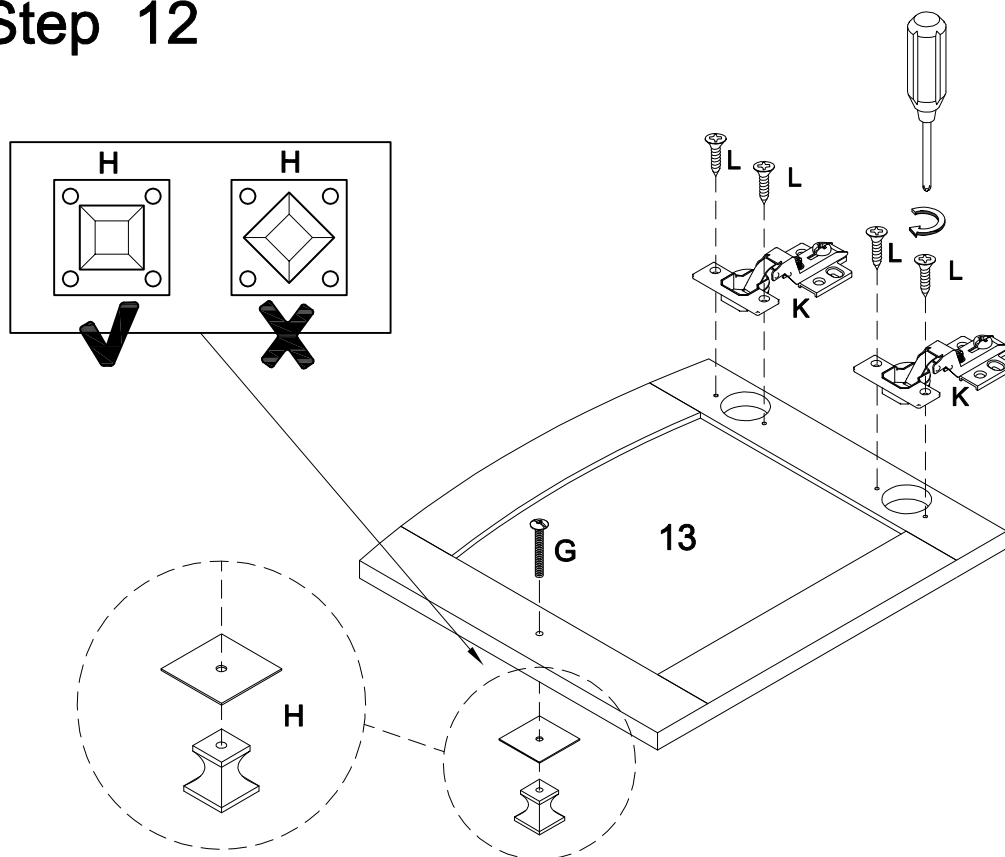

 
Step 13

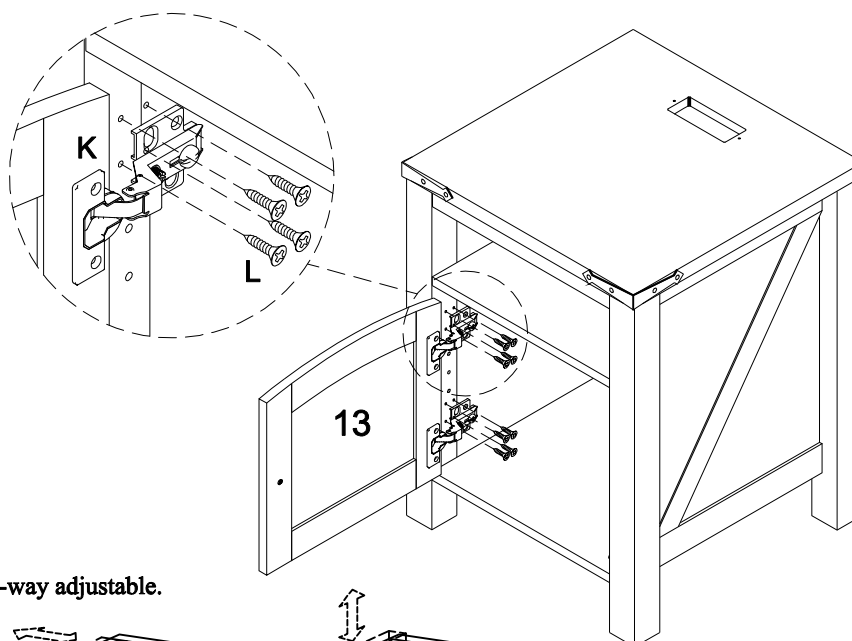

 
Concealed hinges are three-way adjustable.

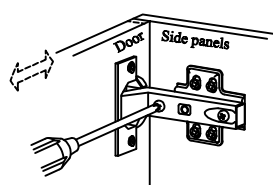

Horizontal
by screw adjustment



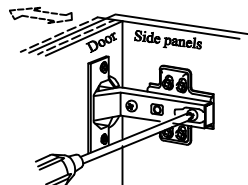 


 In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

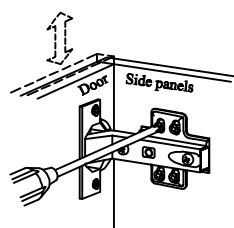


Vertical
Via slots in the mounting
plate or via cam adjustment

   
Step 14

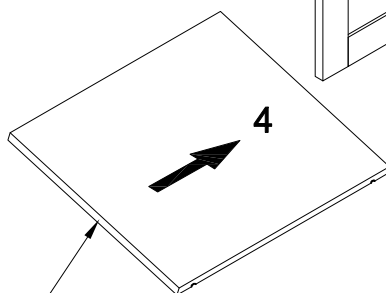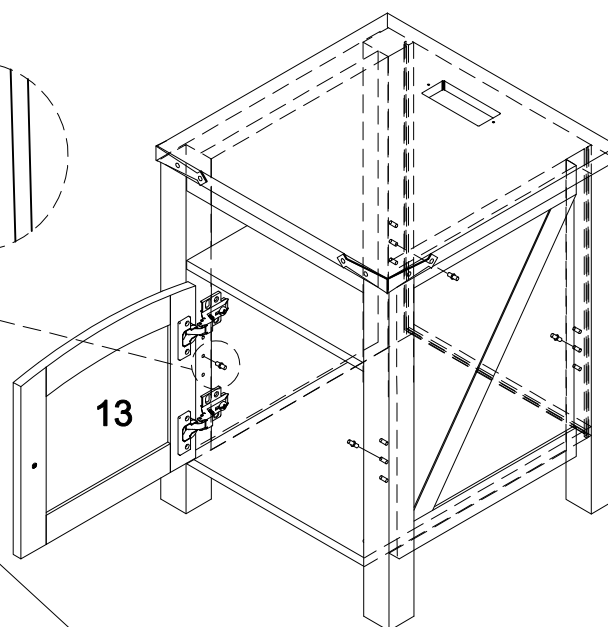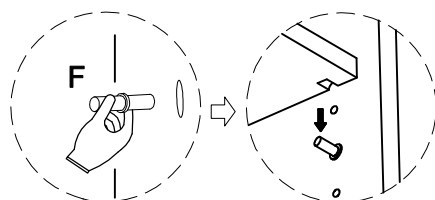


Finished edge

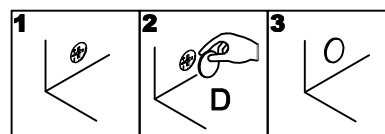 

 Step 15

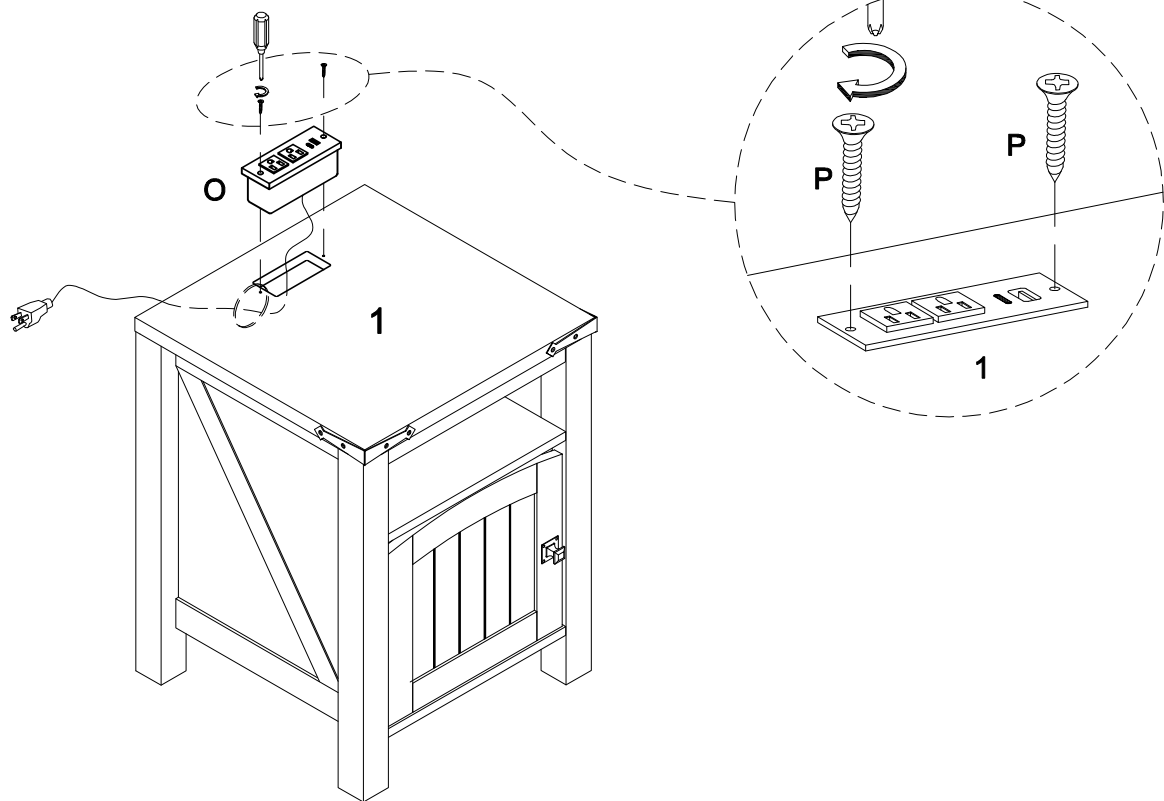

 Step 16

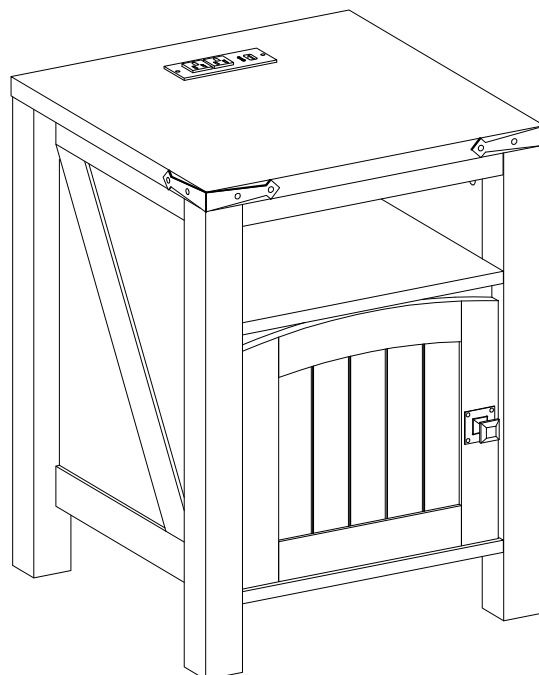

Final Assembly