



Products Instructions

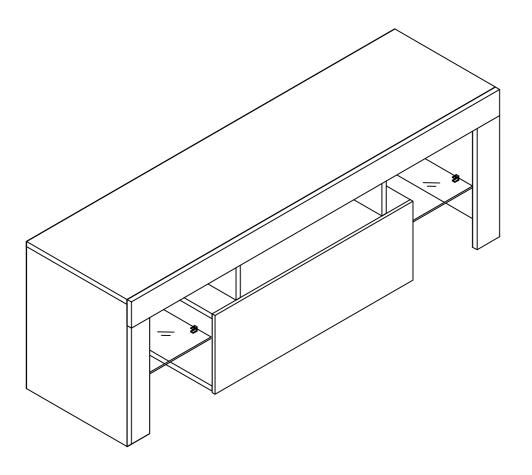

TV-001

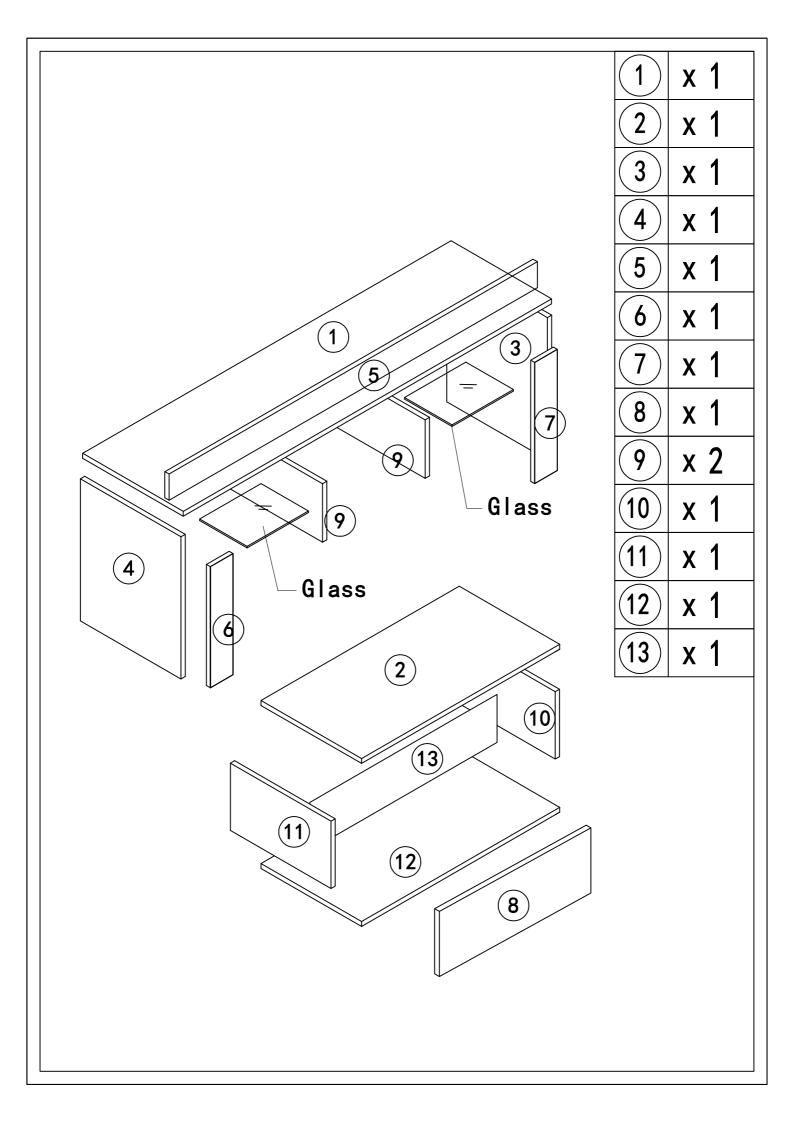

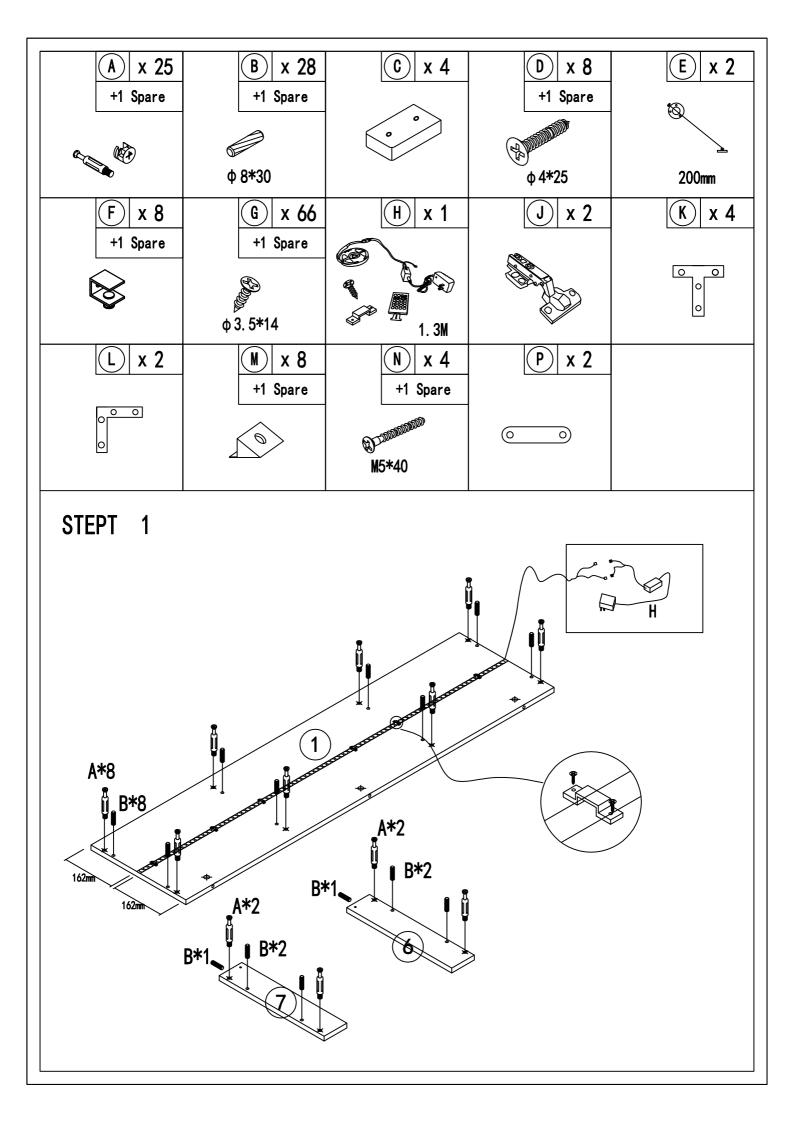


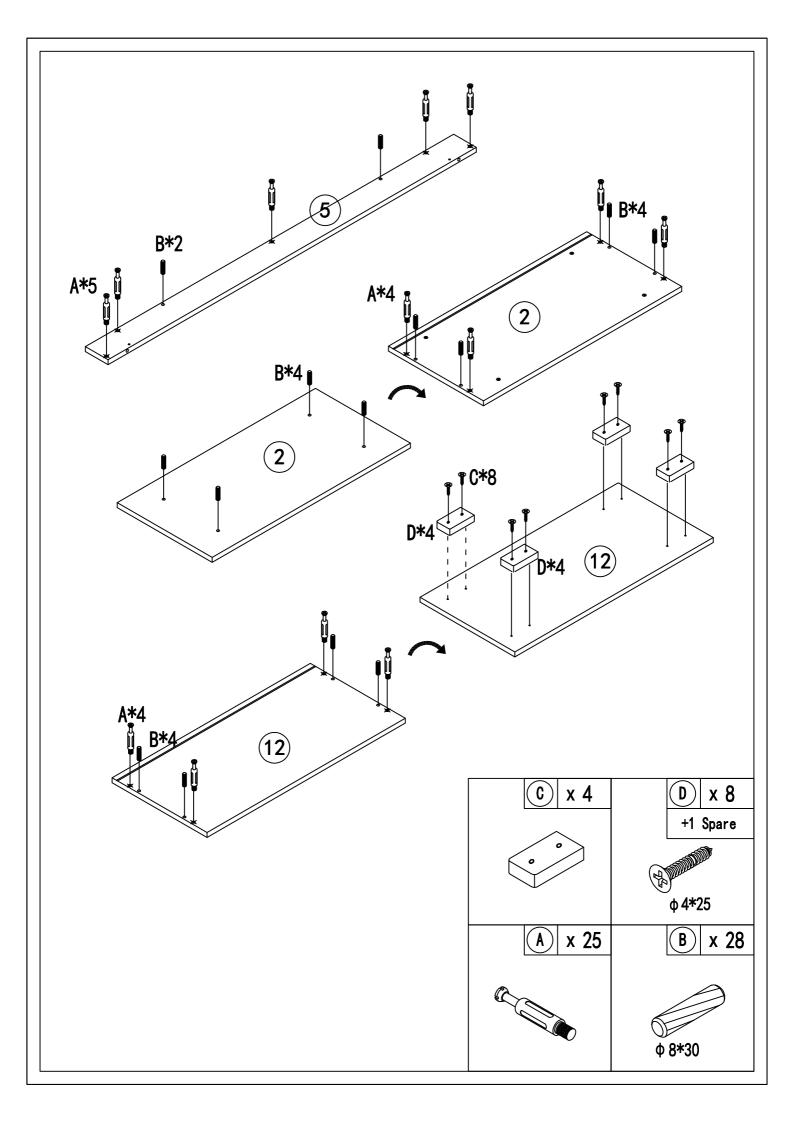



STEPT 2 $\overline{(N)}$ x 4 **ELIMANAMA** M5*40 STEPT 3 (A) x 4

STEPT 4 **13** (11)STEPT 5 (A) x 4


STEPT 6

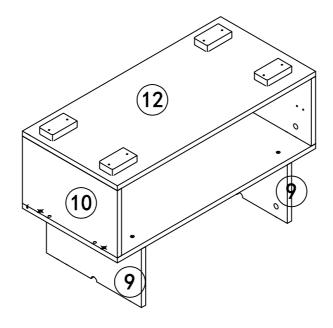


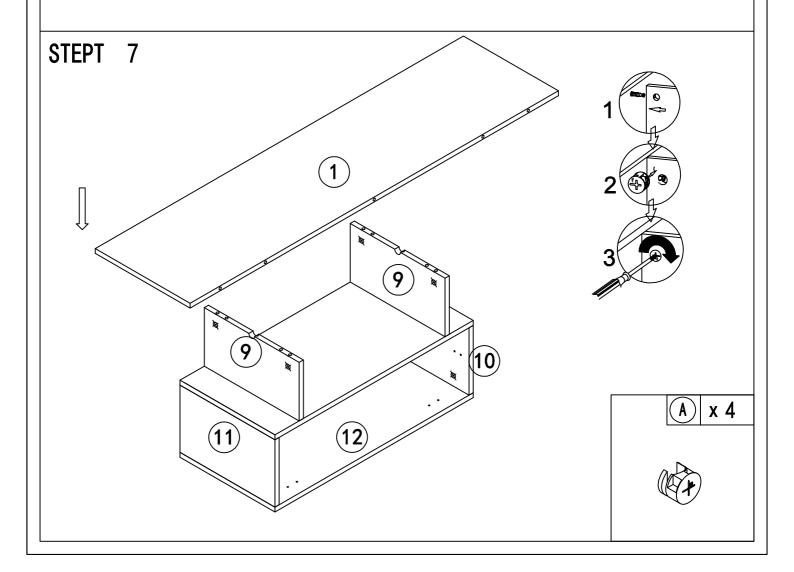

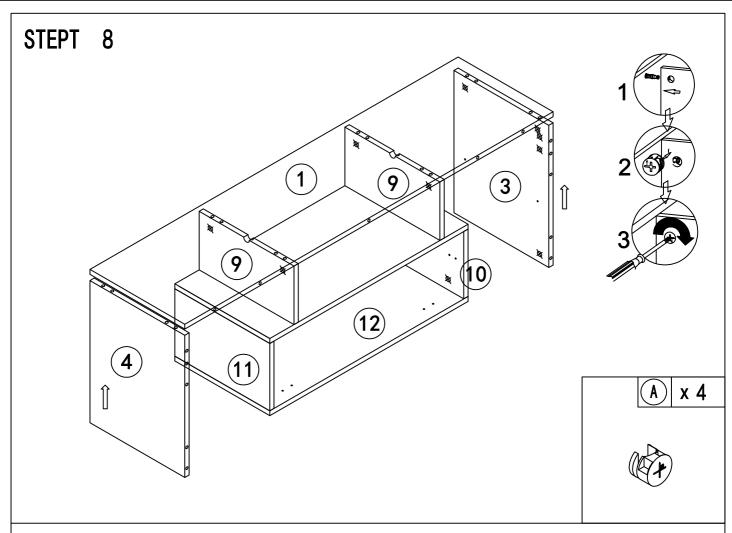




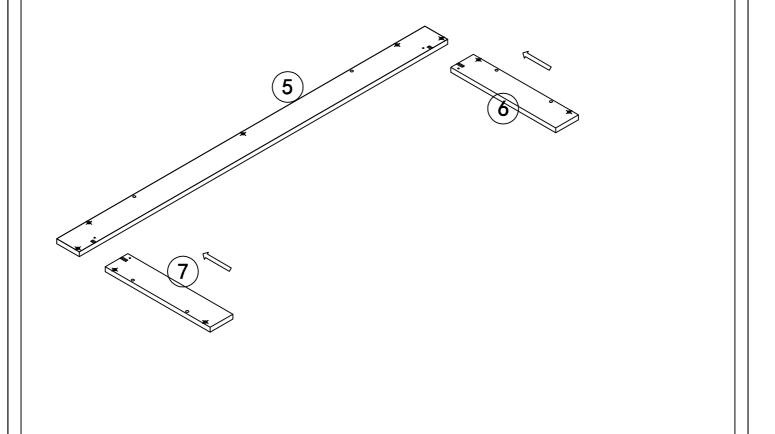

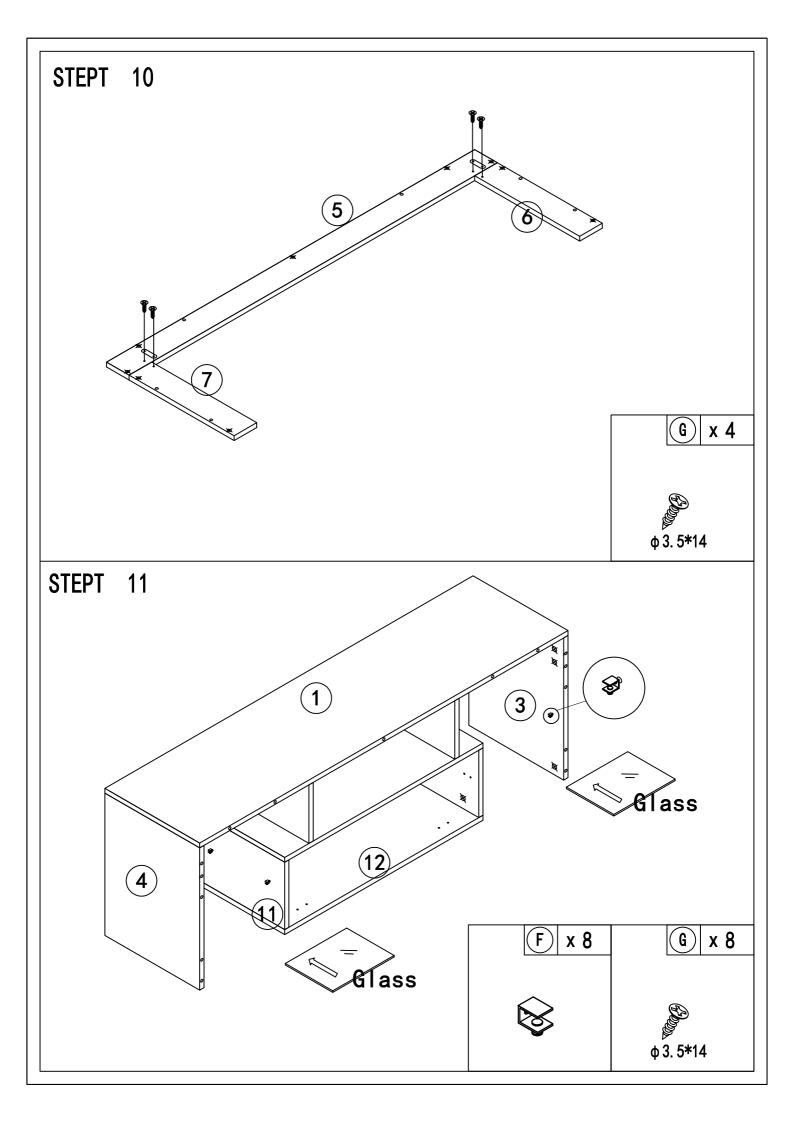

STEPT 12 6 A x 9

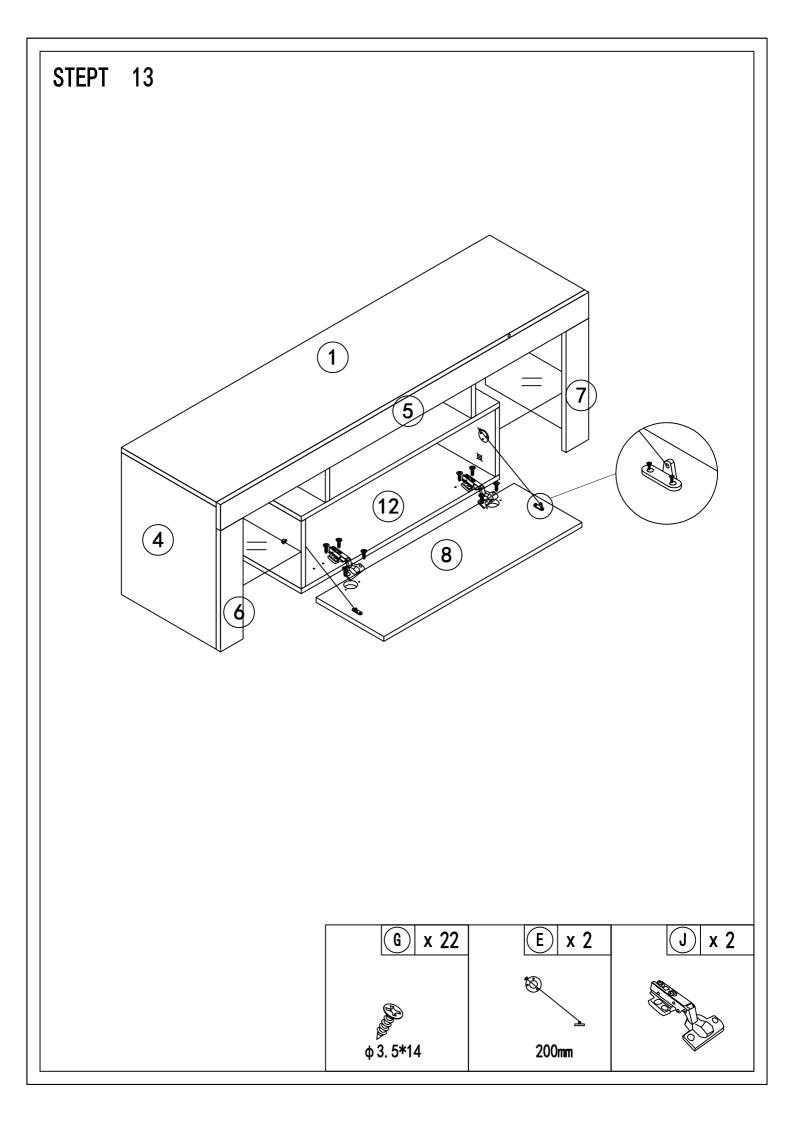


STEPT 14 G 3 This part is in the back, fixing the backplate and the top plate, is the cabinet stable $|\mathbf{M}| \times \mathbf{8}$ (G) x 32 $|\mathbf{K}| \times 4$ (L) x 2 ф3.5*14

LED light

if you can't let the lights work successfully , please check the following:

- 1. Please check the direction of the connect, try it in the opposite direction, according to then following pictrue.
- 2. Please check the remote control, it need you to tear down the plastic septubefore use it.
- 3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

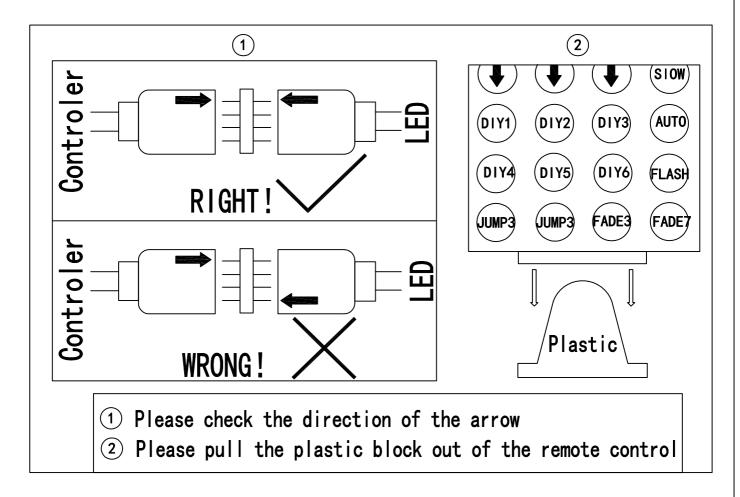

If the led lights still can't work successfully, please pay attention to Twitter:barryandyou, we have prepared a detailed viedeo for you.