 


boahaus

ASSEMBLY INSTRUCTIONS

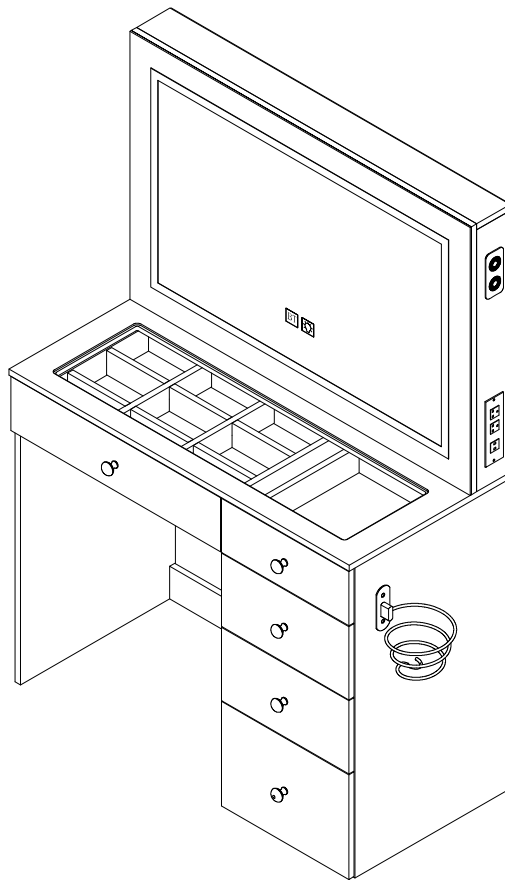

 
MODEL #: 1667

Approx. product weight 110.23lbs./50kg.*


THIS INFORMATION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Need some Help? Call +1 281-809-4043 or email contact@boahaus.com


General Dimensions

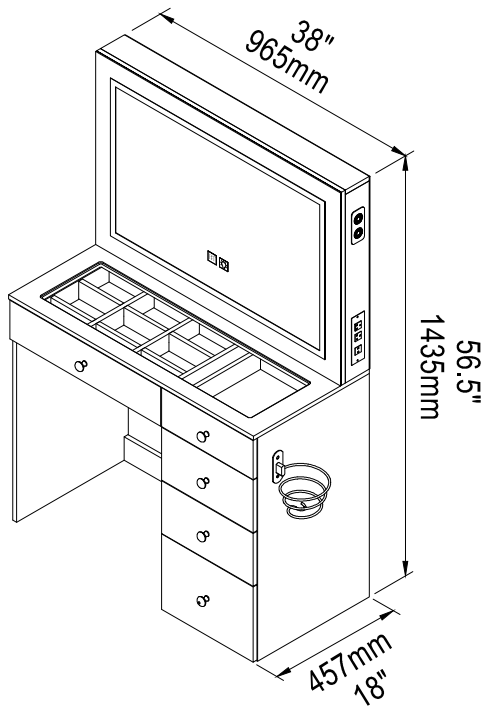


Maximum weight supported

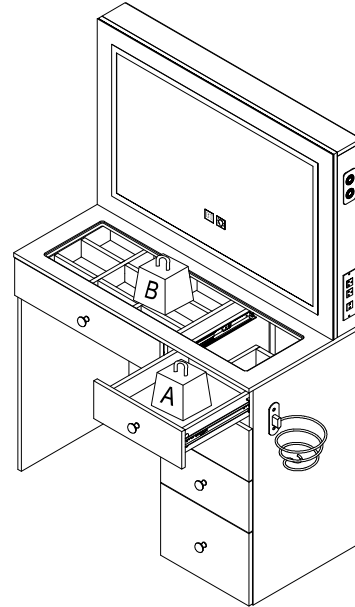 

	LB	KG
A	11	5
B	6.6	3

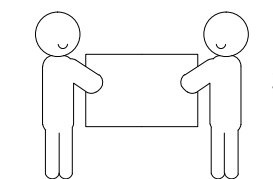 

2 People

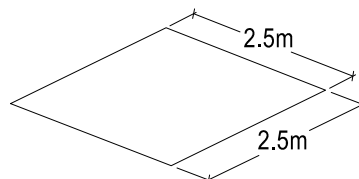 


Recommended space
for assemble

 Note: Place a carpet or blanket in the assembly area to avoid damage to the parts during the process.




 


 
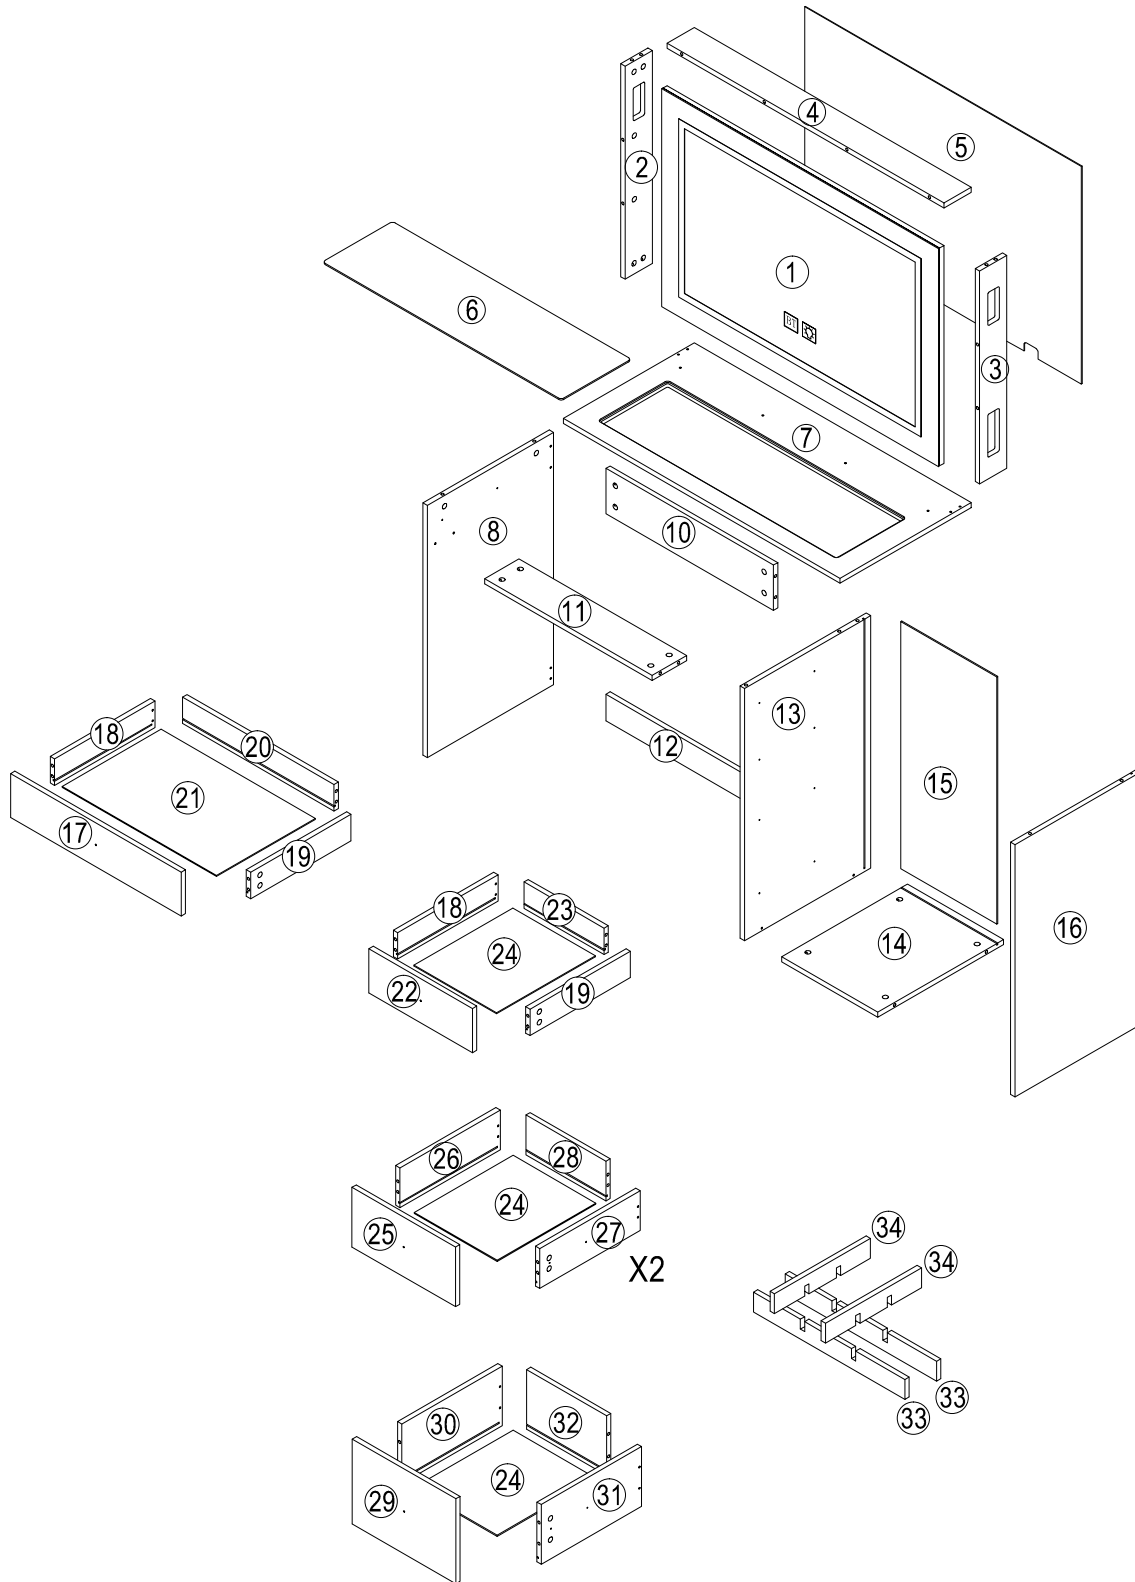 



 


PARTS IDENTIFICATION

NO.		QTY.
1	Mirror	1
2	Left side tray	1
3	Right side tray	1
4	Top tray	1
5	Mirror backboard	1
6	Glass	1
7	Top base	1
8	Left side board	1
10	Left backboard	1
11	Middle layer	1
12	Bottom footer	1
13	Middle board	1
14	Right bottom board	1
15	Right backboard	1
16	Right side board	1
17	Front of left drawer	1
18	Left side of small drawer	2
19	Right side of small drawer	2
20	Rear of left drawer	1
21	Bottom of left drawer	1
22	Front of right small drawer	1
23	Rear of right small drawer	1
24	Bottom of right drawer	4
25	Front of right middle drawer	2
26	Left side of right middle drawer	2
27	Right side of right middle drawer	2
28	Rear of right middle drawer	2
29	Front of right big drawer	1
30	Left side of right big drawer	1
31	Right side of right big drawer	1
32	Rear of right big drawer	1
33	Horizontal drawer division	2
34	Vertical drawer division	2

Note: 6 and 9 are easily mis-distinguished. Therefore, No.9 is skipped.




IDENTIFICATION OF ACCESSORIES


CODE		DESCRIPTION	QTY.
A		Cam lock	83
B		Drum lock	83
C		Flat head screw (M3*12mm)	63
D		Knob	5
E		Knob screw (M4*20mm)	5
F		Telescopic slide L350MM	10
G		Back panel buckle	8
H		Screw driver	1
I		Hair dryer holder	1
J		Plastic foot	6
K		Anti-tip kit	2
L		Speaker	1
M		Outlet	1
N		Nail-free glue	1

ASSEMBLY

 1. Screw A in the top base

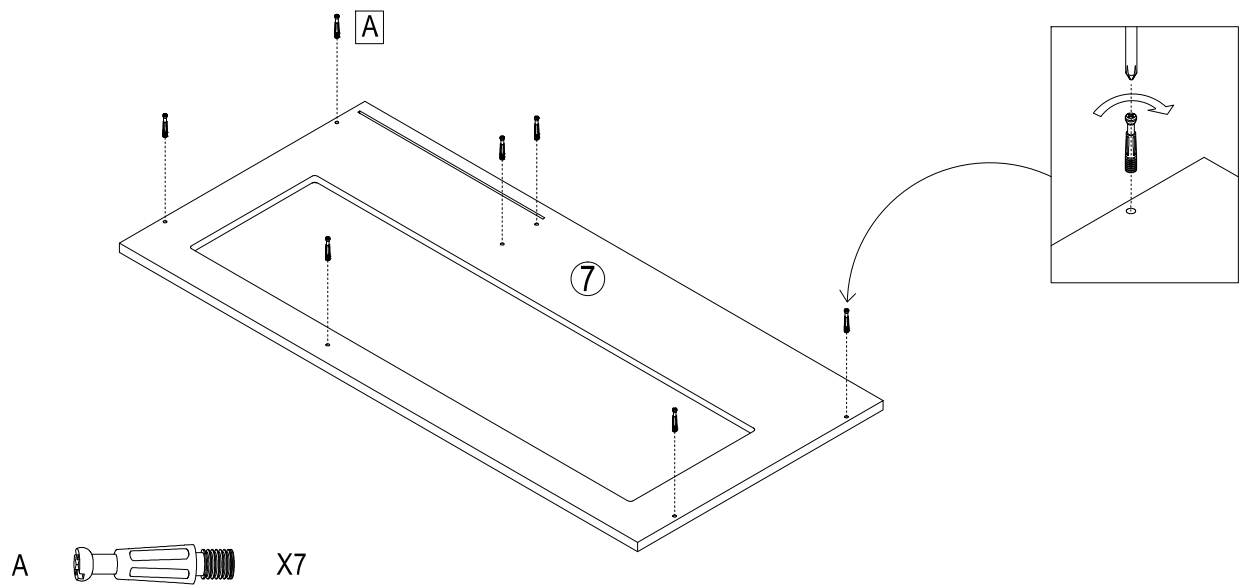


 2. Divide the slides into F-1 and F-2

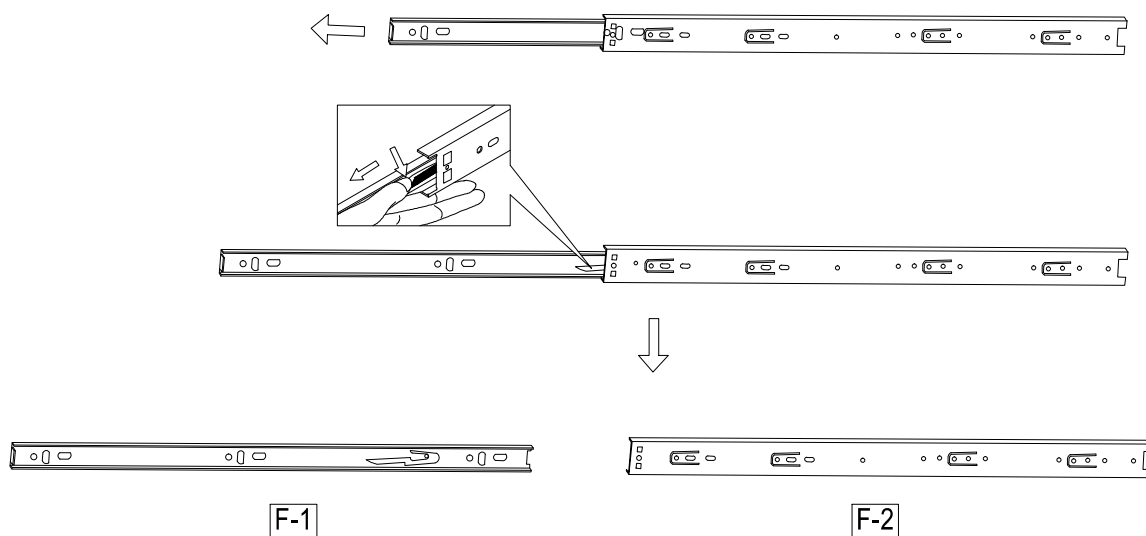


ASSEMBLY

 3. Assemble the slide and cam lock on the left side board

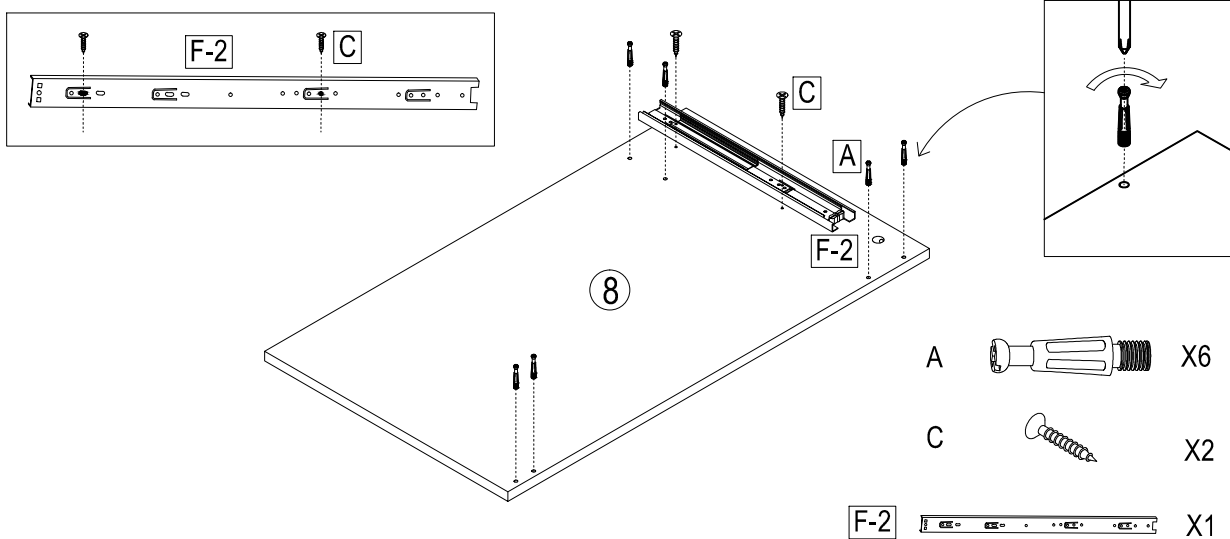


 4. Assemble the slide and cam lock on the middle board

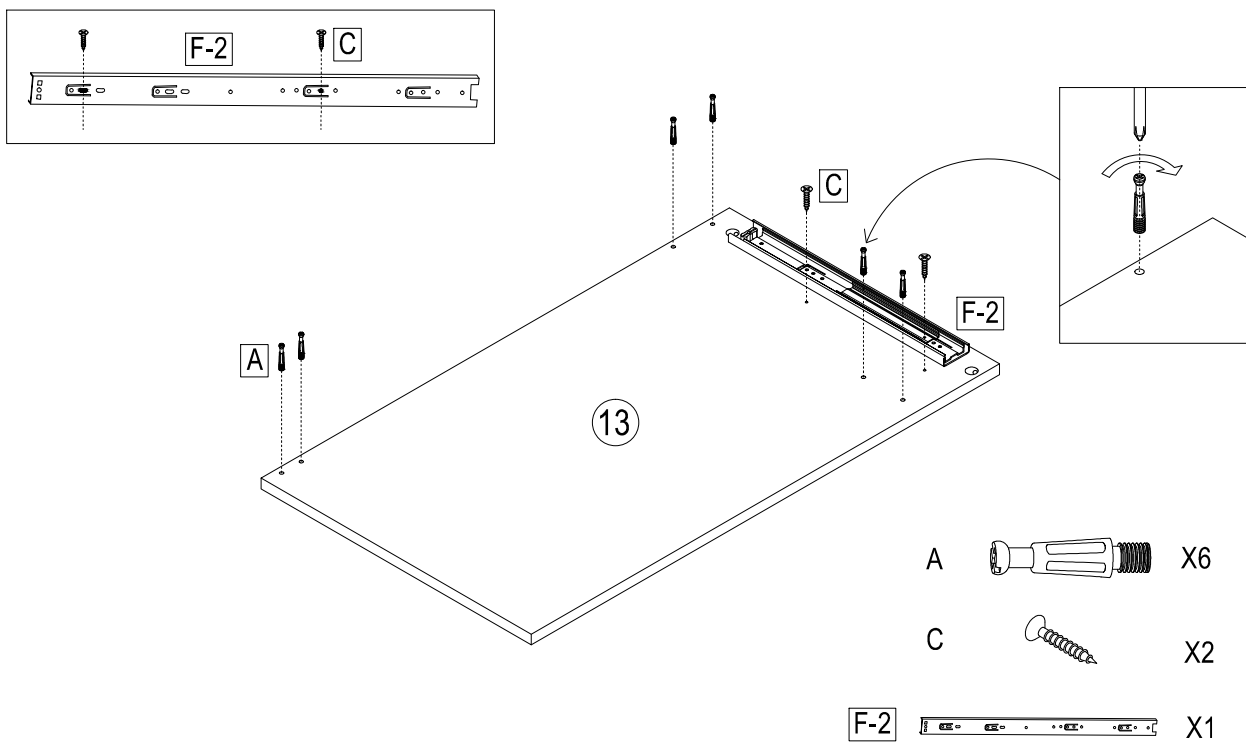


ASSEMBLY

 5. Assemble the desk frame

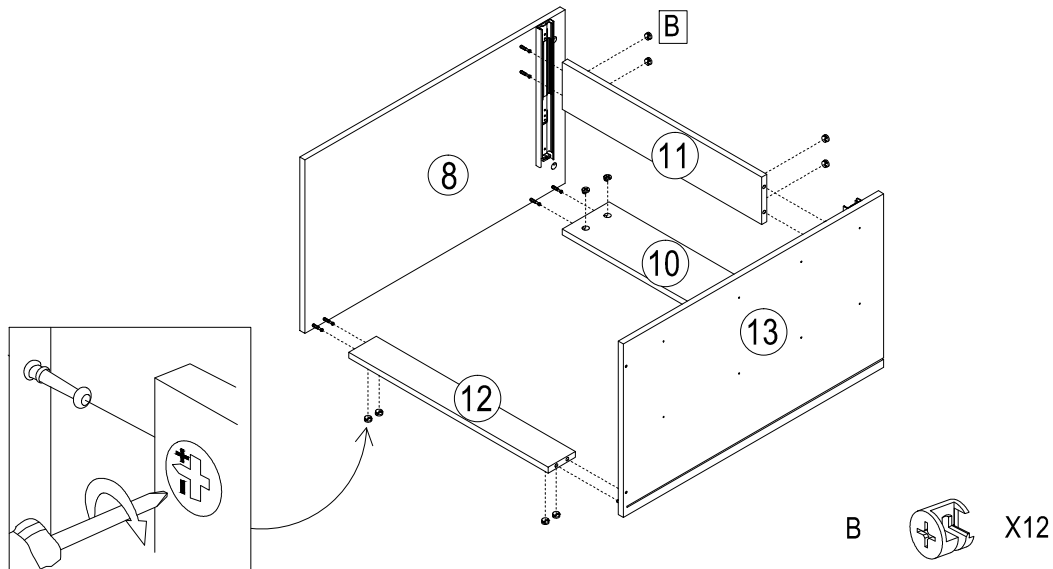


 6. Assemble the slides and cam lock on the middle board

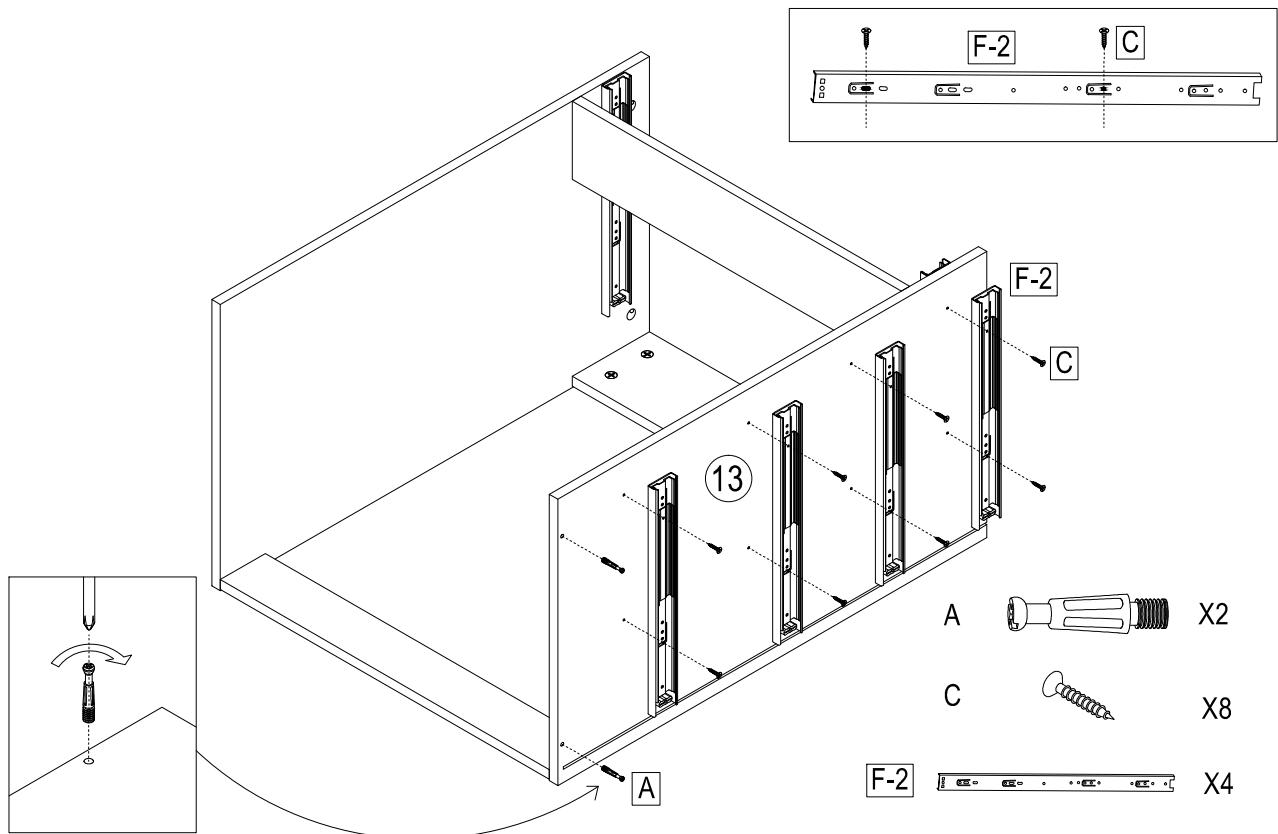


ASSEMBLY

 7. Assemble the slides and cam lock on the right side board

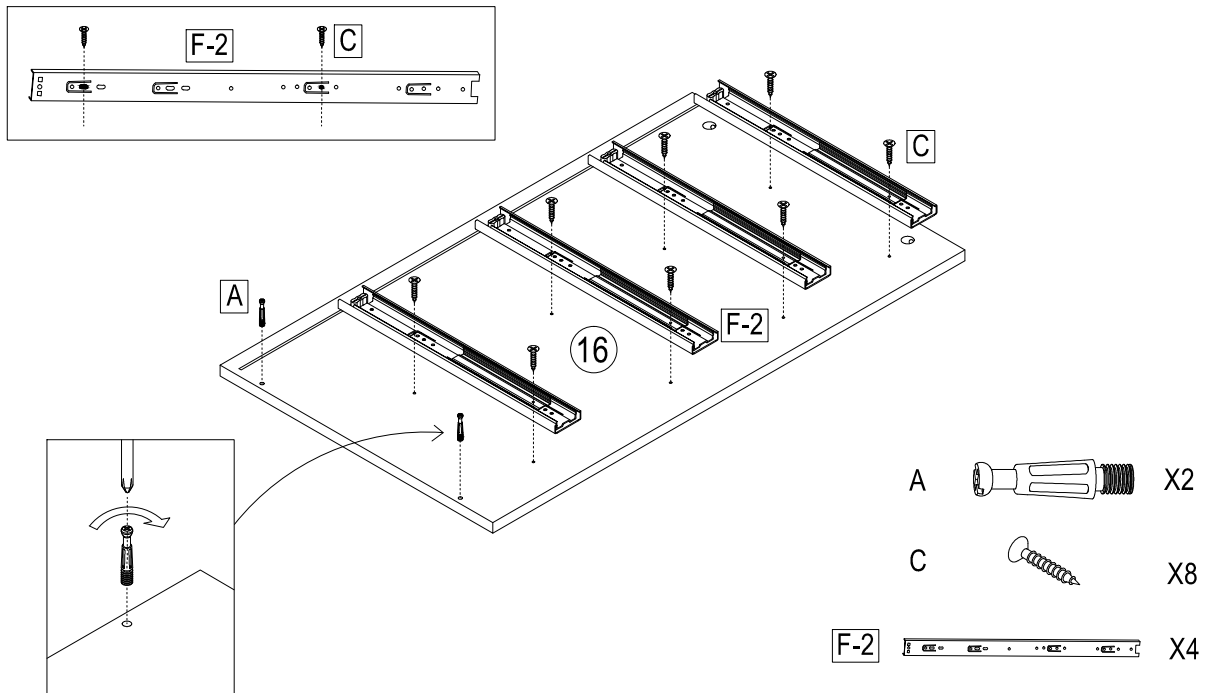


 8. Assemble the right bottom board

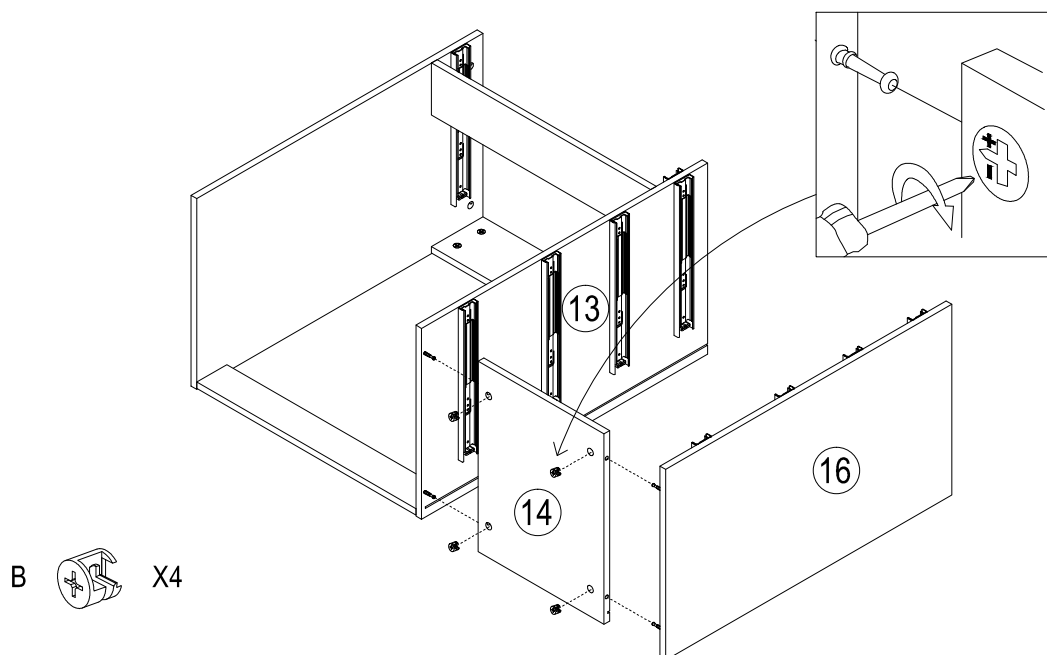


ASSEMBLY

 9. Put the right backboard in

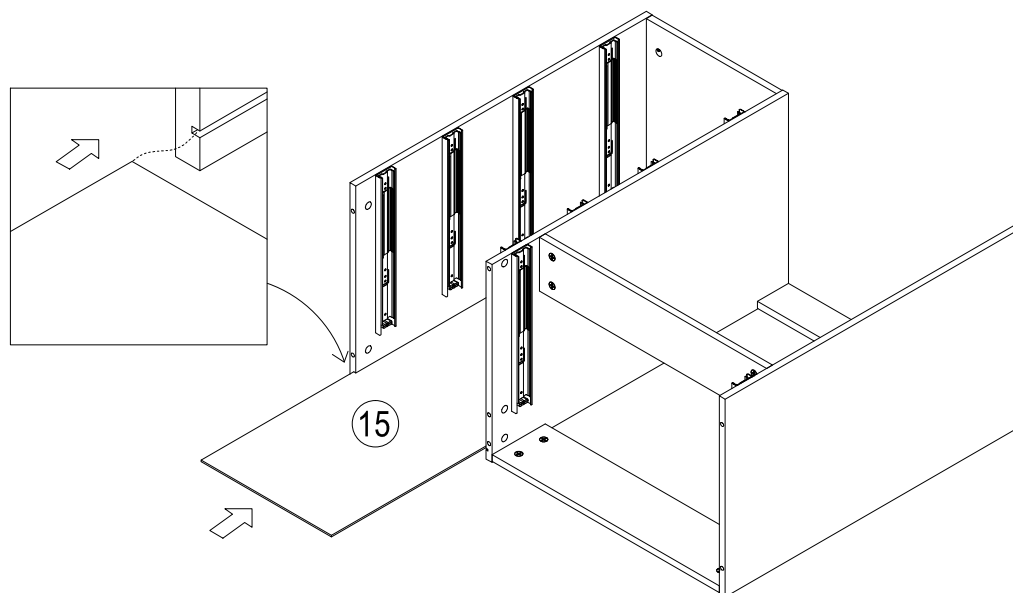


 10. Assemble the top base

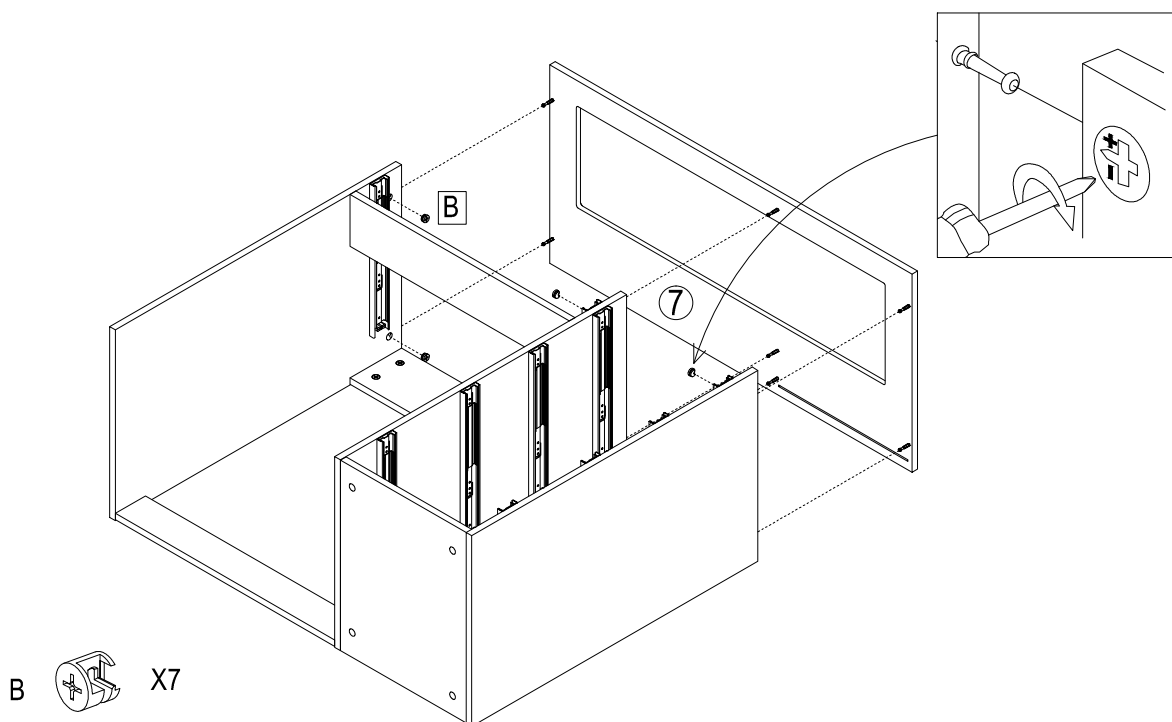


ASSEMBLY

 11. Assemble the plastic foot

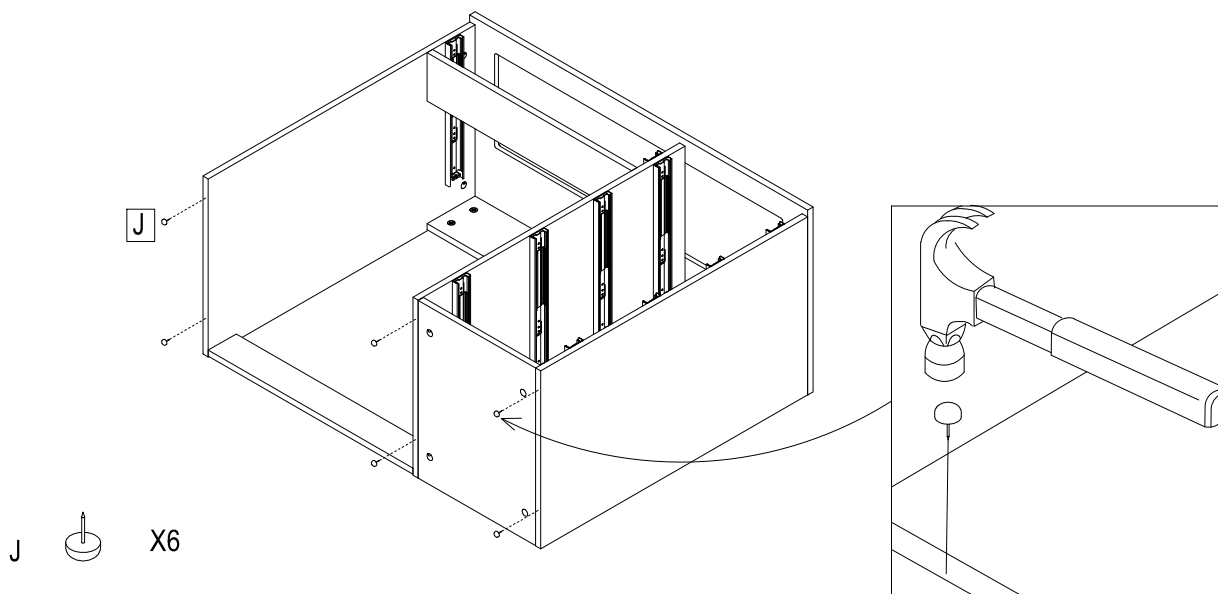


 12. Stand the desk up

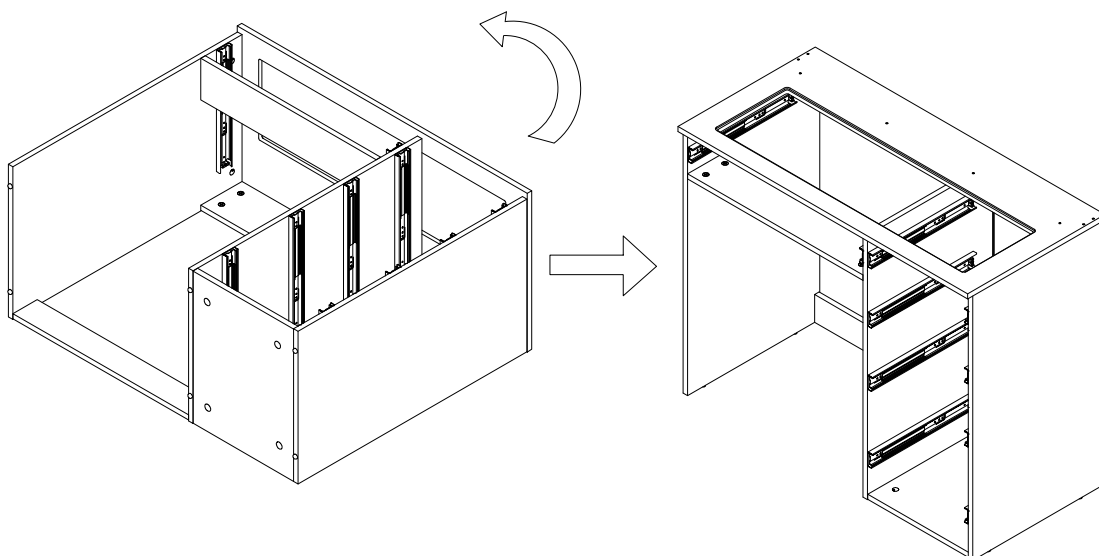


ASSEMBLY

 13. Screw A in the side boards of drawers

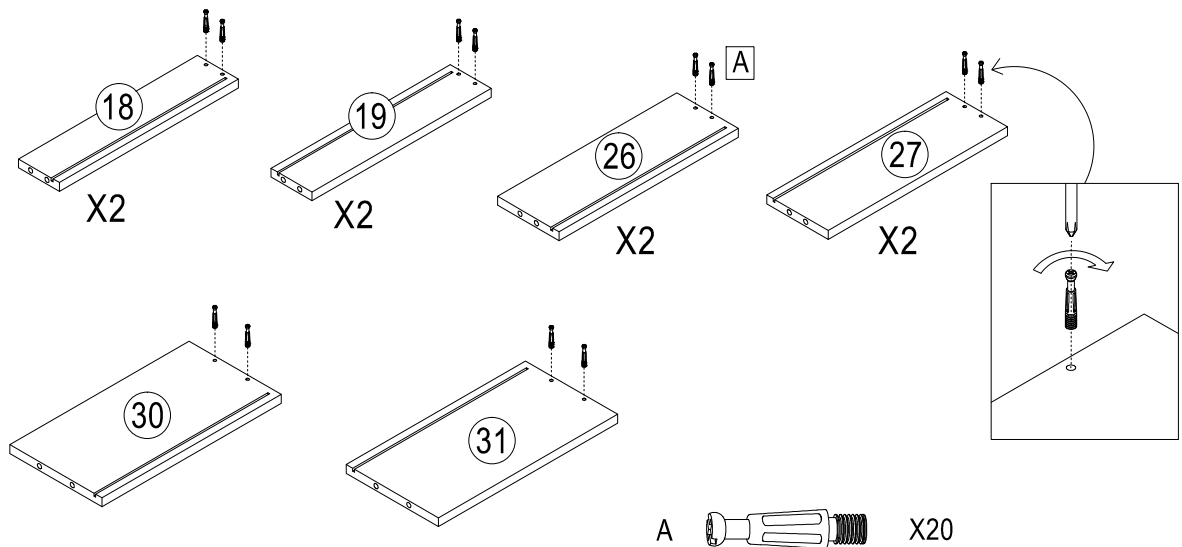


 14. Screw A in the front boards of drawers

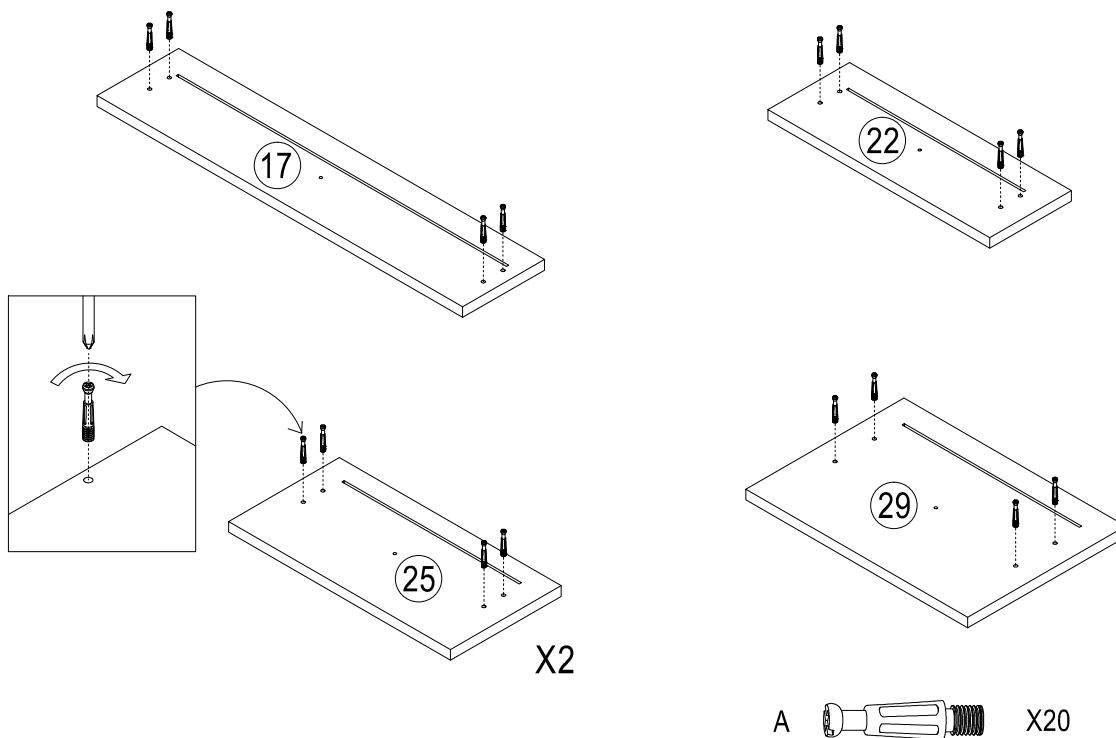


ASSEMBLY

 15. Assemble the drawer 17

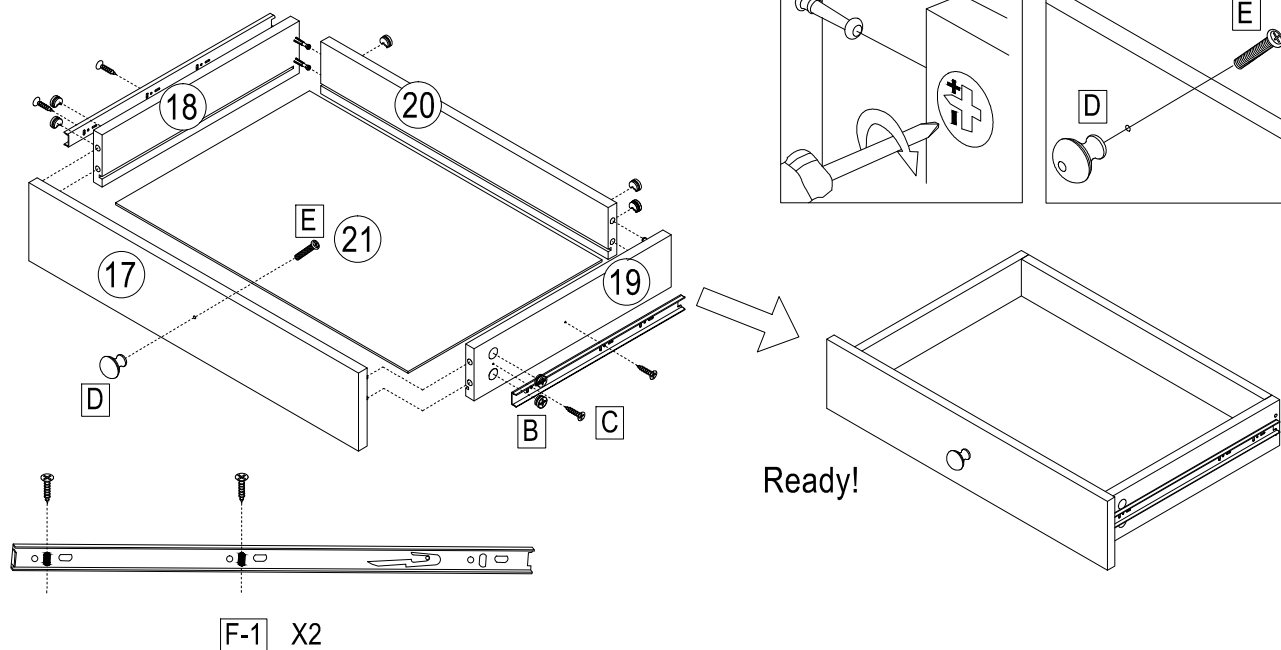


 16. Assemble the drawer 22

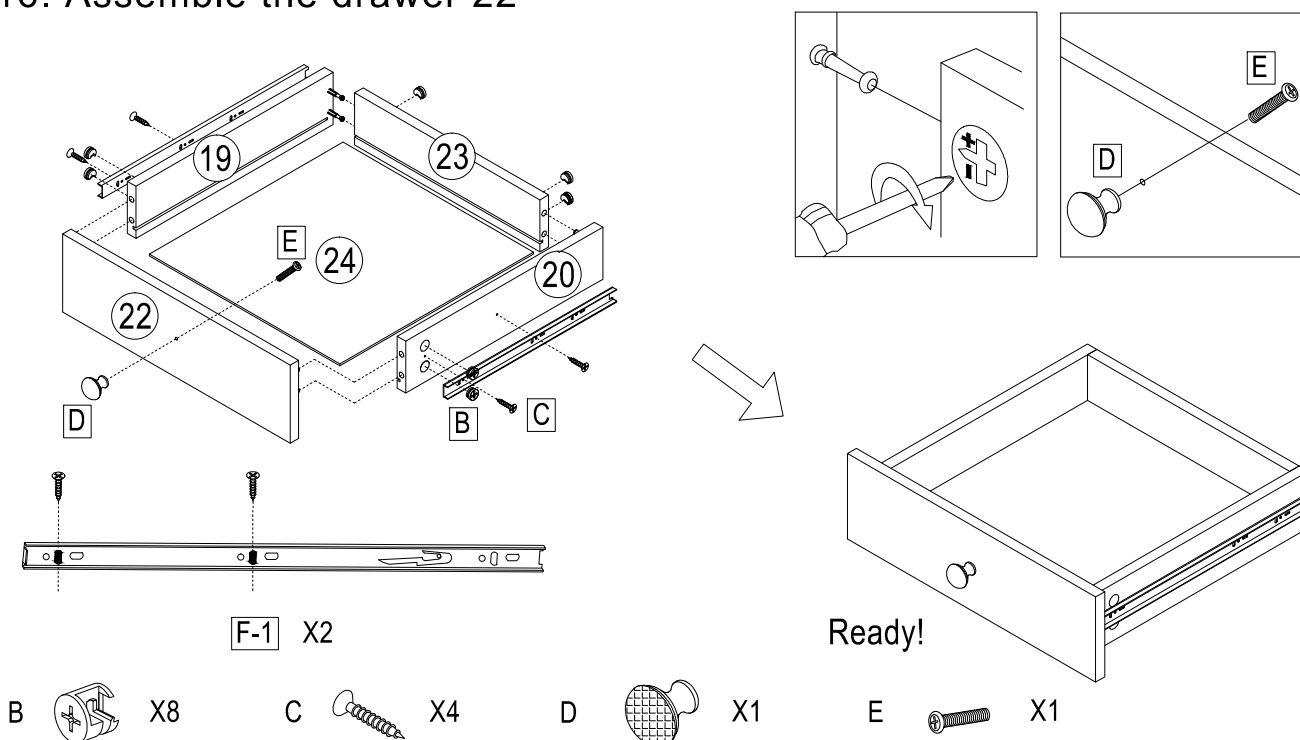


ASSEMBLY

 17. Assemble the drawer 25

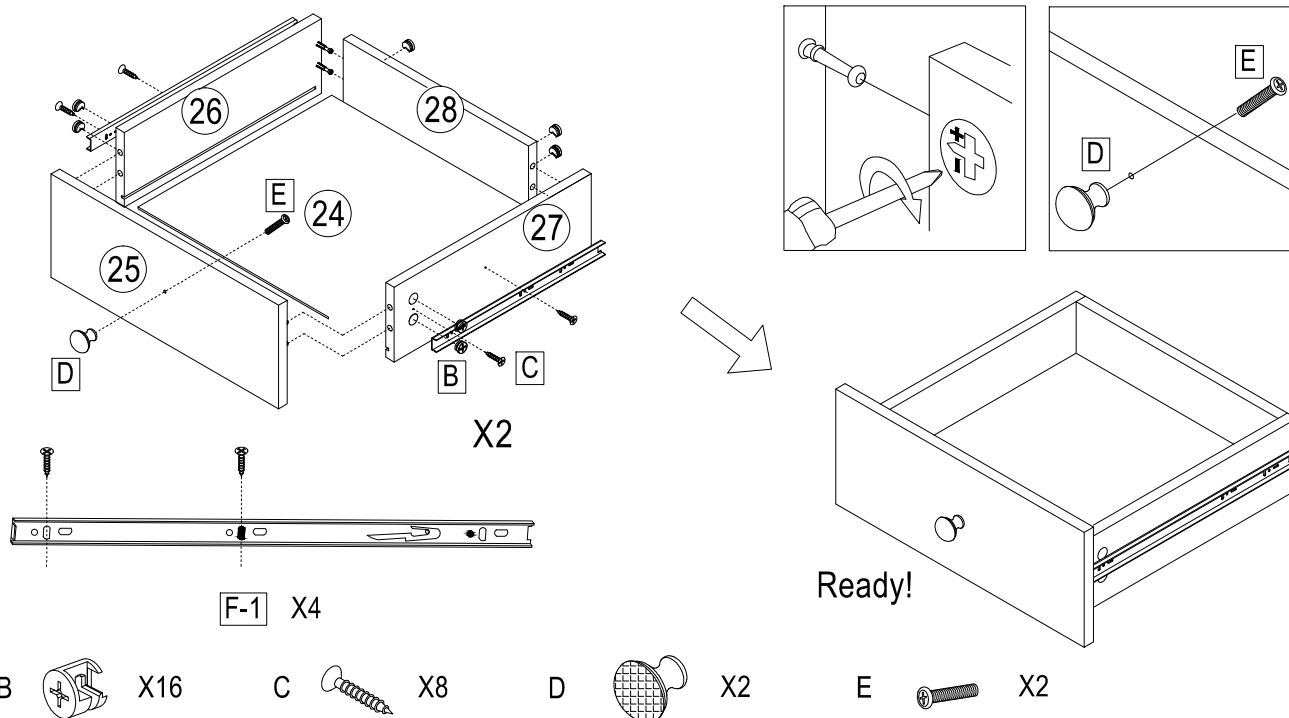


 18. Assemble the drawer 29

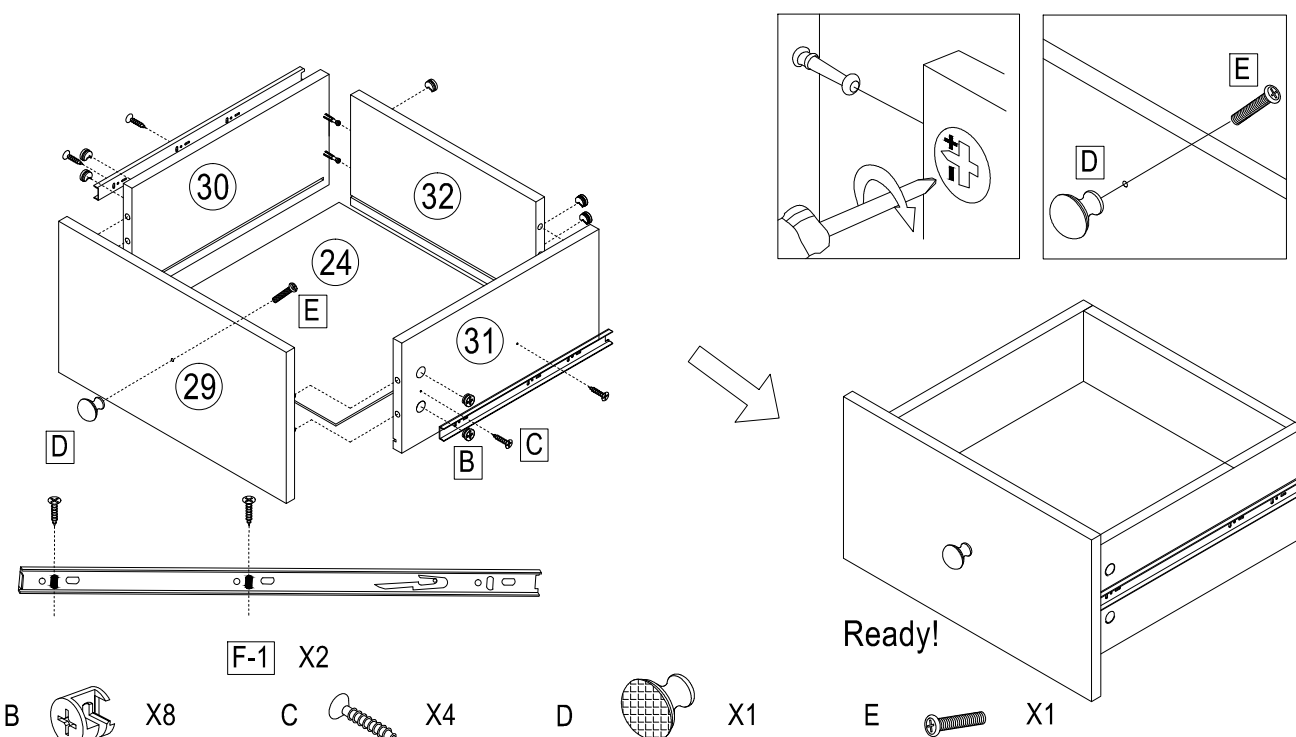


ASSEMBLY

 19. Fix the top base

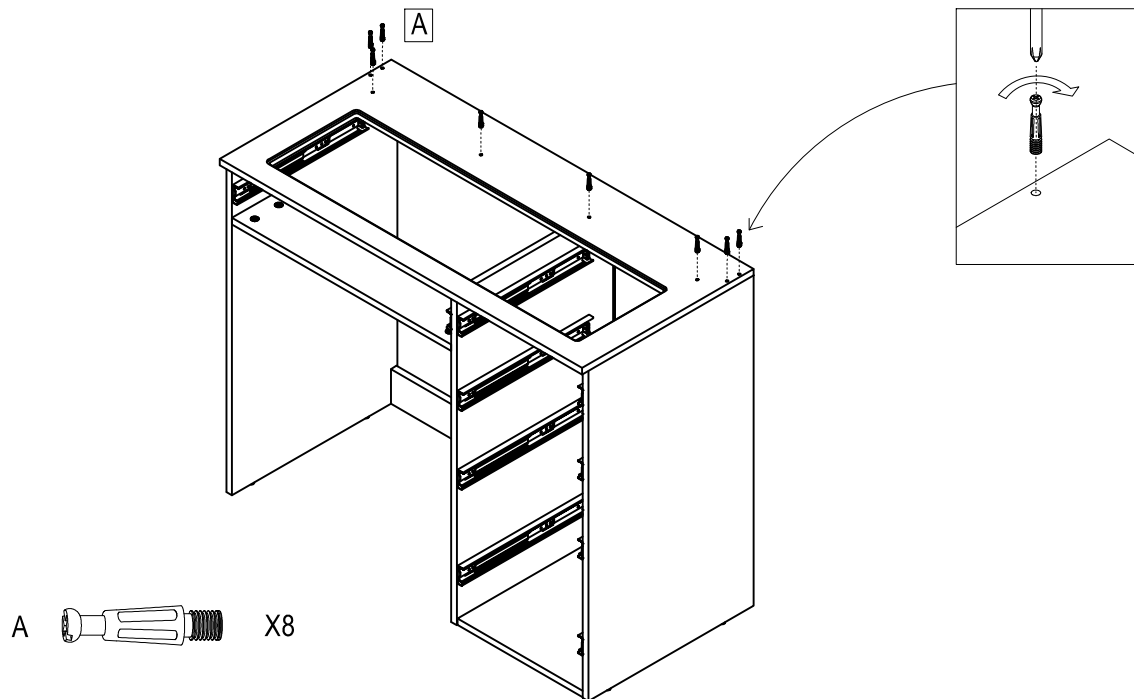


 20. Screw A in the mirror and top tray

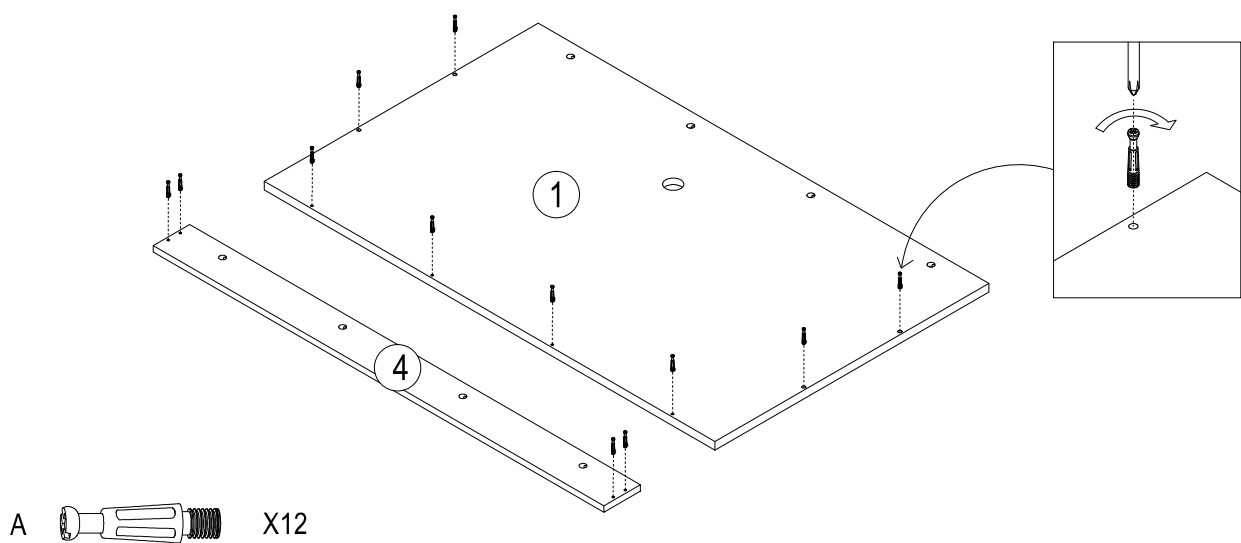


ASSEMBLY

 21. Assemble the mirror frame

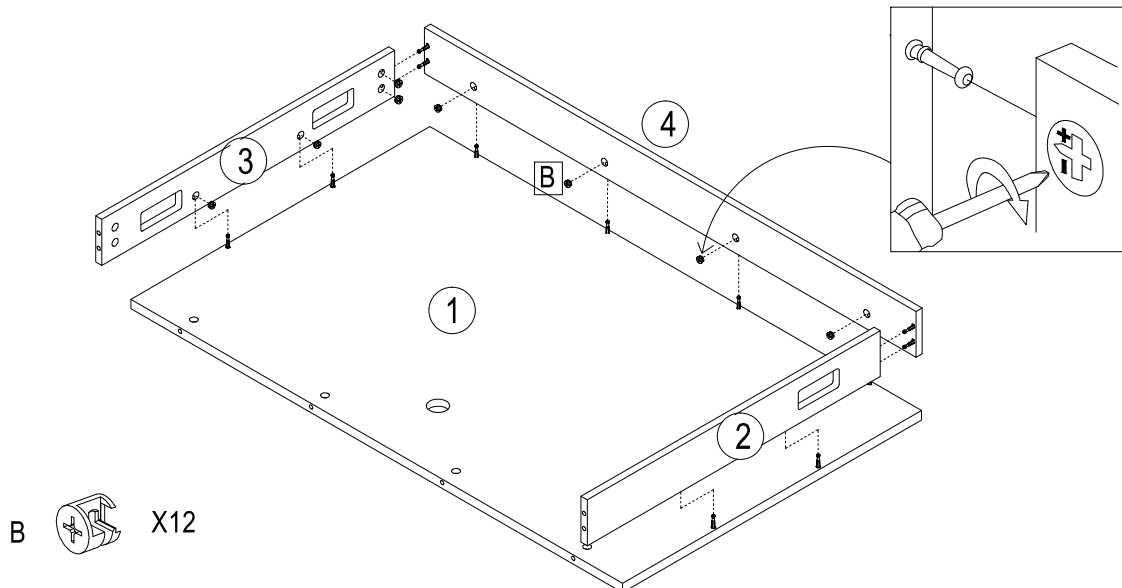


 22. Assemble the mirror on the desk

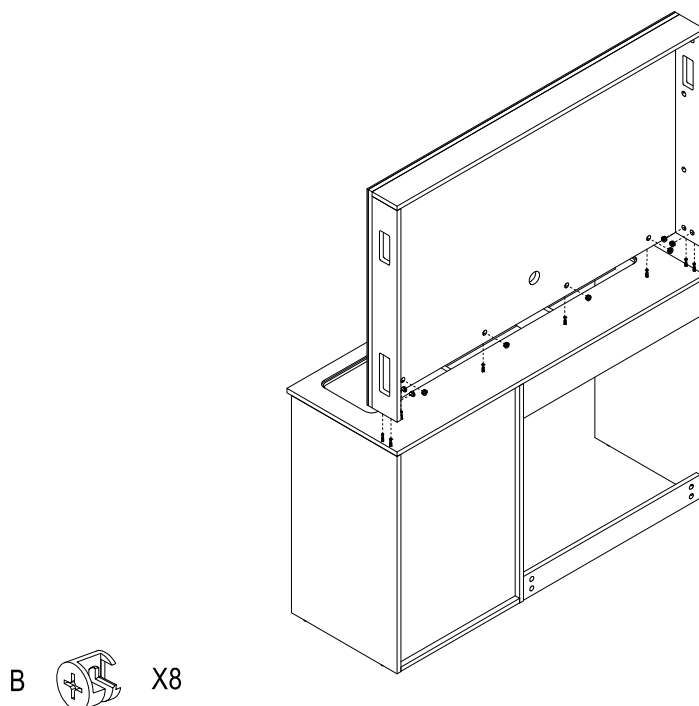


ASSEMBLY

 23. Fix the right backboard buckle

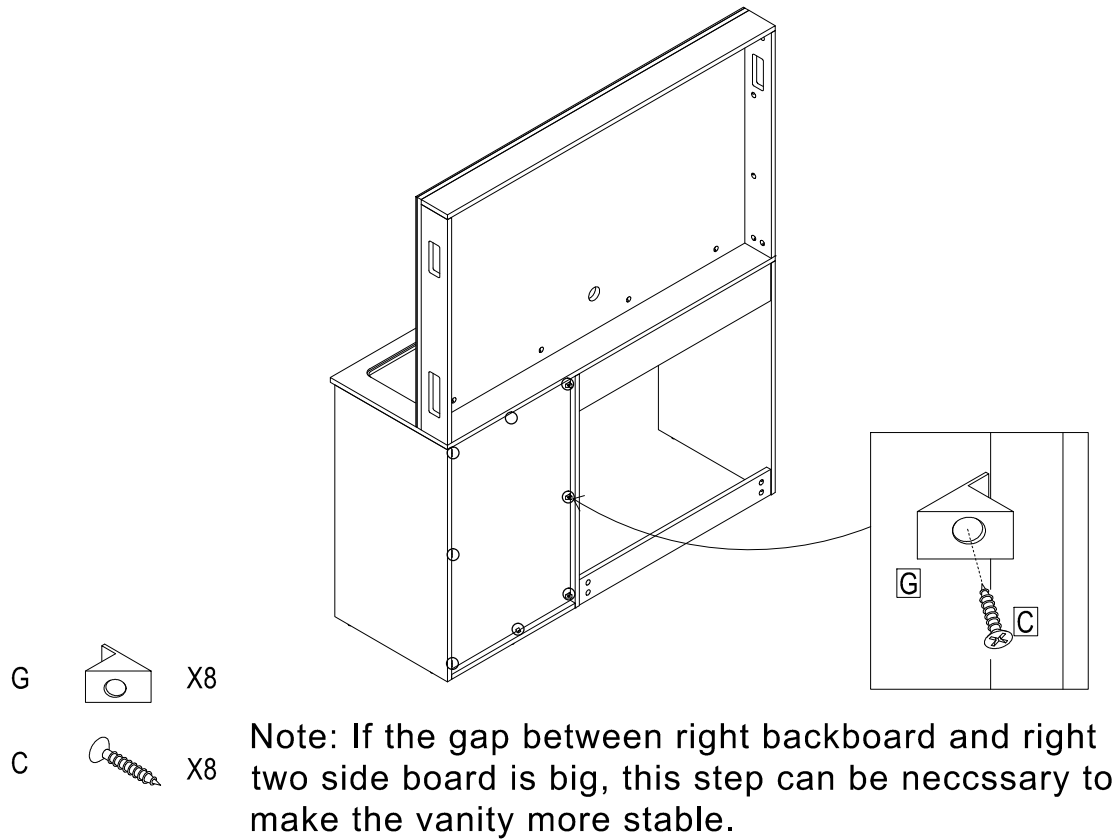


 24. Put the drawers and the drawer division in

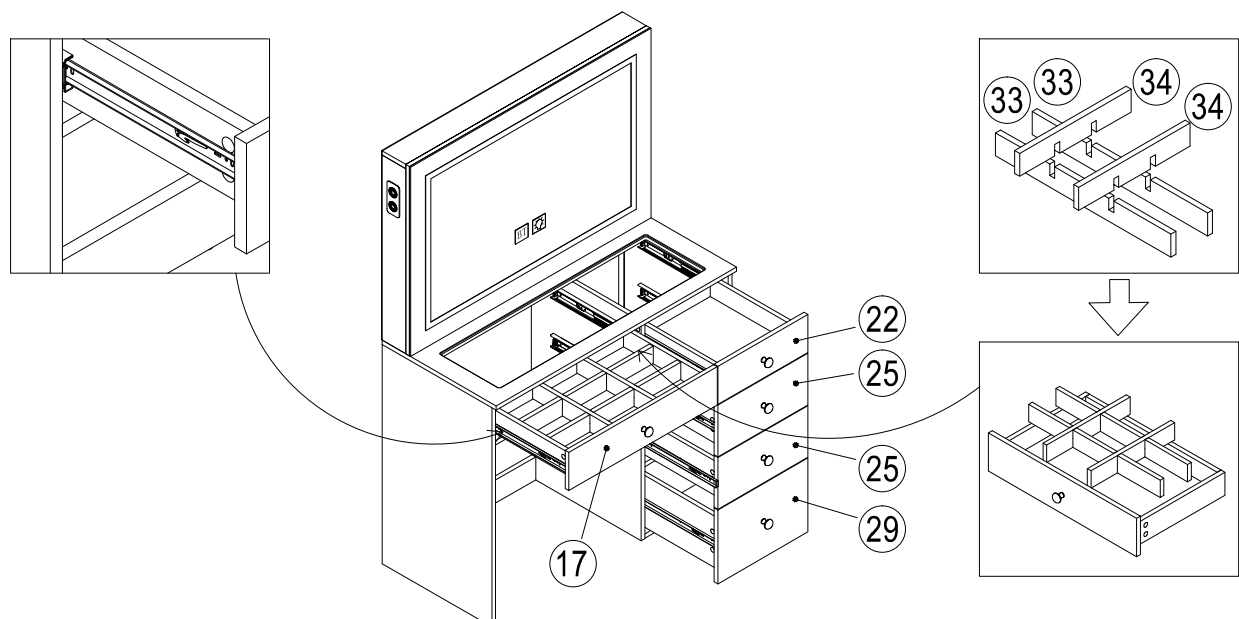

ASSEMBLY

 
25. Assemble the electrical parts for speakers and outlet

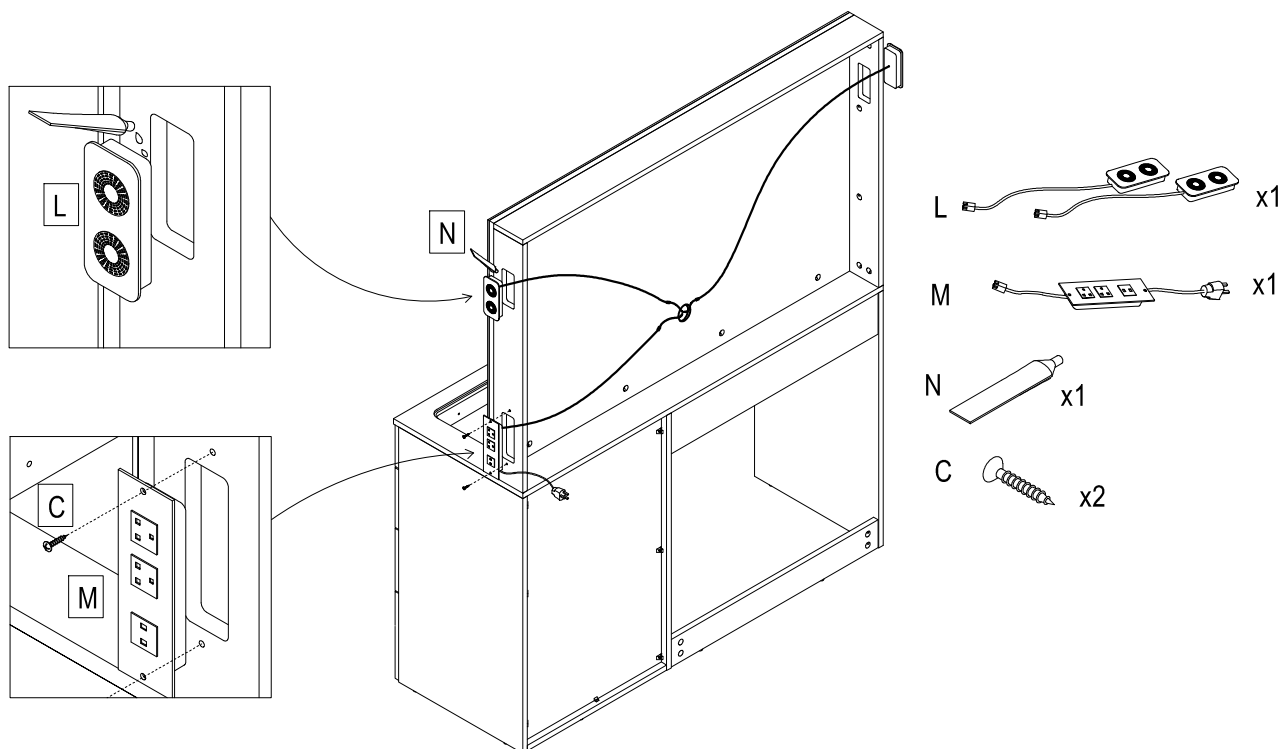

Note: ①If the speaker is not exactly embedded in the notch, glue is necessary to fix it.


②Please kindly connect the cables after aiming at the correct holes position.

 26. Fix the mirror backboard

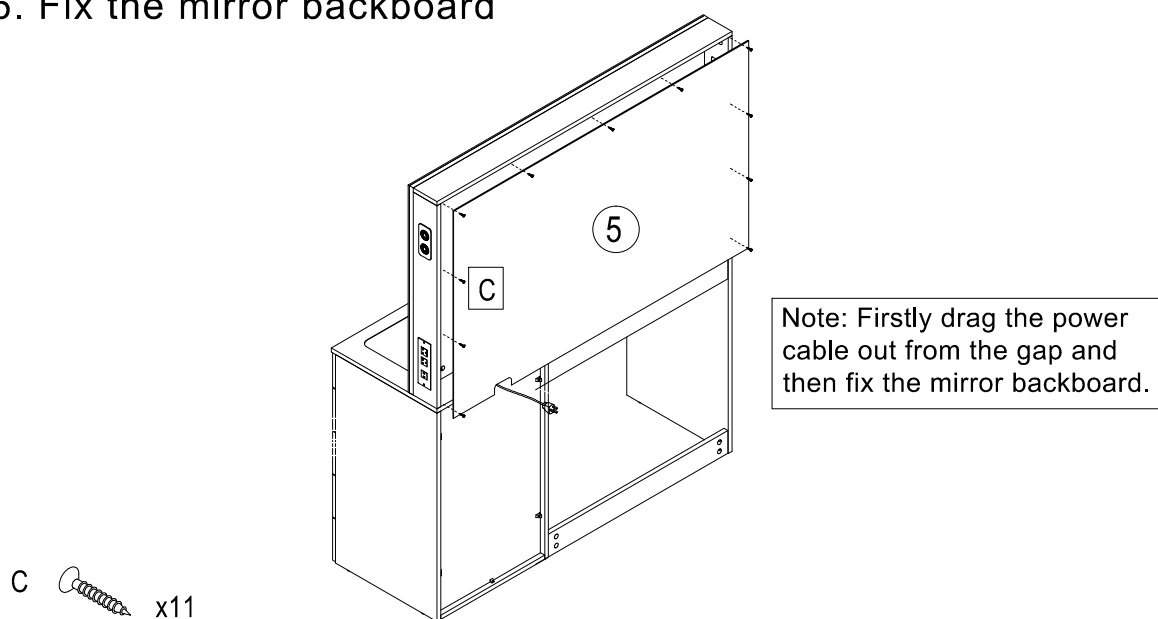


ASSEMBLY

 27. Fix the hair dryer holder



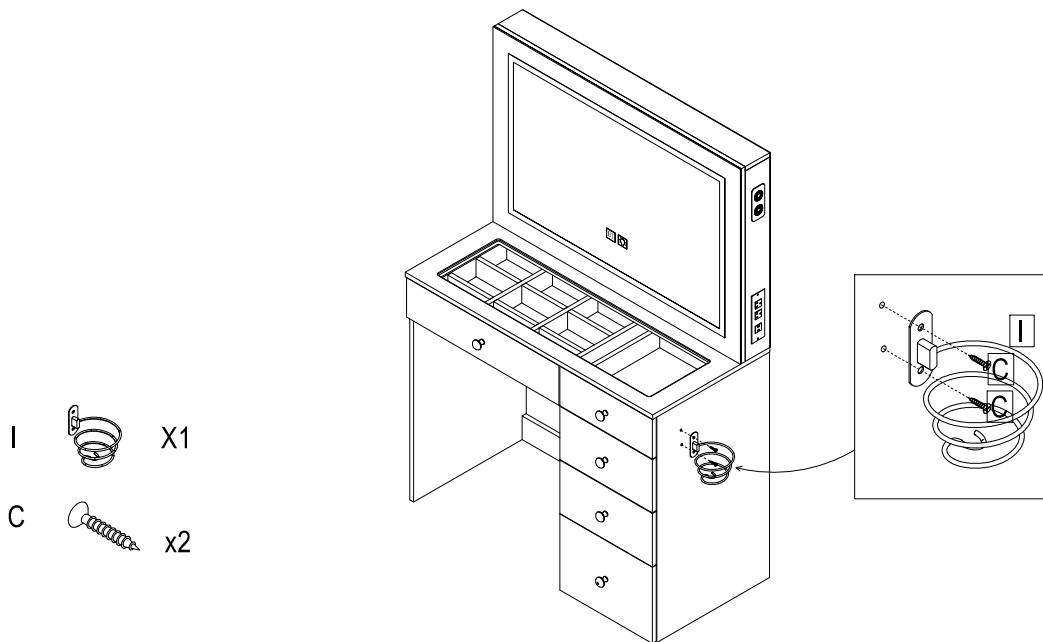


 28. Put the glass in the top base notch

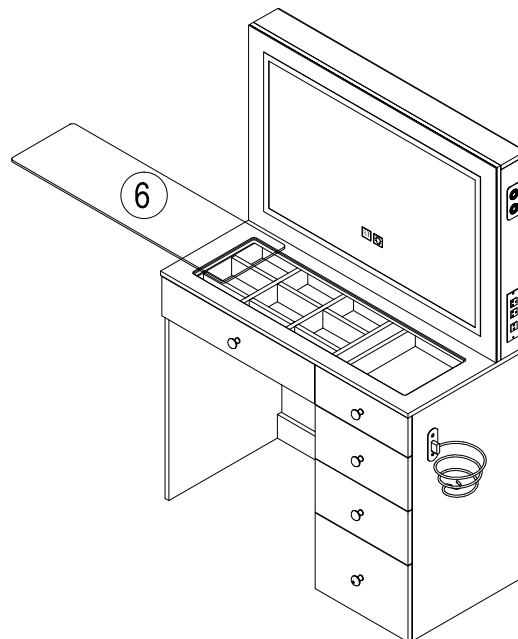


ASSEMBLY

   29. Assemble the anti-tip kits

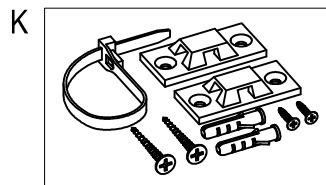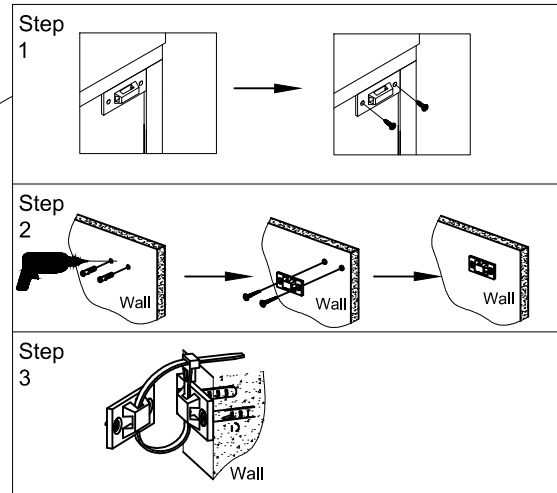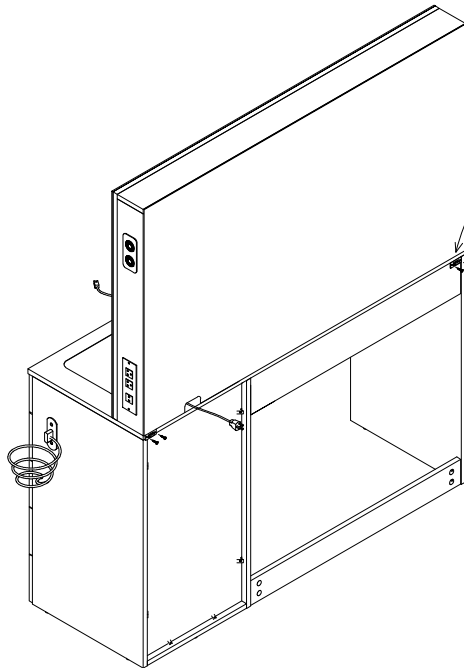


X2

 Bluetooth speakers and light instructions

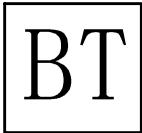

 - 1 Long press the "BT" button and the power is on.
You can connect the bluetooth and turn on the light.
The bluetooth name is "Boahaus" and the initial password is "1234".
- 2 Long press the "BT" button and the bluetooth is off.
- 3 Short press the "BT" button and the music can be paused and continued.

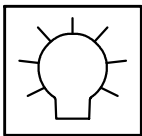

- 1 Press the light button and the light is on. The initial brightness is medium.
- 2 Long press the light button and light will turn brighter.
The light will turn darker if this step is repeated.
- 3 Press twice and the light color is changed. There are three colors available and the brightness adjustment can follow the second point. Press again after the third color is on and the light will be off.

6-Months Limited Warranty

- a. Boahaus, LLC provides limited warranty coverage to the original purchaser of this product for a period of six months from the date of purchase against defects in materials or workmanship of Boahaus furniture components. As used in this Warranty, “defect” means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
- b. There is no warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, or care. There is also no warranty coverage for rented products or any products purchased “used” or “as is”, at a distress or going-out of business sale, or from a liquidator.
- c. As the exclusive remedy under this Warranty, Boahaus will (at its sole option) repair, replace or refund the value of any defective furniture component. Boahaus may require independent confirmation of the claimed defect and proof of purchase. Replacement parts will be warranted for only the remaining period of the original Warranty. BOAHAUS SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS WARRANTY, such as loss of use, disassembly, transportation, labor or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- d. This Warranty applies only to warranted defects that first arise and are transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.
- e. THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Boahaus and all implied warranties, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you.
- f. For Warranty inquiries, questions about disposition or claims, please visit our website www.boahaus.com. You can also contact Boahaus at **+1 281-809-4043** or email at contact@boahaus.com Boahaus may require Warranty claims to be submitted in writing to:

Boahaus LLC.
1250-1252
Ave. Franklin Delano Roosevelt,
San Juan, PR 00926.

Please include your sales receipt or other proof of purchase and a specific description of the product defect.

Need some Help? Call +1 281-809-4043 or email contact@boahaus.com

boahaus

ASSEMBLY INSTRUCTIONS

ATTENTION!!!

Any inquiry or replacement parts
you need, contact us directly at:

contact@boahaus.com

Scan this QR Code to chat to Customer Support Team



Or Call Us at +1 (281) -809-4043