
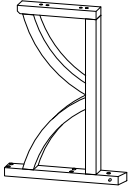 
 
 

 
 
 

 
 
 
 

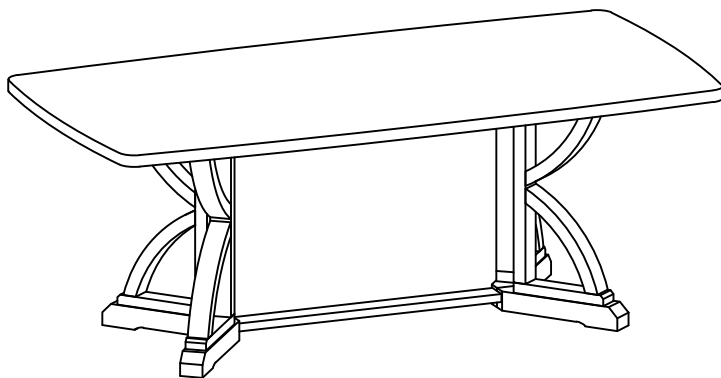 


ASSEMBLY INSTRUCTIONS




78" RECTANGULAR DINING TABLE

A Table Top  1 PC	B Leg Frame B  2 PCS	C Leg Frame C  2 PCS	D Leg Base  2 PCS
E Crossbar  1 PC	F JCBC Bolt M6 x 40mm  18 PCS	G JCBC Bolt M6 x 50mm  4 PCS	H JCBC Bolt M6 x 70mm  10 PCS
I Lock Washer M6  28 PCS	J Flat Washer M6  18 PCS	K PVC Dowel M8 x 30mm  14 PCS	L Nylon Washer M6  4 PCS
M Leveler M6 x 23mm  4 PCS	N Allen Wrench M4 x 100mm  1 PC		




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

   
- 1** Insert PVC Dowel (K) into the pre-drilled holes of the Leg Frame (B), the Leg Frame (C) and the Crossbar (E).

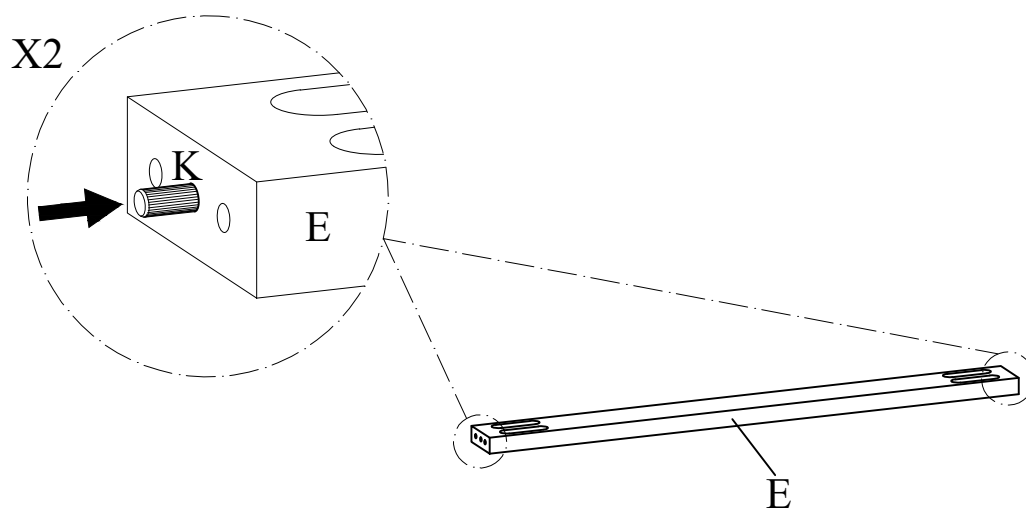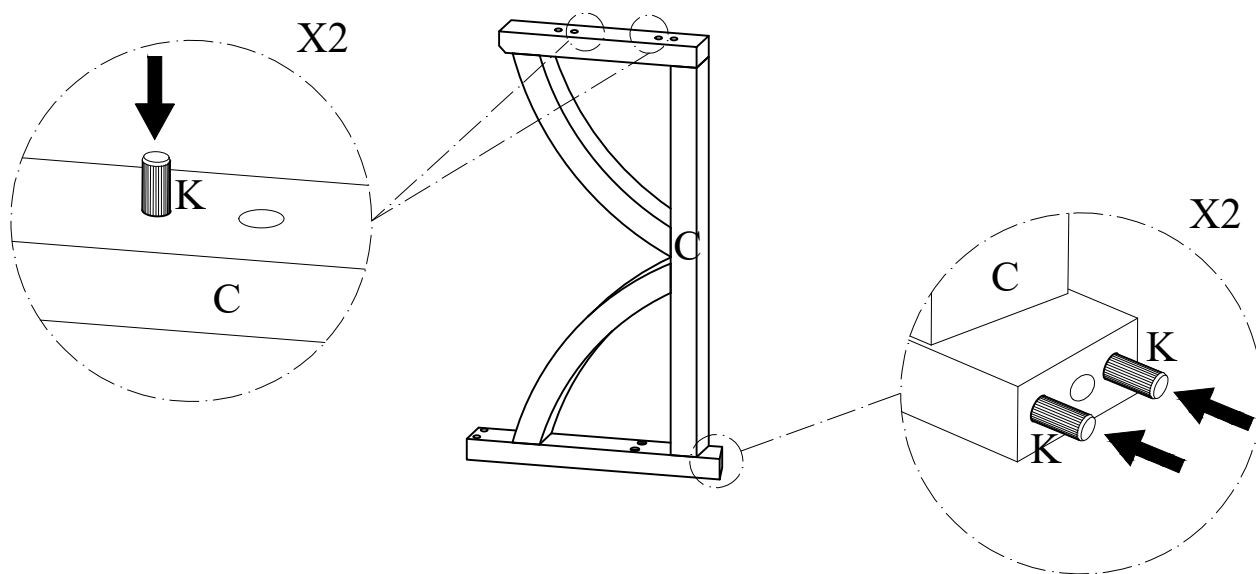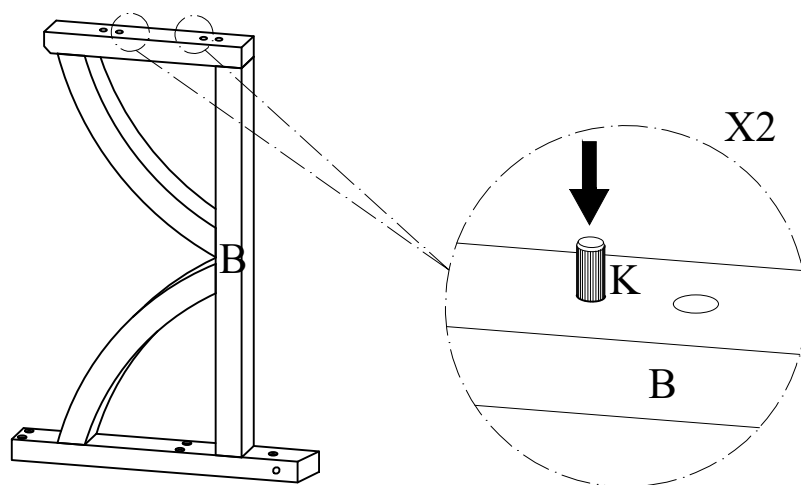

 
-
- 2** Use PVC Dowel (K) as a guide to align and attach the Leg Frame (B) to the Leg Frame (C) using JCBC Bolt (H) and Lock Washer (I) with the Allen Wrench (N).

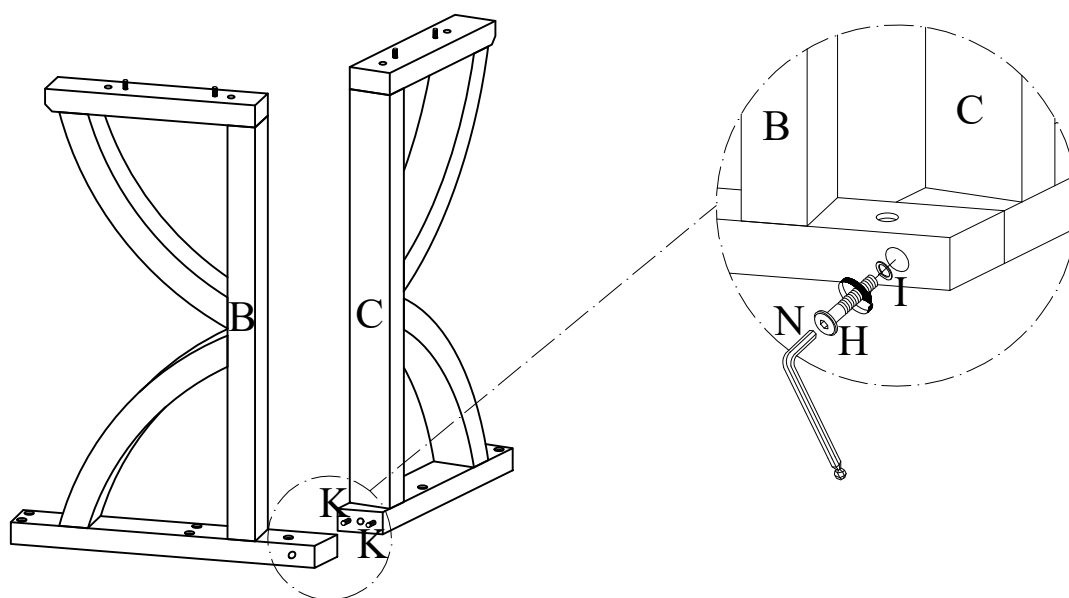

 
-
- 3** Use PVC Dowel (K) as a guide to align and attach the Leg Base (D) to the Leg Frame (B & C) using JCBC Bolt (H) and Lock Washer (I) with the Allen Wrench (N).

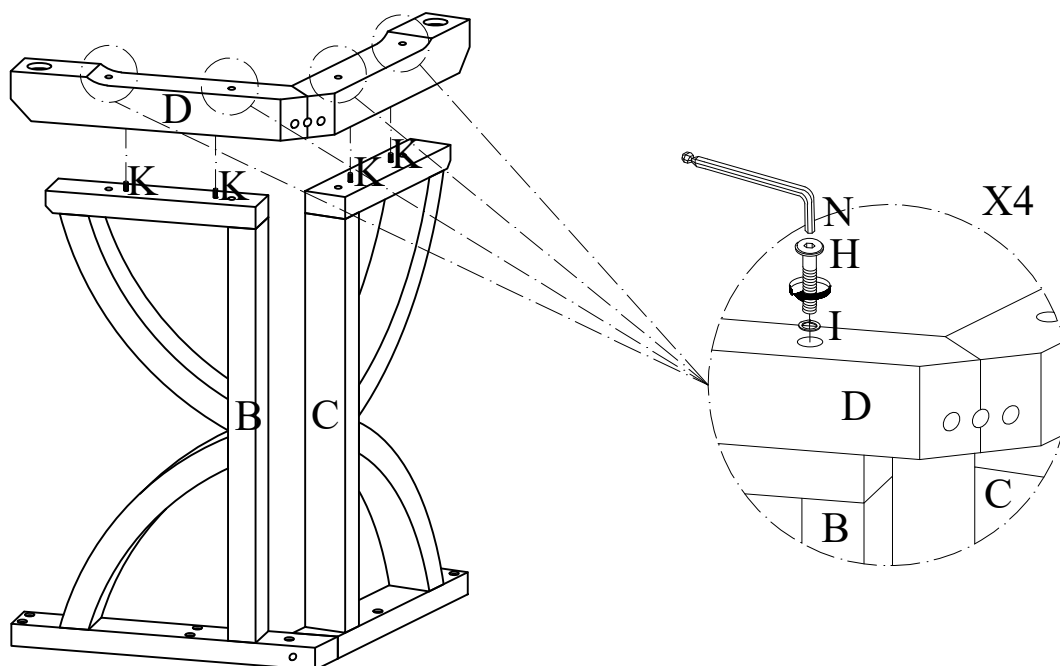

 
- 4** Use PVC Dowel (K) as a guide to align and attach the Crossbar (E) to the Leg Base (D) using JCBC Bolt (G) and Nylon Washer (L) with the Allen Wrench (N).

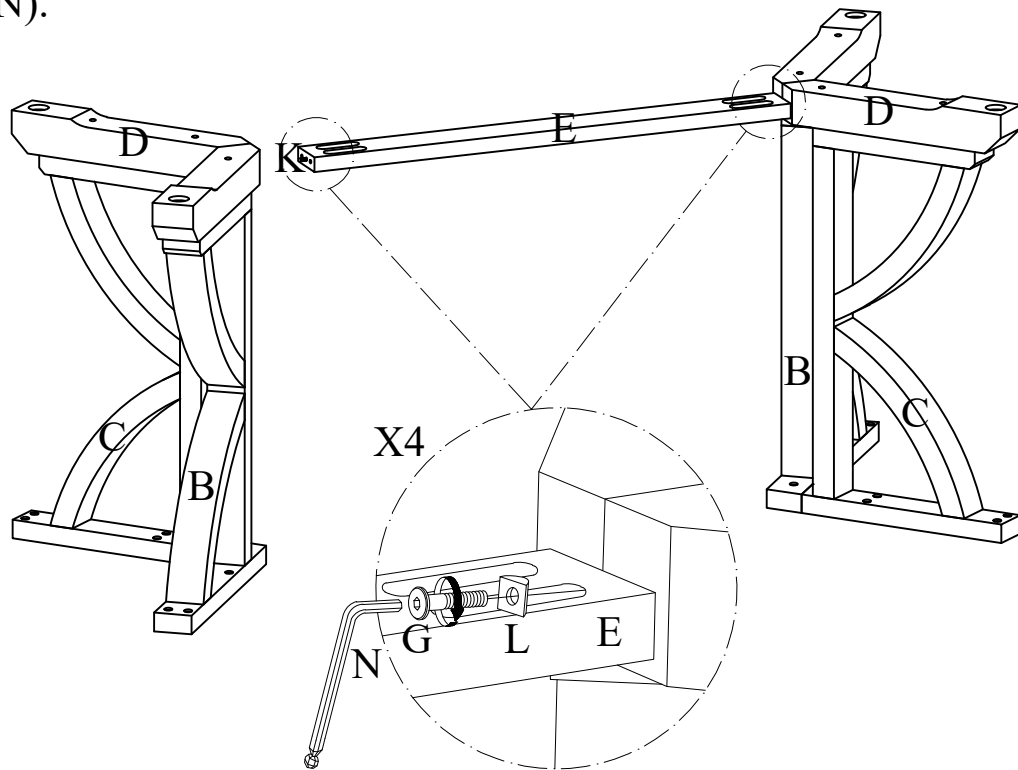

 
- 5** Place the Table Top (A) upside down on an even surface. Align and attach the Leg Frame (B & C) to the Table Top (A) using JCBC Bolt (F) and Lock Washer (I) and Flat Washer (J) with the Allen Wrench (N).

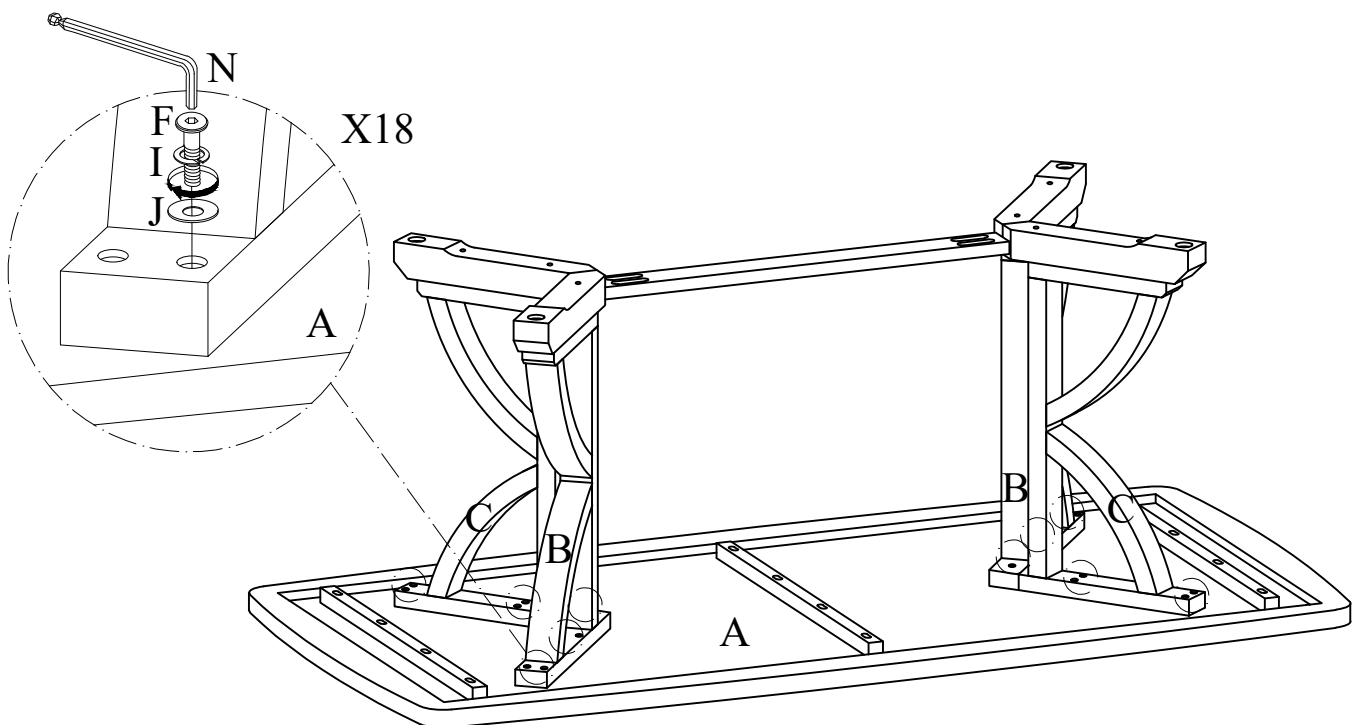

 6 Screw the Leveler (M) into each hole of the Leg Base (D).

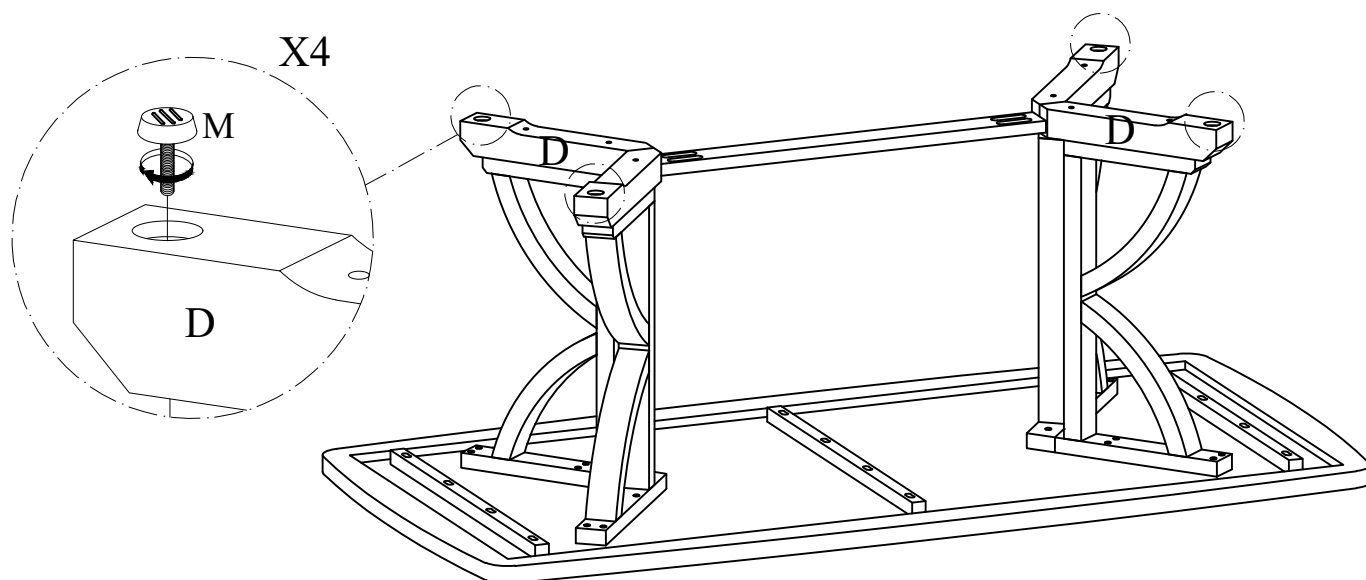

 7 Stand the table on an even surface and check for balance. If the table wobbles slightly, please adjust the Leveler (M).

 
 
 
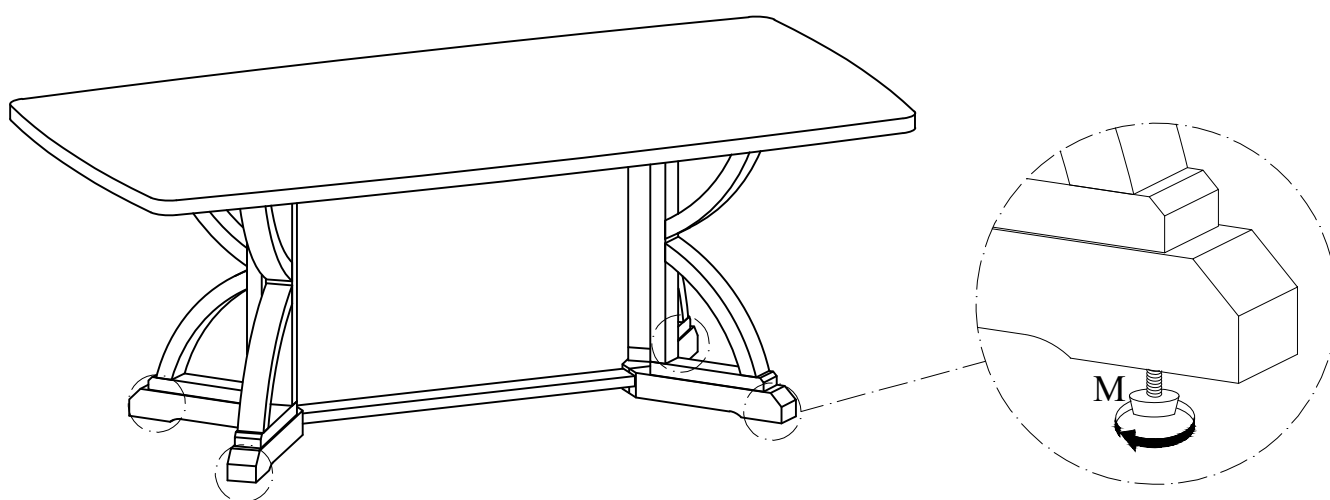 


 
 
 
 


 
 



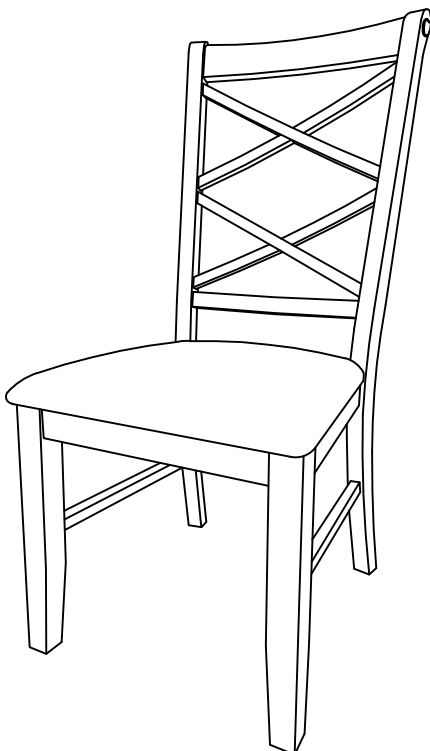 
Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

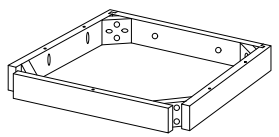ASSEMBLY INSTRUCTIONS


DOUBLE CROSS BACK DINING CHAIR

A Chair Back  1 PC	B Seat Frame  1 PC	C Seat Cushion  1 PC	D Front Leg - Left  1 PC
E Front Leg - Right  1 PC	F Stretcher - Left  1 PC	G Stretcher - Right  1 PC	H JCBC Bolt M6 x 40mm  2 PCS
I JCBC Bolt M6 x 60mm  4 PCS	J JCBC Bolt M6 x 70mm  4 PCS	K Lock Washer M6  10 PCS	L Flat Washer M6  10 PCS
M CSK Screw M4 x 25mm  5 PCS	N CSK Screw M4 x 38mm  4 PCS	O Allen Wrench M4 x 100mm  1 PC	




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 -
- 1** Place the Chair Back (A) on a soft surface and attach the Seat Frame (B).
- (i) Insert JCBC Bolt (J), Lock Washer (K) and Flat Washer (L) into the corner holes and tighten with the Allen Wrench (O).
 - (ii) Insert JCBC Bolt (H), Lock Washer (K) and Flat Washer (L) into the middle holes and tighten with the Allen Wrench (O).

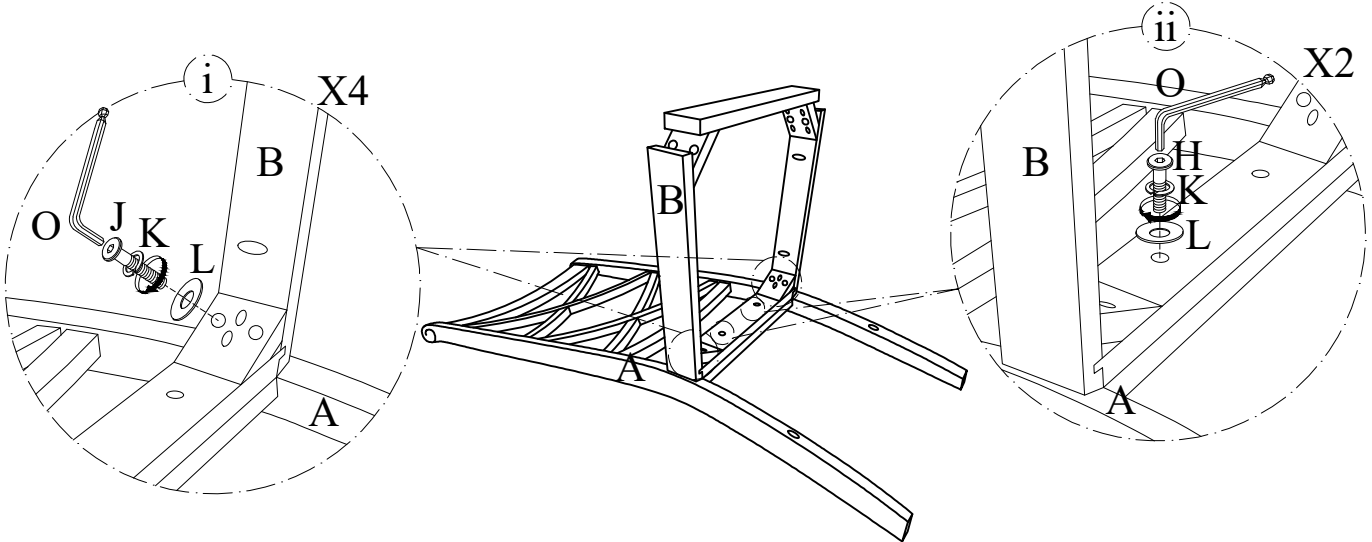


Take the Allen Wrench and turn the bolts until the legs are secured.
DO NOT TIGHTEN THE BOLTS COMPLETELY.
Stop when you feel you are adding force to tighten the bolt.

 -
- 2** Attach the Stretcher - Left & Right (F & G) to the Chair Back (A) using CSK Screw (N) with a screwdriver (not provided). Do not fully tighten all screws in this step.

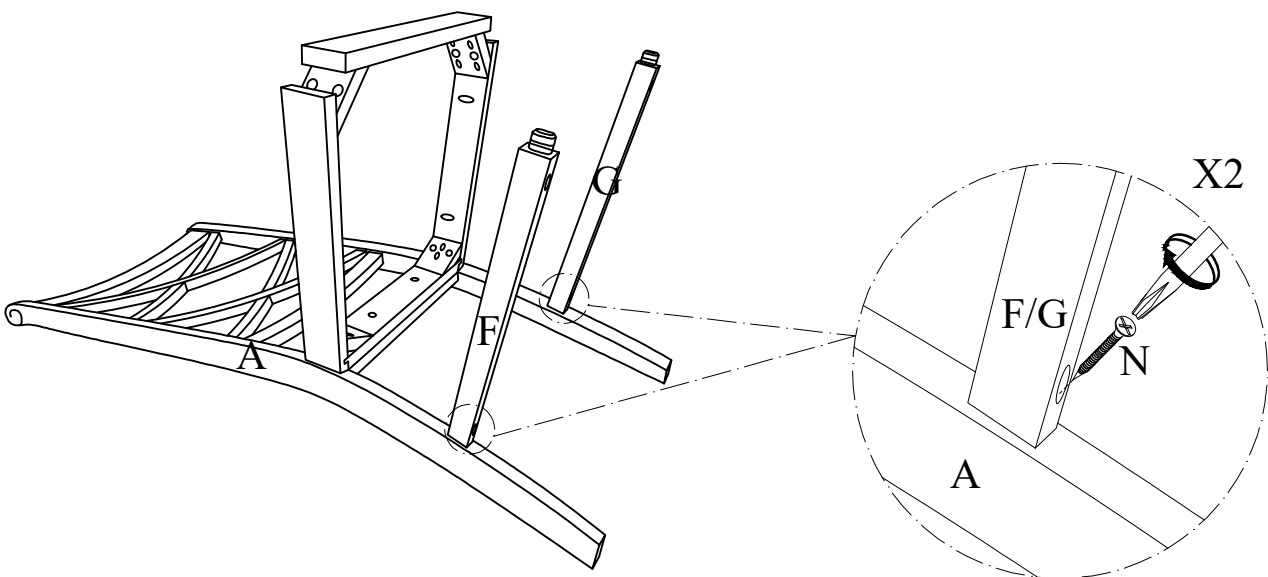


 -
- 3** Attach the Front Leg - Left & Right (D & E) to the front corners of the Seat Frame (B) using JCBC Bolt (I), Lock Washer (K) and Flat Washer (L) with the Allen Wrench (O).

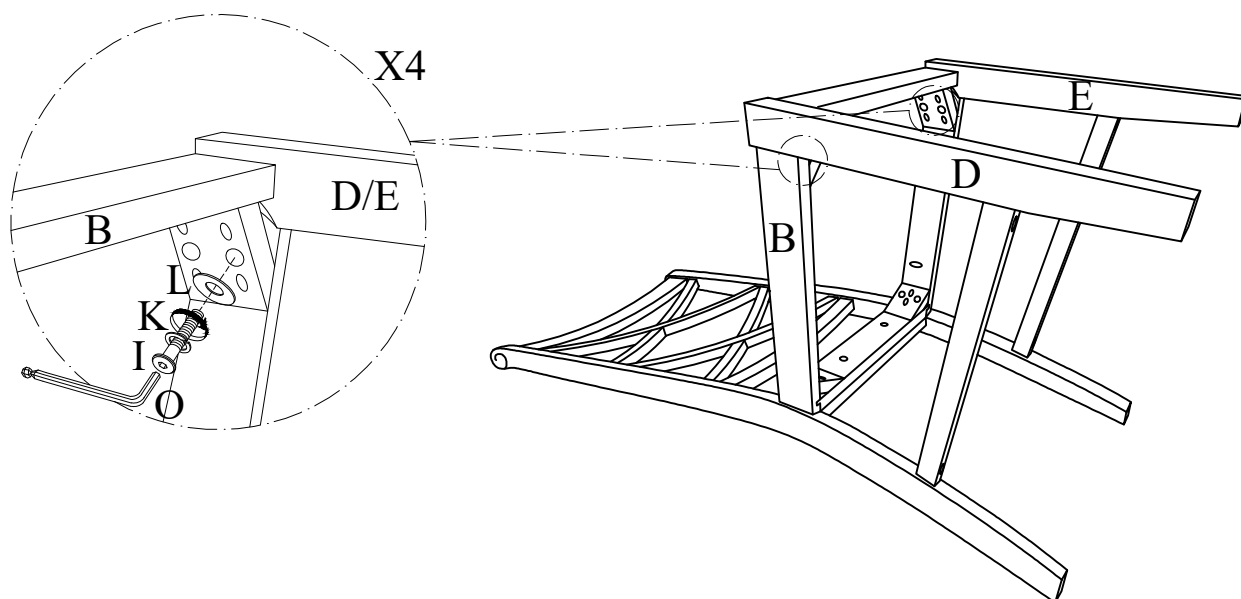


Take the Allen Wrench and turn the bolts until the legs are secured.
DO NOT TIGHTEN THE BOLTS COMPLETELY.
Stop when you feel you are adding force to tighten the bolt.

 
-
- 4** Attach the Stretcher - Left & Right (F & G) to the Front Leg - Left & Right (D & E) using CSK Screw (N) with a screwdriver (not provided). Fully tighten all screws in this step.

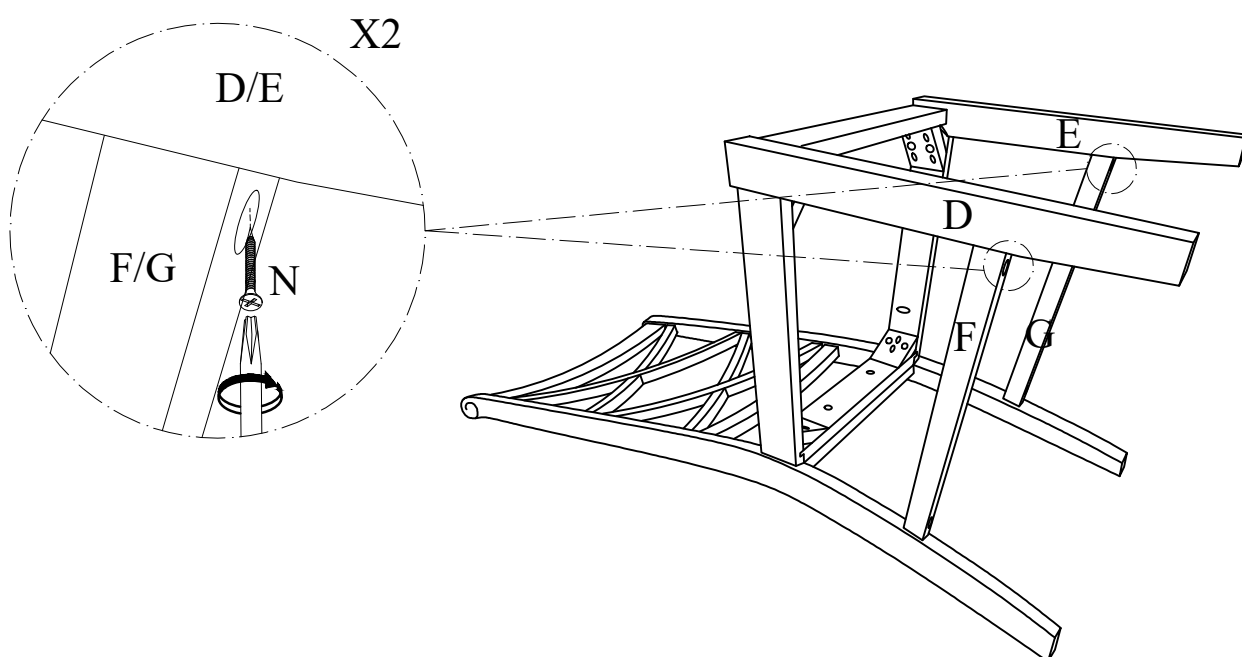

 -
- 5** Attach the Seat Cushion (C) to the Seat Frame (B) using CSK Screw (M) with a screwdriver (not provided). Fully tighten all screws in this step.

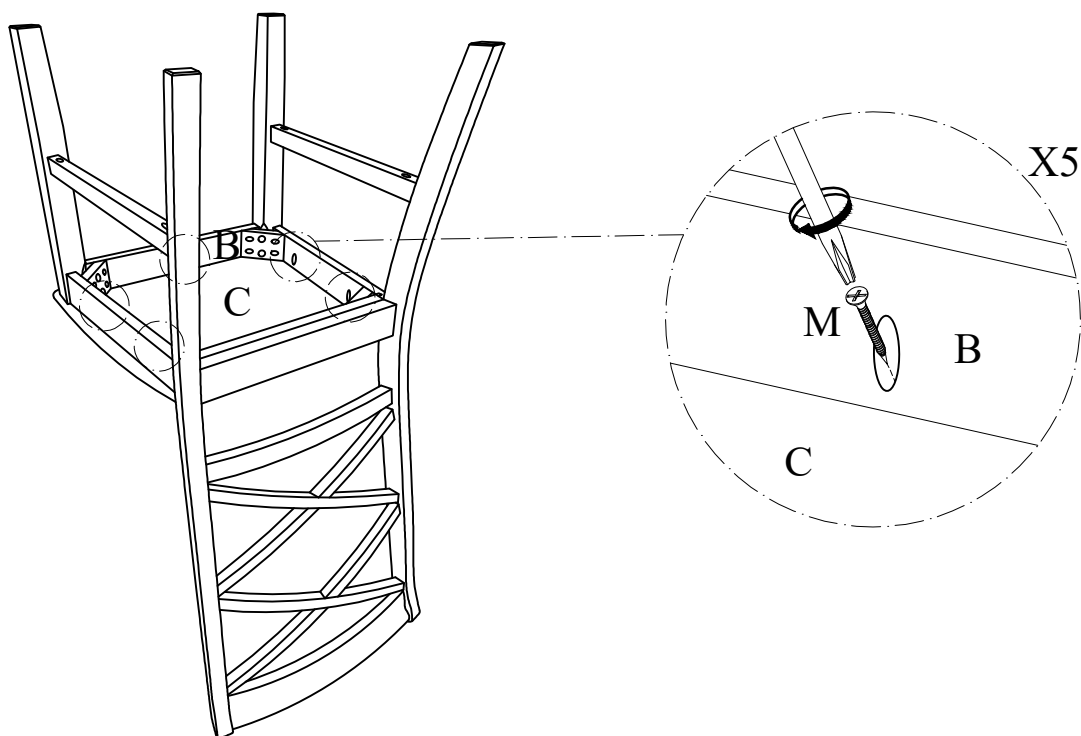

 -
- 6** Stand the chair on an even surface and check for balance. If the chair wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

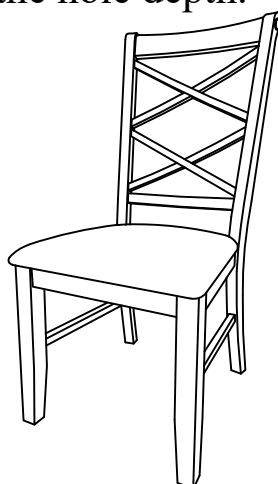

Helpful Tip : While tightening the bolts from underneath, have someone sit in the chair.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.