ASSEMBLY INSTRUCTIONS



Fine Furniture for every stage of life

MEDIA TOWER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

50 MINUTES

PARTS IDENTIFICATION

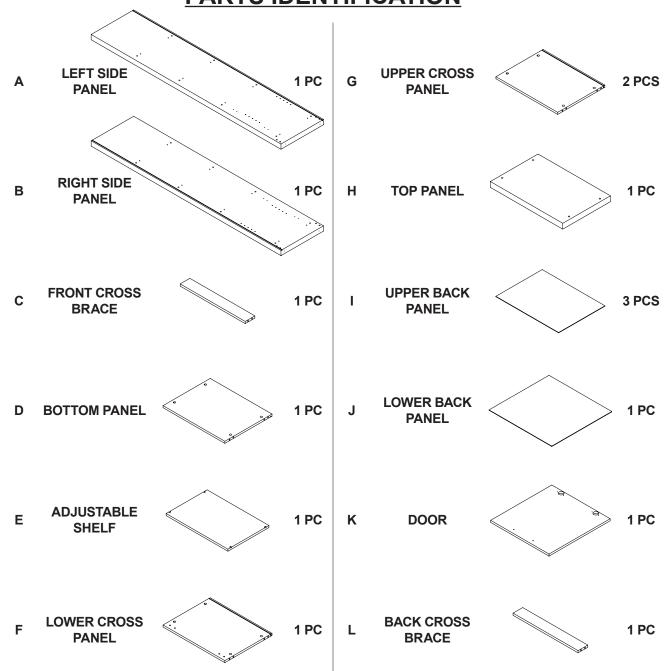

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	9	HANDLE BOLT M5x25mm BLK		2 PCS
2	WOODEN DOWEL		28 PCS	10	NUT M5		2 PCS
3	CAM BOLT		16 PCS	11	HINGE ø35mm SR		2 PCS
4	CAM LOCK ø15x12mm SR		16 PCS	12	HINGE SCREW	ALLILLIA (B)	8 PCS
5	PLASTIC FEET Ø15mm		4 PCS	13	FIXER		6 PCS
6	PIN FOR ADJUSTABLE SHELF		4 PCS	14	FIXER SCREW ø3x19mm SR		6 PCS
7	DOOR CATCH		1 PC	15	SCREW Ø4.5x42mm SR	attitutu 🔞	4 PCS
8	HANDLE BLK		1 PC	16	STICKER		3 PCS

Z8,Z9,Z10,Z11 not included in blister packaging.


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

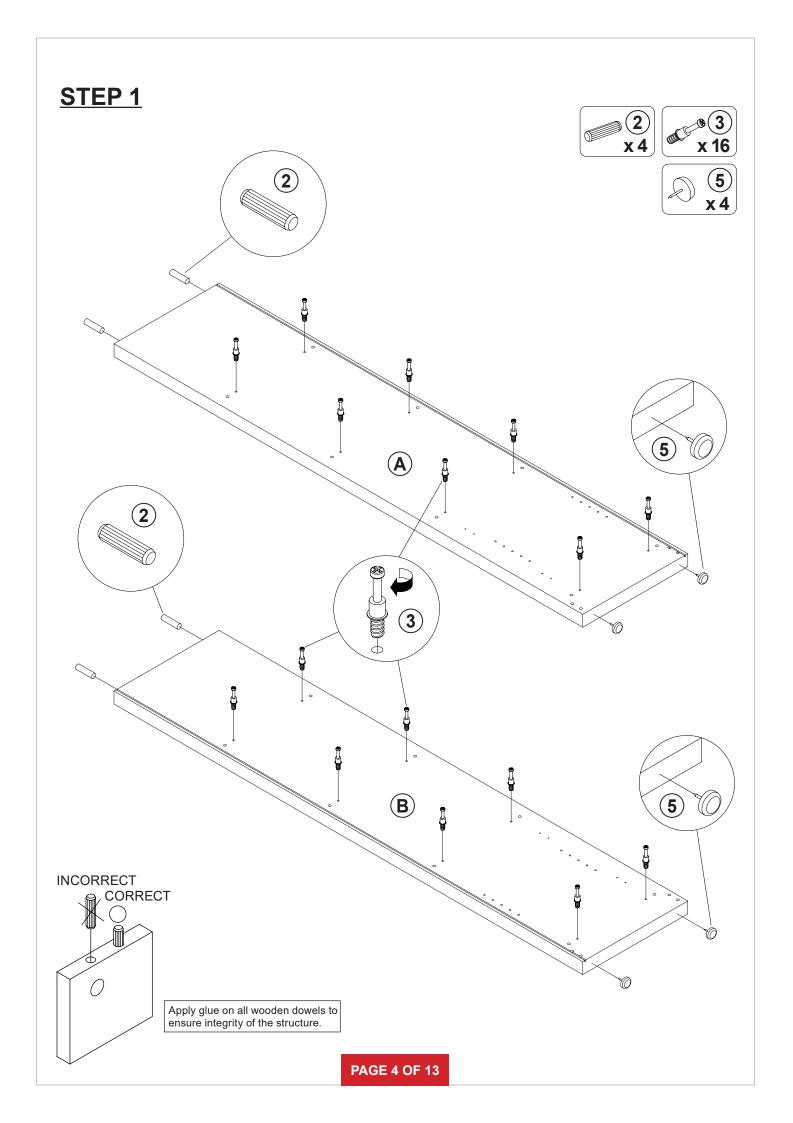


STEP 2




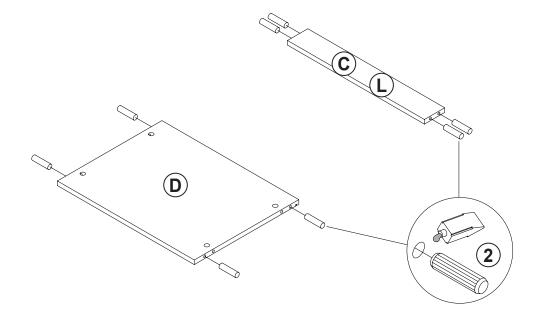

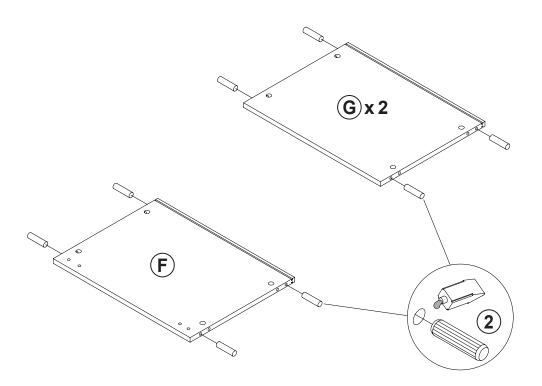


Apply glue on all wooden dowels to ensure integrity of the structure.

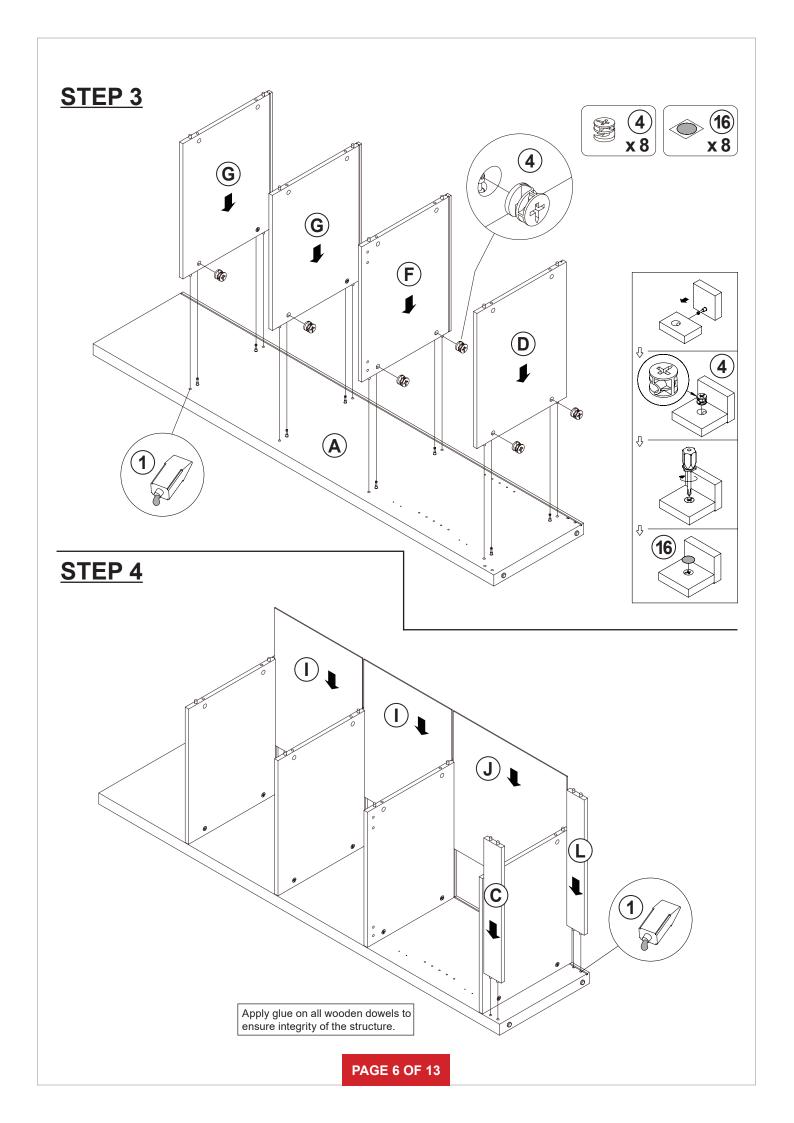

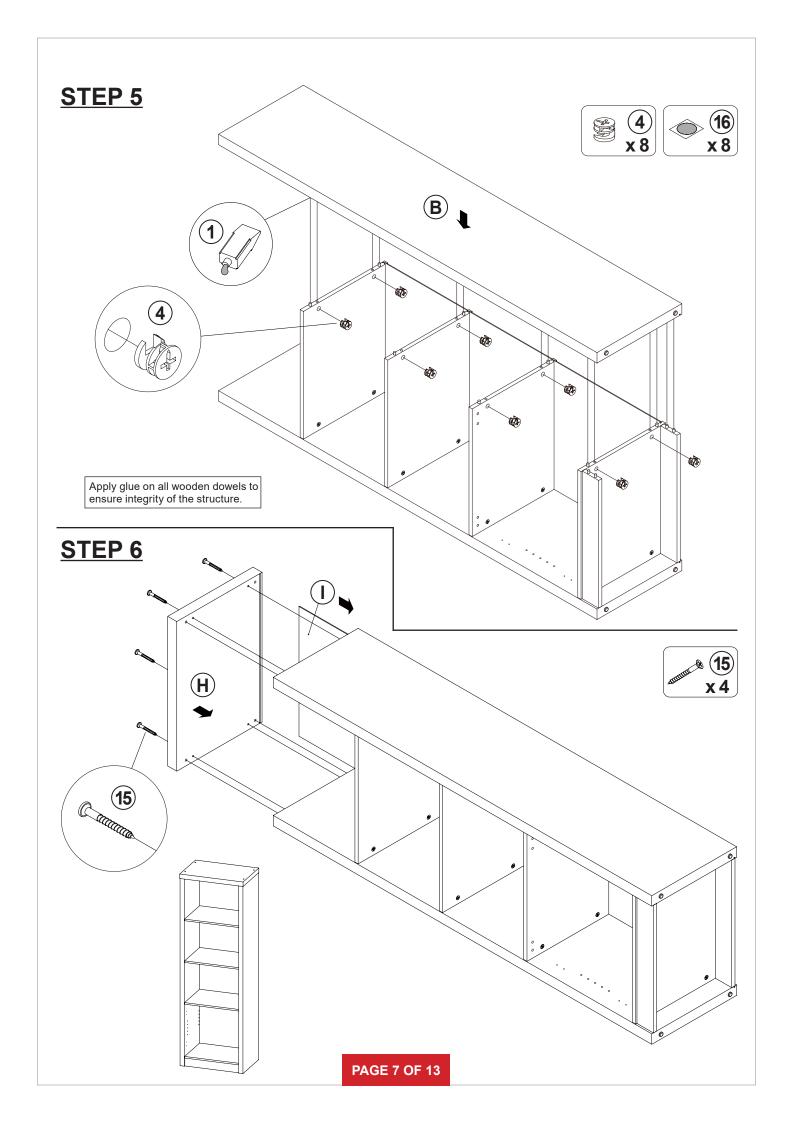


STEP 7



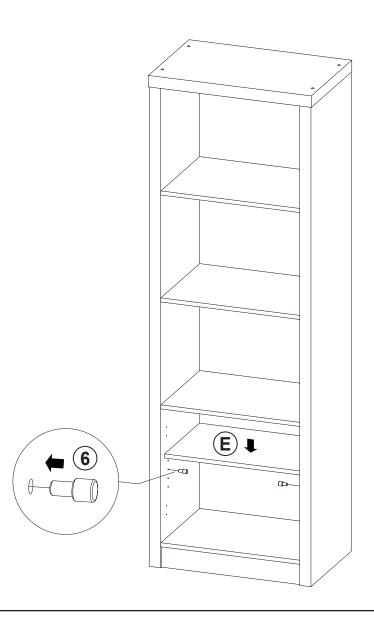



STEP 8

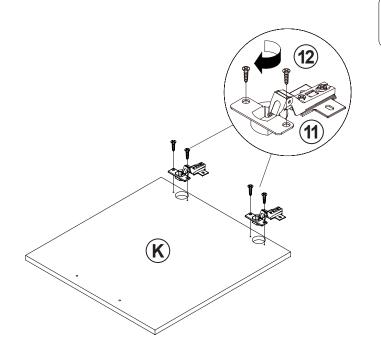




PAGE 8 OF 13

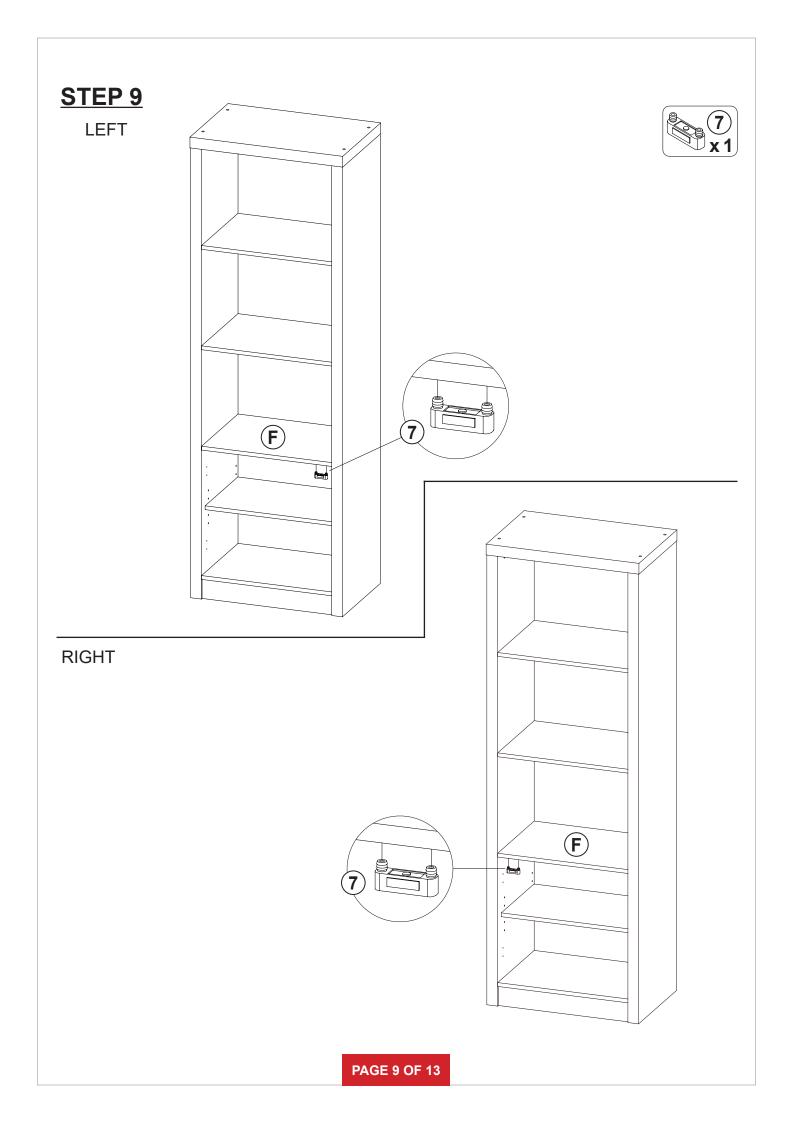

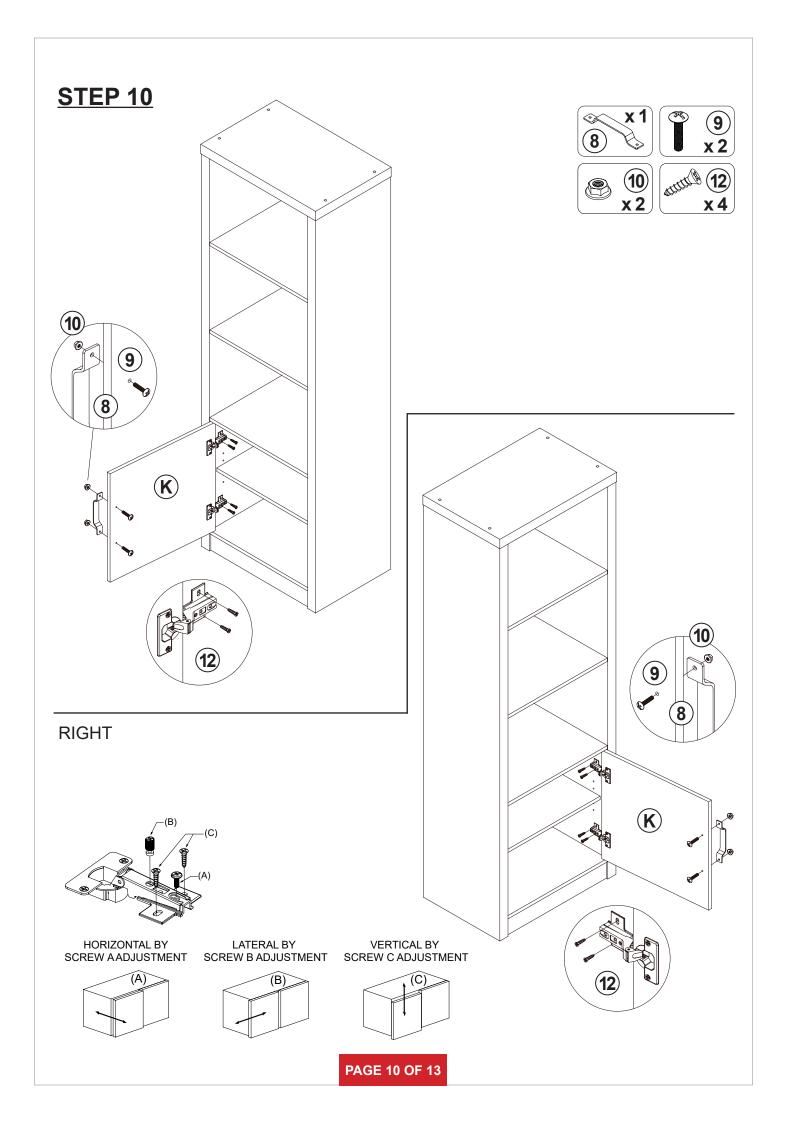




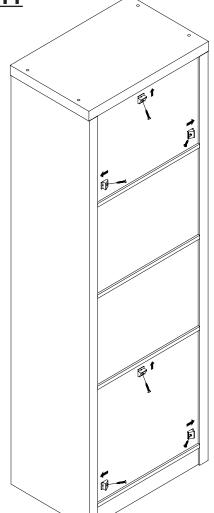






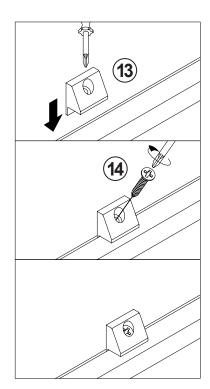


14 13 mmm

STEP 12

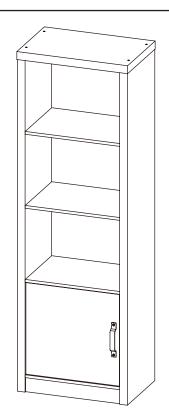





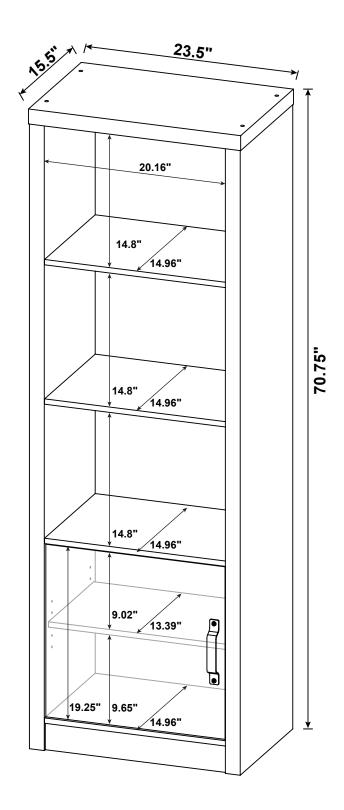

Note: Dimension tolerance ±5%

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
- 2. Position the case piece against the wall in the desired location.
- 3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
- 4. Drill a 1-1/4" hole in the spot you marked.
- 5. Tap in plastic wall plug.
- 6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tiping kit in the middle of the case piece if only have one set of anti-tipping kit.)

