 


 

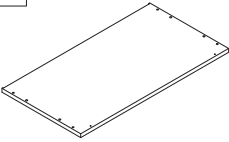 
 
 

 
 
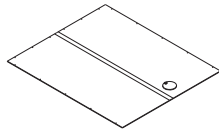 
 
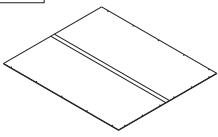 
CROSLEY

FURNITURE

 
 
 

 
 
 

 

Tall Pantry CF3115

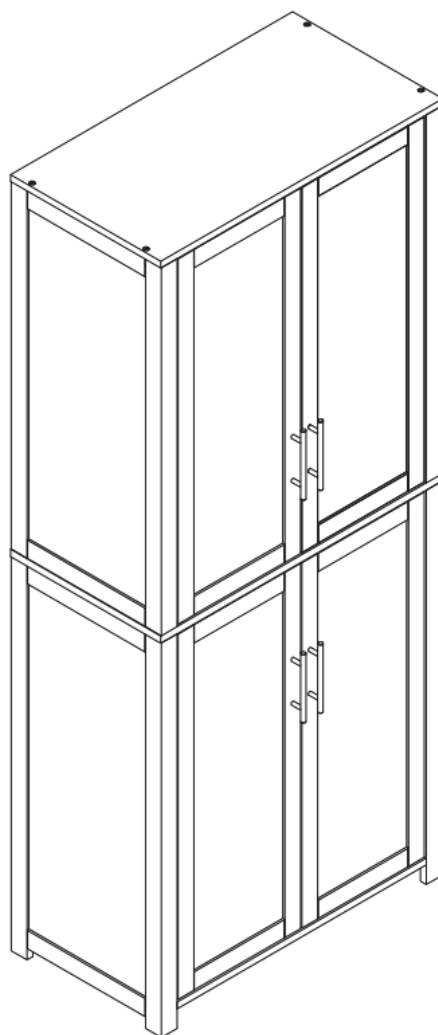

PART LIST

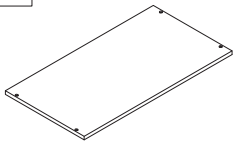
A 	B 	C 	D 	E 
Top Panel 1 PC	Upper Panel 2 PCS	Middle Panel 1 PC	Lower Left Panel 1 PC	Lower Right Panel 1 PC
F 	G 	H 	I2 	J2 
Upper Left Door / Lower Right Door 2 PCS	Upper Right Door / Lower Left Door 2 PCS	Bottom Panel 1 PC	Upper Back Panel 1 PC	Adjustable Shelf 4 PCS
K2 				
Lower Back Panel 1 PC				

HARDWARE LIST

#1 	#2 	#3 	#4 	#5 
Long Bolt 16 PCS (Extra 1) Ø1/4"x1"	Wood Dowel 12 PCS (Extra 1) Ø8*30mm	Handle 4 PCS	Short Bolt 8 PCS (Extra 1) Ø4*22mm	Shelf Holder 16 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10 
Double Magnet 4 PCS	Screw 8 PCS (Extra 1)	Short Screw 38 PCS (Extra 4)	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Step 1. Attach double magnets (part #6) to panels (parts A, C & H) using screws (part #7) and phillips head screwdriver.

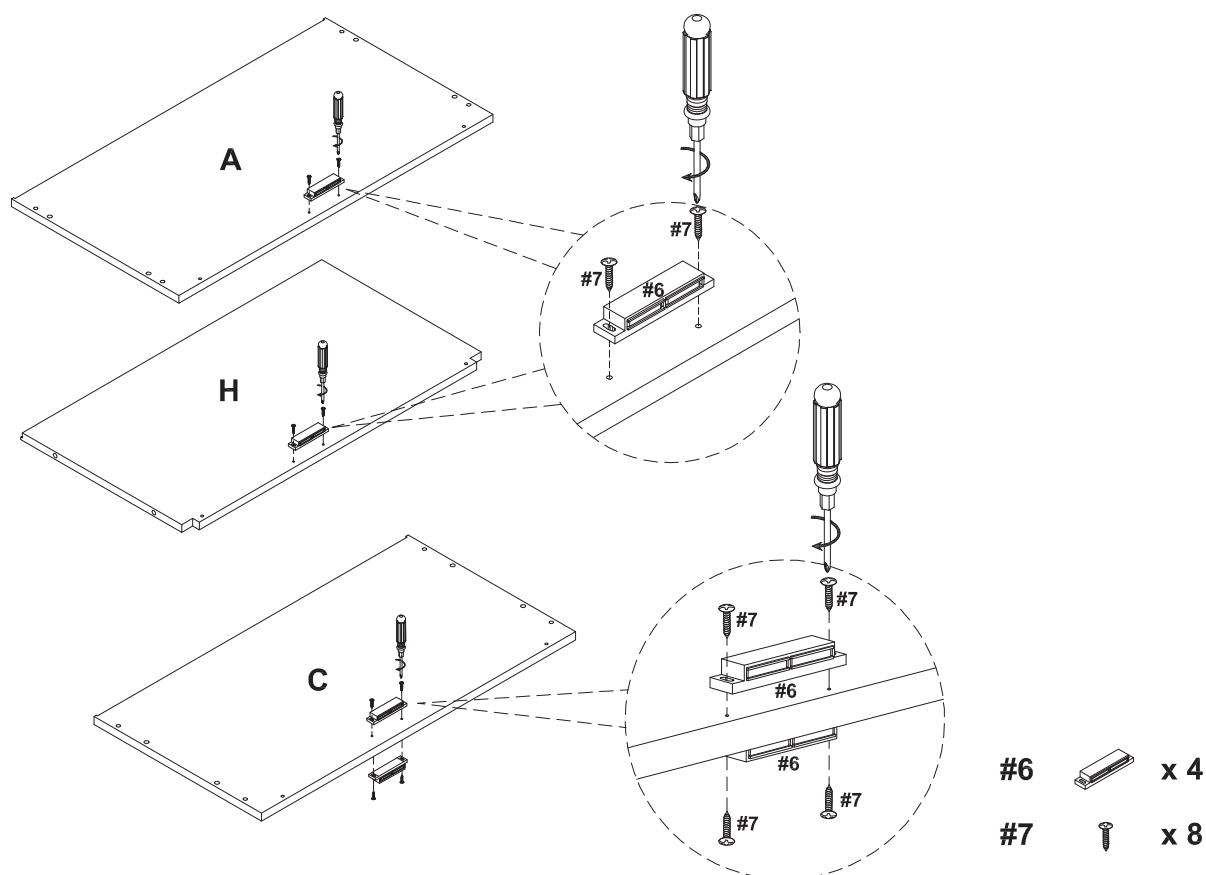

 
Step 2. Attach handles (part #3) to doors (parts F & G) using short bolts (part #4) and phillips head screwdriver.

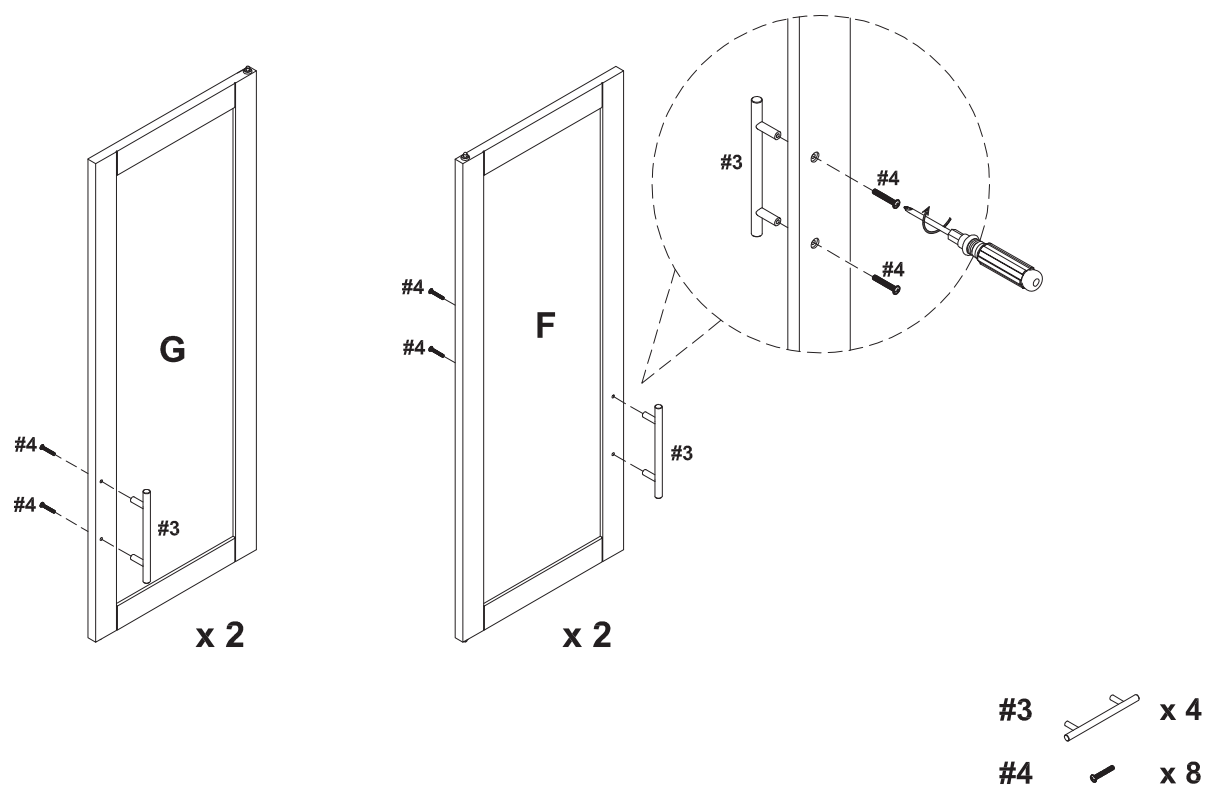

 
Step 3. Attach upper panels (part B) to top panel (part A) using wood dowels (part #2), long bolts (part #1) and allen wrench (part #9).

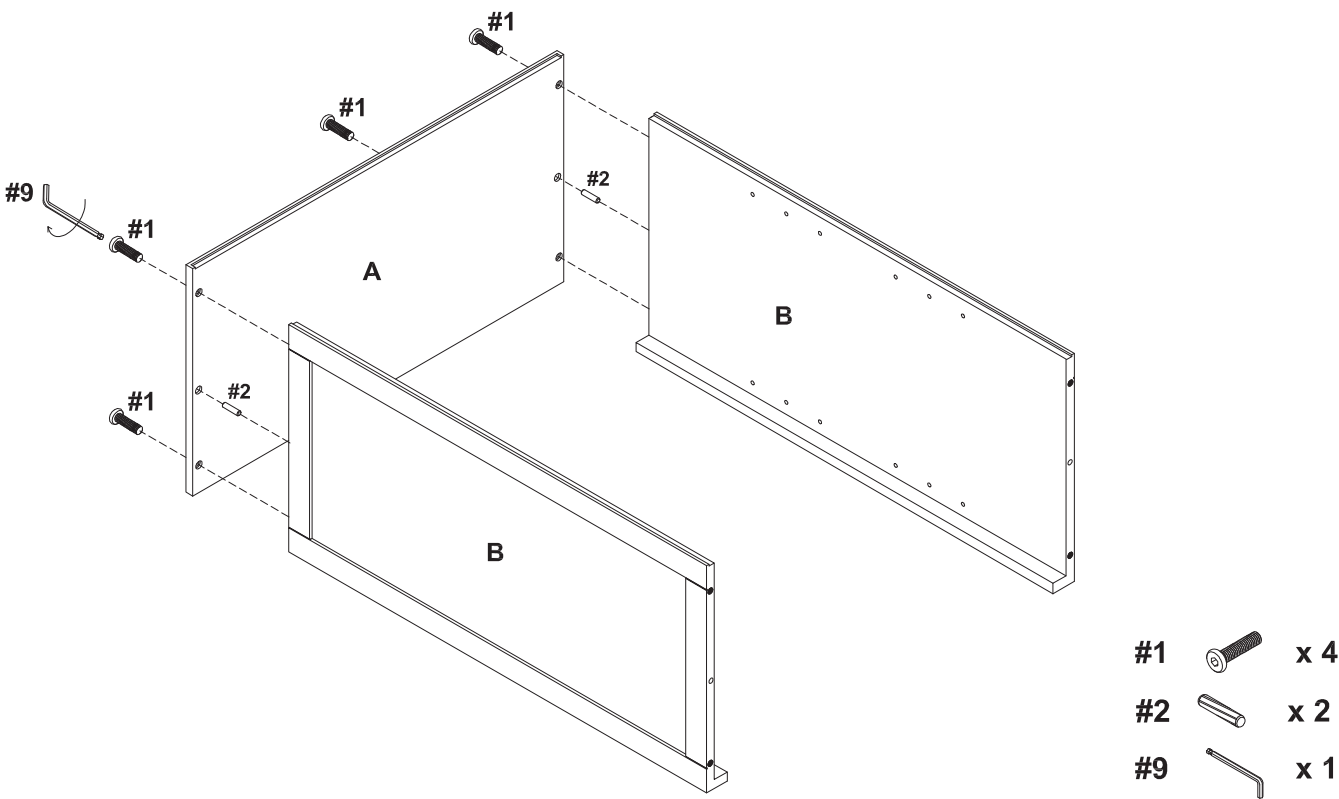

 Step 4. Attach middle panel (part C) to upper panels (part B) using wood dowels (part #2), long bolts (part #1) and allen wrench (part #9).

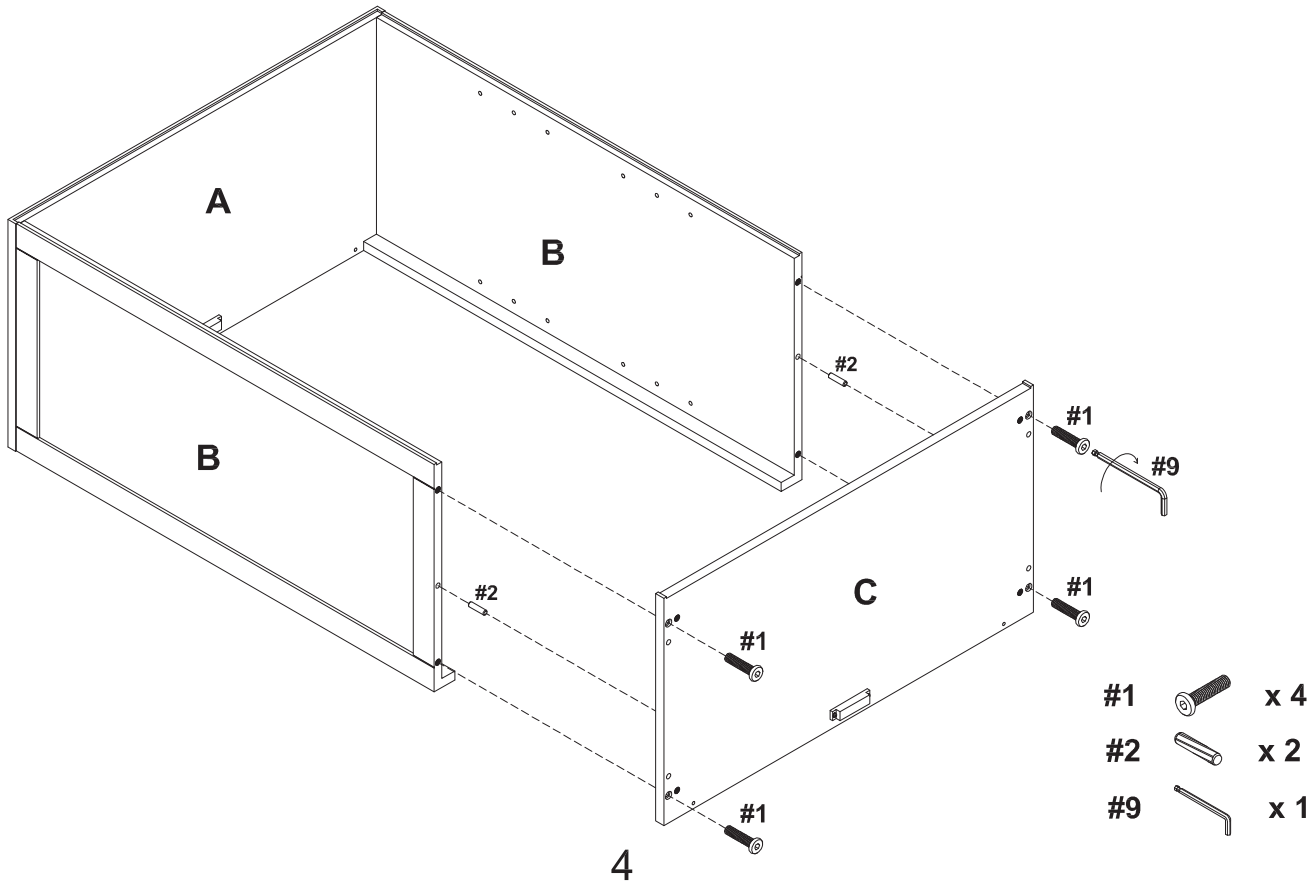


 Step 5. Attach lower panels (parts D & E) to bottom panel (part H) using wood dowels (part #2).

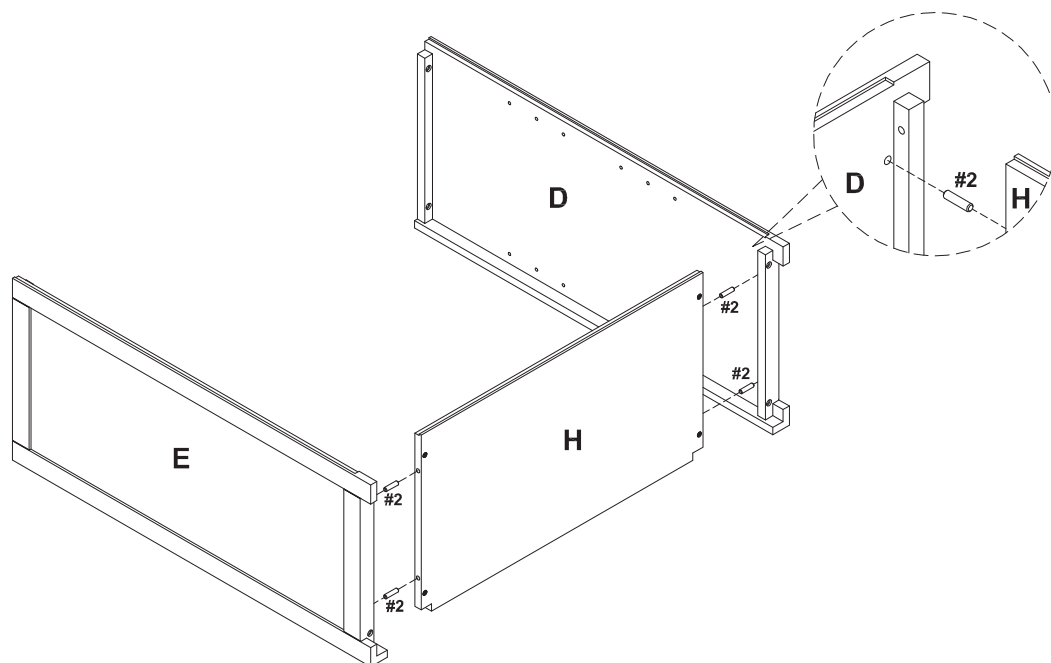

#2  x 4

 
Step 6. Attach long bolts (part #1) to assembled unit (parts D, E & H) using allen wrench (part #9).

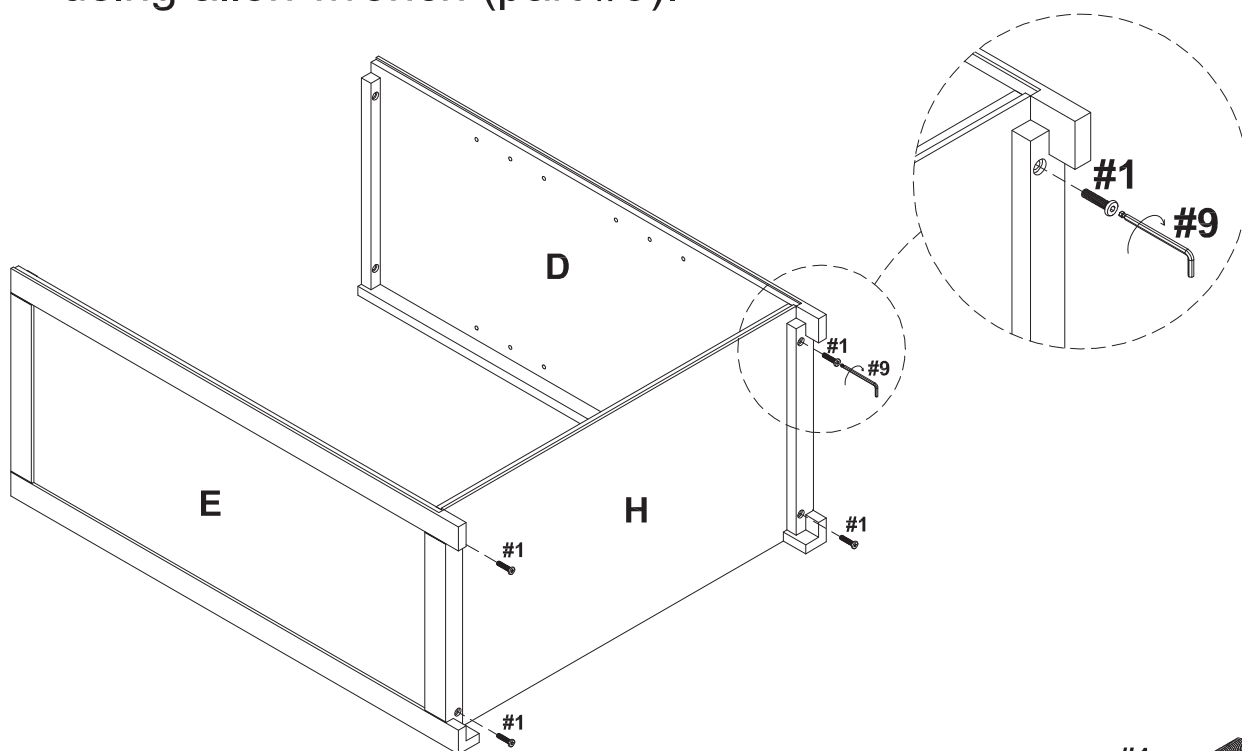


#1  x 4

#9  x 1

 Step 7. Attach assembled unit (parts D & E) to middle panel (part C) using wood dowels (part #2), long bolts (part #1) and allen wrench (part #9).

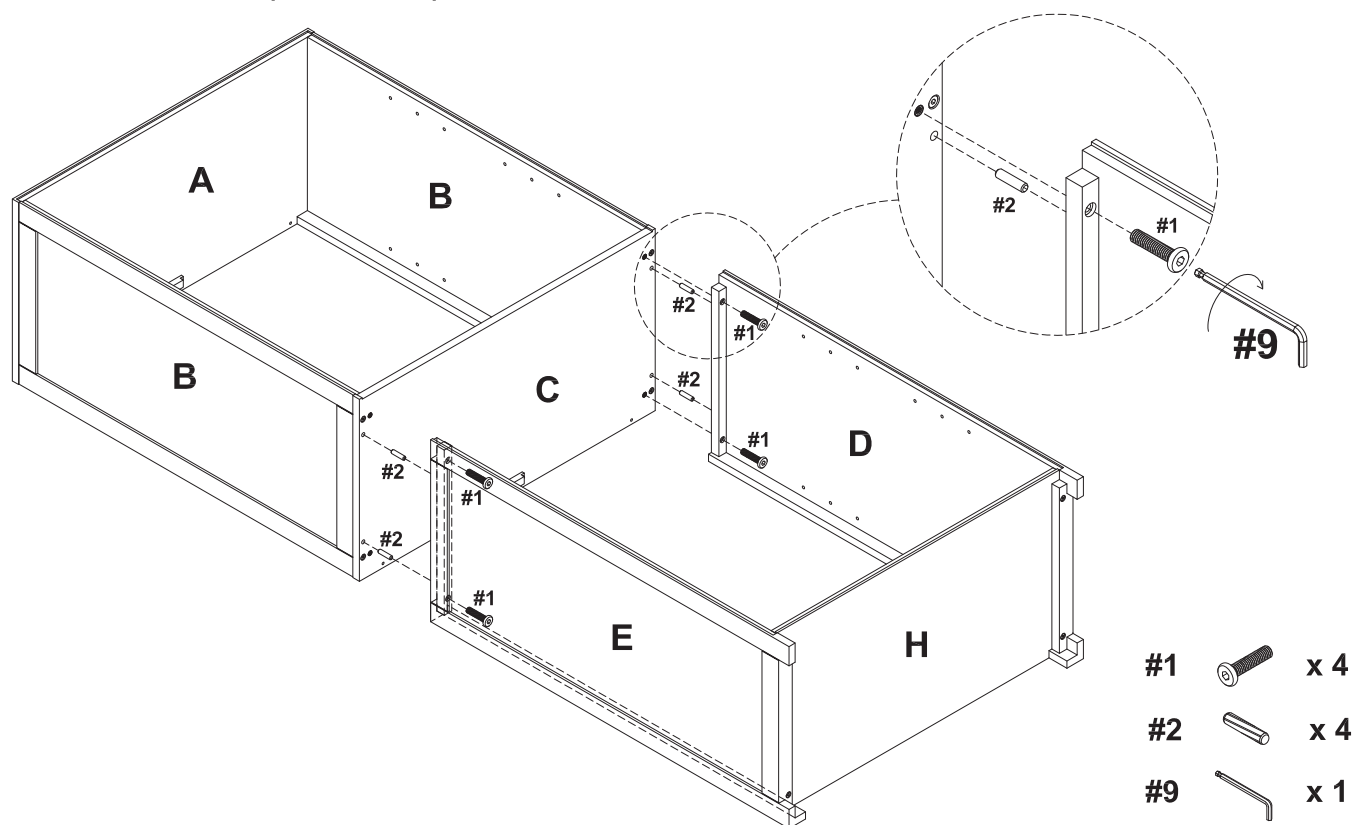

 
Step 8. Attach back panels (parts I2 & K2) to assembled unit (parts A, B, C, D, E & H) using short screws (part #8) and phillips head screwdriver.

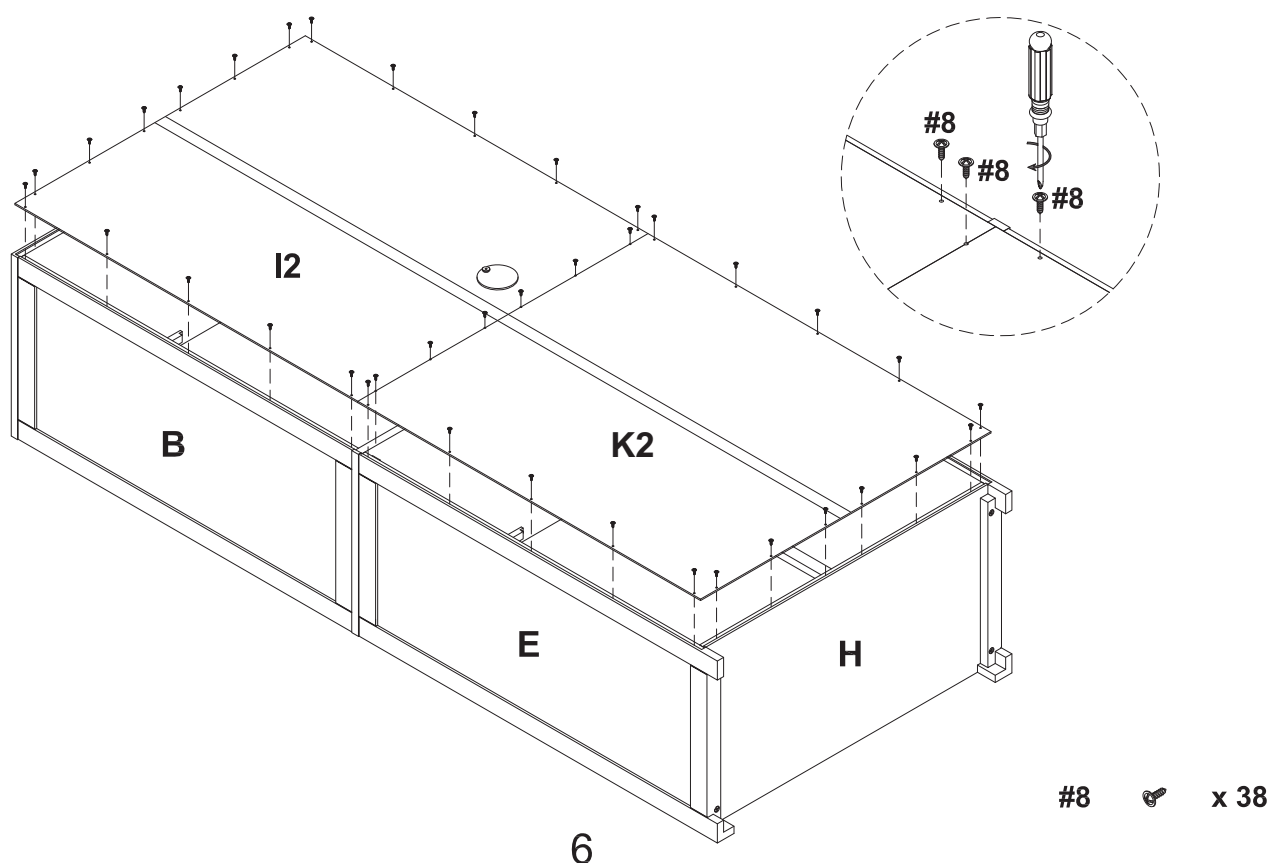

Step 9. Carefully turn the unit upright. Attach doors (parts F & G) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of middle panel (part C) and bottom panel (part H), then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A) and middle panel (part C).


Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

  Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

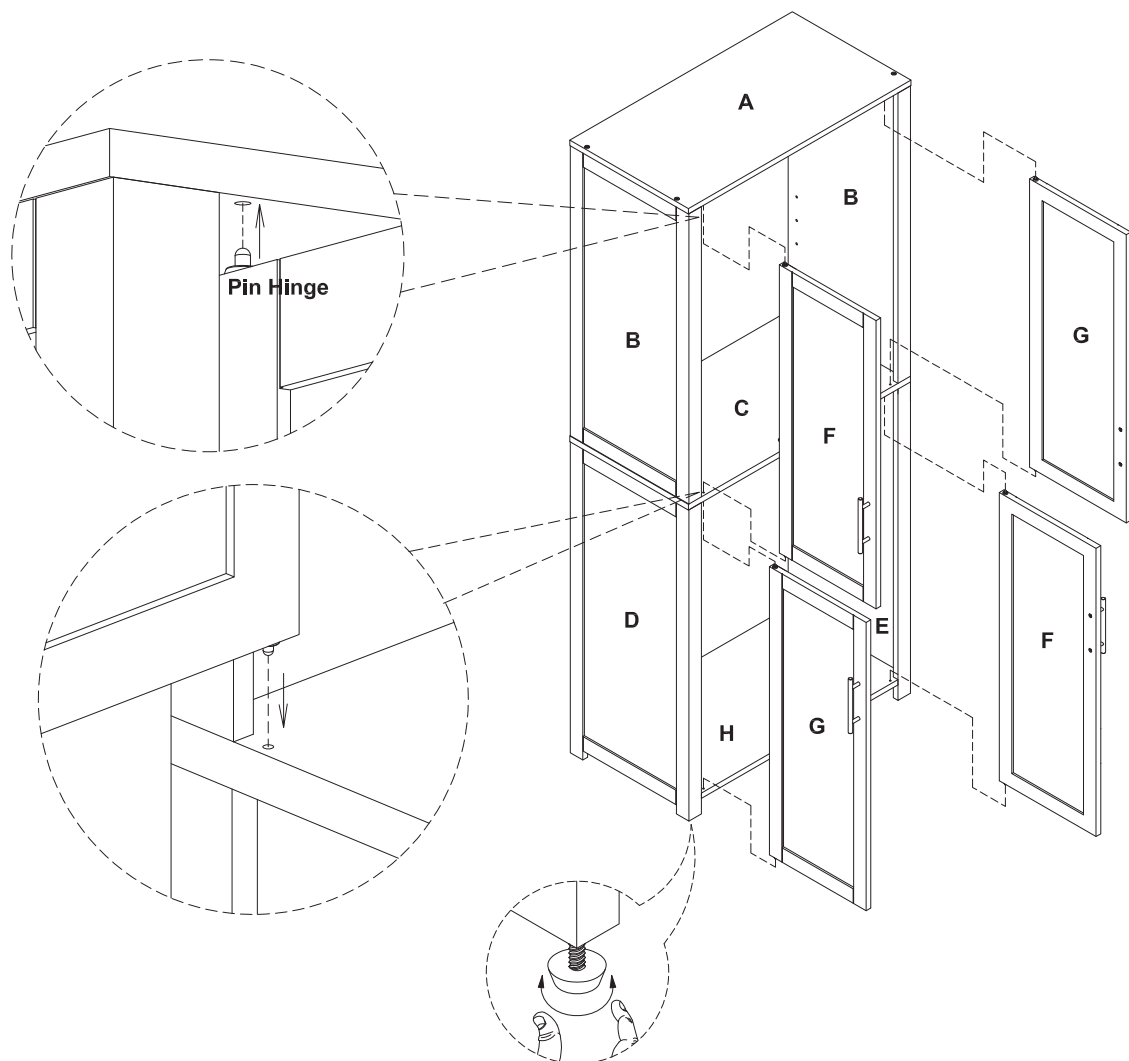





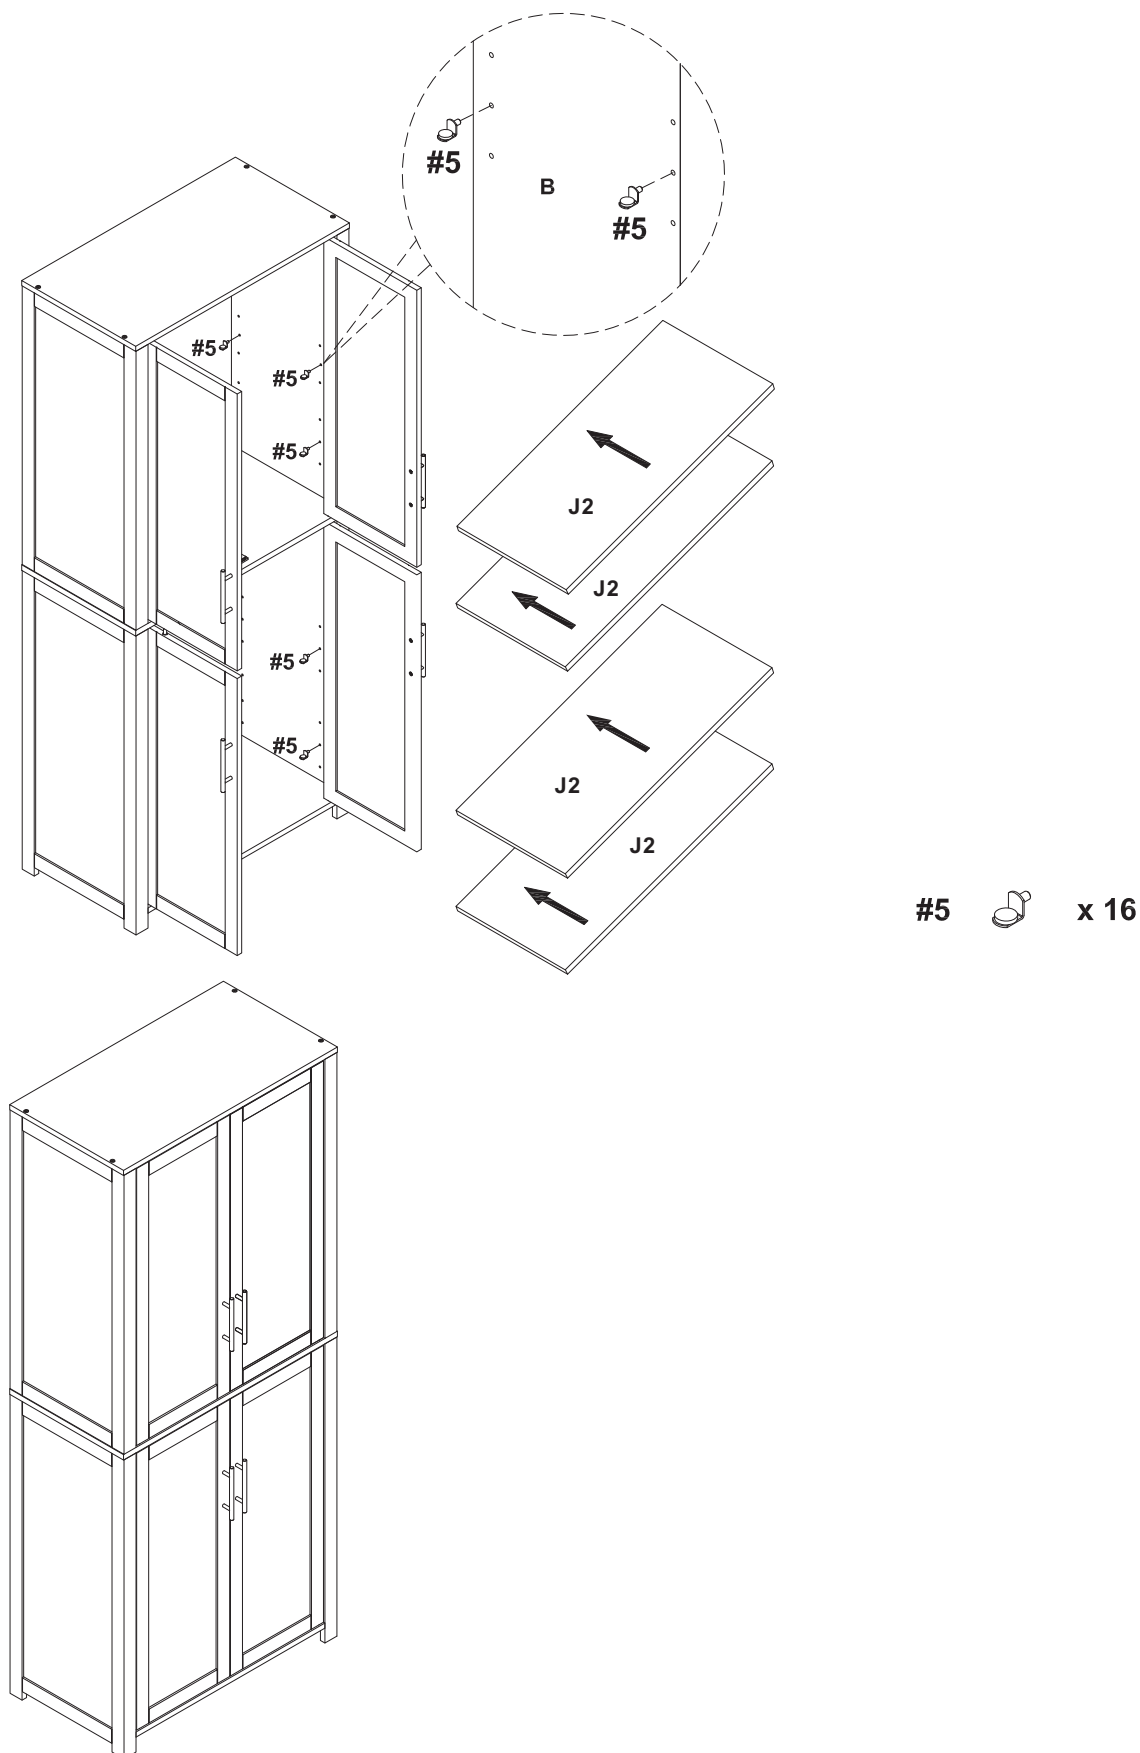

Step 10. Insert shelf holders (part #5) into desired position and slide adjustable shelves (parts J2) into place.

Important: Safety strap kit (part #10) must be installed to prevent tipping, damage and/or injury.



Step 11.


#10	A	B	C	D	E
					
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

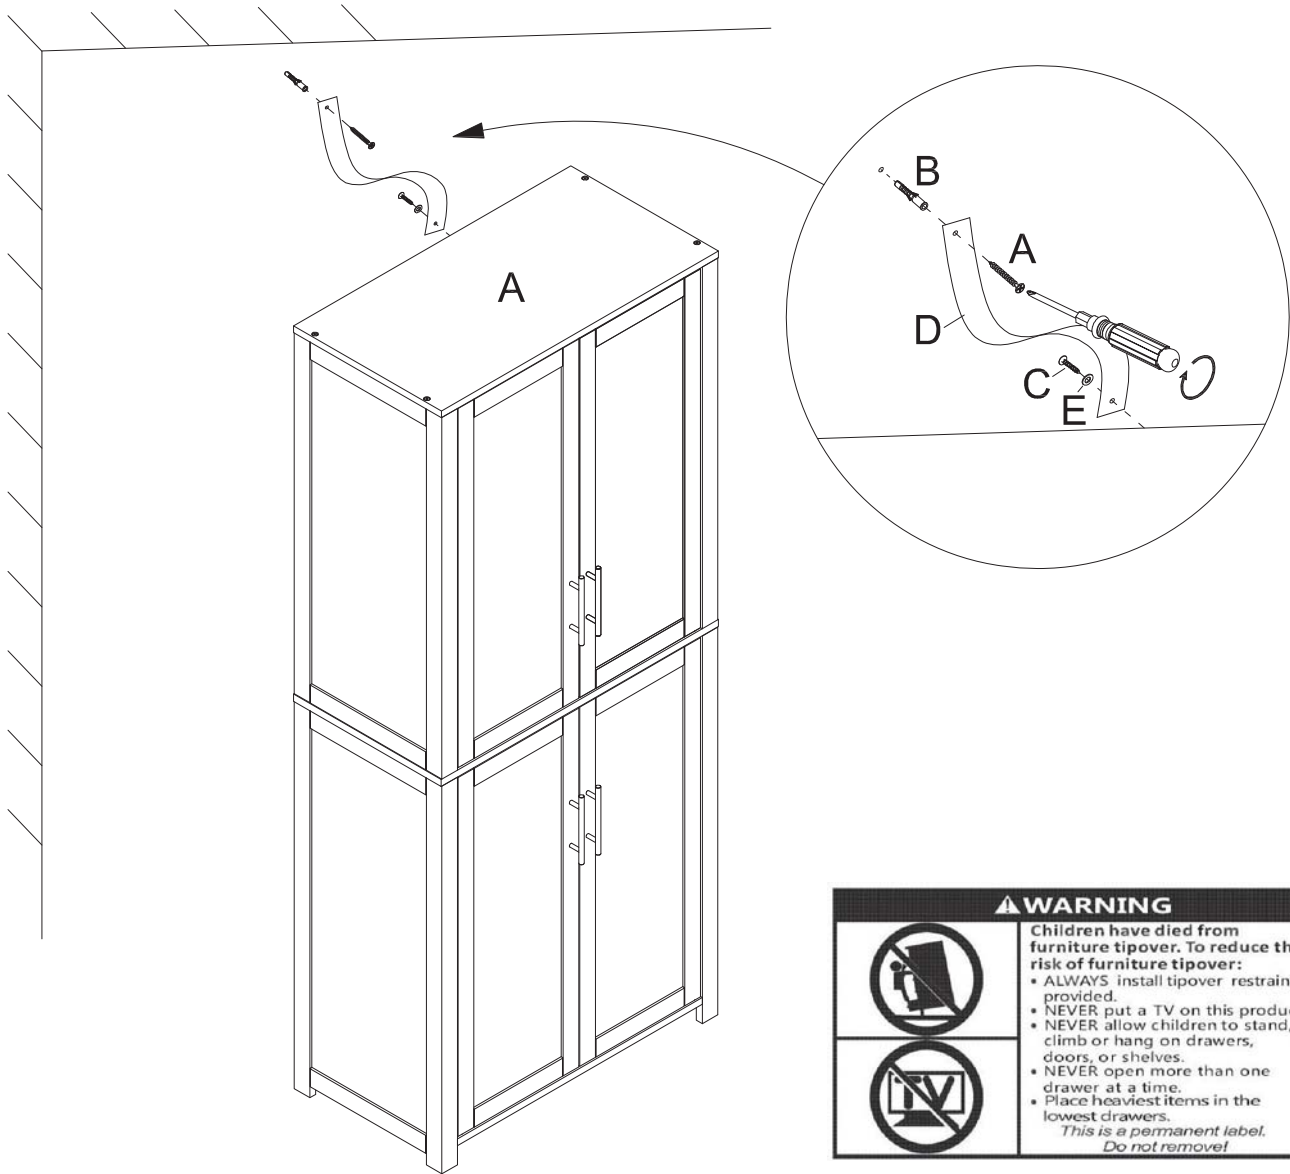



⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!