


ASSEMBLY INSTRUCTIONS

B0501a




①

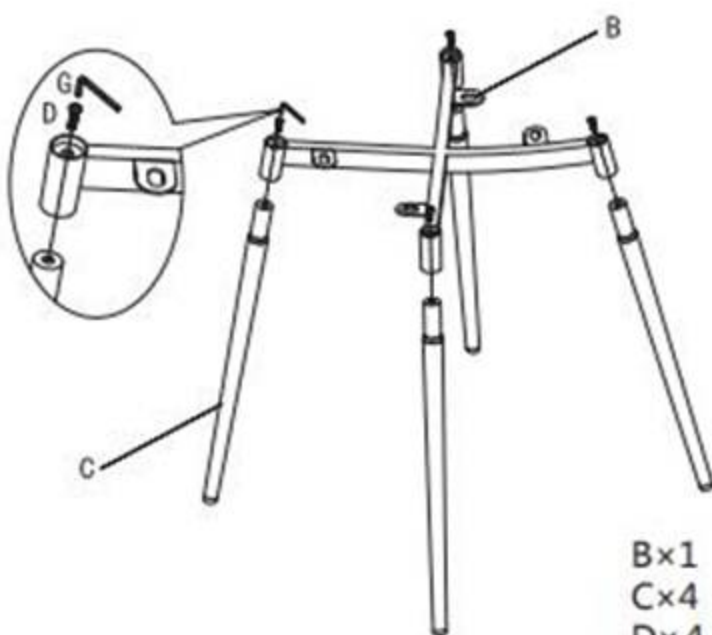

Bx1
Cx4
Dx4
Gx1

②

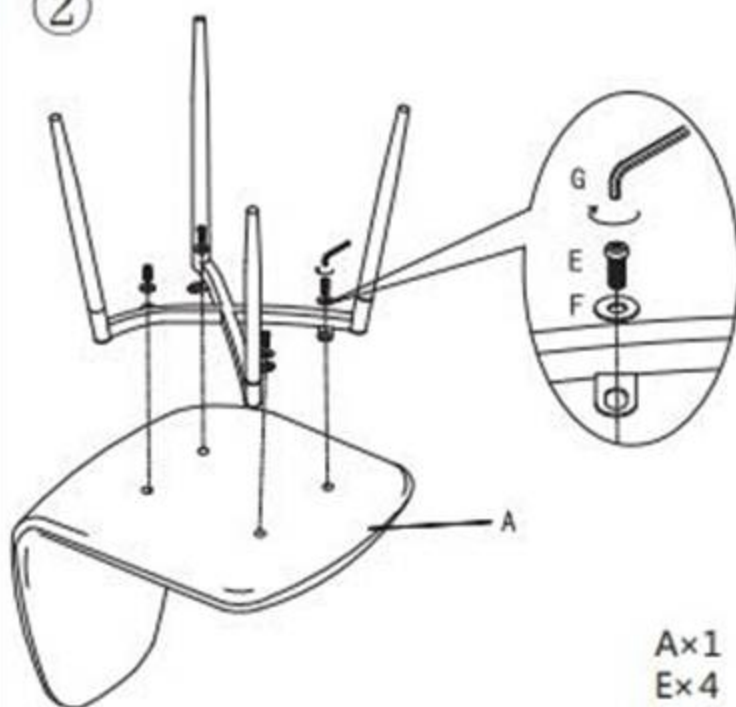

Ax1
Ex4
Fx4
Gx1

A



1x

B



1x

C



4x

D



M8x30mm

4x

E



M6x16mm

4x

F



6x18mm

4x

G



1x