Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs. Sets often ship in multiple boxes and may arrive a day or two apart.

Dining Chair N776P224512



Parts List


Label	Picture	Description	QTY	
А		Back	1	
В		Seat Cushion	1	
С		Leg	1	

 
<u>Hardware</u>

Label	Picture	Description	QTY
1	(1)	Bolt (M6x30mm)	4
2	(4)	Bolt (M6x30mm)	5
3		Allen Wrench (5mm)	1
4	0	Washer	5

Assembly Preparation

Before Beginning Assembly :

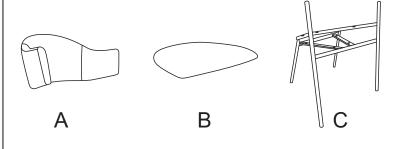





Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps

Overview

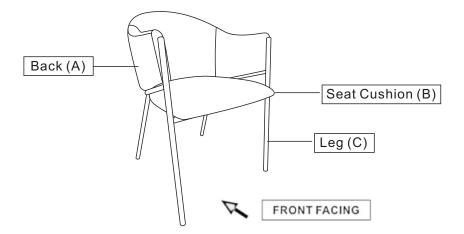


This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step1

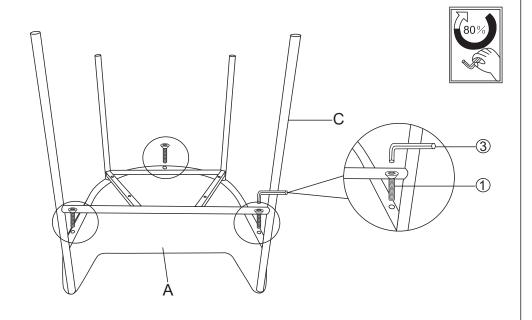


Attach the Back (A) to the Leg (C) using the Bolt (1) with Allen Wrench (3) as pictured above. Do not fully tighten the Bolts.

Step2

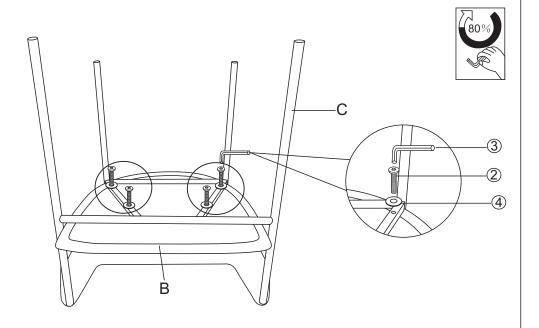

Attach the Seat Cushion (B) to the Leg (C) using the Washer (4), Bolt (2) with Allen Wrench (3) as pictured above. Do not fully tighten the Bolts.


Step3

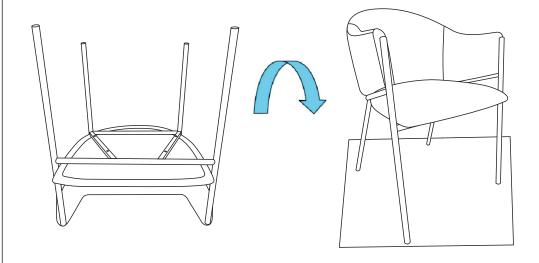

After checking the chair,If no problem,pls tighten all the Bolts. Stand the Chair up .

Place the chair on a LEVEL SURFACE to check for wobbles . Adjust the levelers to ensure chair stability

Step4

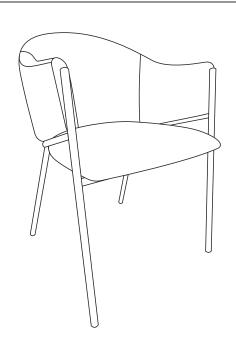

Your Chair is ready for use.

This chair can only be used on a flat, level surface.