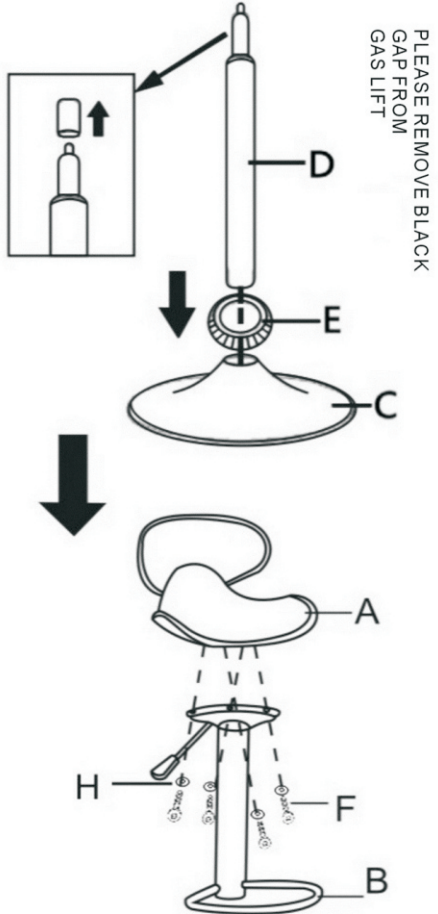
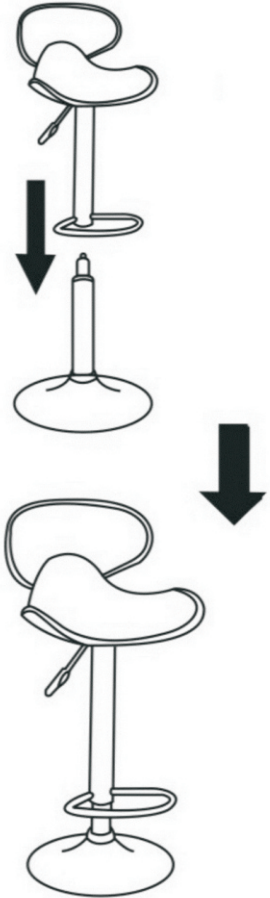


PC138/PC238/PC152 ASSEMBLY INSTRUCTION

Ax1 	Ex1 	 PLEASE REMOVE BLACK GAP FROM GAS LIFT	
Bx1 	Fx4 		
Cx1 	Gx1 		
Dx1  PLEASE REMOVE BLACK GAP FROM GAS LIFT	Hx4 		